Features

- Securely mount SNAP I/O racks, controllers, and power supplies to DIN rails
- Easily jumper 4-channel digital I/O modules
- Commission high-density digital modules
- Replace lost or damaged parts
- Use legacy and current brains and mounting racks together



Description

SNAP TEX mounting and wiring tools and spare parts are all part of the SNAP TEX family of wiring and mounting accessories. The parts in this data sheet are used for:

- Securely mounting SNAP I/O racks, controllers, power supplies, and other devices on DIN rails
- Wiring and commissioning SNAP I/O modules
- Replacing lost or damaged parts
- Adapting legacy parts to newer SNAP PAC parts

For cables and breakout boards in the SNAP TEX family, see form #1756, the SNAP TEX Cables and Breakout Boards Data Sheet.

DIN-Rail Mounting Clips and Kits

Opto 22 SNAP I/O mounting racks, controllers, power supplies, breakout boards, etc. can be panel mounted or DIN-rail mounted. For DIN-rail mounting, these clips and kits adapt the bottom of the hardware to attach securely to DIN rails.

Choose the kit or clips you need based on the table on page 2.

Operator Interface for SNAP HDD Modules

The **OptoTerminal-G20** makes it easier to commission and troubleshoot SNAP high-density digital (HDD) modules such as the SNAP-IAC-16 and the SNAP-ODC-32-SRC.

The OptoTerminal-G20 displays the status of a highdensity digital module's points on a two-line LCD display and can also be used to turn output points on and off. See Opto 22 form 1547, the *SNAP High-Density Digital Modules User's Guide*, for more details.

Part Numbers

Part	Description	
	Rack Accessories	
SNAP-PSDIN	DIN-rail adapter kit for most SNAP power supplies and controllers	
SNAP-PSUDIN	DIN-rail adapter kit for large-footprint SNA power supplies	
SNAP-ROKDIN	DIN-rail adapter kit for SNAP-PAC-SRA or SNAP-RPSW	
SNAP-S2DIN	DIN-rail adapter kit for SNAP-PAC-S2	
SNAP-LCM4DIN	DIN-rail adapter kit for SNAP-LCM4	
SNAP-CDBBDIN	DIN-rail adapter kit for classic digital brain boards (E1, B1, B5, B100)	
SNAP-TEX-DRC10	SNAP PAC rack DIN-rail adapter clip, 10-pack	
SNAP-TEX-RCKCAP	SNAP PAC rack connector cap, pack of 16	
SNAP-TEX-REC10N	Narrow end cap for SNAP PAC racks DIN-ra assemblies, 10-pack	
SNAP-TEX-REC10W	Wide end cap for SNAP PAC racks DIN-rail assemblies, 10-pack	
	Other Tools and Parts	
OPTOTERMINAL-G20	Operator interface for commissioning SNAP high-density digital modules	
SNAP-STRAPB	Pack of 10 jumper straps for digital SNAP I/C modules	
SNAP-STRAP-OMR	Jumper strap for SNAP-OMR6 modules	
SNAP-WIRESTRAPB	Pack of 10 jumper connectors for digital SNAP I/O modules	
SNAP-MODTOOL	SNAP I/O module removal tool, 10-pack	
SNAP-FIELDCONB	SNAP module field connector, 10-pack	
SNAP-RCK-B2M	Adapter for using legacy SNAP brain on SNAP PAC or M-series racks	
SNAP-RCK-M2B	Adapter for using SNAP PAC or SNAP M brains on SNAP B-series racks	
SNAP-MR10	Mechanical relay replacement for breakout boards, 10 A	

DATA SHEET Form 1772-141031

PAGE

1

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2008–2014 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

DATA SHEET Form 1772-141031

PAGE

2

DIN-Rail Clips and Kits

For these SNAP products		Clips needed	Use this adapter clip	Use this end cap
Power Supplies				
SNAP-PS5 SNAP-PS24	SNAP-PS5-24DC	1 kit	SNAP-PSDIN	N/A
SNAP-PS5U	SNAP-PS24U	1 kit	SNAP-PSUDIN	N/A
Controllers				·
SNAP-PAC-S1 SNAP-PAC-S1-W	SNAP-PAC-S1-FM	1 kit	SNAP-PSDIN	N/A
SNAP-PAC-S2	SNAP-PAC-S2-W	1 kit	SNAP-S2DIN	N/A
Mounting Racks				·
SNAP-PAC-RCK4	SNAP-PAC-RCK4-FM	2 clips		
SNAP-PAC-RCK8 SNAP-PAC-RCK8-FM	SNAP-PAC-RCK12 SNAP-PAC-RCK12-FM	3 clips	SNAP-TEX-DRC10* (10 clips in package) SNAP-TEX-REC10 (10 in package; usi per rack)	
SNAP-PAC-RCK16	SNAP-PAC-RCK16-FM	4 clips		
Breakout Boards				
SNAP-TEX-MR10-4		2 clips	SNAP-TEX-DRC10*	SNAP-TEX-REC10W*
SNAP-TEX-MR10-16	SNAP-TEX-MR10-16C	3 clips	(10 clips in package)	(10 in package; use 2 per rack)
SNAP-AIMA-HDBSNAP-IDC-HDBSNAP-AIMA-HDB-FMSNAP-IDC-HDB-FMSNAP-AIV-HDBSNAP-TEX-32SNAP-AIV-HDB-FMSNAP-TEX-FB16-HSNAP-TEX-FB16-LSNAP-TEX-FB16-L		2 clips	SNAP-TEX-DRC10* (10 clips in package)	SNAP-TEX-REC10N* (10 in package; use 2 per board)
SNAP-ODC-HDB SNAP-ODC-HDB-FM	SNAP-SCM-BB4	3 clips		
Other SNAP Devices		·		
SNAP-PAC-SRA	SNAP-RPSW	1 kit	SNAP-ROKDIN	N/A

* Requires the black plastic extrusion that comes with new racks and boards. Older racks and boards have a light-colored plastic extrusion. The black plastic extrusion is not sold separately. It is included with a new board or rack.



SNAP-PSDIN



SNAP-TEX-REC10W



SNAP-TEX-DRC10

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2008–2014 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.


Racks: Installing SNAP Rack DIN-Rail Clips

- 1. For racks with three or more clips only: Slide one DIN clip to the middle position and secure with the provided rivet. For racks with four clips, add another middle clip.
- 2. Insert one edge of the circuit board into the extrusion.
- **3.** Push down hard on the other edge to snap the board into place.
- **4.** Attach one DIN clip to each end cap using the slots in the end caps as shown.
- 5. Using the screws provided, secure an end cap and DIN clip assembly to each end of the extrusion.



Attaching the Adapter Clip to a DIN Rail


- 1. Hook the DIN-rail clip over the top of the DIN rail.
- 2. Using a screwdriver, pry open the DIN-rail clip flange at the bottom of the clip. Push the clip towards the DIN rail.
- **3.** Snap the DIN-rail clip into place.

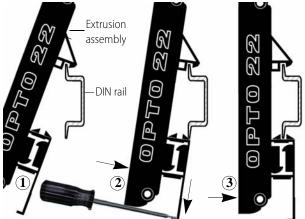


To remove: Use a screwdriver to pry open the DIN-rail clip flange.

Power Supplies: Installing SNAP-PSDIN Adapters

- 1. Remove the four screws that fasten the panel mounting base plate to the power supply.
- 2. Remove the panel mounting base plate making sure to *save the screws*.
- **3.** Using the two flat-head screws included with the kit, assemble the SNAP-PSDIN-RAIL adapter as shown.

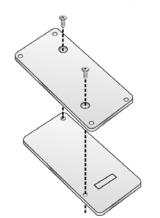

- **4.** Using the four screws removed in step 1, fasten the DIN-rail adapter to the power supply.
- **5.** Mount the power supply on the DIN rail next to the rack or controller it will power.

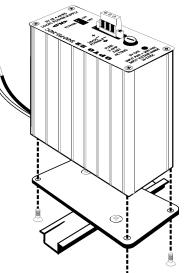

NOTE: The SNAP-PS5-24DC power supply is shown. Other power supplies have similar base plates.

Form 1772-141031	DATA SHEET	
PAGE		
3		

PT0 22 SNAP TEX Mounting/Wiring Tools and Spare Parts

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2008–2014 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

Installing the SNAP-ROKDIN Adapter Kit

This adapter kit is for the SNAP-PAC-SRA arbiter or the SNAP-RPSW redundant power switch. The DIN-rail clip adds an additional 0.375 inches (0.95 cm) to the device's height. You need one adapter kit per device.

- **1.** Turn the device over. Unscrew the four flat-head screws and remove the base plate. Save the screws.
- 2. Attach the new, plain base plate to the device using the saved screws.
- **3.** Align the DIN-rail clip to the new base plate so that the spring will be at the bottom of the device when it is mounted on the DIN rail. Use the two round-head screws provided with the kit to attach the clip..



4. To mount, align the spring clip with the bottom edge of the DIN rail, push up to engage the spring, and slip the two top flanges over the top edge of the DIN rail.


Wiring Accessories

Jumper Straps for SNAP Digital I/O


SNAP I/O module jumper straps let you easily make jumper connections on a 4-channel digital SNAP I/O module.

- The **SNAP-STRAPB** plugs into individual wire connections on an an 8-position pluggable field connector.
- The SNAP-STRAP-OMR plugs into the 12-position field connectors on SNAP-OMR6 mechanical relay output modules to connect the third wire of each channel.
- SNAP-STRAPs on multiple modules can be connected using the **SNAP-WIRESTRAPB**.


Both parts are Factory Mutual approved.

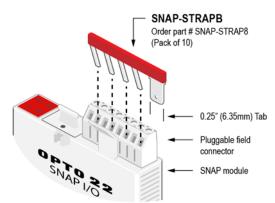

SNAP-STRAPB works with 8-position field connectors on many SNAP I/O modules.

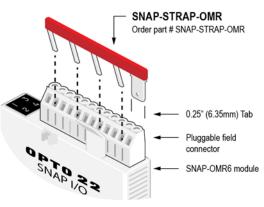

SNAP-STRAP-OMR works with 12-position gray field connectors on SNAP-OMR6 modules.

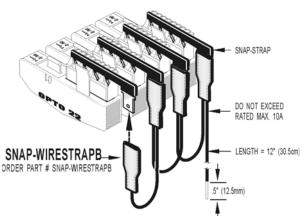

Length of wire between connectors = 3.25" (8.26 cm)

For other wiring options, see form #1756, the SNAP TEX Cables and Breakout Boards Data Sheet.

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2008–2014 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

DATA SHEET Form 1772-141031

PAGE

4

2 2

Other Accessories

Connector Caps

The **SNAP-TEX-RCKCAP** slips over an empty module connector on the rack to keep it dirt- and dust-free. The flexible black plastic cap is removable at any time. Pack of 16.

Replacement Parts

The **SNAP-FIELDCONB** replaces lost or damaged field connectors (pack of 10). The connector plugs into the top of a SNAP I/O module and is used for wiring field devices to the module. Used with most 1-, 2-, and 4-channel digital and analog modules, it accepts up to 14 AWG wire. Torque specifications for connector screws: 5.26 inch lbs (0.6 Newton m.)

The **SNAP-MR10** is a replacement mechanical relay (10 A) and clip for SNAP-TEX-MR10-16, SNAP-TEX-MR10-16C, and SNAP-TEX-MR10-4 breakout boards. Typical life expectancy (Electrical): 1 x 10⁵.

SNAP I/O Module Removal Tool

The **SNAP-MODTOOL**, included with each I/O mounting rack, is used to remove a SNAP I/O module from the rack. If you need extra tools, order this pack of 25.

To remove a module:

- 1. If the modules are held in place with screws, remove them.
- 2. Holding the SNAP module tool (provided) as shown in the illustration below, insert it into the notch at the base of the module.
- **3.** Squeeze the module tool against the module to open the release latch, and pull straight up on the module to remove it.

Rack Adapters for Mixing Legacy and Current Brains and Racks

While it's always best to use brains and racks designed to work together, sometimes mixing them is temporarily necessary. Two rack adapters are available:

- **SNAP-RCK-B2M** allows a legacy SNAP brain such as a SNAP-B3000-ENET (blue connector) to be used on a SNAP PAC rack or a SNAP M-series rack (black connector).
- **SNAP-RCK-M2B** allows a newer SNAP PAC brain or rackmounted controller, such as a SNAP-PAC-EB2 or a SNAP-PAC-R1 (black connector), to be used on an older SNAP Bseries rack (blue connector).

Please note that the adapter does not change the functionality or limitations of the older products. For example, when used with a newer brain or controller, a SNAP B-series rack is still limited to using digital modules only in its first eight slots.

For additional information, see form #1688, *SNAP PAC System Migration Technical Note* and form #1693, *Legacy and Current Product Compatibility Charts.*

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3007 • support@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3010 • FAX 951-695-3070 • gain and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.



DATA SHEET Form 1772-141031

Products

Opto 22 develops and manufactures reliable, flexible, easy-to-use hardware and software products for industrial automation, energy management, remote monitoring, and data acquisition applications.

groov

groov puts your system on your mobile device. With zero programming, you can build mobile operator interfaces to monitor and control systems from Allen-Bradley, Siemens, Schneider Electric, Modicon, and many more. Web-based *groov* puts mobile-ready gadgets at your fingertips. Tag them from your existing tag database, and they automatically scale for use on any device with a modern web browser. See groov.com for more information and your free trial.

SNAP PAC System

Designed to simplify the typically complex process of selecting and applying an automation system, the SNAP PAC System consists of four integrated components:

- SNAP PAC controllers
- PAC Project[™] Software Suite
- SNAP PAC brains
- SNAP I/O¹

SNAP PAC Controllers

Programmable automation controllers

(PACs) are multifunctional, modular controllers based on open standards.

Opto 22 has been manufacturing PACs for over two decades. The standalone SNAP PAC S-series, the rack-mounted SNAP PAC R-series, and the software-based SoftPAC[™] all handle a wide range of digital, analog, and serial functions for data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

SNAP PACs are based on open Ethernet and Internet Protocol (IP) standards, so you can build or extend a system easily, without the expense and limitations of proprietary networks and protocols. Wired+Wireless[™] models are also available.

PAC Project Software Suite

Opto 22's PAC Project Software Suite provides full-featured, costeffective control programming, HMI (human machine interface) development and runtime, OPC server, and database connectivity software for your SNAP PAC System.

Control programming includes both easy-to-learn flowcharts and optional scripting. Commands are in plain English; variables and I/ O point names are fully descriptive.

PAC Project Basic offers control and HMI tools and is free for download on our website, www.opto22.com. PAC Project

Professional, available for separate purchase, adds one SoftPAC, OptoOPCServer, OptoDataLink, options for controller redundancy or segmented networking, and support for legacy Opto 22 serial *mistic*[™] I/O units.

SNAP PAC Brains

While SNAP PAC controllers provide central control and data distribution, SNAP PAC brains provide distributed intelligence for I/O processing and communications. Brains offer analog, digital, and serial functions, including thermocouple linearization; PID loop control; and optional high-speed digital counting (up to 20 kHz), quadrature counting, TPO, and pulse generation and measurement.

SNAP I/O

I/O provides the local connection to sensors and equipment. Opto 22 SNAP I/O offers 1 to 32 points of reliable I/O per module,

depending on the type of module and your needs. Analog, digital, and serial modules are all mixed on the same mounting rack and controlled by the same processor (SNAP PAC brain or rack-mounted controller).

Quality

Founded in 1974, Opto 22 has established a worldwide reputation for high-quality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California. Because we test each product twice before it leaves our factory, rather than only testing a sample of each batch, we can guarantee most solid-state relays and optically isolated I/O modules for life.

e e Due du et Cuere e

Free Product Support

Opto 22's California-based Product Support Group offers free, comprehensive technical support for Opto 22 products. Our staff of support engineers represents decades of training and experience. Support is available in English and Spanish by phone or email, Monday–Friday, 7 a.m. to 5 p.m. PST.

Additional support is always available on our website: how-to videos, OptoKnowledgeBase, self-training guide, troubleshooting and user's guides, and OptoForums.

In addition, hands-on training is available for free at our Temecula, California headquarters, and you can register online.

Purchasing Opto 22 Products


Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at 800-321-6786 or 951-695-3000, or visit our website at www.opto22.com. More About

0

U

www.opto22.com

www.opto22.com • Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Form 1335-131203 SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2014 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

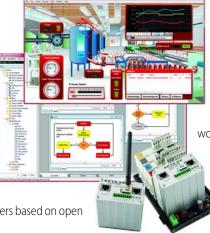

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for opto 22 manufacturer:

Other Similar products are found below :

G4AC5 G4PB8H DC200MP E2 PB16C 240D10-17 AD6T DA3 SNAP-PS5-24DC SNAP-ODC5SNK SNAP-AOVA-8 PB4H SNAP-AIV SNAP-AITM-4I SNAP-AIMA-I GRV-EPIC-CHS4 GRV-EPIC-PSDC GRV-EPIC-PSPT GRV-IAC-24 GRV-IACDCTTL-24 GRV-IACHV-24 GRV-IACHVS-24 GRV-IACI-12 GRV-IACIHV-12 GRV-IACIHVS-12 GRV-IACIS-12 GRV-IACS-24 GRV-IDC-24 GRV-IDCIS-12 GRV-IDCS-24 GRV-IMA-24 GRV-ITMI-8 GRV-OAC-12 GRV-OACI-12 GRV-OACIS-12 GRV-OACS-12 GRV-ODCIS-12 GRV-OMRIS-8 AD10T2 AD8T DA8 IAC15 SNAP-PAC-EB1-FM FUSEG4B 120D45 DA4 SNAP-B16MC AD12 G4AD3 B5