Technical Specification

All gas springs packages are supplied with:

- ◆ 2 Gas springs including a release valve,
- ◆ 4 Metal eyes,
- ◆ 4 Metal ball joints with metric stud,
- ◆ 1 Gas release key (stud),
- ◆ 1 Instruction leaflet

Operating Temperature range: from -5°c to +70°c

Steel zinc or chrome plated metal end-fittings

Steel chrome plated rod

Steel black painted body


Manufactured in the United Kingdom


DO'S


- ◆ Do use standard gas springs rod down.
- → If springs are to be stored prior to use, it should be stored rod down to lubricate the rod seal.
- ◆ Do try to use ball joints to help avoid side load forces. If eyes are used, ensure a sloppy fit to allow lateral movement.
- **♦** Do ensure that the end-fittings are in line so that side load forces are not applied as a result of misalignement.
- **♦** Do try to use shorter springs close to the hinge rather than long stroke springs away from the hinge.
- ◆ Do provide physical stops to limit the spring's extremes. i.e. ensure that undue force is not applied to over compress or over extend the spring.
- ◆ Ensure the gas spring's end-fittings are fully screwed home.
- ♦ Where ball joints are used ensure the ball stud is flush with the surface and tightened.

DON'TS


- ◆ Do not scratch, dent, chip, bend or paint the rod.
- ◆ Do not puncture or incinerate. Please contact customer support for disposal instructions.
- ◆ Do not lubricate the gas spring.
- ◆ Do not cycle more than 15 times per minute.
- ◆ Under no circumstances attempt to regas a spring. This is an extremely hazardous operation.
- ◆ Do not reduce the force of the spring below its specified minimum working force

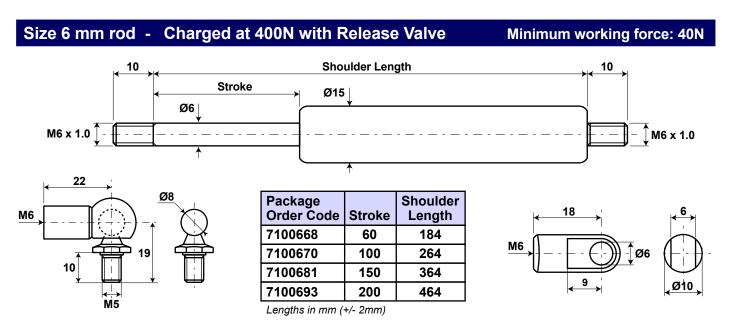

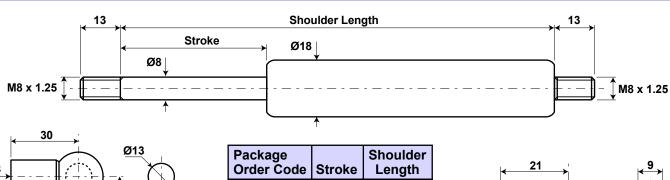

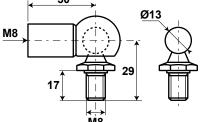



Stroke	Shoulder Length
100	268
150	368
200	468
250	568
	100 150 200

 


Lengths in mm (+/- 2mm)

Size 10 mm rod - Charged at 1200N with Release Valve Minimum working force: 150N

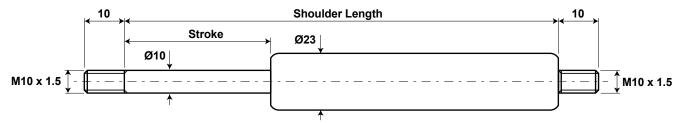

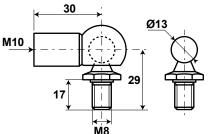



Package Order Code	Stroke	Shoulder Length
7100840	100	265
7100851	200	465
7100863	250	565
7100875	300	665
Lengths in mm (+/- 2mm)		

 


Size 14 mm rod - Charged at 2500N with Release Valve

 Minimum working force: 250N



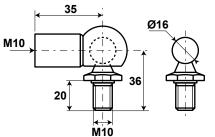

Package Order Code	Stroke	Shoulder Length
7100887	100	280
7100889	200	480
7100905	300	680
7100917	400	880
7100929	500	1080

 

Lengths in mm (+/- 2mm)

Page 2 of 3

ADJUSTING A STANDARD COMPRESSION GAS SPRING WITH A RELEASE VALVE

- ◆ Upon receipt fit the gas spring to the application, operate the springs and observe the movement. Care should be taken on this first compression. The supplied force in the spring might be so great that damage could occur to the part to which the gas springs are attached. For example, if the springs are attached to a sheet metal lid.
- ◆ Safely support the load and remove the gas springs. Unscrew the end-fitting from the body end (the piston chamber). There may be a threaded stud located in the body that will also need to be removed, please note that this stud has a hole drilled on one end of it to fit over the valve. The valve can now be seen by looking down into the gas spring.
- ◆ Hold the spring with the rod down and the valve facing away from you. Screw in the release valve key until you can feel the tip of the valve. In one flowing movement turn clockwise a quarter of a turn and immediately turn anti-clockwise a quarter of a turn. The sound of escaping gas should be heard (it is best to carry out this procedure in a quiet environment).
- ◆ The gas spring has a very small volume of nitrogen at high pressure. On the small size 6 and 8 mm springs, a release of nitrogen lasting more than a second could reduce the spring's force by 100 Newtons.
- **→** Refit the gas springs to the application. If the force is still too great, repeat the above procedure until satisfied. If two gas springs are attached remove approximately the same amount of gas from each spring.
- ♦ If, as it occasionally happens, you let out too much gas, it is possible to recharge release valved springs. Please contact Farnell InOne technical support.

FOR A VARIETY OF REASONS IT IS EXTREMELY DANGEROUS TO ATTEMPT TO REGAS THE GAS SPRINGS. THIS SHOULD NOT BE ATTEMPTED UNDER ANY CIRCUMSTANCES.

For technical support please contact: Farnell InOne Technical Support

Tel: 08701 200 202 - Fax: 08701 200 203 - techsales@farnellinone.co.uk www.farnellinone.co.uk

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for duratool manufacturer:

Other Similar products are found below:

KIT NO 3600439 D00197 D00346 D01441 D01615 D02342 D03061 D00338 D00341 D00345 D00358 D00642 D01617 D01971

D02313 D03070 PDR4001 79-3984 1748 SPC22132 MCA565 MC000014 24-8463 DTRSRLCBS-8-01 DTRNSE 1207 M4 25 DTRFF
006-P5X7.5B DTRDLMSPM-12-01 DT5200 DTRSR4100W DTRSR3075W DTRRLCBSR-7-01 DTRPGSB-4A DTRNSE 1207 M6 20

DTRNNE 1587 M3 DTRFF-008-P4X6 DTRFF-005P4X5 DM6-CWA2WAS100BS4463 NUT CAPTIVE NO10 PK100 74431 DM6ITST
Z100DIN6797 DM3-ITA2-S100DIN6797 DM2-CWA2WAS100BS4463 M2.510 KSSTMCZ100- M12- N5ST-Z100- 02-10009 DTRNSE

1207 M3 4 DTRLCBS-3-01 DTRNSE 1207 M4 6 SPC22128 WP-SP