

QWERTY PAD

User Manual



Mini wireless keyboard and touchpad

Safety Notice

Please refer to all safety precautions covered in this manual to prevent personal injury or damage to the device.

The QWERTY PAD contains a lithium-ion battery. All safety precautions should be taken into consideration when handling or operating a device with this type of battery.

- ⚠ Do not drop, crush, heat or submerge in water.
- ⚠ Do not operate in environments with extreme humidity or temperatures (Hot or cold).
- ⚠ Do not operate or attempt to operate this device while driving or operating any moving vehicle.
- ⚠ Whilst on aircraft do not operate this device. This device may interfere with aircraft operations and communication devices.
- ⚠ Please turn off the device when around fuel or any combustible agents or chemicals.
- ⚠ Turn off this device in hospitals, failure to do so may cause interference with medical equipment or communication devices. As with all wireless devices, this product may interfere with implanted cardiac pacemakers, hearing aids and other medical implants.
- ⚠ Do not attempt to disassemble the device or replace the rechargeable battery. Doing so will invalidate the warranty.
- ⚠ Do not look directly into or point the LED light at eyes. Doing so may cause permanent damage or blindness.



This product should not be disposed of with household waste.
Please recycle where facilities exist.
Check with your local authority for recycling advice.

Overview

Thank you for purchasing this QWERTY PAD. This device is a 2.4GHz wireless ultra mini keyboard with touchpad, complete with USB adaptor.


This product consists not only of a wireless keyboard, but also has multimedia control keys, along with PC gaming control keys, and also has a built-in touchpad. There are several indicator lights included with the unit: RF signal, CAPS LOCK, low-voltage, and also a keyboard backlight function, to enable use in low light conditions.

Ideal for use in a host of situations:

- Presentations or business meetings
 - Change slides or screen options
 - Emphasize words or objects
 - Type on screen
- HPTC, Android TV Box, IPTV, PC, PAD, Games Console, etc.
 - Browse the Internet (When connected to the internet)
 - Read and send e-mails (E-mail enabled products only)
 - Enjoy your favourite games
 - Watch TV-On-Demand services such as:
 - BBC iPlayer, ITV Player, 4OD, etc.
 - Watch Movie-On-Demand services such as:
 - Netflix, LOVEFILM, etc.

Introduction

Keyboard Layout Illustration

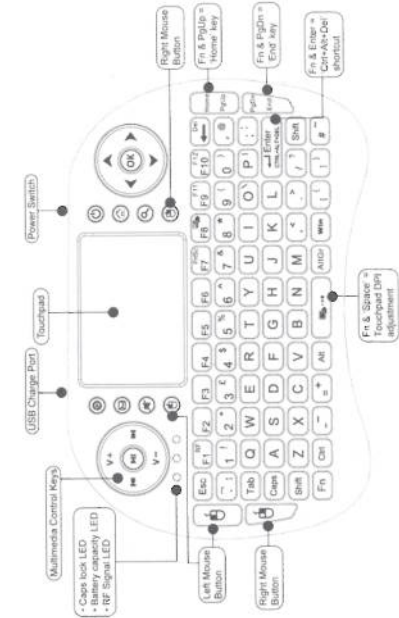

Touchpad

The *QWERTY PAD* comes with a notebook style touchpad, which can be has an innovative functionality of a mouse wheel. To use simply press the 'Fn' button and slide your finger on the touchpad in the desired direction (up or down) in the highlighted area. As with a standard mouse wheel, this function enables the user to browse web pages and documents easier.

Connecting to the receiver.

Slide out the receiver from the USB receiver storage compartment on the rear of the keyboard, and insert the receiver into a USB port on the computer / console. Once the receiver is inserted, turn the keyboard on by sliding the power switch to the 'ON' position. The device will then establish a connection to the receiver

Auto sleep function

The *QWERTY PAD* also features an auto sleep function, if inactive for approx. 2 minutes; it will go into sleep mode. To wake the *QWERTY PAD* simply press any key or tap the touchpad. The keyboard's RF indicator will continue to flash during sleep mode.

Switch the Keyboard off after use

When you have finished using the *QWERTY PAD*, please switch the device off by moving the power switch to the 'OFF' position. The USB receiver can be unplugged from your device and stored safely back in the keyboard, in order to prevent loss.

Charging the Battery

This device contains a built-in lithium lithium-ion battery. Please use the USB-A to Mini-B cable provided to charge the device. Connect the USB-A connector to your computer / console, and the Mini-B connector to the USB charge port (as illustrated) in order to charge the device.

When the charge is low on the battery, the low-voltage light will flash. The unit will automatically turn off if the battery charge is depleted.

Note: Please charge the unit fully prior to initial use. This device can be used whilst charging, but this will extend the charge time.

RF Matching

The device has been pre-coded at the factory to match the keyboard to the receiver. This ensures that two or more of the same device do not interfere with each other on the same wireless spectrum. In the event this device is conflicting with another wireless device, you can change the channel by pressing the 'Fn' key and 'F1' key for approx. 10 seconds. The RF signal LED will resume a slow flash confirming the change was successful.

Technical Information

Specifications:

- Dimensions (L x W x H): 146.8 x 97.5 x 19mm
- Weight: 110g
- Operational Range: up to 10m (30')
- Transmit power: +5db max.
- Operation Voltage: 3.3V
- Operating Current: < 50mA
- Charge Current: < 350mA
- Sleep Current: < 1mA

Operating System Requirements:

- Windows CE / 2000 / XP / Vista / 7
- Linux (Tested working with: Debian 3.1, Redhat 9.0, Ubuntu 8.10, Fedora 7.0)
- Microsoft Xbox 360 (may require firmware update)
- Sony PS3 (may require firmware update)
- Android 2.2 or higher

Maintenance

- Do not attempt to disassemble the device or replace the rechargeable battery. Doing so will invalidate the warranty.
- The battery will discharge if stored without use for a long period of time.
- Use only the supplied charging cables, failure to do so, may cause damage to the unit.
- Disconnect the device after the battery has been fully charged. Overcharging may shorten the battery life span.
- To clean the device, use a damp cloth with mild soap. Solvents and other cleaning agents may damage the unit.

Troubleshooting

Below are some troubleshooting scenarios for the device. For further help please contact the place of purchase.

Problem	Possible Issue	Solution
Unit does not respond	<ol style="list-style-type: none">1. Low Battery power2. Unit is not switched on	<ol style="list-style-type: none">1. Charge the device for approx. 15 min.2. Check the switch is in the 'ON' position
Keyboard cannot establish a connection to the receiver	<ol style="list-style-type: none">1. The receiver may not be inserted correctly2. There is interference or device may not be within operating range	<ol style="list-style-type: none">1. Disconnect the receiver and re-insert to the USB port2. Move the keyboard closer to the receiver, and make sure there is not interference.
The mouse pointer moves erratically and/or unresponsive	<ol style="list-style-type: none">1. Device may not be within operating range2. Low charge on battery3. Dust or oil on the touchpad	<ol style="list-style-type: none">1. Move the unit closer to the receiver2. Charge the device3. Clean the touchpad with a damp cloth
The unit does not charge	<ol style="list-style-type: none">1. Defective battery2. Loose connections	<ol style="list-style-type: none">1. Contact your place of purchase for replacement unit2. Verify the cable is securely connected at both ends

Box Contents

This package contains the following items:

Ultra mini wireless keyboard	1 unit
Wireless receiver	1 unit
USB-A to Mini-B charge cable	1 unit
User manual	1 unit

Please Note:

The manufacturer reserves the right to amend the specifications without prior notice. The images in this manual are for illustration purposes only.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Other Tools](#) category:

Click to view products by [Qwerty](#) manufacturer:

Other Similar products are found below :

[CR-05FL7--150R](#) [CR-05FL7--698K](#) [899-2-KT46](#) [899-5-KT46](#) [CR-0AFL4--332K](#) [CR-12FP4--260R](#) [CRCW04021100FRT7](#)
[CRCW04021961FRT7](#) [5800-0090](#) [CRCW04024021FRT7](#) [CRCW040254R9FRT7](#) [CRCW0603102JRT5](#) [59065-5](#) [00-8273-RDPP](#) [00-8729-](#)
[WHPP](#) [593033](#) [593058](#) [593072](#) [593564100](#) [593575](#) [593591](#) [593593](#) [011349-000](#) [LTLA506SBLAMNBL](#) [CRCW08052740FRT1](#) [LUC-](#)
[012S070DSM](#) [LUC-018S070DSP](#) [599-2021-3-NME](#) [599-JJ-2021-03](#) [00-5080-YWPP](#) [5E4750/01-20R0-T/R](#) [LW1A-L1-GL](#) [LW1A-P1-GD](#)
[LW1L-A1C10V-GL](#) [LW1L-M1C70-A](#) [0202-0173](#) [00-9089-RDPP](#) [00-9300-RDPP](#) [CRCW2010331JR02](#) [01-1003W-8/32-10](#) [601-GP-08-](#)
[KT39](#) [601-JJ-06](#) [601-SPB](#) [601YSY](#) [602-JJ-03](#) [602SPB](#) [602Z](#) [603-JJ-07-FP](#) [603-JJY-04](#) [604J](#)