

JST

MAINTENANCE

The tool has to be kept clean and oiled occasionally. Referring to the results of the life-time simulation we recommend the exchange of the locator after 1000 cycles at the latest. Furthermore we recommend checking the tool regularly by measuring the dimensions indicated in the specifications of the crimped contact.

WARTUNG

Das Werkzeug muss unbedingt sauber gehalten und gelegentlich geölt werden. Bezugnehmend auf die Resultate des Lebensdauertests empfehlen wir den Austausch der Locator spätestens nach 1000 Zyklen. Weiterhin empfehlen wir, das Werkzeug in regelmäßigen Abständen durch Messen der in der Spezifikation des Crimpkontaktes angegebenen Maße zu überprüfen.

02/15-Rev.0

JST

INSTRUCTION MANUAL BEDIENUNGSANLEITUNG

Crimp Tool
Crimpwerkzeug
CS 10 L - JUCS-2,8/4,8

Application
Anwendungsbereich

For Processing of JST Contacts
Zur Verarbeitung der JST Kontakte
F2.8 STO-1.0(T)-110N
F4.8 STO-1.0(T)-187N
0,5-1,0 mm²



JST

JST



Pos. 1: F 2,8 0,5-1,0 mm²
Pos. 2: F 4,8 0,5-1,0 mm²



Open the tool.
Werkzeug öffnen.




Insert the terminal into the respective profile and close the tool lightly ...

Legen Sie den Kontakt in das entsprechende Profil und schließen Sie das Werkzeug vor ...



... until the contact is held (1. Ratchet Lever).

...bis der Kontakt gehalten wird (1. Rastung).

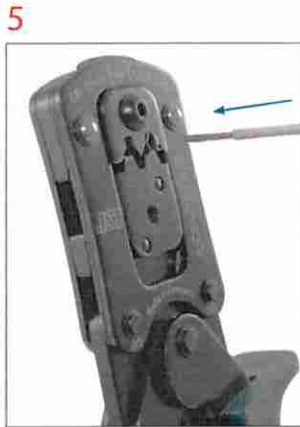


Insert the cable until insulation stop blade.

Leiter bis Iso-Stop Blech einschieben.



Close the tool


Werkzeug schließen

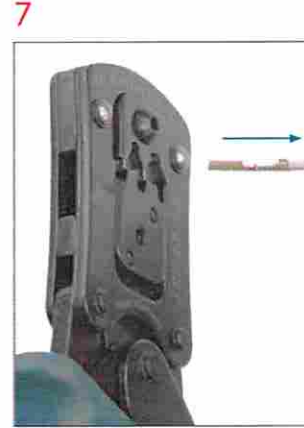

... and remove crimped contact.

... und gecrimpten Kontakt entnehmen.



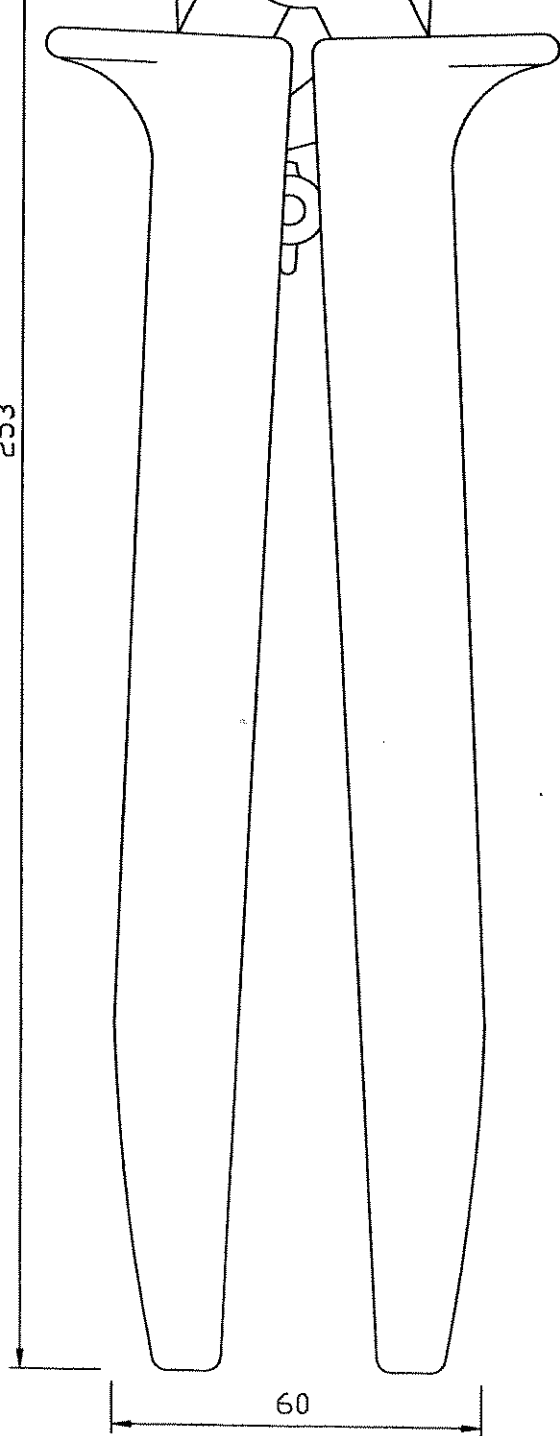

Ratchet release

Easy readjustment
of load

Contact locator with
insulation-stop

Precisely ground
profiles


Ergonomic soft grips
colour: green

Fully recyclable

Applicable terminal:
LTD-1.0T-110N Profile 1
LTD-1.0T-187N Profile 2


Cross section range:
Profile 1: 0.5-1.0mm²
Profile 2: 0.5-1.0mm²

Operating instructions see overleaf

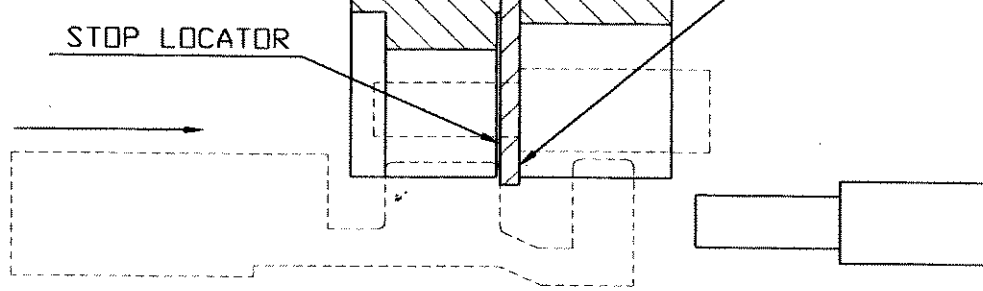

2. CLOSE THE JAWS
ONTO THE TERMINAL.

3. INSERT WIRE INTO
THE CONTACT.

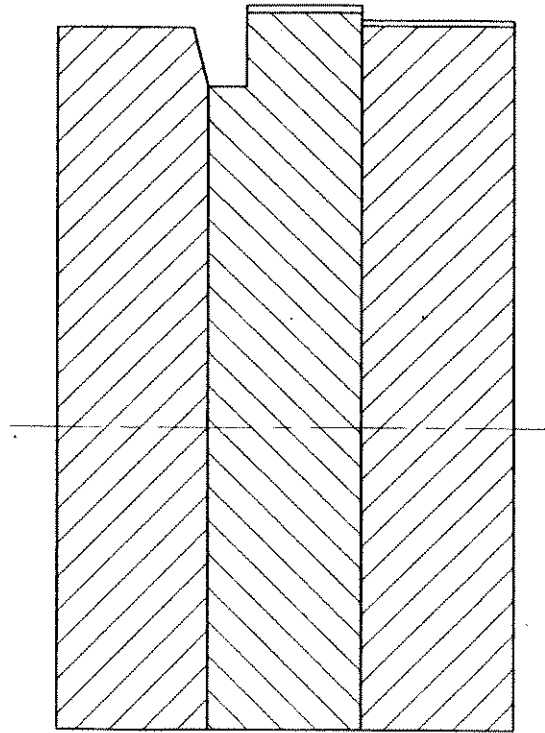

4. SQUEEZE HANDLES
UNTIL AUTOMATIC
RATCHET RELEASES.

5. TAKE CARE WHEN
YOU REMOVE THE
CONTACT FROM
THE DIE.



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [jst manufacturer](#):

Other Similar products are found below :

[GS3-0.5](#) [GS8-6](#) [B5B-XH-A](#) [B5P-VH](#) [B7B-XH-A](#) [B8B-PH-SM4-TB](#) [BM06B-SRSS-TB](#) [FVGS5-6](#) [B2B-ZR-SM4-TF](#) [B34B-PHDSS-B\(LF\)\(SN\)](#) [B3B-ZR-SM4-TF](#) [B4PS-VH](#) [B6B-PH-SM4-TB](#) [B6B-XH-A](#) [B8B-PH-K-S](#) [B8B-ZR-SM4-TF](#) [B8PS-VH](#) [BM04B-SRSS-TB](#) [IDH-KR-12](#) [10HR-4K](#) [WC-ZE2426](#) [WC-691](#) [WC-122](#) [FVDDF5.5-375A \(LF\)](#) [FVGS12-6 \(LF\)](#) [FVWS2-S3.3 \(LF\)](#) [FVWS5.5-5 \(LF\)](#) [B6PS-VH\(LF\)\(SN\)](#) [FNGS12-6](#) [TWE0.5-8](#) [FVGS4-1 \(LF\)](#) [HILR-06VF-1-S](#) [WC-GVH2630](#) [WC-PUD2](#) [S10B-PH-SM4-TB\(LF\)\(SN\)](#) [B2B-EH-A-TW \(LF\)\(SN\)](#) [B4B-EH-A-TW \(LF\)\(SN\)](#) [B4B-XH-TW \(LF\)\(SN\)](#) [B9B-XH-A](#) [BM02B-GHS-TBT](#) [BM03B-GHS-TBT](#) [BM04B-GHS-TBT](#) [BM06B-GHS-TBT](#) [BM10B-GHS-TBT](#) [10FPZ-SM-TF\(LF\)\(SN\)](#) [YRS-852](#) [B04B-VYHSK-M-1](#) [B4B-PH-SM4-GW-TB](#) [B2B-ZR-SM4-TFT\(LF\)\(SN\)](#) [S24B-PADSS-1\(LF\)\(SN\)](#)