

## Features

- Real time clock: month/date/day of the week/hour/minute.
- Alarm time
- Clock with 12/24-hour format.
- Sets a target savings amount.
- Recognizes the inserted coins on your deposit.
- Calculates a running total.
- The rocket takes off and descend after coin deposited.
- Withdrawal and Balance check.
- Deducts the withdrawal amount.

 
## Installing the batteries

Your Rocket Bank runs on 4 "AA" batteries.

1. Use a Phillips screwdriver to loosen the screw of the cover on the bottom of the Rocket Bank.
2. Insert 4 x "AA" batteries into the battery compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw.

### Note:

- When the Rocket bank stops operating properly, the display becomes dim, or the sound becomes weak, replace the batteries in battery compartment marked with CLOCK.
- When the rocket doesn't move, replace batteries in battery compartment marked with MOTOR.

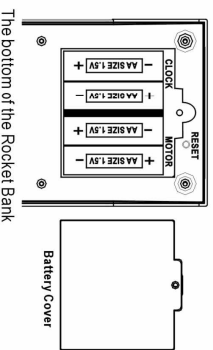


The bottom of the Rocket Bank

## Setting the clock

 1. After installing the batteries, the LCD will display the time mode.
2. To set the time and date, press and hold the SET key for 2 seconds, Year (2007) flashes.
3. To select the current Year, press UP or DOWN key. Press the SET to confirm. Month flashes.
4. To select the current month, press UP or DOWN key. Press the SET to confirm. Date flashes.
5. Repeat the steps to set the date, hour & minutes. After setting the time, the LCD will display 12-HOUR.
6. Press the UP or DOWN key to select 12-HOUR or 24-HOUR format. Press SET to confirm.

**Note:** To return to previous entries during the setup process, press the LEFT or RIGHT key.

## Layout of rocket bank

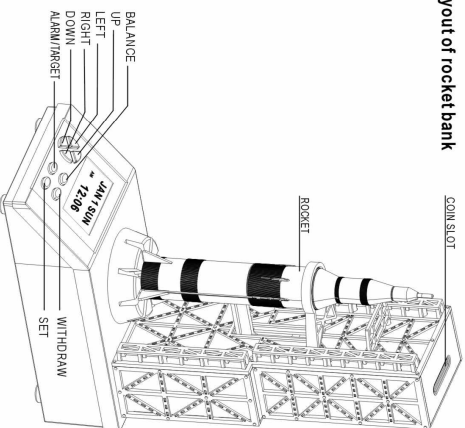

## Setting the alarm time

1. When CLOCK displays, press the ALARM key, the alarm time and ALARM ON or OFF status will be displayed.
2. Press UP or Down key to set ALARM ON or OFF. Note: the symbol (⏰) will appear when the alarm is turned on.
3. To set the alarm time, press the SET key for 2 seconds, alarm hour flashes.
4. Press UP or DOWN to set the alarm hour and then press the SET key to confirm. Minutes flashes.
5. Repeat the steps to set the minutes and press SET key to confirm.
6. The unit returns to the clock mode. Note: The AM/PM indicator will appear when you set the time in 12-hour format.
7. When the alarm time is reached, the rocket will take off and will beep for 90 seconds. To stop the alarm, press any button.

**Note:** To return to previous entries during the setup process, press the LEFT or RIGHT key.

## Setting the target saving amount

1. To enter Target Savings mode, press ALARM/TARGET twice.
2. Press and hold SET for 2 seconds. £ amount flashes.
3. To select target £ amount, up to £99.99, press UP or DOWN key.
4. To confirm target £ amount, press RIGHT key. Pence amount flashes.
5. To select target pence amount, press UP or DOWN key.
6. To confirm target amount, press SET key.
7. When target is reached, "MEET YOUR TARGET" will scroll on the display.

## Making coins deposit

 
To deposit coins, simply insert the coins into the Coin Slot. The Coin Slot recognizes the amount of each coin and counts it into the balance. The rocket will take off with countdown announcement and light flashing when you deposit each coin. When your deposit reaches £399.99, the bank is full and the LCD displays FULL £999.99.

## Checking your balance

Press the BALANCE key. Your current account balance is shown on display.

## Making your withdrawal

1. Press the WITHDRAW key. £ amount flashes.
2. To select £ amount, press UP or DOWN key.
3. To confirm target £ amount, press RIGHT key. Pence amount flashes.
4. To select pence amount, press UP or DOWN key.
5. To confirm withdrawal amount, press SET key.

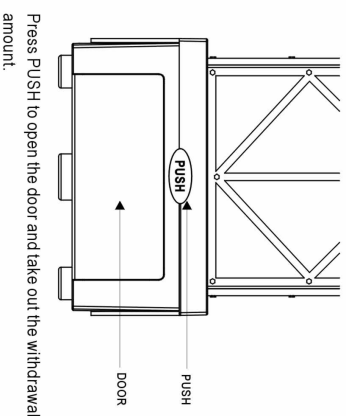

Press PUSH to open the door and take out the withdrawal amount.

## Sound On/Off status

1. Press the UP or DOWN key to enter the SOUND ON (or OFF) status displays.
2. To change sound ON or OFF, press UP or DOWN key, then press SET to confirm.

## Resetting the bank

If your bank is not working properly or does not respond to your input, press RESET on the bottom of the Rocket Bank. All settings will clear. You must set the time, date and target savings amount again.

## Clearing your balance

To clear your balance, press the BALANCE, then press UP or DOWN, confirm by press SET. Your current account will be cleared to zero.

## Battery precautions

1. Alkaline battery recommended.
2. Do not use rechargeable batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable accumulator/batteries are to be removed from the bank before being charged.
5. Rechargeable accumulator/batteries are only to be charged under adult supervision.
6. Different types of battery or new and used accumulators/batteries are not to be mixed.
7. Only batteries of the same or equivalent type as recommended are to be used.
8. Batteries are to be inserted with the correct polarity.
9. Exhausted batteries are to be removed from the bank.
10. The supply terminals are not to be short-circuited.
11. If the bank is not functioning properly please replace the batteries.



Please keep information for future reference.

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [zeon](#) manufacturer:*

Other Similar products are found below :

[Zeon](#)