pushbuttontimer

energybasic

pushbutton timer fitting and operating instructions

pushbuttontimer - two wire (for lighting only)

Product: 350B-1 Two wire

Rating at 240V ac

Incandescent 10A • Compact Fluorescent 10A

- Resistive 10A • Fluorescent 10A • Time Delay 2min - 1h
- 1 Prior to fitting ensure mains power is off and identify the Live In and Switch Live wires. Ensure if fitting into metal back boxes lugs are removed that are not being used.
- 2. Switch the Dip switch Number 4 to the ON position. Set the dip switches to the required time settings (See Diagram 5).
- 3. Fit the Live In and Switch Live into the terminals as marked (See wiring Diagram 1).
- Turn on the mains power.
 Press the button to switch on your lights.
- The product will turn itself off once the required time has elapsed. 6.
- The product can be switched off at anytime by pushing and holding 7 the button for 5 seconds.
- 8. Please ensure device is secured back to the backbox once installation is complete.





NOTE: 2 Wire devices not be used with contactors. Capacitor may be required when switching compact fluorescent or very low power lighting. For example: 2D fittings, energy saving lamps, LED's or any low power consuming loads.

Diagram 1 Wiring diagram for a two wire unit.

Diagram 2

Wiring diagram for two wire additional Switches/PIR into circuit.

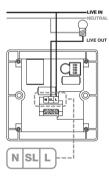

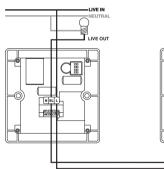


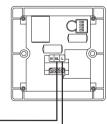


Diagram 5

Please note that the black bar denotes the position of the dip switch.

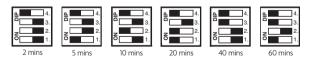

IMPORTANT NOTICE

All wiring should be carried out by a competent person or a qualified electrician and should be fitted to IEE 17th Edition Wiring regulations BS7671:2008.



Call +44 (0) 1675 468222 or click www.elkay.co.uk

Part No. 350B-1 / Jan 2010

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Elkay manufacturer:

Other Similar products are found below :

<u>370B-1</u> <u>550B-1</u> <u>374-DREM</u> <u>374-DMBOX</u> <u>AQUASAFE</u> <u>400A</u> <u>041852X</u> <u>041854F</u> <u>041874R</u> <u>2001/3/CG/3</u> <u>1278</u> <u>1275</u> <u>1276-18</u> <u>2001/4/CG/4</u>