
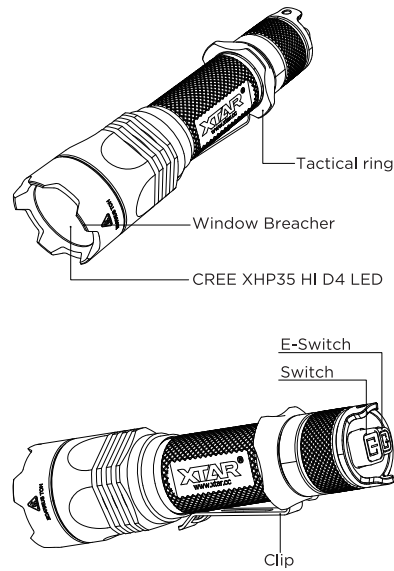


# XTAR®

## TZ28 1500

### Dual Switch Tactical Flashlight

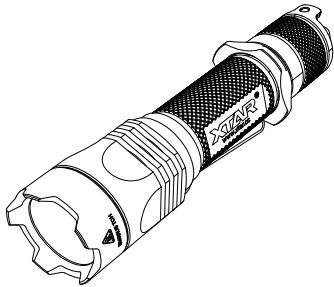

①

## Introduction

TZ28 1500 is a powerful tactical flashlight. One hand operation with dual tactical switches, you have instant access to the high light or strobe mode. Excluding the double layer body, it is impact resistant with four springs. This flashlight also has a series of specialized accessories for the convenience of tactical scenarios, like silent remote switch.

## Technical parameter

ANSI	Turbo	High	Mid	Low	Strobe
	1500lm	400lm	200lm	60lm	1500lm
	1.5hrs	3hrs	7.6hrs	20hrs	/
	340m				
	29200CD				
	1.5m				
	IPX8				
	Φ34mm(head) xΦ25.4mm(body) x 138.8mm(length)				
	116g				

②

# XTAR®

Shenzhen XTAR Electronics Co., Ltd  
5th Floor, No.77 Xinhe Rd, Shangmugu, Pinghu Area,  
Longgang District, Shenzhen, Guangdong, China  
Tel/Fax: (+86)755-25507076 E-mail: info@xtar.cc  
Zip Code: 518111 Website: www.xtar.cc

V2

## Notes:

- Above-mentioned parameters (tested by using XTAR 18650 3500mAh) are approximate and may differ depending on battery and environment.
- Working Voltage: 2.75-8.4V.
- Compatible battery: 1\*18650 & 2\*CR123A.

## Operation

- Install battery.  
Unscrew tail cap, and install the battery with positive pole (+) towards head.
- Instant High Light  
Press the Switch to access Turbo Mode.
- Choose mode  
Press Switch to turn on flashlight, default mode is Turbo, press E-Switch to shift mode, mode cycles regularly as "Turbo-High-Mid-Low".
- Instant Strobe 6Hz (2s) -15Hz (2s)  
When the flashlight is on, long press E-Switch to enters Strobe, 3 seconds to lock Strobe Mode. When flashlight is off, press the E-Switch to enter Strobe Mode, 5 seconds to lock Strobe Mode.

③

## Tips

- The flashlight will gradually reduce the output when the temperature of flashlight is over 60°C.
- Remove battery if the battery is exhausted or flashlight not in use for a long time.
- Please make sure positive pole (+) towards the head.
- Do not wipe the battery with strong corrosive substance.
- Flashlight fails to operate.

Possible Reasons	Solutions
Battery is exhausted or not compatible	Change battery
Battery is installed incorrectly	Make sure positive pole toward the head
Poor contact	1.Clean the contact surface of battery with alcohol 2.Tighten the head or tail cap

- If the light does not continuously output, the possible reason is the poor contact.
- If the light is not high enough when open, the possible reason is the poor contact or low battery voltage.
- For more and updated information, please visit [www.xtar.cc](http://www.xtar.cc).

④

## Customer service

Please provide warranty number to dealer to get after-sales service.

- 15 days free replacement.
- 24 months free repair. If problems develop beyond 24 months, we will offer free repair service but charge for parts used. The distributor will inform you material fee or related freight if any before repair.
- Lifetime technical support.

## Notes:

- Damage caused by misuse or intentional force is not covered by the warranty.
- You are recommended to store warranty info online: register and login [www.xtar.cc](http://www.xtar.cc) - Member Center - Warranty Information.
- Warranty number (9-11 digit) can be found on the package or product.

Global After-sales Email: [service@xtar.cc](mailto:service@xtar.cc)  
US After-sales Email: [serviceus@xtar.cc](mailto:serviceus@xtar.cc)

⑤

## Anti-fake inquiry

- Scratch the anti-counterfeiting label on the package to get 18-digit number.
- Input the number into the query page on [www.xtar.cc](http://www.xtar.cc) (Contact Us - Anti-fake).

**Warning: Do not radiate the light directly towards the eyes, serious injury or blindness could occur by misuse.**

⑥

# X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [LED Panel Mount Indicators](#) category:*

*Click to view products by [Xtar](#) manufacturer:*

Other Similar products are found below :

[607-1312-310F](#) [607-3232-140F](#) [6091M1-24V](#) [6091M5-24V](#) [6091M7-24V](#) [6091QM1-12V](#) [821-0331-503](#) [FL2870C8R](#) [FL2950WL7B](#)  
[FL2950WL8G](#) [FL589WL8R](#) [Q6P3BXXB12E](#) [H8630FBBA3](#) [MPC3GDW6.0](#) [MPC5ADW6.0](#) [DX1091GN](#) [DX1118GN](#) [NL177WL3G](#) [NL276C3G](#)  
[NL2950BWL3G](#) [NL2950CWL2R](#) [NL589WL2R](#) [NL67C3G](#) [NL67C3R](#) [C430ABWC2](#) [2191L1-12V](#) [PB22BM41K](#) [PB22SIM40Y](#) [PB22SIOL0RG](#)  
[PB22SKRS31KC](#) [PB22SPPM41R](#) [PB22SPPM61R](#) [LE177C5B](#) [LE2821H5G](#) [LH1048BSWL3702](#) [LH1048BWL3702](#) [LH382A](#) [LHM62B](#) [SSI-](#)  
[LXH387USBD-150](#) [SSI-LXR4815SOD-150](#) [SSP-LXS110818BA](#) [FL2950BWL7R](#) [FL2950CWL7R](#) [FL2950WL7R](#) [FL2950WL8R](#) [FL2951WL8A](#)  
[FL2951WL8G](#) [FL2951WL8R](#) [FL589C7R](#) [FL67C7R](#)