

SA-027WQ

7-Day Timer Manual



- 12~24 VAC/VDC
- Program up to 60 flexible events
- Holiday function (up to 99 days)
- Easy-to-read backlit LCD
- Adjustable output time
- Programmable security code lock out
- 12 or 24 hr clock format

- 16 Schedules including daily, weekly, weekends, etc.
- Memory saved if power fails
- Backup battery included*
- Covered terminal blocks
- Form C relay output (10A@120VAC/298VDC)
- Egress input terminal *Preserves clock time only. External power must be present for relay to function.


SLI SECO-LARM®



Table of Contents:

Overview	.2	Setting the Time 4
Specifications	.2	Entering Events
Dimensions	.2	Setting Holiday Mode6
Installation	.3	Sample Applications/Wire Diagram7
Setting the Security Code	.3	Troubleshooting
		Also Available from SECO-LARM 8

Overview:

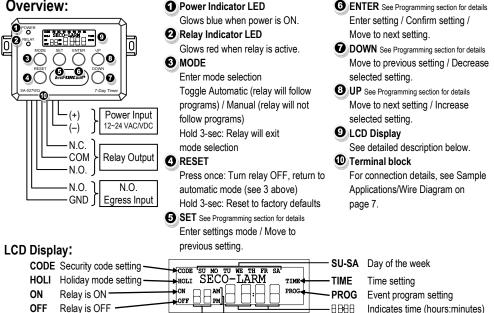


Relay is OFF -NOTE: If both ON & OFF show, event is programmed to 'Pulse' mode.

AM / PM Indicates when set in 12-hr clock format Event # Shows which event is active, or F/P for relay output mode

Specifications:

Operating voltage		12~24 VAC/VDC
Current draw	Standby	15mA@12VDC
	Active	70mA@12VDC
Relay rating		10A@120VAC/28VDC
Backup battery		1 x CR-2016 (included)
Weight		4.6-oz (130g)
Dimensions		4 ³ / ₁₆ " x 3 ¹ / ₁₆ " x 1 ¹ / ₄ " (107 x 78 x 31 mm)

Dimensions:

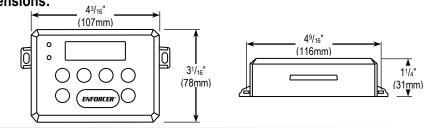

Installation:

- 1. Mount the 7-Day Timer where the alpha-numeric display can be easily seen, and the keys can be pressed.
- 2. Remove the cover from the device. Remove the paper battery protector from the backup battery (CR-2016, included).

NOTE: The paper protector prevents the battery from being drained during product shipment. If the protector is not removed, the backup battery will fail to function.

- 3. Connect the device that will be controlled to the relay N.O. or N.C. and COM terminals. **NOTE:** If connecting the timer to a DC-powered electromagnetic or electric lock, connect a 1N4004 diode (not included) as close as possible to, and in parallel with, the lock (see page 7). This absorbs possible electromagnetic interference to prevent operation of the lock from damaging the timer. A 1N4004 diode is not required for AC-powered locks.
- Connect 12~24 VAC/VDC to the power input terminals marked (+) and (-).
- 5. Ensure the connected device operates within the specifications of the relay.

Egress Input: (optional, switch not included)

- 1. The 7-Day Timer features a N.O. Egress input which can be used with an optional N.O. switch which, when pressed, will cause the 7-Day Timer relay to activate.
- Connect the switch between the N.O. Egress input and ground

 
Setting the Security Code:

- If the security code feature is enabled, a 4-digit code must be entered before performing any operations.
- Use the UP/DOWN keys to input the code, and ENTER/SET to move to the next/previous code digit.
- Entering the incorrect code will return to the main screen.
- The default code is 0000.

· If the security code is enabled, enter

Press ENTER

- · Enters the security code setting
- · CODE is solid
- The first digit of the security code flashes
- Use UP/DOWN keys to select the first digit of the security code



- security code Use the UP key to disable the
- security code

Press SET

the security code

CODE flashes

- CODE will display when security code enabled
- Press ENTER
- If the security code is enabled then enter the new code twice
- If the security code is disabled then the main screen is displayed

- Press ENTER
- Enter the second digit of the security • code
- Repeat for each digit
- The default code is 0000

Press ENTER

- Exits the security code setting •
- Returns to the main screen •


Security Code Reset: To reset the security code to the factory default (0000), press and hold the SET, ENTER, UP & DOWN keys for 3 seconds.

Operating Modes:

- The SA-027WQ has two operating modes, Automatic and Manual.
- In Automatic Mode the SA-027WQ follows programmed events and the ON or OFF icons are solid. This mode is used when programmed events are required.
- In Manual Mode the SA-027WQ does not follow programmed events and the ON or OFF icons are flashing. This mode is used to manually operate the relay.
- Holding the Mode button for 3 seconds switches between the operating modes.

Setting the Time:

- Set the current time in 12- or 24- hour clock format.
- Note: The backup battery will preserve clock time during power failure
- To set the time:

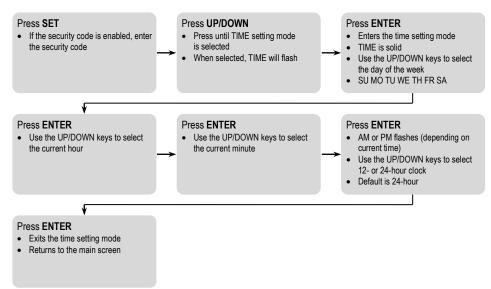


Entering Events:

- The 7-Day Timer can store up to 60 events.
- When an event is active, the event number will show on the LCD.
- In fixed mode, ON or OFF will show on the LCD.
- Fixed mode means the relay will activate with one event and deactivate with another event.
- In pulsed mode, ON and OFF will both show on the LCD.
- Pulsed mode means the relay will activate for a set period of time and then automatically turn off.

NOTE: The timer only executes future events. For example, a Monday 8:00 AM event that is programmed at 10:00 AM on Monday will not execute and come into effect until the following Monday at 8:00 AM.


To create a new event:

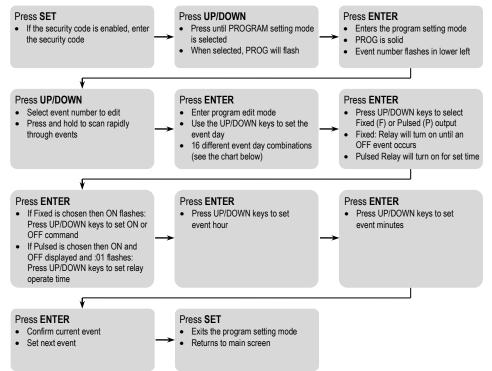

Setting for day of the week can be programmed in 16 different combinations. Combinations, in the order they appear, are as follows: (combination will show onscreen when selected)


	SUNDAY	MOnday	TUesday	WEdnesday	THursday	FRiday	SATURDAY
1	•						
2		•					
3			•				
4				•			
5					•		
6						•	
7							•
8		•	•	•	•	•	
9		•	•	•	•	•	•
10	•	•	•	•	•	٠	•
11		•	•	•			
12					•	•	•
13		•		•		•	
14			•		•		•
15	•						•
16	Disabled						

To disable an event:

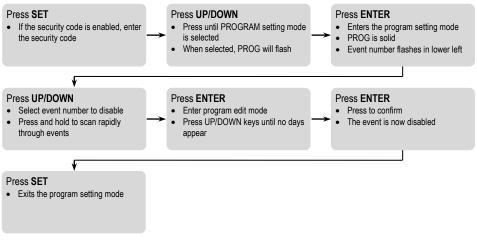

Setting Holiday Mode:


- Holiday mode is used to temporarily suspend all programmed events for up to 99 days.
- Each holiday period is active only once and will not repeat. Holiday duration must be a multiple of 24 hours.
- When holiday mode is active, the number of holiday days remaining are displayed on the LCD.
- Holiday mode will only become active once the start time is reached. For example, if on Monday at 10:00AM a 3-day holiday period is set to begin on Monday at 8:00AM, suspension of events will only begin Tuesday at 8:00AM, and run until Friday at 7:59AM.
- · To schedule a holiday:

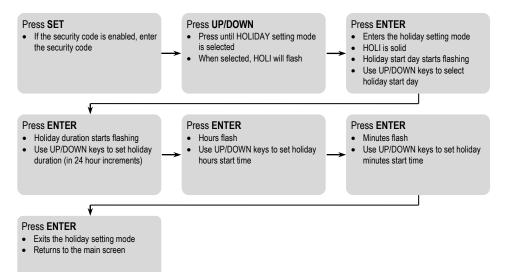

Sample Applications/Wire Diagram:


In this application, the SA-027WQ is used to open and close a gate based on a weekly schedule. The gate is required to remain open from 7:00am to 7:00pm Monday through Friday.

- If the gate is set to automatically close after opening:
 - $_{\odot}\,$ The relay is set in Fixed mode to activate at 7:00am Monday through Friday
 - $\,\circ\,$ The relay is set in Fixed mode to deactivate at 7:00pm Monday through Friday
- If the gate is set to open or close based on a dry contact closure:
 - The relay is set in Pulse mode to activate for :02 seconds at 7:00am Monday through Friday
 The relay is set in Pulse mode to activate for :02 seconds at 7:00pm Monday through Friday
- A wireless remote (such as the SK-919TD1S-UP) activates the wireless receiver (such as the
- SK-910RBQ), which is connected to the egress input of the SA-027WQ. This will activate the gate when the timer is not in use.

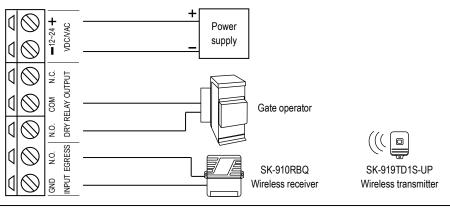

In this application, the SA-027WQ is used to keep an entry door unlocked during normal business hours. The door is to be left unlocked from 8:00am to 5:00pm Monday through Friday.

- The relay is set in Fixed mode to activate at 8:00am Monday through Friday.
- The relay is set in Fixed mode to deactivate at 5:00pm Monday through Friday.
- A fail safe electric door strike (such as the SD-996C-NUQ) is connected between the N.C. and (–) terminals. A 1N4004 diode (not included) must be connected as close as possible to, and in parallel with, the lock.
- A Normally Open (N.O.) spring-loaded switch connected to the egress input of the SA-027WQ allows for egress while the door is locked.

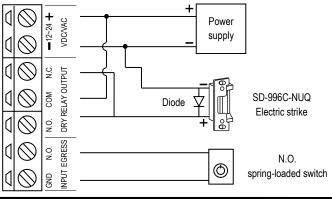

SECO-LARM U.S.A., Inc

Changing the Battery:

- 1. Use one CR-2016 button cell battery.
- 2. Unscrew the rear panel.
- 3. Note the orientation of the button cell battery and remove it.
- Replace the battery with one fresh cell of the same type (CR-2016), in the same orientation as before.
- 5. Replace the rear panel.

Troubleshooting:

Time frequently incorrect	Ensure the 7-Day Timer has a reliable power source.Replace the backup battery.		
Programmed event does not execute	 Ensure the 7-Day Timer is in Automatic Mode (see pg. 4, Operating Modes). Ensure event is correctly programmed. 		

Also Available from SECO-LARM:



WARRANTY This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors.

Copyright © 2015 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606 Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326 Website: www.seco-larm.com E-mail: info@seco-larm.com Made in Taiwan PITSW1 Order Part # 763-177% MiSA-027WQ_150709.docx

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for SECO-LARM manufacturer:

Other Similar products are found below :

SS-090-2H1 ST-2406-5A SL-1301-BAQ/C SA-027WQ SD-7202GC-PT SL-1301-BAQ/B SM-4105-LQ/B 82-12781 E-936-S45RRGQ SM-4103-TQ/W E-941SA-1200 SD-7201GCPE1Q SK-990AQ SS-090-2H0 SM-226R-3Q SD-7202GC-PEQ E-941SA-300RQ SM-4104-TQ/W SM-205Q/BR SR-1212-C2ALQ SM-4601-LQ SA-025Q SL-126Q/C SM-200Q/BR CA-1615-06LQ SS-074Q/BG CA-1515Q SM-4201-LQ SK-91ERSD SM-4303-TQ/W SK-1011-SDQ SM-216Q/GY NE-SE01-020Q CA-1610-3FLQ NJ-P101M-PQ SM-226RQ SS-073Q SL-126Q/R SL-126Q/A SL-1312-SA/R SL-126Q/B SM-204Q/W SM-207-5Q/BR SM-4102-TQ/W SM-4301-TQW CA-1616Q SM-4601-L3Q SL-1301-BAQ/R SM-226LQ SM-226L-3Q