




Model 50-14871 Dual IR Emitter

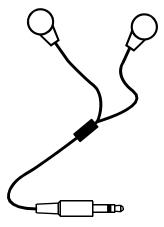


Model 50-14870 Single IR Emitter

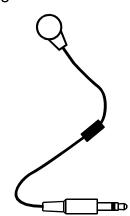


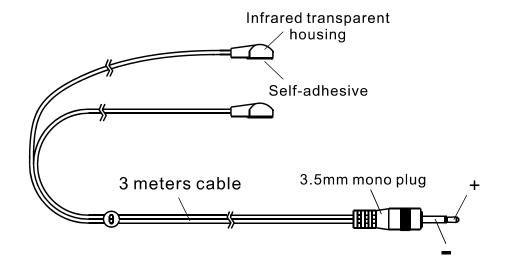

## A. Standard installation

- IR emitter attached directly to IR sensor window.
- 2. Most reliable activation

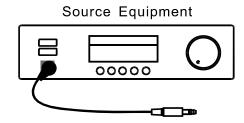

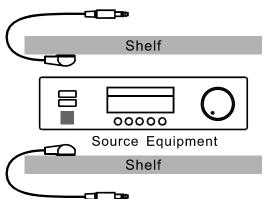


## B. Attach emitter on inside shelf

- Attach emitter on shelf above or below IR sensor.
- Less reliable activation.

## C. Cabinet with door installation

- 1. Attach emitter on door, round shape facing the IR sensor.
- 2. Less reliable activation.

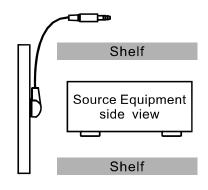

Note: Occasionally, more reliable activation can occur by moving the IR emitter further away from the device. This may be due to improper placement of the emitter, or that the sensor itself is partially obscured. It may also be due to a peculiar remote control unit / sensor combination. Placing the emitter 5~10cm away from the IR sensor can achieve significantly better activation in such cases. Please experiment to achieve optimal activation before securing with the self-adhesive pads.

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Other Tools category:

Click to view products by MCM manufacturer:

Other Similar products are found below:

CR-05FL7--150R CR-05FL7--698K 899-2-KT46 899-5-KT46 CR-0AFL4--332K CR-12FP4--260R CRCW04021100FRT7

CRCW04021961FRT7 5800-0090 CRCW04024021FRT7 CRCW040254R9FRT7 CRCW0603102JRT5 59065-5 00-8273-RDPP 00-8729-WHPP 593033 593058 593072 593564100 593575 593591 593593 011349-000 LTILA506SBLAMNBL CRCW08052740FRT1 LUC-012S070DSM LUC-018S070DSP 599-2021-3-NME 599-JJ-2021-03 00-5080-YWPP 5E4750/01-20R0-T/R LW1A-L1-GL LW1A-P1-GD LW1L-A1C10V-GL LW1L-M1C70-A 0202-0173 00-9089-RDPP 00-9300-RDPP CRCW2010331JR02 01-1003W-8/32-10 601-GP-08-KT39 601-JJ-06 601-SPB 601YSY 602-JJ-03 602SPB 602Z 603-JJ-07-FP 603-JJY-04 604J