

Actuators and accessories





All these parts have to be ordered separately.

	Description colour code	White 1	Red 2	Black 3	Grey 4	Green 5	Blue 6	Amber 7	Yellow 8	Pink 9
	Standard paddle operator for 8H. 17 mm height	8Z0001	8Z0002	8Z0003	8Z0004	8Z0005	8Z0006	8Z0007	8Z0008	
	Short paddle operator for 8H. 14,5 mm height	8Z0491	8Z0492	8Z0493	8Z0494	8Z0495	8Z0496	8Z0497	8Z0498	
	Piano-key actuator for 8H	8Z0121	8Z0122	8Z0123	8Z0124	8Z0125	8Z0126	8Z0127	8Z0128	
	Paddle operator for 8HD	8Z0431	8Z0432	8Z0433	8Z0434	8Z0435	8Z0436	8Z0437	8Z0438	
	Paddle operator for 8M and 8V-M	8Z0011	8Z0012	8Z0013	8Z0014	8Z0015	8Z0016	8Z0017	8Z0018	
	Paddle operator for 8Q and 8V-Q	8Z0051	8Z0052	8Z0053	8Z0054	8Z0055	8Z0056	8Z0057	8Z0058	
	Rocker operator for 8H	8Z0021	8Z0022	8Z0023	8Z0024	8Z0025	8Z0026	8Z0027	8Z0028	
	Rocker operator for 8HD	8Z0441	8Z0442	8Z0443	8Z0444	8Z0445	8Z0446	8Z0447	8Z0448	
	Rocker operator for 8M and 8V-M	8Z0031	8Z0032	8Z0033	8Z0034	8Z0035	8Z0036	8Z0037	8Z0038	
	Rocker operator for 8X	8Z0501	8Z0502	-	-	8Z0505	8Z0506	8Z0507	8Z0508	
	Rocker operator for 8Q and 8V-Q	8Z0071	8Z0072	8Z0073	8Z0074	8Z0075	8Z0076	8Z0077	8Z0078	

	Description colour code	White 1	Red 2	Black 3	Grey 4	Green 5	Blue 6	Amber 7	Yellow 8	Pink 9
	Round tip lever sleeve for 8A, 8F, 8U	8Z0111	8Z0112	8Z0113	8Z0114	8Z0115	8Z0116	8Z0117	8Z0118	8Z0119
	Cone tip lever sleeve for 8A, 8F, 8U	8Z0151	8Z0152	8Z0153	8Z0154	8Z0155	8Z0156	8Z0157	8Z0158	8Z0159
	Round tip lever sleeve for 8B	8Z0131	8Z0132	8Z0133	8Z0134	8Z0135	8Z0136	8Z0137	8Z0138	
	Metal cap for 8E	(Silver) 8Z0091	8Z0092	8Z0093	-	-	8Z0096	-	-	
			8Z0091 silver cap is supplied with the switch free of charge							
	Plastic cap for 8S	8Z0511	8Z0512	8Z0513	8Z0514	8Z0515	8Z0516	8Z0517	8Z0518	
	Rubber cap for 8A, 8F, 8U	-	-	8Z0143	-	-	-	-	-	
	Plastic bezel for 8H, 8H-L	8Z0191	8Z0192	8Z0193	8Z0194	8Z0195	8Z0196	8Z0197	8Z0198	
	Plastic bezel for 8X, 8K-L25	8Z0211	8Z0212	8Z0213	8Z0214	8Z0215	8Z0216	8Z0217	8Z0218	
	Plastic bezel for 8W	8Z0471	8Z0472	8Z0473	8Z0474	8Z0475	8Z0476	8Z0477	8Z0478	

Actuators

All these parts have to be ordered separately.

	Description colour code	White 1	Red 2	Black 3	Grey 4	Green 5	Blue 6	Amber 7	Yellow 8	Pink 9
	Round 15 mm \varnothing 10 mm height button for 8N, 8P, 8R	8Z0061	8Z0062	8Z0063	8Z0064	8Z0065	8Z0066	8Z0067	8Z0068	
	Round 10 mm \varnothing 8 mm height button for 8N, 8P, 8R	8Z0081	8Z0082	8Z0083	8Z0084	8Z0085	8Z0086	8Z0087	8Z0088	
	Round 9 mm \varnothing 3,5 mm height button for 8Y	8Z0421	8Z0422	8Z0423	8Z0424	8Z0425	8Z0426	8Z0427	8Z0428	
	Square button for 8W	8Z0461	8Z0462	8Z0463	8Z0464	8Z0465	8Z0466	8Z0467	8Z0468	