

Adafruit Adalogger FeatherWing

Created by lady ada



https://learn.adafruit.com/adafruit-adalogger-featherwing

Last updated on 2021-11-15 06:46:56 PM EST

Table of Contents

Overview	3
Pinouts	5
Power Pins	5
RTC & I2C Pins	6
SD & SPI Pins	7
Assembly	8
Using the Real Time Clock	10
What is a Real Time Clock?	10
Battery Backup	11
RTC with Arduino	12
• Wiring	12
Talking to the RTC	13
First RTC test	14
Setting the time	15
Reading the time	16
RTC with CircuitPython	17
• Wiring	17
Adafruit CircuitPython Library Install	18
• Usage	19
Setting the time	20
Using the SD Card	21
Formatting under Windows/Mac	22
Basic SD Card Test	22
Next steps!	25
Example logging sketch	25
CircuitPython	28
Adafruit CircuitPython Module Install	28
• Usage	29
Initialize & Mount SD Card Filesystem	29
Reading & Writing Data	31
List Files	32
Logging lemperature	34
Downloads	35
Datasheets and Files	35
Schematic	36
Fabrication Print	36

Overview



A Feather board without ambition is a Feather board without FeatherWings! This is the Adalogger FeatherWing: it adds both a battery-backed Real Time Clock and micro SD card storage to any Feather main board. Using our <u>Feather Stacking Headers</u> (htt p://adafru.it/2830) or <u>Feather Female Headers</u> (http://adafru.it/2886) you can connect a FeatherWing on top of your Feather board and let the board take flight!



This FeatherWing will make it real easy to add datalogging to any of our existing Feathers. You get both an I2C real time clock (PCF8523) with 32KHz crystal and

battery backup, and a microSD socket that connects to the SPI port pins (+ extra pin for CS). Tested and works great with any of our Feathers, based on ATmega32u4, ATmega328P, ATSAMD21, ATSAMD51, nRF52, Teensy, or ESP32/ESP8266.

We recommend the Arduino's default SD library to talk to the microSD card socket. On ESP8266, the SD CS pin is on GPIO 15, on Atmel M0, M4, 328P or 32u4 it's on GPIO 10. You can cut the trace to the default pin and change this to any pin. To use the RTC, <u>use our RTClib library</u> (https://adafru.it/c7r). If you need a <u>precision RTC</u>, check out our DS3231 FeatherWing (http://adafru.it/3028)

Great for any kind of datalogging or even data reading! Some light soldering is required to attach the headers onto the 'Wing but it's a 10 minute task.

Pinouts

Evern though every pin from the Feather is 'doubled up' with an inner header, not all of the pins are actually used!

Power Pins

On the bottom row, the 3.3V (second from left) and GND (fourth from left) pin are used to power the SD card and RTC (to take a load off the coin cell battery when main power is available)

RTC & I2C Pins

In the top right, SDA (rightmost) and SCL (to the left of SDA) are used to talk to the RTC chip.

- SCL I2C clock pin, connect to your microcontrollers I2C clock line. This pin has a 10K pullup resistor to 3.3V
- SDA I2C data pin, connect to your microcontrollers I2C data line. This pin has a 10K pullup resistor to 3.3V

These pins are in the same location on every Feather

There's also a breakout for INT which is the output pin from the RTC. It can be used as an interrupt output or it could also be used to generate a square wave.

Note that this pin is open drain - you must enable the internal pullup on whatever digital pin it is connected to!

SD & SPI Pins

Starting from the left you've got

- SPI Clock (SCK) output from feather to wing
- SPI Microcontroller Out Sensor In (MOSI) output from feather to wing
- SPI Microcontroller In Sensor Out (MISO) input from wing to feather

These pins are in the same location on every Feather. They are used for communicating with the SD card. When the SD card is not inserted, these pins are completely free. MISO is tri-stated whenever the SD CS pin is pulled high

The SDCS pin is the chip select line.

- On ESP8266, the SD CS pin is on GPIO 15
- On ESP32 it's GPIO 33
- On WICED it's GPIO PB5
- On the nRF52832 it's GPIO 11
- On Atmel M0, M4, 328p or 32u4 it's on GPIO 10
- On Teensy 3.x it's on GPIO 10

You can cut the trace to the default pin and change this to any pin by soldering a wire to any available pad.

Assembly

When putting together your Featherwings, think about how you want it to connect, you can use stacking headers:

Or plain female socket headers:

The most common method of attachment for the featherwing is putting stacking or female headers on the Feather mainboard and then putting the Wing on top:

But don't forget, you can also put the stacking headers on the wing and stack the Feather on top of it!

Using the Real Time Clock

What is a Real Time Clock?

When logging data, it's often really really useful to have timestamps! That way you can take data one minute apart (by checking the clock) or noting at what time of day the data was logged.

The Arduino IDE does have a built-in timekeeper called millis() and theres also timers built into the chip that can keep track of longer time periods like minutes or days. So why would you want to have a separate RTC chip? Well, the biggest reason is that mil lis() only keeps track of time since the Feather was last powered - that means that when the power is turned on, the millisecond timer is set back to 0. The Feather doesnt know its 'Tuesday' or 'March 8th' all it can tell is 'Its been 14,000 milliseconds since I was last turned on'.

OK so what if you wanted to set the time? You'd have to program in the date and time and you could have it count from that point on. But if it lost power, you'd have to reset the time. Much like very cheap alarm clocks: every time they lose power they blink 12: 00

While this sort of basic timekeeping is OK for some projects, a data-logger will need to have consistent timekeeping that doesnt reset when the power goes out or is reprogrammed. Thus, we include a separate RTC! The RTC chip is a specialized chip that just keeps track of time. It can count leap-years and knows how many days are in a month, but it doesn't take care of Daylight Savings Time (because it changes from place to place)

This image shows a computer motherboard with a Real Time Clock called the DS1387 (https://adafru.it/aX0). Theres a lithium battery in there which is why it's so big.

The RTC we'll be using is the PCF8523 (https://adafru.it/reb)

Battery Backup

As long as it has a coin cell to run it, the RTC will merrily tick along for a long time, even when the Feather loses power, or is reprogrammed.

Use any CR1220 3V lithium metal coin cell battery:

CR1220 12mm Diameter - 3V Lithium Coin Cell Battery

These are the highest quality & amp; capacity batteries, the same as shipped with the iCufflinks, iNecklace, Datalogging and GPS Shields, GPS HAT, etc. One battery per order...

https://www.adafruit.com/product/380

You MUST have a coin cell installed for the RTC to work, if there is no coin cell, it will act strangely and possibly hang the Arduino when you try to use it, so ALWAYS make SURE there's a battery installed, even if it's a dead battery.

RTC with Arduino

Wiring

Wiring it up is easy, connect it up as shown below.

fritzing

- GND to GND (black wire on STEMMA QT version) on your board
- VCC (red wire on STEMMA QT version) to the logic level power of your board (on classic Arduinos & Metros use 5V, on 3.3V devices use 3.3V)
- SDA to the SDA (blue wire on STEMMA QT version) i2c data pin
- SCL to the SCL (yellow wire on STEMMA QT version) i2c clock pin

There are internal 10K pull-ups on the PCF8523 on SDA and SCL to the VCC voltage

pcfmetro Fritzing

https://adafru.it/A1F

Talking to the RTC

The RTC is an i2c device, which means it uses 2 wires to to communicate. These two wires are used to set the time and retrieve it.

For the RTC library, we'll be using a fork of JeeLab's excellent RTC library, which is available on GitHub (https://adafru.it/c7r). You can do that by visiting the github repo and manually downloading or, easier go to the Arduino Library Manager

File Edit Sketo	h Tools Help			
i2csca	Verify/Compile Upload Upload Using Programmer Export compiled Binary	Ctrl+R Ctrl+U Ctrl+Shift+U Ctrl+Alt+S		
// AUI	Show Sketch Folder	Ctri+K		1
// VERS	Include Library	I	Δ	
// PORP	Add File		Manage Libraries	
// URL:	http://forum.arduino.	.cc/index.ph	Add .ZIP Library	
// Released //	to the public domain		Arduino libraries ArduinoHttpClient	

Type in RTClib - and find the one that is by Adafruit and click Install

💿 Library Manager	×
Type All Topic All Topic III Topic IIII Topic III Topic III Topic III Topic III Topic	
DS3231 by Andrew Wickert, Eric Ayars, Jean-Claude Wippler, Northern Widget LLC Arduino library for the DS3231 real-time clock (RTC) Abstracts functionality for clock reading, clock setting, and alarms for the DS3231 high-precision real-time clock. This is a splice of Ayars' (http://hacks.ayars.org/2011/04/ds3231-real-time-clock.html and Jeelabs/Ladyada's (https://github.com/adafruit/RTClib) libraries. More info	•
RTClib by Adafruit Version 1.2.1 INSTALLED A fork of Jeelab's fantastic RTC library A fork of Jeelab's fantastic RTC library More info Version 1.2.0 TInstal	I
RTCLib by NeiroN by JeeLabs (http://news.jeelabs.org/code/), NeiroN (neiron.nxn@gmail.com) A library that makes interfacing D51302, D51307, D53231, PCF8583, PCF8563, RTC_Millis Real Time Clock modules easy. Including temperature, alarms and memory storage if present. Includes DateTime class implementation and it conversion. More info	
TinyRTCLib by Adafruit A tiny version of RTCLib, for use with TinyWireM A tiny version of RTCLib, for use with TinyWireM More info	*
	Close

There are a few different 'forks' of RTClib, make sure you are using the ADAFRUIT one!

We also have a great tutorial on Arduino library installation at: http://learn.adafruit.com/adafruit-all-about-arduino-libraries-install-use Once done, restart the IDE

First RTC test

The first thing we'll demonstrate is a test sketch that will read the time from the RTC once a second. We'll also show what happens if you remove the battery and replace it since that causes the RTC to halt. So to start, remove the battery from the holder while the Feather is not powered or plugged into USB. Wait 3 seconds and then replace the battery. This resets the RTC chip. Now load up the matching sketch for your RTC

Open up Examples->RTClib->pcf8523

Helloworld	Arduino 1.6.9	AudioZero	•
File Edit Sketch	n Tools Help	Bridge	•
New	Ctrl+N	DHT sensor library	•
Open	Ctrl+O	EEPROM	•
Open Rece	nt I	Firmata	•
Sketchbool	k I	HT1632	•
Examples		LPD8806	•
Close	Ctrl+W	RTClib	datecalc
Save	Ctrl+S	RTCZero	ds1307
Save As	Ctrl+Shift+S	SoftwareSerial	ds1307nvram
D C .	C11 C120 D	SPI	ds1307SqwPi
Page Setup	Ctrl+Shift+P	Temboo	ds3231
Print	Ctrl+P	TinyWireM	pcf8523
Preference	s Ctrl+Comma	USBHost	softrtc
0	Chillio D	WiFi101	•
- DOD EHRDI	Curry	Wire	•

Upload it to your board with the PCF8523 breakout board or FeatherWing connected

Now open up the Serial Console and make sure the baud rate is set correctly at 57600 baud you should see the following:

Whenever the RTC chip loses all power (including the backup battery) it will reset to an earlier date and report the time as 0:0:0 or similar. Whenever you set the time, this will kickstart the clock ticking.

So, basically, the upshot here is that you should never ever remove the battery once you've set the time. You shouldn't have to and the battery holder is very snug so unless the board is crushed, the battery won't 'fall out'

Setting the time

With the same sketch loaded, uncomment the line that starts with RTC.adjust like so:

```
if (! rtc.initialized()) {
   Serial.println("RTC is NOT running!");
   // following line sets the RTC to the date & amp; time this sketch was compiled
   rtc.adjust(DateTime(F(__DATE__), F(__TIME__)));
```

This line is very cute, what it does is take the Date and Time according the computer you're using (right when you compile the code) and uses that to program the RTC. If your computer time is not set right you should fix that first. Then you must press the U pload button to compile and then immediately upload. If you compile and then upload later, the clock will be off by that amount of time.

Then open up the Serial monitor window to show that the time has been set

```
- O X
💿 COM68
                                                           Send
                                                               .
2016/9/5 (Monday) 19:0:17
since midnight 1/1/1970 = 1473102017s = 17049d
now + 7d + 30s: 2016/9/13 7:30:23
                                                               Ξ
2016/9/5 (Monday) 19:0:20
since midnight 1/1/1970 = 1473102020s = 17049d
now + 7d + 30s: 2016/9/13 7:30:26
2016/9/5 (Monday) 19:0:23
 since midnight 1/1/1970 = 1473102023s = 17049d
now + 7d + 30s: 2016/9/13 7:30:29
2016/9/5 (Monday) 19:0:26
since midnight 1/1/1970 = 1473102026s = 17049d
now + 7d + 30s: 2016/9/13 7:30:32
2016/9/5 (Monday) 19:0:29
since midnight 1/1/1970 = 1473102029s = 17049d
now + 7d + 30s: 2016/9/13 7:30:35
Autoscroll
                                     Both NL & CR 👻 57600 baud
```

From now on, you won't have to ever set the time again: the battery will last 5 or more years

Reading the time

Now that the RTC is merrily ticking away, we'll want to query it for the time. Let's look at the sketch again to see how this is done

```
void loop () {
    DateTime now = rtc.now();
    Serial.print(now.year(), DEC);
    Serial.print('/');
    Serial.print(now.month(), DEC);
    Serial.print('/');
    Serial.print(now.day(), DEC);
    Serial.print(" (");
    Serial.print(days0fTheWeek[now.day0fTheWeek()]);
    Serial.print(") ");
    Serial.print(now.hour(), DEC);
    Serial.print(':');
    Serial.print(now.minute(), DEC);
    Serial.print(':');
    Serial.print(now.second(), DEC);
    Serial.println();
```

There's pretty much only one way to get the time using the RTClib, which is to call no w(), a function that returns a DateTime object that describes the year, month, day, hour, minute and second when you called now().

There are some RTC libraries that instead have you call something like RTC.year() and RTC.hour() to get the current year and hour. However, there's one problem where if you happen to ask for the minute right at 3:14:59 just before the next minute rolls over, and then the second right after the minute rolls over (so at 3:15:00) you'll see the time as 3:14:00 which is a minute off. If you did it the other way around you could get 3:15:59 - so one minute off in the other direction.

Because this is not an especially unlikely occurance - particularly if you're querying the time pretty often - we take a 'snapshot' of the time from the RTC all at once and then we can pull it apart into day() or second() as seen above. It's a tiny bit more effort but we think its worth it to avoid mistakes!

We can also get a 'timestamp' out of the DateTime object by calling unixtime which counts the number of seconds (not counting leapseconds) since midnight, January 1st 1970

```
Serial.print(" since 2000 = ");
Serial.print(now.unixtime());
Serial.print("s = ");
Serial.print(now.unixtime() / 86400L);
Serial.println("d");
```

Since there are 60*60*24 = 86400 seconds in a day, we can easily count days since then as well. This might be useful when you want to keep track of how much time has passed since the last query, making some math a lot easier (like checking if it's been 5 minutes later, just see if unixtime() has increased by 300, you dont have to worry about hour changes)

RTC with CircuitPython

Wiring

Wiring it up is easy, connect it up as shown below.

fritzing

- GND to GND on your board
- VCC to the logic level power of your board - every CircuitPython board uses 3.3V
- SDA to the SDA i2c data pin
- SCL to the SCL i2c clock pin

There are internal 10K pull-ups on the PCF8523 on SDA and SCL to the VCC voltage

Adafruit CircuitPython Library Install

To use the RTC sensor with your <u>Adafruit CircuitPython (https://adafru.it/AIP)</u> board you'll need to install the <u>Adafruit_CircuitPython_PCF8523</u> (https://adafru.it/Bvh) module on your board.

First make sure you are running the <u>latest version of Adafruit CircuitPython</u> (https:// adafru.it/Amd) for your board. Next you'll need to install the necessary libraries to use the hardware--carefully follow the steps to find and install these libraries from Adafruit's CircuitPython library bundle (https://adafru.it/zdx). Our introduction guide has a great page on how to install the library bundle (https://adafru.it/ABU) for both express and non-express boards.

Remember for non-express boards like the, you'll need to manually install the necessary libraries from the bundle:

- adafruit_bus_device folder
- adafruit_register folder
- adafruit_pcf8523.mpy

Before continuing make sure your board's lib folder or root filesystem has the adafruit_pcf8523.mpy module, the adafruit_register folder, and the adafruit_bus_device folder copied over.

			vear.	mon. date. nou	r. min. se	c. wdav.	
Computer	• 0	IRCUITPY (G:) IID I			▼ + 7 5	earch lib	Q
Organize 🔻 Share with	•	New folder				8== -	
Subversion	*	Name		Date modified	Туре	Size	
Videos		퉬 adafruit_bus_device		10/29/2017 2:51 PM	File folder		
		adafruit_pcf8523.mpy		10/19/2017 9:12 PM	MPY File		2 KB
Nomegroup		퉬 adafruit_register		10/29/2017 3:25 PM	File folder		
🖳 Computer							
🚢 Local Disk (C:)							
CIRCUITPY (E:)	E						
CIRCUITPY (G:)							
	-						

Usage

To demonstrate the usage of the PCF8523 module you can connect to your board's serial REPL to see the output while saving our example sketch to main.py

Next connect to the board's serial REPL (https://adafru.it/Awz)so you are at the CircuitPython >>> prompt.

Then save this script to main.py (back up or remove whatever was there before)

```
import busio
import adafruit_pcf8523
import time
import board
myI2C = busio.I2C(board.SCL, board.SDA)
rtc = adafruit_pcf8523.PCF8523(myI2C)
days = ("Sunday", "Monday", "Tuesday", "Wednesday", "Thursday", "Friday",
```

```
"Saturday")
if False: # change to True if you want to write the time!
                         year, mon, date, hour, min, sec, wday, yday, isdst
   #
    t = time.struct_time((2017, 10, 29, 15, 14, 15, 0, -1, -1))
   # you must set year, mon, date, hour, min, sec and weekday
   # yearday is not supported, isdst can be set but we don't do anything with it
at this time
    print("Setting time to:", t)  # uncomment for debugging
    rtc.datetime = t
   print()
while True:
    t = rtc.datetime
   #print(t) # uncomment for debugging
   print("The date is %s %d/%d/%d" % (days[t.tm_wday], t.tm_mday, t.tm_mon,
t.tm_year))
   print("The time is %d:%02d:%02d" % (t.tm_hour, t.tm_min, t.tm_sec))
    time.sleep(1) # wait a second
```

Setting the time

The first time you run the program, you'll need to set the time

find these lines:

```
if False: # change to True if you want to write the time!
    # year, mon, date, hour, min, sec, wday, yday, isdst
    t = time.struct_time((2017, 10, 29, 15, 14, 15, 0, -1, -1))
    # you must set year, mon, date, hour, min, sec and weekday
    # yearday is not supported, isdst can be set but we don't do anything with it
    at this time
```

Change the False to True in the first line, and update the time.struct_time to have the current time starting from year to weekday. The last two entries can stay at -1

Re-run the sketch by saving and you'll see this out of the REPL:

	Adafruit Circu	itPython RE	PL	
	main.p	y out	put:	-
	Settin	g tim	e to: struct_time(tm_year=2017, tm_mon=10, tm_mday=29,	
	tm_hou	r=15,	<pre>tm_min=14, tm_sec=15, tm_wday=0, tm_yday=-1, tm_isdst=-1)</pre>	
	The da	te is	Sunday 29/10/2017	
	The ti	me is	15:14:15	
	The da	te is	Sunday 29/10/2017	
	The ti	me is	15:14:16	
	The da	te is	Sunday 29/10/2017	_
	The ti	me is	15:14:17	
	The da	te is	Sunday 29/10/2017	
	The ti	me is	15:14:18	
1				

Note the part where the program says it is Setting time to:

Now you can go back and change the if True to if False and save, so you don't re-set the RTC again.

The script will now output the time and date

Main.py output: The date is Sunday 29/10/2017 The time is 15:14:56 The date is Sunday 29/10/2017 The time is 15:14:57 The date is Sunday 29/10/2017 The time is 15:14:58

Using the SD Card

The other half of the adalogger FeatherWing is the SD card. The SD card is how we store long term data. While the Feather may have a permanent EEPROM storage, its only a couple hundred bytes - tiny compared to a 2 gig SD card. SD cards are so cheap and easy to get, its an obvious choice for long term storage so we use them for the 'Wing!

The FeatherWing kit doesn't come with an SD card but we carry one in the shop that is guaranteed to work (https://adafru.it/aIH). Pretty much any SD card should work but be aware that some cheap cards are 'fakes' and can cause headaches.

4GB Blank SD/MicroSD Memory Card Add mega-storage in a jiffy using this 4 GB micro-SD card. It comes with a SD adapter so you can use it with any of our shields or adapters! Preformatted to FAT so it works out of...

https://www.adafruit.com/product/102

You'll also need a way to read and write from the SD card. Sometimes you can use your camera and MP3 player - when its plugged in you will be able to see it as a disk. Or you may need an <u>SD card reader</u> (http://adafru.it/939). The Wing doesnt have the ability to display the SD card as a 'hard disk' like some MP3 players or games, the Feather does not have the hardware for that, so you will need an external reader!

USB MicroSD Card Reader/Writer - microSD / microSDHC / microSDXC

This is the cutest little microSD card reader/writer - but don't be fooled by its adorableness! It's wicked fast and supports up to 64 GB SDXC cards! Simply slide the card into...

https://www.adafruit.com/product/939

Formatting under Windows/Mac

If you bought an SD card, chances are it's already pre-formatted with a FAT filesystem. However you may have problems with how the factory formats the card, or if it's an old card it needs to be reformatted. The Arduino SD library we use supports both FA T16 and FAT32 filesystems. If you have a very small SD card, say 8-32 Megabytes you might find it is formatted FAT12 which isnt supported. You'll have to reformat these card. Either way, its always good idea to format the card before using, even if its new! Note that formatting will erase the card so save anything you want first

We strongly recommend you use the official SD card formatter utility - written by the SD association it solves many problems that come with bad formatting!

The official SD formatter is available from https://www.sdcard.org/downloads/ formatter_4/ (https://adafru.it/cfL)

Download it and run it on your computer, there's also a manual linked from that page for use

Download the official SD Formatter software for Windows

https://adafru.it/cfL

Basic SD Card Test

The Arduino SD Card library has a built in example that will help you test the Wing and your connections

Open the file listfiles example sketch in the SD library:

		sketch_feb04a Arduino 1.8.13	
<u>File</u> <u>E</u> dit <u>S</u> ketc	h <u>T</u> ools <u>H</u> elp		
New	Ctrl+N		0
Open	Ctrl+0		
Open Recent	•		
Sketchbook	*	to pup anco.	
Examples	•		
Close	Ctrl+W	Built-in Examples	
Save	Ctrl+S	01.Basics	•
Save As	Ctrl+Shift+S	02.Digital	•
Page Setup	Ctrl+Shift+P	03.Analog	•
Print	Ctrl+P	04.Communication	•
Preferences	Ctrl+Comma	05.Control	•
Quit	Ctrl I O	06.Sensors	· •
Quit	Ctri+Q	07.Display	•
		08.Strings	+ · · · · · · · · · · · · · · · · · · ·
		09.USB	•
		10.StarterKit_BasicKit	•
		11.ArduinoISP	•
		Examples for any board	
		Adafruit Circuit Playground	•
		Bridge	•
		Ethernet	•
		Firmata	F
		LiquidCrystal	· F
		SD	Cardinfo
		Stepper	Datalogger
		Temboo	DumpFile
		RETIRED	▶ Files
		Examples for Adafruit Feather M0 Express	listfiles
		Adafruit Zero DMA Library	NonBlockingWrite
tion of the second s		CI_Tests	ReadWrite
9		120	no, Off on /dev/ttyACMU

This sketch will not write any data to the card, just list the contents. This can be very useful when trying to figure out whether an SD card is supported. Before trying out a new card, please try out this sketch!

Scroll to the line where you see **SD.begin()** and change the value in the parentheses to match the chip select (CS) pin for your board.

- On ESP8266, the SD CS pin is on GPIO 15
- On Atmel M0, M4, 328p or 32u4 it's on GPIO 10
- On Teensy 3.x it's on GPIO 10
- On STM32F2/WICED, its on PB5
- On ESP32, it's on GPIO 33
- On nRF52832, it's on GPIO 11
- On nRF52840, it's on GPIO 10

OK, now insert the micro SD card into the FeatherWing and upload the sketch.

Open up the Serial Monitor and you should see a listing of the files and folder layout. The specifics will depend on the card contents, but should look something like:

🔴 🔵 🌒 /de	ev/ttyACM0
1	Send
Initializing SD cardinitialization done. LOST.DIR/ ANDROI-1/ ANDROI-1/ DATA/ DATA/ COMGOD-1.YOU/ FILES/ COMUCA-1.WED/ FILES/ done!	
Autoscroll Show timestamp	Newline 9600 baud Clear output

If you have a bad card, or some other formatting issue, you'll probably see:

e e /dev/tt	уАСМ1				
1					Send
Initializing SD cardinitialization failed!					
🗹 Autoscroll 🔄 Show timestamp	Newline	•	9600 baud	•	Clear output

It couldn't even initialize the SD card. This can also happen if there's a soldering error or if the card is really damaged

If you're having SD card problems, we suggest using the SD formatter mentioned above first to make sure the card is clean and ready to use!

Next steps!

Once you know the SD card works, check out the <u>SD card library</u> (https://adafru.it/ucu) examples, <u>SD library documentation</u> (https://adafru.it/ucu) and <u>Notes</u> (https://adafru.it/ucv)!

Example logging sketch

If you want to try saving data to the SD card in the simplest sketch, try this example. You can adjust the delay() to set how often analog data is read from pin A0 and saved to the SD card. The red LED will blink if there's an error, and the green LED will blink when data is written to the SD card.

```
You will need to change the sketch's SD_CS pin to match the SD card's Chip
Select pin on your Feather!
     #include <SPI.h>
     #include <SD.h>
 4
    // Set the pins used
    #define cardSelect 4
 5
 6
    File logfile;
 9
    // blink out an error code
    void error(uint8_t errno) {
      while(1) {
       uint8_t i;
        for (i=0; i<errno; i++) {</pre>
14
          digitalWrite(13, HIGH);
          delay(100);
           digitalWrite(13, LOW);
17
           delay(100);
18
        }
19
        for (i=errno; i<10; i++) {</pre>
           delay(200);
         }
       }
     }
     // This line is not needed if you have Adafruit SAMD board package 1.6.2+
     // #define Serial SerialUSB
27
    void setup() {
      // connect at 115200 so we can read the GPS fast enough and echo without dr
29
      // also spit it out
       Serial.begin(115200);
       Serial.println("\r\nAnalog logger test");
      pinMode(13, OUTPUT);
34
      // see if the card is present and can be initialized:
       if (!SD.begin(cardSelect)) {
         Serial.println("Card init. failed!");
         error(2);
40
       }
       char filename[15];
41
42
       strcpy(filename, "/ANALOG00.TXT");
```

```
for (uint8_t i = 0; i < 100; i++) {</pre>
43
        filename[7] = '0' + i/10;
44
         filename[8] = '0' + i%10;
45
         // create if does not exist, do not open existing, write, sync after write
46
         if (! SD.exists(filename)) {
47
           break;
48
         }
49
       }
       logfile = SD.open(filename, FILE_WRITE);
       if( ! logfile ) {
         Serial.print("Couldnt create ");
         Serial.println(filename);
         error(3);
       }
       Serial.print("Writing to ");
       Serial.println(filename);
60
       pinMode(13, OUTPUT);
61
       pinMode(8, OUTPUT);
       Serial.println("Ready!");
63
64
     }
66
     uint8_t i=0;
67
     void loop() {
       digitalWrite(8, HIGH);
69
       logfile.print("A0 = "); logfile.println(analogRead(0));
       Serial.print("A0 = "); Serial.println(analogRead(0));
       digitalWrite(8, LOW);
       delay(100);
74
     }
                                                                              view raw
adalogger.ino hosted with • by GitHub
```

If you really want to make sure you save every data point, put a

logfile.flush();

right after the logfile.print's however this will cause the adalogger to draw a lot more power, maybe about 3x as much on average (30mA avg rather than about 10mA)

CircuitPython

Adafruit CircuitPython Module Install

To use a microSD card with your Adafruit CircuitPython board you'll need to install the Adafruit_CircuitPython_SD (https://adafru.it/zwC) module on your board.

First make sure you are running the <u>latest version of Adafruit CircuitPython</u> (https:// adafru.it/Amd) for your board.

Next you'll need to install the necessary libraries to use the hardware--carefully follow the steps to find and install these libraries from Adafruit's CircuitPython library bundle (https://adafru.it/zdx). Our introduction guide has a great page on how to install the library bundle (https://adafru.it/ABU) for both express and non-express boards. Be sure to use the latest CircuitPython Bundle as it includes an updated version of the SD card module with a few necessary fixes!

Remember for non-express boards like the, you'll need to manually install the necessary libraries from the bundle:

- adafruit_sdcard.mpy
- adafruit_bus_device

If your board doesn't support USB mass storage, like the ESP8266, then <u>use a tool</u> <u>like ampy to copy the file to the board</u> (https://adafru.it/s1f). You can use the latest version of ampy and its <u>new directory copy command</u> (https://adafru.it/q2A) to easily move module directories to the board.

Before continuing make sure your board's lib folder or root filesystem has the adafrui t_sdcard.mpy and adafruit_bus_device modules copied over.

Usage

The following section will show how to initialize the SD card and read & write data to it from the board's Python prompt / REPL.

Next <u>connect to the board's serial REPL</u> (https://adafru.it/Awz)so you are at the CircuitPython >>> prompt.

Initialize & Mount SD Card Filesystem

Before you can use the microSD card you need to initialize its SPI connection and mount its filesystem. First import the necessary modules to initialize the SPI and CS line physical connections:

import board
import busio
import digitalio

Next create the SPI bus and a digital output for the microSD card's chip select line (be sure to select the right pin name or number for your wiring):

```
spi = busio.SPI(board.SCK, MOSI=board.MOSI, MISO=board.MISO)
# Use board.SD_CS for Feather M0 Adalogger
cs = digitalio.DigitalInOut(board.SD_CS)
# Or use a digitalio pin like 5 for breakout wiring:
#cs = digitalio.DigitalInOut(board.D5)
```

Now import modules to access the SD card and filesystem:

import adafruit_sdcard
import storage

At this point you're ready to create the microSD card object and the filesystem object:

```
sdcard = adafruit_sdcard.SDCard(spi, cs)
vfs = storage.VfsFat(sdcard)
```

Notice the adafruit_sdcard module has a SDCard class which contains all the logic for talking to the microSD card at a low level. This class needs to be told the SPI bus and chip select digital IO pin in its initializer.

After a SDCard class is created it can be passed to the storage module's VfsFat class. This class has all the logic for translating CircuitPython filesystem calls into low level microSD card access. Both the SDCard and VfsFat class instances are required to mount the card as a new filesystem.

Finally you can mount the microSD card's filesystem into the CircuitPython filesystem. For example to make the path /sd on the CircuitPython filesystem read and write from the card run this command:

storage.mount(vfs, "/sd")

The first parameter to the storage.mount command is the VfsFat class instance that was created above, and the second parameter is the location within the CircuitPython filesystem that you'd like to 'place' the microSD card. Remember the mount location as you'll need it to read and write files on the card!

If the same SPI bus is shared with other peripherals, it is important that the SD card be initialized before accessing any other peripheral on the bus. Failure to do so can prevent the SD card from being recognized until it is powered off or re-inserted.

Reading & Writing Data

Once the microSD card is mounted inside CircuitPython's filesystem you're ready to read and write data from it. Reading and writing data is simple using Python's file operations like <u>open (https://adafru.it/reL), close (https://adafru.it/ryE), read (https://adafru.it/ryE), adafru.it/ryE), and write (https://adafru.it/ryE).</u> The beauty of CircuitPython and MicroPython is that they try to be as similar to desktop Python as possible, including access to files.

For example to create a file and write a line of text to it you can run:

```
with open("/sd/test.txt", "w") as f:
    f.write("Hello world!\r\n")
```

Notice the with statement is used to create a context manager that opens and automatically closes the file. This is handy because with file access you Python you m ust close the file when you're done or else all the data you thought was written might be lost!

The open function is used to open the file by telling it the path to it, and the mode (w for writing). Notice the path is under /sd, /sd/test.txt. This means the file will be created on the microSD card that was mounted as that path.

Inside the context manager you can access the f variable to operate on the file while it's open. The write function is called to write a line of text to the file. Notice that unlike a print statement you need to end the string passed to write with explicit carriage returns and new lines.

You can also open a file and read a line from it with similar code:

```
with open("/sd/test.txt", "r") as f:
    print("Read line from file:")
    print(f.readline())
```

If you wanted to read and print all of the lines from a file you could call readline in a loop. Once readline reaches the end of the file it will return an empty string so you know when to stop:

```
with open("/sd/test.txt", "r") as f:
    print("Printing lines in file:")
    line = f.readline()
    while line != '':
        print(line)
        line = f.readline()
```

There's even a readlines function that will read all of the lines in the file and return them in an array of lines. Be careful though as this means the entire file must be loaded into memory, so if the file is very large you might run out of memory. If you know your file is very small you can use it though:

```
with open("/sd/test.txt", "r") as f:
    lines = f.readlines()
    print("Printing lines in file:")
    for line in lines:
        print(line)
```

Finally one other very common file scenario is opening a file to add new data at the end, or append data. This works exactly the same as in Python and the open function can be told you'd like to append instead of erase and write new data (what normally happens with the w option for open). For example to add a line to the file:

```
with open("/sd/test.txt", "a") as f:
    f.write("This is another line!\r\n")
```

Notice the a option in the open function--this tells Python to add data at the end of the file instead of erasing it and starting over at the top. Try reading the file with the code above to see the new line that was added!

That's all there is to manipulating files on microSD cards with CircuitPython!

Here are a few more complete examples of using a SD card from the Trinket MO CircuitPython guides (https://adafru.it/Bvi). These are great as a reference for more SD card usage.

List Files

Load this into main.py:

```
import os
import adafruit_sdcard
import board
import busio
import digitalio
```

```
import storage
# Use any pin that is not taken by SPI
SD_CS = board.D0
# Connect to the card and mount the filesystem.
spi = busio.SPI(board.SCK, board.MOSI, board.MISO)
cs = digitalio.DigitalInOut(SD_CS)
sdcard = adafruit_sdcard.SDCard(spi, cs)
vfs = storage.VfsFat(sdcard)
storage.mount(vfs, "/sd")
# Use the filesystem as normal! Our files are under /sd
# This helper function will print the contents of the SD
def print directory(path, tabs=0):
    for file in os.listdir(path):
        stats = os.stat(path + "/" + file)
        filesize = stats[6]
        isdir = stats[0] & 0×4000
        if filesize < 1000:</pre>
            sizestr = str(filesize) + " by"
        elif filesize < 1000000:</pre>
            sizestr = "%0.1f KB" % (filesize / 1000)
        else:
            sizestr = "%0.1f MB" % (filesize / 1000000)
        prettyprintname = ""
        for _ in range(tabs):
            prettyprintname += "
                                   11
        prettyprintname += file
        if isdir:
            prettyprintname += "/"
        print('{0:<40} Size: {1:>10}'.format(prettyprintname, sizestr))
        # recursively print directory contents
        if isdir:
            print_directory(path + "/" + file, tabs + 1)
print("Files on filesystem:")
print("========")
print_directory("/sd")
```

Once it's loaded up, open up the REPL (and restart it with ^D if necessary) to get a printout of all the files included. We recursively print out all files and also the filesize. This is a good demo to start with because you can at least tell if your files exist!

Adafruit CircuitPython REPL			
Files on filesystem:			
TeensyDemo.bin	Size:	8.4	MB
SEARCH.HTM	Size:	75.5	KB
fw.bin	Size:	18.0	KB
System Volume Information/	Size:	Θ	by
WPSettings.dat	Size:	12	by
IndexerVolumeGuid	Size:	76	by
test.txt~	Size:	254	by
test.txt	Size:	12	by
binaries/	Size:	Θ	by
2772cipy.bin	Size:	239.6	KB
2772test.bin	Size:	29.6	KB
bootload.bin	Size:	8.2	KB
2772blnk.bin	Size:	18.0	KB

Logging Temperature

But you probably want to do a little more, lets log the temperature from the chip to a file.

Here's the new script

```
import time
import adafruit_sdcard
import board
import busio
import digitalio
import microcontroller
import storage
# Use any pin that is not taken by SPI
SD CS = board.D0
led = digitalio.DigitalInOut(board.D13)
led.direction = digitalio.Direction.OUTPUT
# Connect to the card and mount the filesystem.
spi = busio.SPI(board.SCK, board.MOSI, board.MISO)
cs = digitalio.DigitalInOut(SD_CS)
sdcard = adafruit_sdcard.SDCard(spi, cs)
vfs = storage.VfsFat(sdcard)
storage.mount(vfs, "/sd")
# Use the filesystem as normal! Our files are under /sd
print("Logging temperature to filesystem")
# append to the file!
while True:
    # open file for append
    with open("/sd/temperature.txt", "a") as f:
        led.value = True # turn on LED to indicate we're writing to the file
        t = microcontroller.cpu.temperature
        print("Temperature = %0.1f" % t)
        f.write("%0.1f\n" % t)
        led.value = False # turn off LED to indicate we're done
    # file is saved
    time.sleep(1)
```

When saved, the Trinket will start saving the temperature once per second to the SD card under the file temperature.txt

22	-
23	# Use the filesystem as normal! Our files are under /sd
24	n obe elle i recoyo cem do normater our i reco dre ander pou
24	wint("Lagging tompositive to filesuster")
25	print('Logging temperature to ritesystem')
26	# append to the file!
27	while True:
28	# open file for append
29	<pre>with open("/sd/temperature.txt", "a") as f:</pre>
30	led.value = True # turn on LED to indicate we're writing to the file
	+ = microcontrollor cou tomocraturo
Adafruit Circ	ultPython REPL
Auton	calcad is an Simply anyo files over USP to run them or enter DEDL to disable
Auto-i	etoad is on. Shipty save files over 05b to run them or enter REPL to disable.
main.p	by output:
Loggir	ng temperature to filesystem
Temper	rature = 26.1
Temper	rature = 26.2
Temper	rature = 25.9
Tompor	
remper	ature - 20.0
	Adafruit

The key part of this demo is in these lines:

```
print("Logging temperature to filesystem")
# append to the file!
while True:
    # open file for append
    with open("/sd/temperature.txt", "a") as f:
        led.value = True    # turn on LED to indicate we're writing to the file
        t = microcontroller.cpu.temperature
        print("Temperature = %0.1f" % t)
        f.write("%0.1f\n" % t)
        led.value = False    # turn off LED to indicate we're done
# file is saved
time.sleep(1)
```

This is a slightly complex demo but it's for a good reason. We use with (a 'context') to open the file for appending, that way the file is only opened for the very short time its written to. This is safer because then if the SD card is removed or the board turned off, all the data will be safe(r).

We use the LED to let the person using this know that the temperature is being written, it turns on just before the write and then off right after.

After the LED is turned off the with ends and the context closes, the file is safely stored.

Downloads

Datasheets and Files

- EagleCAD PCB files on GitHub (https://adafru.it/rek)
- Fritzing object in Adafruit Fritzing library (https://adafru.it/c7M)
- PCF8523 product page (https://adafru.it/reb)

Schematic

Fabrication Print

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Adafruit Accessories category:

Click to view products by Adafruit manufacturer:

Other Similar products are found below :

 3209
 3561
 3560
 3562
 2503
 3011
 3048
 2973
 2868
 2958
 2836
 2968
 3610
 3568
 3551
 2858
 3353
 3584
 3484
 2865
 3556
 3559
 3262

 3348
 2499
 2878
 2963
 3219
 3005
 2882
 PGM1202
 02-LDR1
 02-LDR12
 02-LDR13
 02-LDR14
 02-LDR15
 02-LDR2
 02-LDR3
 02-LDR4

 2194
 862
 460
 905
 02-LDR21
 02-LDR22
 02-LDR23
 1008
 1020
 1031