LT3497EDDB

DESCRIPTION

WARNING!

Do not look directly at operating LED.

This circuit produces light that can damage eyes.

Demonstration circuit 1019A is a Dual White LED Driver Converter featuring the LT®3497 in a 3mm x 2mm DFN package. The demo circuit demonstrates small size and low component count in two independent Boost Circuits. It drives two independent LED strings at 20mA from a 3V-10V input. Other features of the LT3497, such as the internal schottky diodes, the high switching frequency and the internal open circuit protection, allow the use of tiny components. Different dimming controls can be implemented on the demo board. Optional N-MOSFET placeholders are provided to test direct PWM dim-

ming. Analog dimming is done via the SHDN/DIMMING CONTROL terminals. Please refer to the quick start procedure. The high side current sensing feature of the LT3497 allows "one wire" current source, i.e. the low side of the LED string can return to ground anywhere.

The LT3497 datasheet gives complete description of the part, operation and application information. The datasheet must be read in conjunction with this quick start guide for working on or modifying the demo circuit 1019A.

Design files for this circuit board are available. Call the LTC factory.

LTC, LT is a registered trademark of Linear Technology Corporation

Table 1. Performance Summary $(T_A = 25^{\circ}C)$

SYMBOL	PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
V _{IN}	Input Supply Range **		3		10	V
I _{OUT}	Output Current		19	20	21	mA
V _{OUT}	Output Voltage			19.5		V
η	Efficiency	V _{IN} =3.6V		72.3		%
V _{OPEN}	CAP pin Over voltage Protection	LED Open	30	32	34	V
IQ	Quiescent Current	V _{IN} = 4.2V, CTRL=ON, LEDs open			15	mA
I _{QSHDN}	Quiescent Current in Shutdown	V _{IN} = 4.2V, CTRL=0FF			10	μΑ
Fs	Switching Frequency		1.8	2.3	2.8	MHz

^{**} The Input Supply Range of the Demo Circuit 1019A is limited by Maximum Input Voltage of the LT3497. Always ensure that this level is not exceeded.



QUICK START PROCEDURE

Demonstration circuit 1019A is easy to set up to evaluate the performance of the LT3497. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

Note: when measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

1. Place jumpers in the following positions to test the circuit:

JP1 ON

JP2 ON

2. With power off, connect the input power supply to V_{IN} and GND.

3. Turn on the power at the input.

Note: Make sure that the input voltage does not exceed 10V.

4. Check for the proper voltages and currents.

Note: If the LEDs do not light up, check the jumper settings.

- 5. Once the proper operations are established, adjust the input within the operating range and observe the parameters of interest.
- 6. To test the filtered PWM dimming or the direct DC dimming, remove the jumper JP1 or JP2, apply the PWM or the DC signal to the SHDN/DIMMING CTRL1 or SHDN/DIMMING CTRL2 and observe the brightness of the LED output.
- 7. To test the direct PWM dimming, follow the Direct PWM Dimming section in the datasheet.

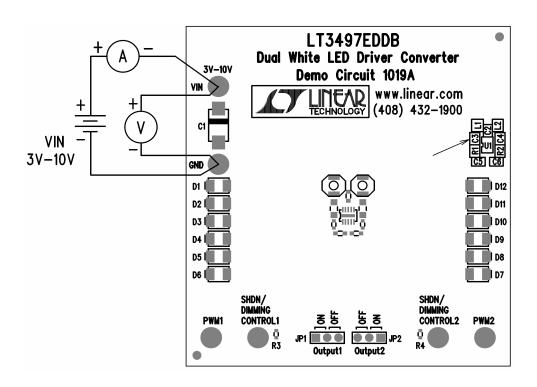


Figure 1. Proper Measurement Equipment Setup




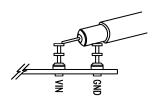


Figure 2. Measuring Input or Output Ripple



QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1019A DUAL WHITE LED DRIVER CONVERTER



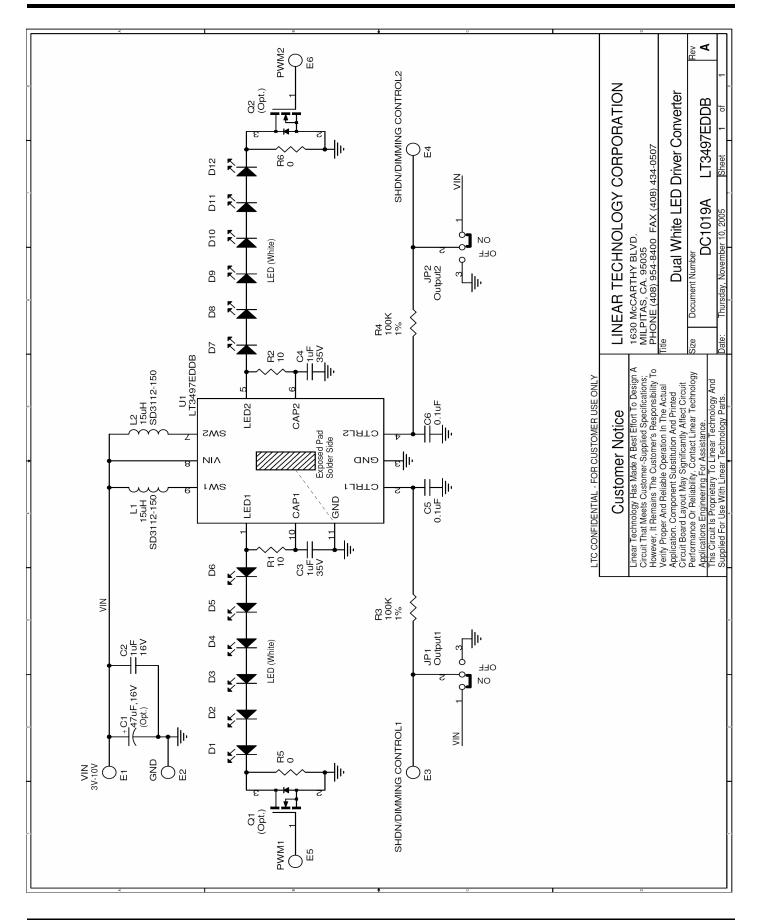

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for LED Lighting Development Tools category:

Click to view products by Analog Devices manufacturer:

Other Similar products are found below:

MIC2870YFT EV ADP8860DBCP-EVALZ LM3404MREVAL ADM8843EB-EVALZ TDGL014 ISL97682IRTZEVALZ LM3508TLEV EA6358NH MAX16826EVKIT MAX16839EVKIT+ TPS92315EVM-516 MAX1698EVKIT MAX6956EVKIT+ OM13321,598 DC986A DC909A DC824A STEVAL-LLL006V1 IS31LT3948-GRLS4-EB 104PW03F PIM526 PIM527 MAX6946EVKIT+ MAX20070EVKIT# MAX21610EVKIT# MAX20090BEVKIT# MAX20092EVSYS# PIM498 AP8800EV1 ZXLD1370/1EV4 MAX6964EVKIT MAX25240EVKIT# MAX25500TEVKITC# MAX77961BEVKIT06# 1216.1013 TPS61176EVM-566 TPS61197EVM TPS92001EVM-628 1270 1271.2004 1272.1030 1273.1010 1278.1010 1279.1002 1279.1001 1282.1000 1293.1900 1293.1800 1293.1700 1293.1500