

DEMO MANUAL DC1371B

FMC High-Speed Data Acquisition Board

DESCRIPTION

Demonstration circuit 1371, along with PScope[™] software, provides a USB based, Windows PC hosted digital data acquisition system supporting high speed data converter products from Linear Technology. The DC1371 must be powered with the 5V power supply that is supplied with the demo board. The PScope evaluation software automatically detects the DC1371 and the demonstration circuit board connected to it. This system provides for fast and easy performance evaluation of high speed ADCs. DC1371 collects samples from high speed demonstration circuits and the PScope software performs various analyses on the data including calculating SNR, SINAD, THD, SFDR and ENOB. The digitized input, an FFT of the collected data, the primitive wave of the sample set or an IFFT of modified frequency domain data is plotted to a display window to facilitate analyzing noise and distortion products and their sources. Figure 1 shows a picture of the DC1371. The DC1371 is connected to the ADC demonstration circuit via a 400 pin FMC connector and to the PC by a mini-USB cable.

Design files for this circuit board are available at http://www.linear.com/demo/DC1371B

∠ , LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks and PScope is a trademark of Linear Technology Corporation. All other trademarks are the property of their respective owners.

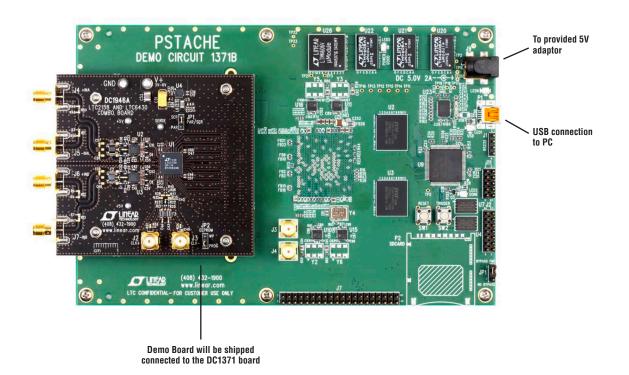


Figure 1. DC1371B Data Collection Board



SCREENSHOT

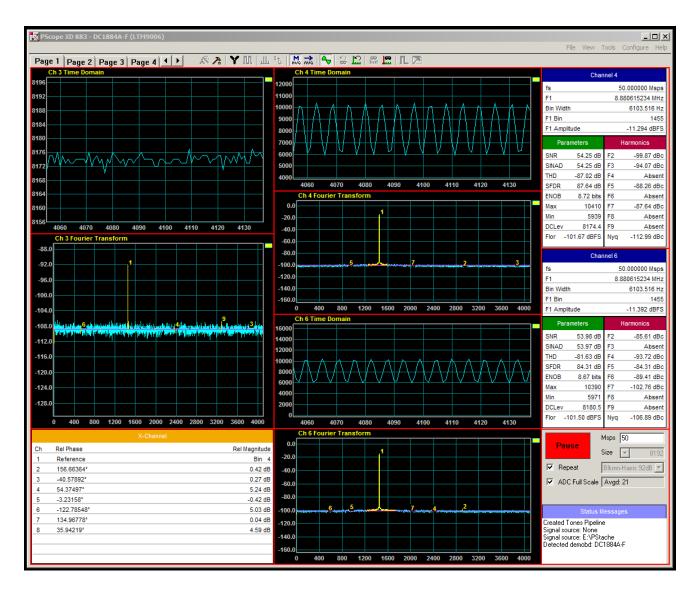


Figure 2. Typical PScope Screen





QUICK START PROCEDURE

To prevent damage to the DC1371, it is important to follow the equipment setup procedure outlined below:

- 1. Do not plug the DC1371 into the PC USB port before running the PScope installation program.
- 2. Download the PScope installation program from http:// www.linear.com/designtools/software/
- 3. Run the PScope installation program and follow the on screen instructions.

NOTE: The PScope evaluation software requires a PC running Windows XP or newer, with an available USB port.

4. Connect the DC1371 to a USB port and supply external power to the DC1371. **Only use the provided 5V power supply.**

- The DC1371 should be provided with an ADC demo board attached. This demo board should not be removed. The DC1371 does not supply power to the ADC demonstration circuit.
- 6. Each ADC demonstration board also comes with a demo manual similar to this one and should be referred to for specific usage details relevant to the demonstration circuit being evaluated. Please refer to it for proper jumper settings, input power requirements and input signal levels and frequency ranges.
- 7. Apply an appropriate conversion clock and analog input signal to the ADC demonstration board.
- 8. The PScope software will automatically find and configure the DC1371 and the connected demo board.



DEMO MANUAL DC1371B

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following AS IS conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction is not exclusive.

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged**.

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Data Conversion IC Development Tools category:

Click to view products by Analog Devices manufacturer:

Other Similar products are found below :

EVAL-AD5063EBZ EVAL-AD5422LFEBZ EVAL-AD7265EDZ EVAL-AD7641EDZ EVAL-AD7674EDZ EVAL-AD7719EBZ EVAL-AD7767-1EDZ EVAL-AD7995EBZ AD9114-DPG2-EBZ AD9211-200EBZ AD9251-20EBZ AD9251-65EBZ AD9255-125EBZ AD9284-250EBZ AD9613-170EBZ AD9627-125EBZ AD9629-20EBZ AD9709-EBZ AD9716-DPG2-EBZ AD9737A-EBZ AD9787-DPG2-EBZ AD9993-EBZ DAC8555EVM ADS5482EVM ADS8372EVM EVAL-AD5061EBZ EVAL-AD5062EBZ EVAL-AD5443-DBRDZ EVAL-AD5570SDZ EVAL-AD7450ASDZ EVAL-AD7677EDZ EVAL-AD7992EBZ EVAL-AD7994EBZ AD9119-MIX-EBZ AD9148-M5375-EBZ AD9204-80EBZ AD9233-125EBZ AD9265-105EBZ AD9265-80EBZ AD9608-125EBZ AD9629-80EBZ AD9648-125EBZ AD9649-20EBZ AD9650-80EBZ AD9765-EBZ AD9767-EBZ AD9778A-DPG2-EBZ ADS8322EVM LM96080EB/NOPB EVAL-AD5445SDZ