

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 728

## 1MHz SYNCHRONOUS STEP-UP DC/DC CONVERTER

### LTC3458EDE

## DESCRIPTION

Demonstration circuit 728 is a 1MHz Synchronous Step-Up DC/DC Converter featuring the LTC<sup>®</sup>3458EDE. The demo circuit demonstrates a DC/DC boost converter, with a 1.5A switch, providing 7V at 200mA to 800mA depending on input voltage. The circuit demonstrates the advantages of output disconnect and inrush current limiting. Small circuit size and low component count make the LTC3458 suitable for use in many space-conscious applications such as handheld instruments, point-of-load converters, USB VBUS Power and OLED

displays. Other integrated features include externally programmable burst mode threshold, peak current limit, soft-start, anti-ringing control and thermal shutdown. NOTE: If supply is going to be used in **Fixed Frequency Mode**, use a 50K Ohm resistor to tie the Burst pin to the output voltage.

**Design files for this circuit board are available. Call the LTC factory.**

LTC is a registered trademark of Linear Technology Corporation

**Table 1. Performance Summary (T<sub>A</sub> = 25°C)**

PARAMETERS	CONDITION	VALUE
Minimum Input Voltage		2.0V
Maximum Input Voltage		6V
Output Voltage V <sub>OUT</sub>	V <sub>IN</sub> = 2V, I <sub>OUT</sub> = 200mA	7V ±3%
Output Voltage V <sub>OUT</sub>	V <sub>IN</sub> = 2.7V, I <sub>OUT</sub> = 300mA	7V ±3%
Output Voltage V <sub>OUT</sub>	V <sub>IN</sub> = 3.3V, I <sub>OUT</sub> = 400mA	7V ±3%
Output Voltage V <sub>OUT</sub>	V <sub>IN</sub> = 4.2V, I <sub>OUT</sub> = 550mA	7V ±3%
Output Voltage V <sub>OUT</sub>	V <sub>IN</sub> = 5V, I <sub>OUT</sub> = 700mA	7V ±3%
Output Voltage V <sub>OUT</sub>	V <sub>IN</sub> = 6V, I <sub>OUT</sub> = 800mA	7V ±3%
Typical Output Ripple V <sub>OUT</sub>	V <sub>IN</sub> = 3.3V, I <sub>OUT</sub> = 400mA	20mV <sub>p-p</sub>
Typical efficiency	V <sub>IN</sub> = 4.2V, I <sub>OUT</sub> = 300mA	87.5%

C9 used only when operating supply with long inductive input leads.

## QUICK START PROCEDURE

Demonstration circuit 728 is easy to set up to evaluate the performance of the LTC3458EDE. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

**NOTE:** When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output

voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

1. Place jumpers in the following positions:

**JP1 On, JP2 Auto On.**

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 728

## 1MHz SYNCHRONOUS STEP-UP DC/DC CONVERTER

2. With power off, connect the input power supply to Vin and GND.

3. Turn on the power at the input.

**NOTE:** Make sure that the input voltage does not exceed 6V.

4. Check for the proper output voltages.

**NOTE:** If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

**NOTE:** Once the proper output voltages are established, adjust the loads within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

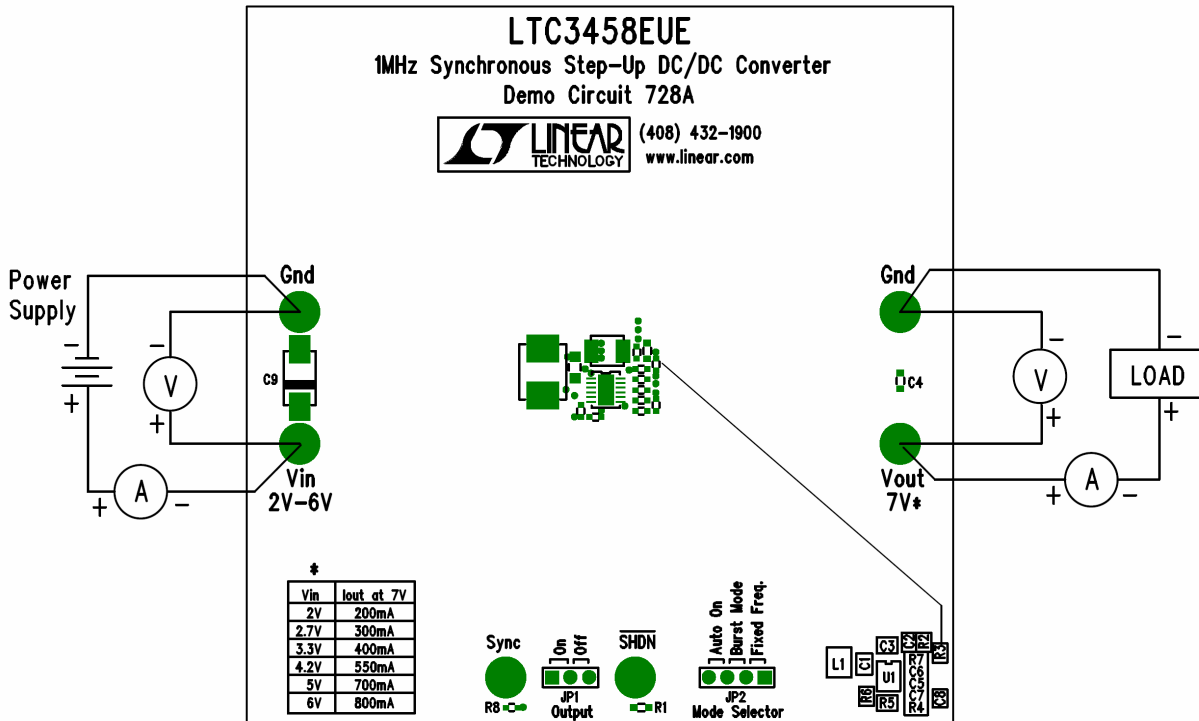


Figure 1. Proper Measurement Equipment Setup


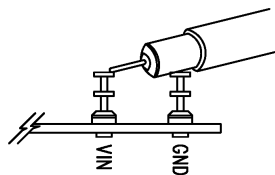


Figure 2. Measuring Input or Output Ripple

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 728

## 1MHz SYNCHRONOUS STEP-UP DC/DC CONVERTER

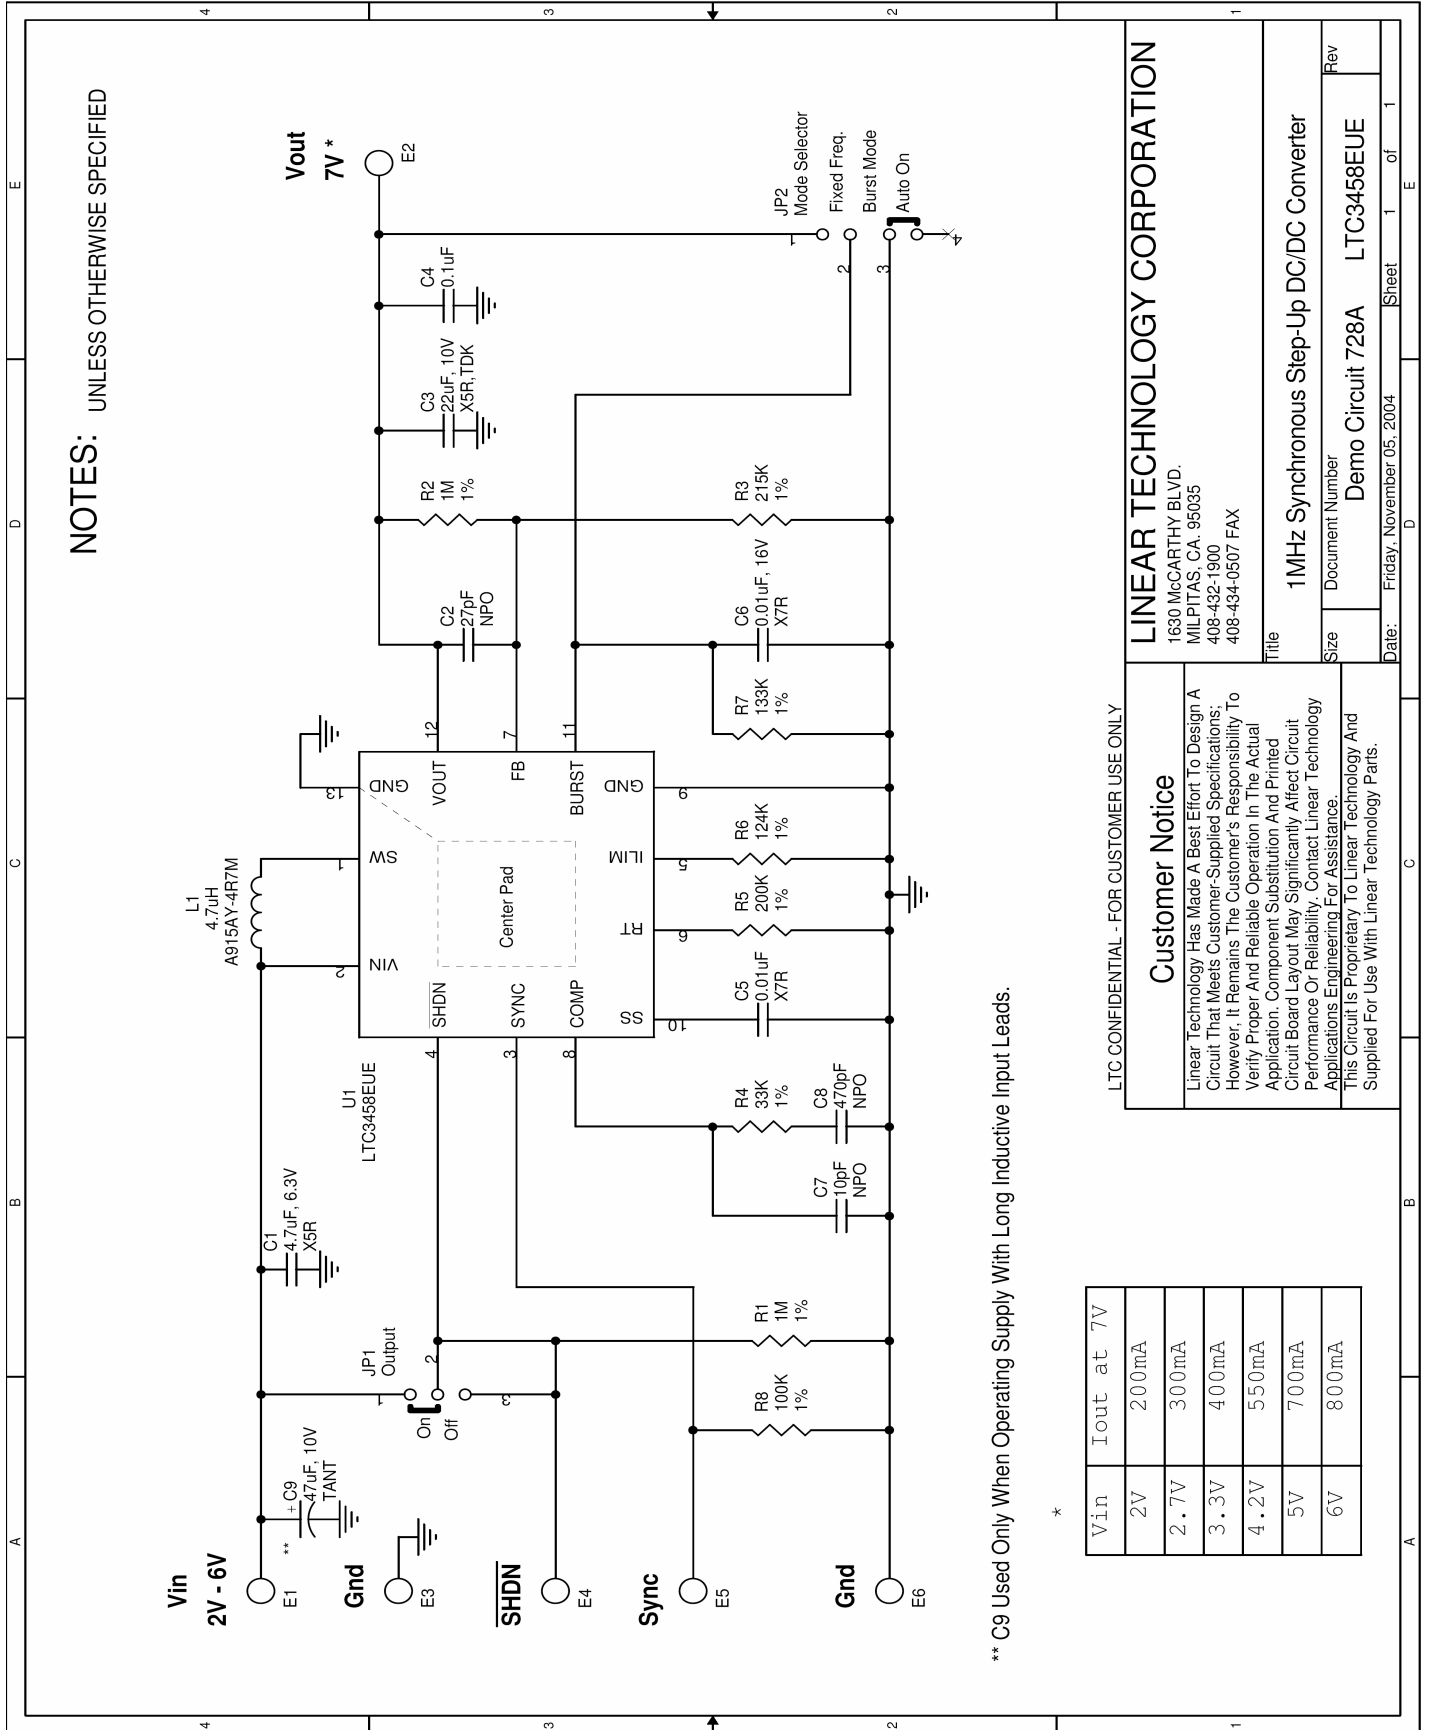

LTC CONFIDENTIAL - FOR CUSTOMER USE ONLY

**LINEAR TECHNOLOGY CORPORATION**  
 1630 McCARTHY BLVD.  
 MILPITAS, CA. 95035  
 408-432-1900  
 408-434-0507 FAX

**1MHz Synchronous Step-Up DC/DC Converter**

Document Number: **LTC3458EUE**

Date: Friday, November 05, 2004

Sheet 1 of 1

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Power Management IC Development Tools](#) category:*

*Click to view products by [Analog Devices](#) manufacturer:*

Other Similar products are found below :

[EVAL-ADM1168LQEBZ](#) [EVB-EP5348UI](#) [MIC23451-AAAYFL EV](#) [MIC5281YMME EV](#) [DA9063-EVAL](#) [ADP122-3.3-EVALZ](#) [ADP130-0.8-EVALZ](#) [ADP130-1.2-EVALZ](#) [ADP130-1.5-EVALZ](#) [ADP130-1.8-EVALZ](#) [ADP1714-3.3-EVALZ](#) [ADP1716-2.5-EVALZ](#) [ADP1740-1.5-EVALZ](#) [ADP1752-1.5-EVALZ](#) [ADP1828LC-EVALZ](#) [ADP1870-0.3-EVALZ](#) [ADP1871-0.6-EVALZ](#) [ADP1873-0.6-EVALZ](#) [ADP1874-0.3-EVALZ](#) [ADP1882-1.0-EVALZ](#) [ADP199CB-EVALZ](#) [ADP2102-1.25-EVALZ](#) [ADP2102-1.875EVALZ](#) [ADP2102-1.8-EVALZ](#) [ADP2102-2-EVALZ](#) [ADP2102-3-EVALZ](#) [ADP2102-4-EVALZ](#) [ADP2106-1.8-EVALZ](#) [ADP2147CB-110EVALZ](#) [AS3606-DB](#) [BQ24010EVM](#) [BQ24075TEVM](#) [BQ24155EVM](#) [BQ24157EVM-697](#) [BQ24160EVM-742](#) [BQ24296MEVM-655](#) [BQ25010EVM](#) [BQ3055EVM](#) [NCV891330PD50GEVB](#) [ISLUSBI2CKIT1Z](#) [LM2744EVAL](#) [LM2854EVAL](#) [LM3658SD-AEV/NOPB](#) [LM3658SDEV/NOPB](#) [LM3691TL-1.8EV/NOPB](#) [LM4510SDEV/NOPB](#) [LM5033SD-EVAL](#) [LP38512TS-1.8EV](#) [EVAL-ADM1186-1MBZ](#) [EVAL-ADM1186-2MBZ](#)