

## Datasheet

For complete technical information about this product, including installation instructions, application requirements and guidelines, technical specifications, and accessories, go to [www.bannerengineering.com](http://www.bannerengineering.com) and search 174868.

- In-Series Diagnostics (ISD) provides detailed status and performance data from each connected safety device which can be accessed with an HMI or similar device
- Intuitive, icon-based programming with drag-and-drop PC configuration simplifies device setup and management
- Supports a wide range of safety devices, eliminating the need to buy and stock safety relay modules dedicated to specific safety devices
- Two six-amp safety relay outputs, each with three N.O. sets of contacts
- Ten inputs, including four that can be used as non-safe outputs
- Automatic Terminal Optimization (ATO) can increase the inputs from 10 to up to 14
- Industrial Ethernet two-way communication
  - 256 virtual non-safe status outputs
  - 80 virtual non-safe inputs (reset, on/off, cancel off-delay, mute enable)
- Optional SC-XM3 external drive for fast swap and quick configuration without a PC

Model	Description
SC10-2roe	Configurable safety relay controller - 10 inputs (4 convertible), two 3-channel safety relay outputs, industrial ethernet



**Note:** Configuration software is required.  
The software is available at [www.bannerengineering.com/safetycontroller](http://www.bannerengineering.com/safetycontroller).

## SC10-2 Features and Indicators

Connection points are push-in spring clamp connectors.

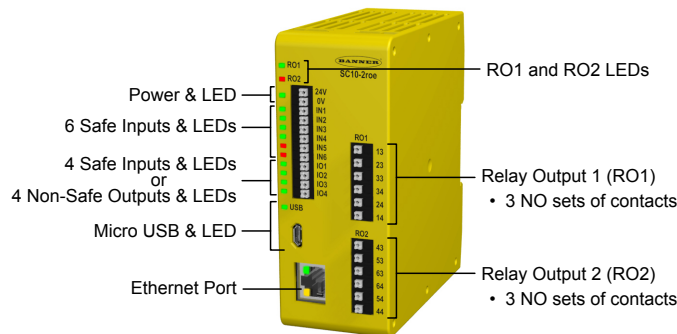


Figure 1. Features and Indicators

## Responsibilities of Qualified Personnel

To access the Banner Safety Controller instruction manual (p/n 174868):

- Go to [www.bannerengineering.com](http://www.bannerengineering.com) to download the manual in the language you require; or
- Call Banner at 1-888-373-6767 or call your local Banner Representative to request a manual



### WARNING:

It is the responsibility of the Qualified Personnel to:

- Carefully read, understand, and follow the information in the XS/SC26-2 instruction manual
- Perform a risk assessment of the specific machine guarding application
- Determine what risk reduction measures are appropriate per the results of the risk assessment
- Properly install, configure, and then verify that the risk reduction measures are working as intended
- Periodically re-verify, as needed, that the risk reduction measures are working as intended

**Failure to follow any of these responsibilities may potentially create a dangerous condition that could lead to serious injury or death.**

Pour accéder au manuel d'utilisation Banner Safety Controller (réf. 174868):

- Rendez-vous sur le site [www.bannerengineering.com](http://www.bannerengineering.com) pour télécharger le manuel dans la langue de votre choix, ou
- Contactez Banner au 1-888-373-6767 ou appelez votre représentant Banner local pour demander le manuel.



**WARNING:**

Il incombe au personnel qualifié de:

- Lire avec attention, bien comprendre et suivre les instructions du manuel du système XS/SC26-2
- Effectuer une évaluation des risques de l'application de protection spécifique à la machine
- Identifier les mesures de limitation du risque appropriées en fonction des résultats de l'étude de risques
- Installer et configurer correctement les dispositifs de protection destinés à limiter le risque puis vérifier qu'ils fonctionnent de la façon prévue
- Vérifier périodiquement, s'il y a lieu, que ces dispositifs de protection fonctionnent toujours comme il se doit

**Le non-respect de l'une de ces responsabilités peut potentiellement créer une condition dangereuse pouvant entraîner des blessures graves, voire mortelles.**

So beziehen Sie die Bedienungsanleitung für den Banner Safety Controller (Ident-Nr. 174868):

- Laden Sie die Anleitung in der gewünschten Sprache von unserer Website ([www.bannerengineering.com](http://www.bannerengineering.com)) herunter oder
- fordern Sie die Anleitung telefonisch bei der Banner-Hotline unter der Rufnummer +1-888-373-6767 oder bei einer Banner-Vertretung in Ihrer Nähe an.

**WARNING:**

Es liegt in der Verantwortung des qualifizierten Personals,

- Die Informationen in der Anleitung für den XS/SC26-2 gründlich durchzulesen, zu verstehen und zu befolgen
- Eine Risikobeurteilung der spezifischen Maschinenschutzanwendung durchzuführen
- Ermitteln, welche Maßnahmen zur Risikominderung aufgrund der Ergebnisse der Risikobeurteilung angemessen sind
- Das gesamte Schutzsystem fachgerecht installieren, konfigurieren und anschließend auf die bestimmungsgemäße Funktion überprüfen
- Je nach Bedarf regelmäßig nachprüfen, ob die Maßnahmen zur Risikominderung wie beabsichtigt funktionieren

**Die Nichtbeachtung einer dieser Verantwortlichkeiten kann zu gefährlichen Zuständen führen, die zu schweren oder tödlichen Verletzungen führen können.**

Per accedere al manuale di istruzioni dello Banner Safety Controller (codice 174868):

- Andare al sito [www.bannerengineering.com](http://www.bannerengineering.com) per scaricare il manuale nella lingua desiderata; oppure
- Contattare Banner al numero telefonico 1-888-373-6767 oppure il rappresentante Banner locale per richiedere un manuale

**WARNING:**

È responsabilità della Personale Qualificato:

- Leggere attentamente, assicurarsi di avere compreso e seguire le indicazioni riportate nel manuale di istruzioni del XS/SC26-2
- Eseguire una valutazione dei rischi dell'applicazione di protezione della macchina specifica
- Determinare quali misure di riduzione del rischio sono appropriate in base ai risultati della valutazione del rischio
- Installare e configurare correttamente il sistema, quindi verificare che le misure di riduzione del rischio assicurino i risultati previsti
- Ricontrollare periodicamente, in base alla necessità, che tali misure di riduzione del rischio continuino ad assicurare i risultati previsti

**La mancata osservanza di una qualsiasi di queste responsabilità può potenzialmente creare una condizione pericolosa che potrebbe causare lesioni gravi o mortali.**

Para obtener el manual de instrucciones del Banner Safety Controller (p/n 174868):

- Visite [www.bannerengineering.com](http://www.bannerengineering.com) para descargar el manual en el idioma que necesite; o
- Llame a Banner al 1-888-373-6767 o llame a su representante local de Banner para solicitar un manual

**WARNING:**

Es responsabilidad del personal calificado:

- Leer con atención, entender y seguir la información en el manual de instrucciones de la XS/SC26-2
- Realizar una evaluación de riesgos que incluya la aplicación de protección de la máquina específica
- Determinar qué medidas de reducción de riesgos son apropiadas según los resultados de la evaluación de riesgos
- Instalar, configure y luego verifique correctamente que las medidas de reducción de riesgos funcionan según lo previsto
- Vuelva a verificar periódicamente, según sea necesario, que las medidas de reducción de riesgos funcionan según lo previsto

**El incumplimiento de cualquiera de estas responsabilidades puede crear potencialmente una condición peligrosa que podría provocar lesiones graves o la muerte.**

## Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: [www.bannerengineering.com](http://www.bannerengineering.com).

For patent information, see [www.bannerengineering.com/patents](http://www.bannerengineering.com/patents).

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Safety Controllers](#) category:*

*Click to view products by [Banner](#) manufacturer:*

Other Similar products are found below :

[SMS31](#) [SMS20](#) [AT-FM-10K](#) [ISS-105](#) [2702171](#) [FS1A-C11S](#) [SC10-2ROE](#) [SC26-2](#) [SC26-2D](#) [SC26-2DE](#) [SC26-2E](#) [SC-IM9C](#) [SR-IM-9A](#)  
[XS26-2D](#) [XS26-2DE](#) [XS26-2E](#) [XS26-ISDd](#) [XS2RO](#) [XSECAT](#) [81580504](#) [G9SP-N10D](#) [HR2S-301P](#) [44531-0010](#) [DST1-ID12SL-1](#) [DST1-](#)  
[MD16SL-1](#) [G9SP-N10S](#) [G9SP-N20S](#) [NXCSG320](#) [1051328](#) [1190012](#) [1190017](#) [2700994](#) [2701625](#) [2916493](#) [2985631](#) [2985688](#) [2986012](#)  
[2986229](#) [2986232](#)