

Data Sheet

In-Circuit ESR & DC Resistance Capacitor Tester

Model 881

Model 881 is a new portable In-Circuit ESR Meter, the new compact hand-held tester can be used to measure the equivalent series resistance of electrolytic capacitors in or out of circuit and can also be used to measure low value non-inductive resistors. Model 881 is a must for anyone that tests or trouble shoots printed circuit boards.

- Measures ESR with a range of 0.1 to 30 ohms
- Three color front panel chart shows ESR readings of Good, Fair, and Bad
- Measures DC Resistance with a range of 0.1 to 30 ohms
- Automatically calibrates internal signal
- 15mVp-p Output test voltage (will not turn on any solid-state devices)
- Includes a one-handed tweezers test probe
- Uses a standard 9VDC battery as power source



Specifications	Model
	881
Open circuit probe voltage	15mV pp
Output test frequency	100 KHz sine wave
Measures ESR	
ESR range Ω	0.1 – 30 (25 segment LED bar scale)
	Beeps from 1 to 5 beeps depending on ESR of capacitor
Measures DC Resistance	
DC Resistance range Ω	0.5 – 30 flashing the LED
Power	
	One 9V battery or an external AC adapter (9V DC 100mA 5.5mm x 2.1mm center pin+)
Power drain	10mA typical
Dimensions	1.5" x 3.8" x 5.7"

B&K Precision Corporation

22820 Savi Ranch Parkway, Yorba Linda, CA 92887
Tel: 714-921-9095, Fax: 714-921-6422
www.bkprecision.com

Specifications subject to change without notice

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Component Testers](#) category:

Click to view products by [B&K Precision](#) manufacturer:

Other Similar products are found below :

[410-413](#) [FLUKE 9062](#) [BK894](#) [BK895](#) [BK880](#) [2840](#) [2841](#) [BK2840](#) [BK2841](#) [BK830C](#) [570A](#) [C.A 6608](#) [C.A 6609](#) [815](#) [FLUKE-9040EUR](#)
[881](#) [891](#) [895](#) [894](#) [AK57X](#) [770734](#) [ET30A](#) [LCR200](#) [LCR203](#) [PRT200](#) [UM200](#) [T5-H5-1AC-KIT/US](#) [SRL-10](#) [VT-1100](#) [69127](#) [RT310](#) [VS-](#)
[AVT-C08-L10E](#) [1212598](#) [PRM-5](#) [T3LCR1002](#) [T3LCR1300](#) [T3LCR1100](#) [VS-AVT-RKBB2](#) [VS-AVT-RKBB3](#) [VS-AVT-RKBB4](#) [NCVT-](#)
[4IR](#) [LCR55A](#) [ET30B](#) [ET40B](#) [VS-AVT-C08-L10](#) [ET26B](#) [ET23B](#) [ET38](#) [ET25](#) [ET60](#)