# **DuplineSafe** Safety Relay Output Module Type GS 3830 0143



# **Product Description**

DuplineSafe relay output module approved according to IEC/EN 61508-SIL3, IEC/ EN 62061-SIL3 and ISO/EN 13849-1 PL e by TÜV. The module monitors up to 63 DuplineSafe input modules, type number GS751021xx. The NO relay contacts are only in the closed position if a valid "safe state" signal is received from all the Safety Input modules being monitored. The module can be configured to operate with automatic or manual restart after the safety relays have been released. A non-safe status output is available for connection to external equipment, e.g. a PLC. The Module must be configured prior to installation by means of the DuplineSafe configuration unit GS73800080.

## **Output Specifications**

Safety output Contact type Contact material Switching voltage Switching capacity	2 x NO Relay Forced contact Ag-alloy, gold plated 250 VAC/VDC 6 A AC-1 at 230 V 3 A AC-15 at 230V 5 A DC-13 at 24V
Response time 1 From input contact of safety input module opens to safety relay releases	max 300ms
Response time 2 From input contact of safety input module closes to safety relay activates	max 600 ms
Status output	1 NPN transistor
	Output ON when fault detected
Safety approved	No
Voltage	< 30 VDC
Current	< 50 mA
Voltage drop	< 2 V
Short-circuit protection	No A LVAC
Isolation Output-Dupline®	4 kVAC

### Safety Specifications

) <sup>-6</sup> ) <sup>-9</sup> /h
1



- Safety relay that monitors up to 63 Safety Input Modules
- Safety output available on 2 separate relay outputs (NO)
- Safety approved according to IEC/EN 61508-SIL3, IEC/EN 62061-SIL3 and ISO/EN 13849-1 PL e
- Approval authority: TÜV Rheinland Group
- cÜLus approved
- Automatic or manual restart
- Status output for external equipment (e.g. PLC)
- Operates on a standard Dupline® network
  It is possible to use DuplineSafe modules and standard
  Dupline® modules on the same bus
- H8-housing
- For mounting on DIN-rail (EN 50022)
- LED-indication for supply, relay status, manual restart ready and Dupline® carrier
- AC power supply
- Configuration with GS73800080

Ordering Key	GS 3830
DuplineSafe H8-Housing Output module	

### Type Selection

Supply	Ordering no. DuplineSafe Safety Input Module	
230 VAC	GS 3830 0143 230	

### **General Specifications**

Power ON delay	< 10 s
Environment Degree of protection Pollution degree Operating temperature Storage temperature	IP 20 3 (IEC 60664) -25°C to 50°C -30°C to 70°C
Humidity (non-condensing)	20 to 80%
Mechanical resistance Shock Vibration  Terminals Tightening torque	15 G (11 ms) 2 G (6 to 55 Hz) Screwterminals 0.8 Nm
Housing Dimensions Mounting	H8-housing (144 x 77 x 70 mm) DIN-rail
Approvals	IEC/EN 61508-SIL3 IEC/EN 62061-SIL3 ISO/EN13849-1 PL e TÜV Rheinland Group cULus

Note: The GS38300143 must be de-energized (power off) before programming til module

# **Supply Specifications**

Power Supply	230 VAC +/- 15% 115 VAC +/- 15%
Frequency Power consumption Power dissipation	45 to 65 Hz 4 VA 3 W




### **Indicators**

Supply OK Dupline® OK	LED, green LED, yellow
Relay status	LED, red
Manual restart ready Configuration mode	LED, red LED's, all flashing

### **Input Specifications**

Manual restart Open loop voltage Short-circuit current Contact resistance	1 NO Contact 5 V 100 μA < 1 kΩ
Cable length	max. 2 m
Dielectric voltage Inputs – Dupline®	None

### **Wiring Diagram**

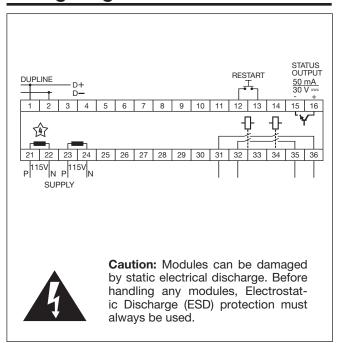


### **Mode of Operation**

The Safety Output module GS38300143 monitors up to 63 Safety Input modules, type number GS751021xx. Each Safety Input module is monitoring the status of one potential-free contact in a safety device, e.g. an emergency stop palm button or pull cord switch. The Safety Input modules are continuously transmitting on the Dupline® bus the status of the safety contacts using a dynamic signaling principle on two Dupline® channel addresses (please refer to GS751021xx datasheet for more details).

During configuration of the Safety Output module, the user must define on which Dupline® channel addresses Safety Input modules shall be monitored. If all the configured Safety Input modules are sending a valid "safe-state" signal, then the relay contacts of the Safety Output module will be closed. In any other situation (non-safe signal received from one or more Safety Input modules or bus fault), the relay contacts will

be open, thus keeping the system in a safe state. Find below a principle diagram of a DuplineSafe system.

### **The Channel Generator**

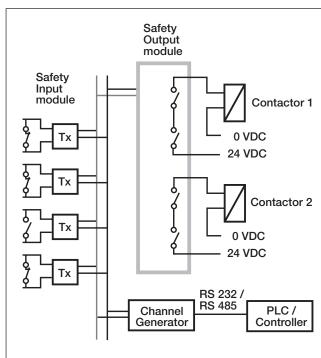

DuplineSafe Principle Diagram

Any type of Dupline® Channel Generator can be used, as this component is not part of the safety function. However, it is important to

note that all Dupline® channel addresses used for Safety Input modules must be monostable. Split I/O mode and intelligent channel functions are not allowed. If this rule is not obeyed, the relay contacts of the Safety Output module will remain in the open position in any situation.

#### **Combined Systems**

It is allowed to use standard Dupline® modules on the channel addresses not used for safety signals, thus allowing combined systems.

# Monitoring from a PLC, PC or Text Display

There are two products available for interfacing a DuplineSafe system to a PLC, PC, Text Display or Touchscreen. One possibility is the Profibus-DP gateway (GS38910125), the other possibility is the small Modbus interface GSTI50 for Text displays and Touchscreens. Using these products, it is possible to monitor the



### Mode of Operation (cont.)

status of all the inputs of the Safety Input modules from e.g. a PLC or Text Display. It is not allowed to perform any control function on the channel addresses used for safety signals.

#### **Automatic or manual restart**

Two different operation modes for restart can be configured. A restart is needed whenever the Safety output has been brought to the safe state (relay contacts open). If "automatic restart" is selected then the Safety Output module will automatically close the relay contacts as soon as a valid "safe-state" signal is received from all the Safety Input modules. If "manual restart" is selected, an activation of the "manual restart" input is required to make a restart, and the restart will only happen if all Safety Input modules are sending a "safe-state" signal.

#### Status output

The status output is ON when a fault or a safety transmitter is actuated. This output can be used as an indication by using a LED or buzzer/horn to sound an alarm.

#### **Synchronization Channel**

The synchronization channel is used by the Safety Relay to send out a synchronization signal to the Safety Input modules on the bus. Therefore, all the Safety Input modules and the Safety Relay, which together are performing a safety function, must be coded for the same synchronization channel. But in case there is already

another safety output module on the bus sending a synchronization signal on this channel, then this signal can be used by other safety output modules.

#### Configuration of the Safety Output module

Prior to installation, the Safety Output module needs to be configured by the DuplineSafe configuration unit GS73800080. The following parameters need to be selected:

Number of channels on the Dupline® bus

The "number of channels" is actually selected on the channel generator, but the Relay Output Module need to know this figure to ensure correct operation.

Channel addresses of Safety Input modules to be monitored

Each Safety Input Module is using two channel addresses to send its signal. The possible selections are in the range A3/A4 .. P7/P8. It must be defined which channel addresses the Safety Output module shall monitor. (Please note that the channel address A1/A2 is not allowed in the system).

Synchronization channel

Please refer to above description

Please refer to the user manual for the DuplineSafe Configuration Unit GS73800080 for detailed instructions on how to configure the Safety Output module GS38300143 to perform the desired function.

### **DuplineSafe - System Characteristics and Rules**

#### Reaction time

The reaction time for the total Dupline® safety-loop depends of the number of Dupline® channels. The response time can be calculated as:

Reaction time on relay release (worst-case): 2 x Number of Dupline® channels + 40 [ms]

Note: Reaction time is for the total Dupline® safety-loop; from a safety input goes to non-safe state until the output relay is released.

Reaction time on relay activate (worst-case): 4 x Number of Dupline® channels + 80 [ms]

Note: Reaction time is for the total Dupline® safety-loop; from a safety input goes to safe state until the output relay is activated

#### **Topology**

The Dupline® system has free topology, so cable branches can freely be made at any point in the system. There are no specif-

ic length restriction on cable branches.

#### Cable types

A non-shielded twisted pair cable with a cross-section of 1.5 mm2 is recommended, but the Dupline® bus can also run on cable without twisting and with lower cross-sections. However, the rules mentioned below must be obeyed.

#### Cabling rules

The Dupline® system is an extremely robust transmission system, but the following rules should be obeyed:

Rule no. 1

The two Dupline® wires must be "floating" (none of the two wires may be connected to any other potential). Specifically it should be made sure that the Dupline® common is not connected to protective earth, e.g. through the power supply.

Rule no. 2

If the longest cable path exceeds 1.5 km a DT01 ter-

mination unit needs to be installed at the point farthest away from the channel generator.

If above rules are not obeyed, noise may be induced in the system, and as a result the relay contacts of the safety output module will remain in the open position.

### Distance, cable and number of Safety input modules

It is not always the full capacity of 63 Safety Input modules can be utilized. It depends on the cable type and the length of the cable. The following rule applies:

Total current x cable loop resistance < 3,7 V

The total current is the summarized current consumption of all Dupline®-powered modules on the bus. A Safety Input module typ. uses 1 mA.

Cable loop resistance = 2 x Length of cable (km) x resistance/km (for the cable type used)

Please note that the "length of cable" in this calculation is not necessarily the total length of cable used, it is the cable path from the channel generator to the farthest Safety Input module. In other words, only the longest cable path counts.

If the above rule is not obeyed, the relay contacts of the Safety Output module will remain open in any situation.

Example: How many safety Input modules can be installed on a 3 km of 1.5 mm2 cable?

Cable loop resistance = 2 x 3 km x 13,6  $\Omega$ /km = 81,6  $\Omega$  Max total current = 3,7 V / 81,6  $\Omega$  = 45,3 mA.

Conclusion: In this system the max capacity is 45 Safety Input modules, since each input module uses 1 mA.



### **DuplineSafe Safety Procedure**

In order to ensure correct safety function of a Dupline®Safe system, the steps below need to be carried out:

- 1. Identify the exact number of Safety Input modules required
- Make a table defining the channel address of each Safety Input module (addresses to be selected in the range A3/A4 ..P7/ P8)
- Physically allocate the number of Safety Input modules required and program them one by

one according to the address table, using the Dupline®-Safe Configuration unit GS73800080.

- 4. Configure carefully the Safety Output module to monitor exactly the channel addresses selected for the Dupline® Input modules
- 5. Connect all the Safety Input modules and the Safety Output module to the Dup-

line® two-wire bus and bring all the inputs to the safe state.

- 6. Now the Safety Relay Output should have closed the contacts. If this is not the case, please review if the addressing of the safety input modules and the configuration of the safety output module complies
- ty output module complies with each other. If this does not solve the problem, please check that all the DuplineSafe rules have been obeyed.
- 7. Now check each individual Safety Input module by:
- a. Remove the bus connection from Safety

- Input module and check that the safety relay output releases.
- Re-connect the safety input module to the bus and open the input contacts. Check that the safety relay output releases

When all safety input modules have been checked this way, the DuplineSafe system is ready to operate.

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Sensor Fixings & Accessories category:

Click to view products by Carlo Gavazzi manufacturer:

Other Similar products are found below:

F03-01 SUS304 BINIL 8000-5130 FH-AP1 PH-1-10M PH-1-20M PH-2-30M AC201 R4 ADI-LC3S EC18-WELL PBT420-100R PC
15015 K35-4 A-1923 SS-12143 STA12 AP4-T PH-1-50M R6 D01051301 43912557-020 MF-1 D=3.2 BGN-035 E39-L7 ZX-SB11

D01070602 606072 606075 Y92ES12PVC4A10ML Y92ES12PVC4S5ML SA9Z-F11 Z49-SF1 ZFV-XMF2 E4R-R12A-CS3M010 28810-2

ZX-SW11E V3 CCS-PL-LDR2-70 E4R-R12A-CS3M020 BS-1T CHITAN F03-01 CHITAN CCS-PD2-1012 ZX-SFW11E V3 PH-2-90M

PH-2-5M XMLZL008 AC244 28810-1 PH-1-40M SS-12225 32043-500