Accessories Sensor Tester Type ST-03





• NAMUR (EN 50 227)

- 2-wire DC
- 3-wire DC
- 4-wire DC

Product Description

The fastest way to verify the main function on your sensor. The tester can be used for: Namur (EN 50 227), 2wire DC, 3-wire DC and 4-wire DC. Connect your sensor to the terminals on the sensortester. The sensor-type (NPN or PNP) and output status NO (normally open) and (normally closed) is shown on the correspondent LED. Red LED for NPN and green for PNP. A buzzer will tell you if the output is active.

Fault function on the tester can be: Wrong sensor (e.g. AC sensors), defect sensor. The wire is not connected correct. The fuse in the tester is burned. The batteri is flat.

For connection se the wiring diagram on the sensor tester. To replace the batteries (2x9V, e.g. PP3) or fuse (100mA f) remove the screw on the backside of the sensor tester.




ST-03

Type Selection

Ordering number

ST-03

Wiring Diagram

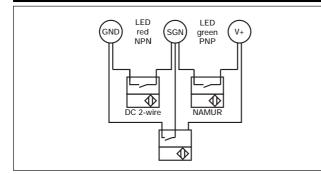

Terminals			
Sensortype	GND	SGN	V+
NAMUR	-	BU(2)	BN(1)
DC 2-wire NO	BU(4)	BN(1)	-
DC 2-wire NC	BU(2)	BN(1)	-
DC 3-wire NO	BU(3)	BK(4)	BN(1)
DC 3-wire NC	BU(3)	BK(2)	BN(1)
DC 4-wire NO	BU(3)	BK(4)	BN(1)
DC 4-wire NC	BU(3)	WH(2)	BN(1)

(.) refers to the pin numbers.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Sensor Fixings & Accessories category:

Click to view products by Carlo Gavazzi manufacturer:

Other Similar products are found below :

 F03-01 SUS304 BINIL
 8000-5130
 FH-AP1
 PH-1-10M
 PH-1-20M
 PH-2-30M
 AC201
 R4
 ADI-LC3S
 EC18-WELL
 PBT420-100R
 PC

 15015
 K35-4
 A-1923
 SS-12143
 STA12
 AP4-T
 PH-1-50M
 R6
 D01051301
 43912557-020
 MF-1
 D=3.2
 BGN-035
 E39-L7
 ZX-SB11

 D01070602
 606072
 606075
 Y92ES12PVC4A10ML
 Y92ES12PVC4S5ML
 SA9Z-F11
 Z49-SF1
 ZFV-XMF2
 E4R-R12A-CS3M010
 28810-2

 ZX-SW11E V3
 CCS-PL-LDR2-70
 E4R-R12A-CS3M020
 BS-1T
 CHITAN
 F03-01
 CHITAN
 CCS-PD2-1012
 ZX-SFW11E V3
 PH-2-90M

 PH-2-5M
 XMLZL008
 AC244
 28810-1
 PH-1-40M
 SS-12225
 32043-500