



Workstation Continuous Mini Monitor Operation, Installation, and Maintenance



Figure 1. Jewel® Workstation Continuous Mini Monitor.

Description

The Jewel® Workstation Continuous Mini Monitor independently monitors the operator and the worksurface. The instant an operator’s wrist strap or cord fails, the monitor will issue audible and visual alarms alerting the user of the problem. In the same manner, the unit also confirms that a path to ground of less than 500 megohms exists from the ESD worksurface.

The Jewel® Workstation Continuous Monitor is a Single Conductor Impedance Sensing Continuous Monitor which per ESD Handbook TR20.20 section 5.3.9.2.1 “a small AC voltage is used in a detection circuit designed to eliminate false alarms and adjustment. They use the phase difference between current and voltage to detect changes in impedance of the grounding cord, wristband and person. No adjustments are required.”

Per ESD Handbook ESD TR20.20 section 5.3.2.4.4, “Typical test programs recommend that wrist straps that are used daily should be tested daily. However, if the products that are being produced are of such value that knowledge of a continuous, reliable ground is needed, and then continuous monitoring should be considered or even required.”

The Jewel® Workstation Continuous Mini Monitor is available in the following model.

Model	Color	Input/Output Voltage AC	Calibration
19212	Sapphire	120/24	NIST

Advantages Of Continuous Monitoring Over Periodic Testing:

“When considering constant [or continuous] monitors, the equipment cost including the wrist strap, maintenance and training cost, labor time for performing wrist strap tests, and the potential failures due to non-functional wrist straps should be considered.

A broken wrist strap may expose products to ESD over an entire shift if it is checked only at shift change with wrist strap checker.” (ESD TR 12-01 Section 4.2 Selection Considerations)

The Jewel® Workstation Continuous Monitor eliminates the need for periodic wrist strap tests and logging. Continuous monitoring is superior to periodic or pulsed testing, and can save a significant amount of money in testing costs and rejected product. Periodic testing detects failures after ESD susceptible products way have been manufactured. The costs of dealing with the resulting catastrophic or latent defects can be considerable. Jewel® Workstation Continuous Mini Monitors eliminate the need for operators to test wrist straps and log the results; by their function, these monitors satisfy the ISO 9000 and ANSI/ESD S20.20 test logging. ANSI/ESD S20.20 Section 6.2.2.2 Personnel Grounding Guidance states “A log should be maintained which verifies that personnel have tested their personal grounding devices.” Per ANSI/ESD-S1.1 Annex A Section 6.1.3 “Daily (wrist strap system) testing may be omitted if constant monitoring is used.” Per ANSI/ESD-S1.1 Annex A Frequency of Functional Testing, “The wrist strap system should be tested daily to ensure proper electrical value. Daily testing may be omitted if constant monitoring is used.”

Park Snap

The audible alarm is designed to alert both operator and supervisor. The Park Snap feature provides a means for an operator to disconnect when normally leaving the work area, without the audible alarm sounding, and wrist cord storage (visual red LED will illuminate). When the operator touches the Park Snap, the audible alarm is disabled for about 8-10 seconds. The operator can remove the wrist strap cord and attach socket of the cord to Park Snap for storage. The operator can separate the coil cord from the wrist band and attach the coil cord snap to the park snap for convenient storage. The coil cord may also be removed from the jack on the Jewel® monitor without the alarm sounding. Once the coil cord is in the park position, the operator ground status light will remain red.

Wave Distortion Detection Technology Provides True 100% Continuous Monitoring

Wave distortion impedance circuitry monitors current/voltage phase shifts and provides true 100% continuous monitoring. Electrical current will lead voltage at various points due to the combinations of resistance and capacitive reactance. By monitoring these “distortions” or phase shifts, the Jewel® Workstation Continuous Mini Monitor will reliably determine if the circuit is complete.

Wave distortion technology can be referred to as “vector impedance monitoring”. This description is valid as the wave distortion technology measures the impedance at the monitored banana jack and looks for changes in either the capacitance or resistance of the circuit which includes the wrist strap and its wearer. It uses filtering and time domain sampling to filter out false signals caused by voltage offsets, 60 Hz fields and other electro-magnetic and electrostatic interference.

In normal factory environments, and with persons whose capacitance with respect to ground is within design limits (5 feet tall 90 pound person to 6 foot 5 inch 250 pound person), the Jewel® Workstation Continuous Mini Monitor cannot be “fooled”. It will provide a reliable alarm only when the wrist strap or work surface becomes dysfunctional or unsafe according to accepted industry standards. The Jewel® Workstation Continuous Mini Monitor is drift-free and designed to be insensitive to the effects of squeezing or stretching the coil cord.

Advantages Of Wave Distortion And Single-Wire Technology

The Jewel® Workstation Continuous Mini Monitor allows the use of any standard, single-wire wrist strap and coil cord. The monitor/wrist strap/cord system life-cycle costs are by far lower than alternative systems which require expensive and less durable dual-wire cords and special wrist straps. The Jewel® Workstation Continuous Mini Monitor is an economical way to monitor both the operator’s wrist strap and workstation surface. See “Maintenance and Calibration” (page 4) to minimize life-cycle costs.

The dictionary defines constant as uniform and unchanging, and continuous as uninterrupted. Nonetheless, some dual-wire resistance monitors utilize a pulsed test current and do not provide continuous monitoring. For example, during each 2.2 second pulse cycle of a leading “constant” resistive monitor, electrical current is pulsed for only 0.2 seconds followed by an unmonitored interval of 2 seconds. This leaves the user/

wrist strap unmonitored for over 90% of each cycle. Damaging static charges can easily occur in the portion of the time in between the pulses. The off period of 2 seconds equals 2 billion nanoseconds, and “it takes only about 25 volts applied for 100 nanoseconds to blow most memories or microprocessors”.*

By using the reliable wave distortion impedance technology to determine if the circuit is complete, there are no false alarms. There is no need to adjust or tune the monitor to a specific user or installation. The miniscule amount of electrical current (less than 1 volt coil cord signal) required to generate the waveform has never caused reported skin irritation and is extremely safe for use in voltage sensitive applications such as disk drive manufacturing.

Worksurface Channel

The Jewel® Workstation Continuous Mini Monitor monitoring circuitry is sufficiently sensitive to detect extremely low current, allowing it to be used with mats having a resistance of up to 5×10^8 ohms RTG.

When the Monitor is connected to an ESD Mat worksurface, the amount of current that flows is a function of the total resistance between the monitor and through the worksurface to ground. When the resistance of the worksurface is below a pre-set threshold, the monitor will indicate good. Conversely, if the resistance level is high when compared to the monitor’s reference, the unit will alarm. This is an integrating resistance measuring circuit, therefore it is relatively insensitive to externally induced electromagnetic fields. The resistance threshold is factory set to 500 megohms. (It can be special ordered to other limits. Limits can be varied and set to 1 gighm maximum.)

Installation

Confirm that the surface resistance (RTG) of the mat is 5×10^8 ohms or less and has a conductive layer. We recommend the Desco 19780 or 19635 Tester. Remove the monitor from its packaging and inspect for any shipping damage. Included with each Jewel® Workstation Continuous Mini Monitor should be:

- 1 120 VAC Adapter
- 2 Push and clinch snaps ([09863](#))

The Continuous Mini Monitor is normally installed toward the front edge of a workstation where the LEDs are easily visible. The unit is designed to be snapped on the worksurface using the 10mm snap studs mounted at the bottom of the monitor. See figure 2.

*1981 article by Donald E. Frank - Electrical Overstress / Electronic Discharge Symposium Proceedings

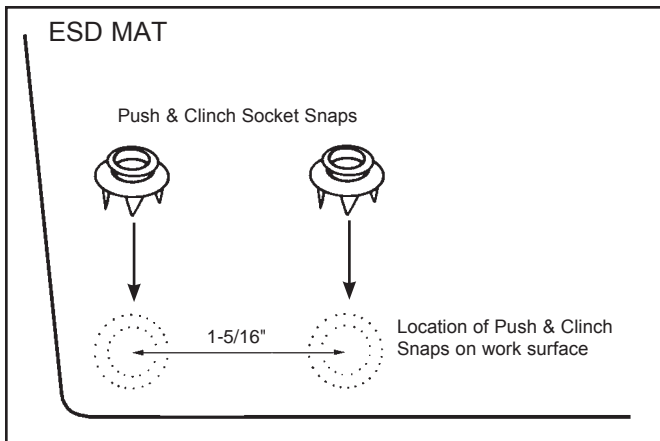


Figure 2. Installation of Push and Clinch Socket Snaps

Figure 3. illustrates how the Monitor is snapped to the worksurface

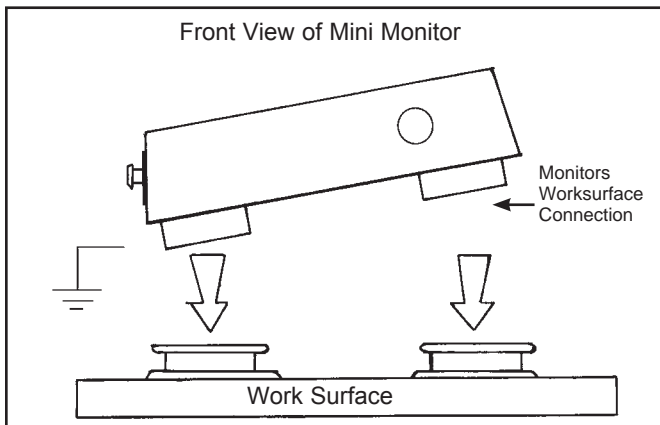


Figure 3. Installing the monitor to the worksurface one snap at a time

Note: Install the monitor to the worksurface by aligning one snap at a time and applying a downward force directly above that snap.

Figure 4. Shows the wiring connection for the Jewel® Workstation Continuous Mini Monitor.

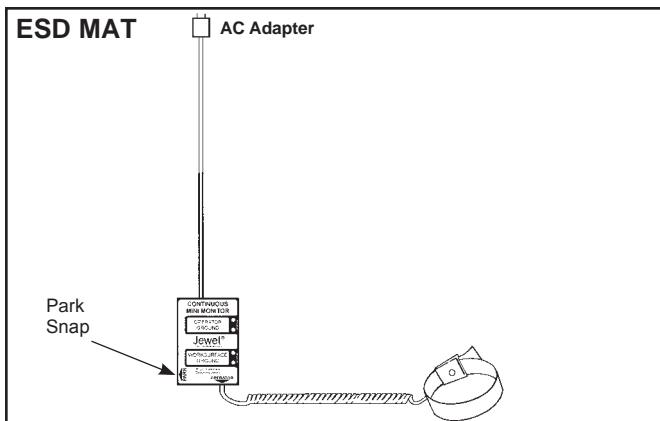


Figure 4. Jewel® Workstation Continuous Mini Monitor setup

The following procedure will outline how to correctly wire the Jewel® Workstation Continuous Mini Monitor so as to properly monitor an ESD protected workstation.

1. Confirm that the worksurface surface resistance is 5×10^8 Ohms or less and has a conductive layer.
2. A convenient 120 VAC outlet should be located and tested for proper wiring and grounding. We recommend Desco Item [98130](#) AC Outlet Analyzer to verify proper wiring and ground.
3. Plug the AC Adapter into the outlet and connect the mini plug into the back side of the Monitor. The green Worksurface LED should be lit. The Monitor is now ready for use. If the red Worksurface LED is flashing, check the snap fasteners for proper connection.

Installation on Micastat® Laminate

Materials Needed:

- 2 [14244](#) Flush Mount Laminate Ground Inserts
- 1 [14242](#) Installation Tool for Flush Mount Insert
- 1 [09857](#) 10mm Socket and Rivet (100 per pack)
- 2 8-32 button cap screws

1. Install the [14244](#) Flush Mount Inserts in the snap pattern for the monitor.
2. Once installed, remove the 8-32 screw supplied.
3. Place a 10mm snap socket on top of the installed [14244](#) brass insert.
4. Screw the 10mm snap socket into place on the insert using an 8-32 button cap screw.
5. Do this for both inserts and snap attach the mini monitor into place; it is now grounded to and monitoring the Micastat®

Operation

When the Jewel® Workstation Continuous Mini Monitor is installed and is connected to an ESD protective work surface, and it is grounded via an AC adapter cord, the monitor's green Worksurface LED and its red Operator LEDs should be on. The monitor takes 6 seconds to activate its alarm circuitry when it is first plugged in.

- The AC adapter must include the ground reference on the barrel of the output plug.
- The AC adapter therefore supplies the Monitor with ground.
- The mat resistance is measured between the two snaps on the bottom of the unit.
- This monitor simplifies the workstation, eliminating the need for a separate mat ground cord.

To Use The Monitor

1. Plug a wrist strap cord banana plug into the monitored banana jack on the front of the unit. This automatically activates the selected operator channel. The red operator LED should turn on.
2. Remove the charges from your body by making contact with a properly grounded ESD worksurface. Snap the cord to the wristband, and fit it snugly onto the wrist. This should silence the audio and cause the LEDs to switch from red to green. If this does not happen, check the coil cord for continuity or damage. Examine the wrist and secure that it has a secure fit. If you have dry skin, apply an approved dissipative hand lotion such as Menda [35666](#) Reztore™ ESD Hand Lotion. When leaving the area, a person can take the coil cord along or leave it attached to the monitor in park position. Alarm will shut off in approximately 8 seconds when operator grounding cord is removed from unit or will instantly shut off when cord is parked.

Note: It is recommended that you use the Park Snap rather than continuously removing the Banana Plug from its jack. If your process requires the constant insertion and removal of the Banana Plug, please contact your Desco Representative for alternate solutions.

Specifications

Test range of monitored circuit	500K - 10M ohms†
Worksurface Limit*	Set to 500 Megohms ± 20%
Operating Voltage	24VAC, 50-60 Hz
Wrist strap open circuit voltage	1.2 volts peak to peak @ 1-2 MicroAmps
Mat test open circuit voltage	5 to 7.5 volts
Response time to alarm	<50mS
Operating Temperature	32 - 100°F
Humidity Range:	0-95% RH, non- condensing
Size	2.77"L x 2.07"W x .710"H

† This cannot be verified with standard DC test equipment. The continuous monitor is an impedance sensing device and the limits are determined by the magnitude and angle of the impedance.

* Contact factory for special limits.

Note: Worksurface must have a conductive layer such as Dual Layer Rubber or Dissipative 3-Layer Vinyl or Micastat® Dissipative Laminate with conductive buried layers. Desco Continuous Monitors are not recommended for use with homogeneous matting.

Maintenance and Calibration

The Jewel® Workstation Continuous Mini Monitor is solid state and designed to be maintenance free. It is calibrated to NIST traceable standards. There are no user adjustments necessary. Because of the wave distortion impedance sensing nature of the test circuit, special equipment is required for calibration. We recommend that calibration be performed annually using the Desco [98220](#) Continuous Monitor Calibration Unit. The Calibration Unit is a most important product which allows the customer to perform NIST traceable calibration on continuous monitors. The [98220](#) is designed to be used on the shop floor at the workstation, virtually eliminating downtime, verifying that the continuous monitor is operating within tolerances. The [98220](#) provides a simple and quick means to assure compliance verification Per ANSI/ESD S20.20 Table 3 per ESD TR53.

Limited Warranty

Desco expressly warrants that for a period of one (1) year from the date of purchase Desco Continuous Monitors will be free of defects in material (parts) and workmanship (labor). Within the warranty period, a credit for purchase of replacement Desco Continuous Monitors, or, at Desco's option, the Continuous Monitor will be repaired or replaced free of charge. If product credit is issued, the amount will be calculated by multiplying the unused portion of the expected one year life times the original unit purchase price. Call Customer Service at 909-627-8178 (Chino, CA) or 781-821-8370 (Canton, MA) for Return Material Authorization (RMA) and proper shipping instructions and address. Include a copy of your original packing slip, invoice, or other proof of date of purchase. Any unit under warranty should be shipped prepaid to the Desco factory. Warranty replacements will take approximately two weeks.

If your unit is out of warranty, Desco will quote repair charges necessary to bring your unit up to factory standards. Call Customer Service at 909-627-8178 (Chino, CA) or 781-821-8370 (Canton, MA) for a Return Material Authorization (RMA) and proper shipping instructions and address.

Warranty Exclusions

THE FOREGOING EXPRESS WARRANTY IS MADE IN LIEU OF ALL OTHER PRODUCT WARRANTIES, EXPRESSED AND IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH ARE SPECIFICALLY DISCLAIMED. The express warranty will not apply to defects or damage due to accidents, neglect, misuse, alterations, operator error, or failure to properly maintain, clean or repair products.

Limit of Liability

In no event will Desco or any seller be responsible or liable for any injury, loss or damage, direct or consequent, arising out of the use of or the inability to use the product. Before using, users shall determine the suitability of the product for their intended use, and users assume all risk and liability whatsoever in connection therewith.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Antistatic Control Products](#) category:

Click to view products by [Desco](#) manufacturer:

Other Similar products are found below :

[13505](#) [13870](#) [14404](#) [20-053-0017](#) [2229](#) [2231](#) [3039](#) [37061](#) [39792](#) [42470](#) [XON-ASB4X30](#) [XON-ASB4X6](#) [XON-ASB6X30](#) [09813](#) [09857](#)
[XON-ASB8X10](#) [XON-ASB6X10](#) [19695](#) [09037](#) [68101](#) [68103](#) [73741](#) [13515](#) [13869](#) [13868](#) [13485](#) [13457](#) [13245](#) [13332](#) [13205](#) [13135](#) [91070](#)
[8031](#) [8523](#) [13080](#) [13215](#) [157](#) [ROLL BEIGE 1.0](#) [VERAX1R-300R](#) [17260](#) [66051](#) [12550](#) [19863](#) [09121](#) [73831](#) [13340](#) [13338](#) [04541](#) [19696](#)
[16104](#) [SPI-20686](#)