

DURATOOL



**Hot Knife Cutting Tool
Model: D03295**

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before use and retain for future reference

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting to the mains power supply.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Do not operate the appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid injury or a hazard.
- Ensure there is sufficient space and ventilation around the appliance to allow the escape of heat and/or fumes.
- Do not touch the cutting parts until cooled to room temperature.
- Do not expose to rain or moisture.
- Never place the product or part of it in water, or operate if your hands are wet.
- The appliance must not be left unattended while it is powered on.
- Turn the appliance off and disconnect from the mains supply when it is not in use.

WHAT'S INCLUDED

- Hot Knife tool
- 2 cutting blades 106mm and 202mm long
- User manual
- Plastic storage case

APPLICATION & OPERATION

Note: The first time you use the cutter, it may smoke slightly before use as the heating element dries out. This is normal and should only last for a few minutes.

Attach the cutter blade whose length is most suitable for the operation required.

- Connect the cutting tool to the mains power socket.
- When the trigger is pulled the cutting blade heats up in seconds.
- Avoid breathing any fumes or smoke given off by the material being worked. It is advisable to wear a face mask when cutting foam and plastics.

TOOL REPLACEMENT

- Replacing the cutting tip should only be done when the tool is switched off and at room temperature.
- Remove the 4 screws (2 in each terminal) and insert the blade into the slots in the terminals lining up the screw holes.
- Refit the 4 screws and tighten them.
- Caution: Damage could occur if the tool is switched on without the blade attached.

Warning: Care should be taken to avoid burns.

CLEANING

- Cleaning should only be done when the tool is switched off and at room temperature.
- The tool may be cleaned with a damp cloth and a small amount of liquid detergent if necessary.
- Never submerge the cutting tool in liquid or allow any liquid to enter the case.
- Do not use any chemicals, abrasives or solvents that could damage the cutting tool.

SPECIFICATION

Voltage	220-240V~50Hz
Power	150W



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China. PR2 9PP
Man Rev 1.0

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Wire Stripping & Cutting Tools](#) category:

Click to view products by [Duratool](#) manufacturer:

Other Similar products are found below :

[6-690504-4](#) [693855-1](#) [813066-2](#) [844764-5](#) [844765-5](#) [1-240644-7](#) [1-240642-7](#) [133900-001](#) [1424635-1](#) [1424650-1](#) [1440-0013-84](#) [1-458031-5](#)
[1-458030-5](#) [1490498-1](#) [1755](#) [2-539783-7](#) [1633578-3](#) [1-844765-9](#) [240825-8](#) [251465-1](#) [R282066100](#) [CST596711](#) [458031-9](#) [462839-1](#) [4-](#)
[690504-2](#) [406339-3](#) [L-4994](#) [45-265](#) [453653-1](#) [45-418](#) [455177-1](#) [455671-4](#) [45-637](#) [458144-8](#) [462007-1](#) [462548-1](#) [464661-1](#) [224186-1](#)
[809687-1](#) [852080-2](#) [856695-8](#) [458030-1](#) [679326-7](#) [690784-2](#) [844765-6](#) [T147A](#) [TE3SA](#) [690464-4](#) [63820-0030](#) [378185](#)