

“Stay Connected” with




Strain Relief Bushings

a PennEngineering® Company



## Heyco® Original Strain Relief Bushing Assembly Pliers Instructions and Spare Parts

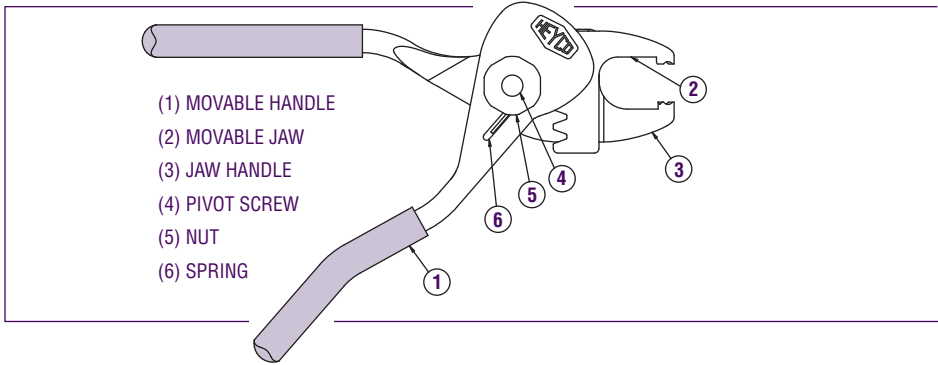

DESCRIPTION	SPARE PART NO.		Drawing Ref. No.
	for 0022 R 29 Plier	for 0030 R 30 Plier	
Grips	0037	0047	1
Pivot Screw	0036	0046	4
Nut	0032	0032	5
Spring	0031	0031	6

### Part No. 0022

R 29 Pliers are shipped set for a 1/4" (6,4 mm) opening.

### Part No. 0030

R 30 Pliers are shipped set for a 37/64" (14,7 mm) opening.


These Pliers will assemble the majority of our **Heyco Original Strain Relief Bushings** (see Directory, opposite). If adjustment is necessary, follow the instructions below:

- A. Remove Nut (5) and Spring (6).
- B. Close Pliers and lift off Movable Handle (1).
- C. Move Jaw (2) to desired opening (see Directory, opposite).
- D. Reassemble Handle (1) in **closed** position so that the gear teeth engage.
- E. Open Pliers and replace Spring (6) with short end in deepest recess, long end in Handle groove.
- F. Replace and secure Nut (5).


See opposite page for alternative jaw openings.

For Original Strain Relief Assembly **Air Tools**, see page 4-29.


#### Assembly Instructions:

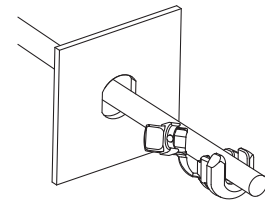

Position on Wire

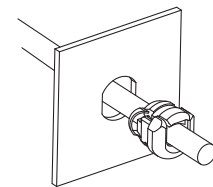

Squeeze Pliers

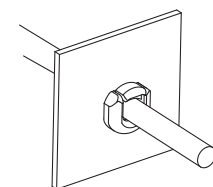

Push into Double D Mounting Hole

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Pliers & Tweezers](#) category:*

*Click to view products by [Heyco](#) manufacturer:*

Other Similar products are found below :

[0031](#) [32750](#) [PN-5050/38D](#) [PG-TP-30D](#) [4-1532129-2](#) [77 12 115](#) [0037](#) [T0058765801](#) [RT400SGSET2](#) [571](#) [76C](#) [MICROFOX-SP-1\\_DB](#) [37](#)  
[31 125](#) [RX 8130](#) [37 33 125](#) [DRP10N](#) [36 12 130](#) [0036](#) [64 11 115](#) [0032](#) [T3627B 7](#) [64 02 115](#) [ESD](#) [6211-06](#) [6214-45](#) [6231-07](#) [6231-08](#) [6411-](#)  
[06](#) [DP20N](#) [PN 5050/10D](#) [TR 20 M](#) [TR 25 15](#) [TR 25 P A](#) [TR 30 58 R A](#) [TR 30 V](#) [TR 5000](#) [TR 5000 PG](#) [MICROFOX-SP\\_DB](#) [CUTFOX-SE](#)  
[LM](#) [CUTFOX-SE LM\\_DB](#) [FMHT0-80519](#) [TR 58 R A](#) [27388](#) [43333](#) [102ACAX](#) [103ACA](#) [141SAP](#) [150SAD](#) [150SAMB](#) [150SAMF](#) [151SA](#)