

Fiber Optic Fault Locator VFL



KE850 EasyPoint

Applications

The compact design of the visual fault locator is very suitable for **daily use** in all fiber optic applications e.g. **in the field, in industrial environment** as well as in **laboratory**.

- To check singlemode/multimode optical fiber and other fiber optic components on faults
- Patching of fibers
- Detects too strong curved glass fibers



Parameter	
Fiber types	Singlemode, Multimode, POF
Wavelength	655 nm (visible)
Laser protection class	Class II
Optical output power	max. 1 mW / 0 dBm
Operation mode	Continuous Wave; Pulsed Mode , frequency 2 - 3 Hz
Range	Singlemode: > 4 km; Multimode: > 2.5 km
Ferrule	2.5 mm suitable for DIN, E2000, FC, SC, ST with ceramic coating to avoid interferences (optional Adapter for 1.25 mm or POF)
Operation time (pulsed mode)	40 hours
Battery type	2 x AAA Alkaline batteries
Weight	70 g batteries included
Dimensions	Length 157 mm, diameter 12 mm, Etui: 180 x 70 x 22 mm (B x T x H)
Operating temperature	-10° ... + 45° C
Storage temperature	-10° ... + 70° C

Included in delivery

- Packed in etui style packaging
- Spare dust cap
- One battery pack
- Instruction manual



Accessories (not included)

- Different Adapters available
 - Adapter 2.5 mm to 1.25 mm
 - Adapter POF



Your Dealer

Artikel-Nr.	Typ	Artikelbezeichnung
0.49100	KE850 EasyPoint	Fiber optic fault locator, batteries, etui
1400070	Fiber Adapter	Adapter for 2.5 mm to 1.25 mm
1400078	Fiber Adapter	Adapter for 2.5 mm to POF



Kurth Electronic GmbH / Muehleweg 11 / D 72800 Eningen u. A. GERMANY / Tel. +49(0)7121 9755 0 / Fax +49(0)7121 9755 56 / info@kurthelectronic.de / www.kurthelectronic.de



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [LAN/Telecom/Cable Testing category](#):

Click to view products by [KURTH ELECTRONIC manufacturer](#):

Other Similar products are found below :

[1673606-1](#) [SEFRAM95](#) [R180001](#) [150058](#) [158051](#) [GBE FIBRE KIT LX](#) [GBE FIBRE KIT SX](#) [TCT-1620](#) [TCT-2210](#) [TCT-680](#) [150050](#)
[150059](#) [150060](#) [158050](#) [158053](#) [TCT-2690PRO](#) [TCT-700](#) [TESTER-MS6811](#) [TESTER-MS6812](#) [262](#) [N044-000-R](#) [MCT-468](#) [TM-901N](#)
[TM-902](#) [TM-903](#) [LAN-1](#) [24-517](#) [CT20](#) [40180](#) [TG20](#) [CLM-1000E](#) [CLM-1000](#) [HDMI-100](#) [TEP-100](#) [KE301](#) [KE3100](#) [KE3150](#) [KE401](#)
[KE501](#) [KE7000](#) [KE701](#) [KE8000](#) [KE801](#) [KE850](#) [VDV501-851](#) [LANXPLOER PRO](#) [LC-90](#) [NAVITEK IE](#) [NAVITEK NT](#) [NAVITEK NT](#)
[PLUS](#)