



# xPico® 110 Evaluation Kit Quick Start Guide


WHAT'S  
IN THE  
BOX



Product  
Registration Form




xPico 110  
Evaluation Board

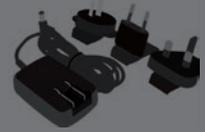

Power Supply  
With  
Regional Adapters

## 1. HARDWARE OVERVIEW

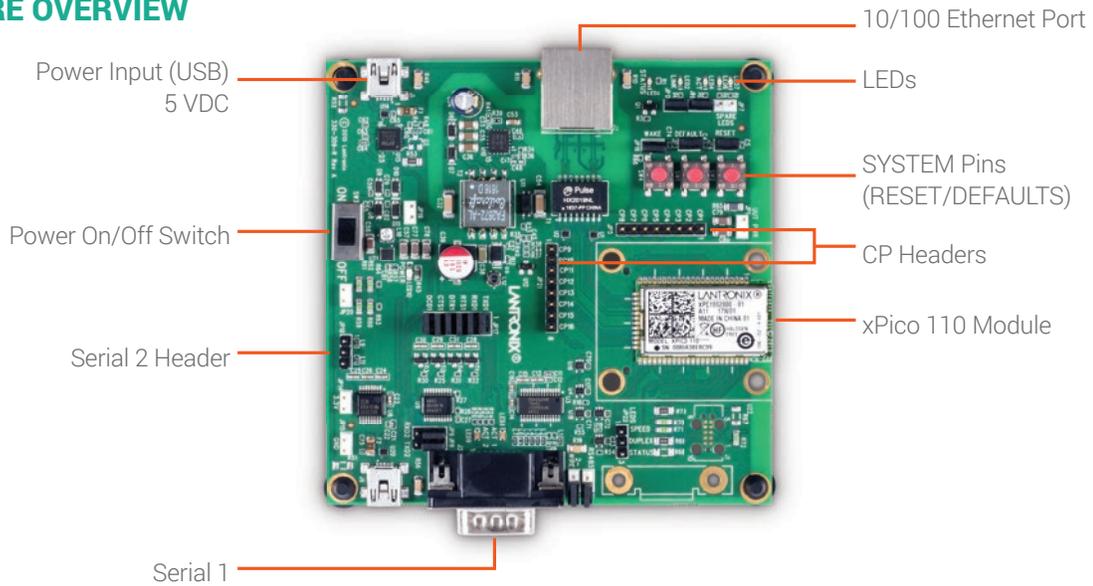

## 2. HARDWARE INSTALLATION

1. Connect the PC to the numbered device ports (Serial 1/Serial 2) on the xPico 110 evaluation board using appropriate cables and adapters.
2. Connect the evaluation board to the network via an Ethernet cable using the Ethernet (RJ45) port.
3. Supply power to the evaluation board by using the included power adapter and move the power switch to ON.
4. Via the computer connected on the same network, you can follow the path to device discovery and initial network configuration as outlined below.



## 3. IP ADDRESSING

The Ethernet port on xPico 110 defaults to DHCP assigned IP address. If your network does not support DHCP, then xPico 110 will fall back to using an automatically generated IP address (Auto IP) within the 169.254.0.0 subnet.

If you want to assign a different IP address, it must be within a valid range, unique to your network, and within the same subnet as your workstation.

To configure the xPico 110, you will need the following:

- IP address (if not assigned): \_\_\_\_\_
- Subnet mask (if not assigned): \_\_\_\_\_
- Gateway IP address: \_\_\_\_\_
- DNS Server address: \_\_\_\_\_



# xPico® 110 Evaluation Kit Quick Start Guide

## 4. USING DEVICE INSTALLER

### INSTALL DEVICE INSTALLER

1. Download the latest version of DeviceInstaller from <http://www.lantronix.com/downloads>. The minimum version required for DeviceInstaller is **4.4.0.4**.
2. Run the executable to start the installation process on the computer being used to configure the xPico 110.
3. Respond to the installation wizard prompts.

### USING DEVICE INSTALLER

Run DeviceInstaller. Click **Start > Programs > Lantronix > DeviceInstaller > DeviceInstaller**

1. Click the **Search** icon.
2. Select the unit from the list of Lantronix products discovered on the local network.
3. Double click the unit in the list. Details about the unit will be displayed.
4. Select the **Web Configuration** tab and click on the green arrow. You will be prompted for username and password
5. The default **USER ID = admin** and **PASSWORD = PASS** (both are case sensitive)

## 5. COMPLETE THE CONFIGURATION

**!** **KEEP YOUR DEVICE SECURE.** Please change the default administrator password before proceeding further. From the Server menu in the Web UI, enable enhanced password option and enter a new password. Hit Ok to apply these new settings and continue with the rest of the configuration.

Continue with the rest of the unit configuration using the Web Configuration UI.

The unit can also be configured using the Setup Menu. The menu is accessible via Telnet or the Serial Port.

For detailed instructions, please refer to the xPico 110 User Guide: <http://www.lantronix.com/support/downloads>.

## Registration

Register the xPico 110 Evaluation Kit to receive notifications for firmware and documentation updates at [www.lantronix.com/product-registration](http://www.lantronix.com/product-registration), or scan the QR code.

## Technical Support

For technical support queries, visit <http://www.lantronix.com/support> or call (800) 422-7044 Monday – Friday from 6:00 a.m. – 5:00 p.m., Pacific Time, excluding holidays.

## Latest Firmware

For the latest firmware downloads, visit <http://www.lantronix.com/support/downloads>



## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Networking Development Tools](#) category:*

*Click to view products by [Lantronix](#) manufacturer:*

Other Similar products are found below :

[BASENODE-EK](#) [DC-ME-9210-LX](#) [WIZ550SR-EVB](#) [DC9007A](#) [DC9021B](#) [ATPANCOORDINATOR-EK](#) [SM2400-EVK2M2-C](#) [SM2400-EVK2M5-A](#) [Pi01-2](#) [Pi01-3](#) [Pi01-4](#) [Pi01-42](#) [Pi01-43](#) [pind-4ge](#) [pind-4ga](#) [tbit-32](#) [DC9020B](#) [DC9022B](#) [RAPID-TSNEK-V0001](#) [ABX00017](#) [GKX00006](#) [DC-ACC-DBME](#) [DC-ME-01T-MF-10](#) [DG-EXT-300-RR](#) [XP10010NMK-01](#) [XPC100100K-02](#) [XPC240300EK](#) [XPC250300EK](#) [XPE200100EK](#) [Development Kit, RS232](#) [Development Kit, USB](#) [MAX11947EVKIT#](#) [RD-HNPH2DCP962KIT-01](#) [ATPL360-EK](#) [MIKROE-3739](#) [MIKROE-3888](#) [MIKROE-2747](#) [NNDK-MOD5213-KIT](#) [SB800EX-KIT](#) [ESP32-GATEWAY](#) [FPWEB2](#) [ARGNKIT](#) [XENNKIT](#) [604565285904](#) [110060622](#) [110060623](#) [SLUSB001A](#) [SLWRB4305D](#) [SLWRB4306C](#) [SLWRB4300B](#)