General Description

The MAX8731A evaluation kit (EV kit) is an efficient, multi- chemistry battery charger. It uses the Intel system management bus (SMBus[™]) to control the battery-regulation voltage, charger current output, and input current-limit set point.

The MAX8731A EV kit can charge one, two, three, or four series Li+ cells with a current up to 8A. The MAX8731A evaluation system (EV system) consists of a MAX8731A EV kit and the Maxim SMBUSMON2 board. The MAX8731A EV kit includes Windows[®] 95/98/2000/XP-compatible software to provide a userfriendly interface.

SMBus is a trademark of Intel Corp. Windows is a registered trademark of Microsoft Corp.

DESIGNATION	QTY	DESCRIPTION
C1	1	1µF ±10%, 25V X7R ceramic capacitor (0805) Murata GRM21BR71E105K TDK C2012X7R1E105K
C2, C4, C7, C17	4	0.1µF ±10%, 25V X7R ceramic capacitors (0603) KEMET C0603C104K3RAC Murata GRM188R71E104K TDK C1608JB1E104K
C3, C5, C6, C14	4	$1\mu F \pm 10\%$, 16V X5R ceramic capacitors (0603) KEMET C0603C105K4PAC Murata GRM188R61C105K TDK C1608JB1C105K
C8, C9, C10, C19	4	0.01µF ±10%, 50V X7R ceramic capacitors (0603) KEMET C0603C103K5RAC Murata GRM188R71H103K TDK C1608JB1H103K
C11, C13, C20	3	4.7μF ±10%, 25V X5R ceramic capacitors (1210) KEMET C1210C475K3PAC Murata GRM32DR61E475K TDK C3225JB1E475K

<u>Component List</u>

Features

- ♦ 0.5% Battery Voltage Accuracy
- ♦ 3% Input Current-Limit Accuracy
- ♦ 3% Battery Charge-Current Accuracy
- Up to 8A Battery Charge Current
- +8V to +25V Input Voltage Range
- Charges Li+, NiCd, NiMH Battery Chemistries
- Cycle-by-Cycle Current Limiting
- SMBus-Compatible 2-Wire Serial Interface
- Includes Windows 95/98/2000/XP-Compatible Software and Demo PCB
- Fully Assembled and Tested

......

Ordering Information

PART	TEMP RANGE	IC PACKAGE	SMBus INTERFACE TYPE
	0°C to	28 TQFN,	Not included
	+70°C	5mm x 5mm	Notificiaded
MAY9721 AEVEVE	0°C to	28 TQFN,	
	+70°C	5mm x 5mm	31110031010142

Note: The MAX8731A EV kit software is provided with the MAX8731AEVKIT+. However, to use the software, the SMBUSMON2 board is required to interface the EV kit to the computer.

Evaluate: MAX8731A

_ Maxim Integrated Products 1

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

Evaluate: MAX8731A

DESIGNATION	QTY	DESCRIPTION
C12	1	22μF ±20%, 25V X5R ceramic capacitor (1812) TDK C4532X5R1E226M
C15, C16	0	Not installed, capacitors
C18, C22	0	Not installed, capacitors
C21	1	220pF ±5%, 50V C0G ceramic capacitor KEMET C0603C221J5GAC Murata GRM1885C1H221J TDK C1608C0G1H221J
D1	1	Diodes, 1N4148-type, SOD-123 Central Semiconductor CMHD4448 (top mark = C48) Diodes Inc. 1N4148W (Top Mark: T4 or T6) Fairchild Semiconductor MMSD4148 (Top Mark: 5H) Vishay Semiconductors 1N4148W-V (Top Mark: A2)
D2	1	Schottky diode, 0.5A, 30V, SOD123 Diodes Inc. B0530W (Top Mark: SE) ON Semiconductor MBR0530 (Top Mark: B3)
D3	0	Not installed
J1	1	2 x 10 right-angle female receptacle
J2, J3	0	Not installed
JU1	1	3-pin header
L1	1	4.3 μ H, 11A, 11.4m Ω inductor Sumida CEP125-4R3MC-U
LED1, LED2	2	Green LEDs (0603) Panasonic LNJ308G8TRA

Component List (continued)

DESIGNATION	QTY	DESCRIPTION
M1, M2	2	2N7002 MOSFETs, SOT23 Central Semiconductor 2N7002 (Top Mark: 702) Diodes Inc. 2N7002 (Top Mark: K72) Fairchild Semiconductor 2N7002
N1, N3	2	MOSFETs, n-channel, 9A, 30V, 8-pin SO Vishay Siliconix Si4800BDY-E3
N2	1	MOSFET with Schottky diode, n-channel, 13.5A, 30V, 8-pin SO Fairchild Semiconductor FAS66705
P1, P3–P6	5	MOSFETs p-channel -45A, -30V, R _{DS} = 2.7m Ω , LFPAK Renesas HAT1125H
P2	0	Not installed
R1	1	150k Ω ±1% resistor (0603)
R2	1	49.9k Ω ±1% resistor (0603)
R3, R6	2	$100k\Omega \pm 1\%$ resistors (0603)
R4, R7, R10, R11, R12	5	10k Ω ±5% resistors (0603)
R5, R15	0	Not installed, resistors
R8	1	1Ω ±5% resistor (0603)
R9	1	33Ω ±5% resistor (0603)
R13, R14	2	1k Ω ±5% resistors (0603)
R17, R18	2	$1M\Omega \pm 1\%$ resistors (0603)
R19, R20	2	$100\Omega \pm 5\%$ resistors (0603)
RS1, RS2	2	$0.01\Omega \pm 1\%$, 1W 2512 sense resistors Vishay Dale WSL2512 0.010 $\pm 1.0\%$ IRC LRC-LRF2512-01-R010-F Panasonic ERJ-IMWSF10MU
U1	1	MAX8731AETI+, 28-pin, 5mm x 5mm Thin QFN
U2	1	CMOS analog switch, SPDT MAX4730EXT+, 6-pin SC70 (Top Mark: ABV)

Component Suppliers

SUPPLIER	PHONE	WEBSITE
Central Semiconductor	631-435-1110	www.centralsemi.com
Diodes Inc.	805-446-4800	www.diodes.com
Fairchild Semiconductor	888-522-5372	www.fairchildsemi.com
International Resistive Co. (IRC)	361-992-7900	www.irctt.com
KEMET	864-963-6300	www.kemet.com
Murata Mfg. Co., Ltd.	770-436-1300	www.murata.com
ON Semiconductor	602-244-6600	www.onsemi.com
Panasonic Corp.	714-373-7366	www.panasonic.com
Renesas Technology Corp.	408-382-7500	www.renesas.com
Sumida Corp.	847-545-6700	www.sumida.com
TDK Corp.	847-803-6100	www.component.tdk.com
Vishay	402-564-3131	www.vishay.com

Note: Indicate that you are using the MAX8731A when contacting these component suppliers.

__Quick Start

Recommended Equipment

Before beginning, the following equipment is needed:

- DC source to supply the input current to the charger. This source must be capable of supplying a voltage greater than the battery-voltage set point and have sufficient current rating.
- Voltmeter
- Smart battery
- Computer running Windows 95, 98, 2000, or XP
- 9-pin serial extension cable
- SMBUSMON2 board

Procedure

The MAX8731A EV kit is a fully assembled and tested board. Follow the steps below to verify board operation. **Caution: Do not turn on the power supply until all connections are completed. Observe all precautions on the battery manufacturer's data sheet.**

- 1) Set the VPP jumper on the SMBUSMON2 board to VCC5.
- 2) Carefully connect the boards by aligning the 20-pin connector of the MAX8731A EV kit with the 20-pin header of the SMBUSMON2 board. Gently press them together.

- 3) Connect a cable from the computer's serial port to the SMBUSMON2 interface board. Use a straight-through, 9-pin, female-to-male cable.
- 4) Install the software by running the INSTALL.EXE program. The install program copies the files and creates icons for them in the Windows 95/98/2000/XP Start menu. An uninstall program is included with the software. Click on the UNINSTALL icon to remove the EV kit software from the hard drive.
- 5) Connect power to the SMBUSMON2 board.
- 6) Connect the input-current supply across the ADAPTER_IN and PGND pads.
- 7) Set jumper JU1 to position 1-2 to select battery A.
- 8) Connect a smart battery to BATT+_A, BATT-_A, THM_A, SCL, and SDA.
- 9) Turn on the power supply.
- 10) Start the MAX8731A EV kit software.
- 11) Verify current is being delivered to the battery.

_Detailed Description of Software

The MAX8731A program provides easy access to the MAX8731A registers. It is also capable of reading the registers of a smart battery and monitoring SMBus traffic.

Upon execution of the program, the software enables the MAX8731A smart charger command panel (Figure 1), after which any of the allowed SMBus commands can be sent to the MAX8731A. Refer to the MAX8731A data sheet for more information regarding the allowed SMBus commands.

Smart Charger Command Panel

ChargeVoltage()

To issue the ChargeVoltage() command to the MAX8731A, enter the desired voltage in millivolts into the **0x15 ChargingVoltage** edit field and select the adjacent **Write** button.

ChargeCurrent() To issue the ChargeCurrent() command to the MAX8731A, enter the desired current in milliamps into the **0x14 ChargingCurrent** edit field and select the adjacent **Write** button.

Autorewrite Checkboxes

The MAX8731A needs to receive a ChargeVoltage() or ChargeCurrent() command every 175s (typ); otherwise, the MAX8731A times out and terminates charging. Usually, a smart battery sends these necessary commands. However, when not using a smart battery with the MAX8731A EV kit, select either (or both) of the **Auto Re-Write** checkboxes located directly under the **0x14 ChargingCurrent** and **0x15 ChargingVoltage** edit fields. This generates a ChargeVoltage() or ChargeCurrent() command at the selected time interval located on the **Timer** panel.

InputCurrent()

Input current is shown on the **Other Bitmapped Charger Registers...** panel (Figure 2). Select **0x3F:W InputCurrent** by choosing it from the pulldown list located directly under the **Other Bitmapped Charger Registers...** label. Each of the bits in the InputCurrent() command word are shown individually with a short description of the bit and a checkbox. Select the checkboxes next to the bits for which the software should write a 1; unselect the checkboxes for a zero. Send the command to the MAX8731A by selecting the **Write** button.

Note: The default input-current-limit setting at POR is 256mA. All codes requesting input current greater than 11.004A result in an input-current overrange, limiting the input current to 11.004A.

ManufacturerID()

ManufacturerID() returns the manufacturer ID (0x004D) from the MAX8731A. This command is available through the **Other Bitmapped Charger Registers...** panel (Figure 2). Select **0xFE:R ManufacturerID** by picking it from the pulldown list located directly under the **Other Bitmapped Charger Registers...** label. Issue a ManufacturerID() command by selecting the **Read** button. The returned hexadecimal value is shown at the bottom of the panel.

DeviceID()

DeviceID() returns the device ID (0x0008) from the MAX8731A. This command is available through the **Other Bitmapped Charger Registers...** panel (Figure 2). Select **0xFF:R DeviceID** by picking it from the pulldown list located directly under the **Other Bitmapped Charger Registers...** label. Issue a DeviceID() command by selecting the **Read** button. The returned hexadecimal value is shown at the bottom of the panel.

Smart Battery Command Panel

The software is capable of reading the registers of a smart battery. The smart battery page of the software is shown in Figure 3. The software only reads the registers selected with checkmarks. By default, the registers are automatically read once every 2s. Disable this feature by unselecting the **Active Read: Battery** checkbox located on the **Timer** panel. Change the refresh time by entering a new value into the **Timer Interval** edit box and select the **Set Interval** button. When autorefresh is disabled, read the battery by selecting the **Refresh** button.

Timer	System Overview Gener	ic Smart Battery (0x	16) MAX8731A Smart Char	ger (0x12) SMBu	s Interface SMBus Scripti	ng SMBus Traffic	
Timer Interval:					Cother Bitmapped Charger	Registers	
2 sec	Smart Charger desci	ibed in file: Max87	'31A.ini 🔽		0x3F:W InputCurrent		-
Set Interval	-0x13 ChargerStatus		_Ox12 ChargerMode				1
- 1	(198)	Read	(I SB)	Write	(1 SB)	Read Write	
Run Running	Rit 0 reserved	2	Bit 0 reserved		Bit0 NotUsed	2 🗖 1	
C1	Bit 1 reserved	2	Bit 1 reserved	— Hil	Bit 1 Not Used	2 1	
Stop	Bit 2 reserved	2	Bit 2 reserved	Ei l	Bit 2 Not Used.	2 11	
Stop if error	Bit 3 reserved	?	Bit 3 reserved	<u> </u>	Bit 3 Not Used.	? 🗖 1	
	Bit 4 reserved	2	Bit 4 reserved		Bit 4 Not Used	2 🗖 1	
	Bit 5 reserved	2	Bit 5 reserved	— Hil	Bit 5 Not Used	2 🗖 1	
	Bit 6 reserved	2	Bit 6 reserved	Ei l	Bit 6 Not Used	2 🗖 1	
Timer Action:	Bit 7 reserved	?	Bit 7 reserved		Bit 7 Adds 256mA	? 🗖 1	
 Active 	Dit 9 record	2	Dit 0 recorriged		Dit 0 Adda 512mA	2 🗖 1	
Read:	Dit 0 reserved	2	Dit 0 reserved	님님	Dit 0 Adds 512mA	2 🗖 1	
🔽 System	Dit 3 reserved	2	Bit 10 received	님님	Dit 3 Adds 1024mA	2 🗖 1	
🔽 Battery	Dit 10 reserved	2	Bit 10 reserved	금신	Dit TU AUUS 2040IIA Dit 11 Adda 4090mA		
🔽 Charger	Dic 11 Teserveu	f	Dic 11 leseiveu	i		: L] '	
	Bit 12 reserved	?	Bit 12 reserved	□1	Bit 12 Adds 8192mA	? 🗖 1	
	Bit 13 reserved	?	Bit 13 reserved		Bit 13 Not Used.	? 🗖 1	
	Bit 14 reserved	?	Bit 14 reserved		Bit 14 Not Used.	? 🗖 1	
O Passive	Bit 15 reserved	?	Bit 15 reserved	□1	Bit 15 Not Used.	? 🔲 1	
SMBus	(MSB)	0x????	(MSB)	0x????	(MSB)	0x????	
traffic	-Out 4 ChargingCurrent		=0u15 Charging) (altage		Other Numeric Charger F	Registers	
monitoring							
	1000 mA	Write		Write			
	🗌 🗖 Auto Re-Write		Auto Re-Write		Band 222	222	Lika
	<u> </u>						1116
	-Data Refresh						
	Data nellesn						

Figure 1. Smart Charger Command Panel

Detailed Description of Hardware

The MAX8731A includes all of the functions necessary to charge a smart battery. The EV kit is capable of charging with a maximum current of 8.064A and a maximum voltage of 19.2V. For more information on the operation of the MAX8731A, refer to the Detailed Description section of the MAX8731A IC data sheet.

Connecting a Smart Battery

The MAX8731A EV kit is capable of charging two smart batteries consecutively. Before connecting a battery, turn

off power to the EV kit. To use charger A, set jumper JU1 to position 1-2 and connect the battery to BATT+_A, BATT-_A, THM_A, SCL, and SDA. To use charger B, set jumper JU1 to position 2-3 and connect the battery to BATT+_B, BATT-_B, THM_B, SCL, and SDA.

Evaluating the MAX8731A Above 25V

To evaluate the MAX8731A with an input voltage greater than 25V (up to 28V), capacitors C1, C11, C13, and C20 must be replaced with higher voltage-rating parts.





Timer	Sustem Queruieuu Cone	rie Smart Pattery (0u16)	MAX8731A Smart Char	ner (0v12) CMP	a Interface CMDus Coristing CM	
Fimer Internels	System Overview Gene	nc smart battery (0x16)	MANOFOTA Official Char		s interface SMBUS Scripting SM	
a mer interval:	Smart Charger deep	ribad in file: May9721A i	ni 🖃		Other Bitmapped Charger Registe	/S
2 sec	Sinak Charger desc				0x3F:W InputCurrent	▼
Set Interval	0x13 ChargerStatus	[⁰ ×	12 ChargerMode		0x3F:W InputCurrent	
-	(1 CP)	Read	:P)	Write	DXFE:R ManufactureriD	
Run Running	Bit 0 reserved	2 Bit)D) N received		Bit 0 Not Used	2 🗖 1
~	Bit 1 reserved	2 Bit	1 reserved	— Hil	Bit 1 Not I sed	2 1
Stop	Bit 2 reserved	? Bit	2 reserved	Ei l	Bit 2 Not Used.	? 🗖1
Stop if error	Bit 3 reserved	? Bit	3 reserved	<u> </u>	Bit 3 Not Used.	? 🗖 1
	Da A	2 0	4		Da.4 National	2 🗖 1
	Bit 4 reserved	? BK	4 reserved	님님	Dit E Natiliard	
	Bit D reserved	? BK	o reserved	님님	Bit 5 Not Used.	
Fimer Action:	Bit 7 received	2 8	7 received	금리	Bit 7 Adda 256mA	· □· 2 □1
Active	DIC7 16361VEG	: 0%	r leselveu		Dit 7 Adds 230mA	· •
Bead	Bit 8 reserved	? Bit	8 reserved	□1	Bit 8 Adds 512mA	? 🔲 1
Gustern	Bit 9 reserved	? Bit	9 reserved	□1	Bit 9 Adds 1024mA	? 🔲 1
Ratteru	Bit 10 reserved	? Bit	10 reserved		Bit 10 Adds 2048mA	? 🔲 1
Charger	Bit 11 reserved	? Bit	11 reserved	□1	Bit 11 Adds 4096mA	? 🔲 1
It charger	Bit 12 reserved	? Bit	12 reserved		Bit 12 Adds 8192mA	? □1
	Bit 13 reserved	? Bit	13 reserved	<u> </u>	Bit 13 Not Used.	? 🗖 1
	Bit 14 reserved	? Bit	14 reserved	<u> </u>	Bit 14 Not Used.	? 🗖 1
O Passive	Bit 15 reserved	? Bit	15 reserved		Bit 15 Not Used.	? 🗖 1
CMDus	(MSB)	0x???? (M	SB)	0x????	(MSB)	0x????
traffic						
monitoring	0x14 ChargingCurrent	[0x	15 ChargingVoltage		Cother Numeric Charger Registers	
	1000 mA	Write 18	8000 mV	Write		T
	Auto Be-Write		Auto Be-Write			
					Read ??? ???	Write
	Data Refresh					
		Read	(45) passed			Pofrosh

Figure 2. Smart Charger Command Panel Showing the Pulldown List for Input Current, Manufacturer ID, and Device ID

Image: Section of the section of th
sec Smart Battery Settings iterval 0x00 Manufacturer Access 0x10 Full Charge Capacity Bunning 0x01 Remaining Capacity Alarm 0x11 Run Time to Empty 0x02 Remaining Time Alarm 0x12 Average Time to Empty 0x03 Battery Mode mAh 0x13 Average Time to Empty 0x04 At Rate 0x14 Charging Current 0x15 Charging Voltage 0x05 At Rate Time to Full 0x16 Battery Status 0x17 Cycle Count 0x08 Temperature 0x19 Design Voltage 0x14 Specification Info 0x08 Temperature 0x18 Design Capacity 0x18 Manufacture Name 0x00 Relative State of Charge 0x20 Manufacturer Name 0x21 Device Name 0x00 Relative State of Charge 0x21 Device Charge 0x21 Device Charge
Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Running Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Running Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Image: Device Manufacturer Accessing Prime Image: Device Manufacturer Accessing Image: Device Manufacturer Manufacturer Date Image: Device Manufacturer Manufacturer Date Prime Image: Device Manufacturer Manufacturer Manufacturer Date Image: Device Manufacturer Manufacturer Manufacturer Date Image: Device Manufacturer Manufacture
Running 0x01 Remaining Capacity Alarm 0x11 Run Time to Empty 0x02 Remaining Time Alarm 0x12 Average Time to Empty 0x03 Battery Mode 0x13 Average Time to Full 0x04 At Rate 0x15 Charging Voltage 0x05 At Rate Time to Full 0x17 Cycle Count 0x08 At Rate OK 0x18 Design Capacity 0x08 Temperature 0x19 Selectication Info 0x09 Voltage 0x18 Manufacture Date 0x08 AverageCurrent 0x12 Serial Number 0x08 AverageCurrent 0x12 Cserial Number 0x00 Max Error 0x20 Manufacture Name 0x00 Max Error 0x20 Manufacture Name 0x02 Max Error 0x20 Manufacture Name 0x02 Max Error 0x20 Manufacture Name 0x20 Device Name 0x21 Device Chemistry
Image: Down of the construction of
p if error 0x03 Battery Mode mAh 0x13 Average Time to Full Image: Construction of the construle of the construction of the construction
p if error
Apply Selected Changes (0x000x04 writeable) 0x15 Charging Voltage 0 ction: 0x05 At Rate Time to Full 0x16 Battery Status 0 //e 0x06 At Rate Time to Empty 0x17 Cycle Count 0 dt 0x07 At Rate 0K 0x19 Design Voltage 0 iystem 0x08 Temperature 0x18 Manufacture Date 0 0x04 Current 0x10 Strial Number 0x10 Strial Number 0 ive 0x00 Relative State of Charge 0x21 Device Name 0 0x00 Relative State of Charge 0x22 Device Chemistry 0
action: □ 0x05 At Rate Time to Full □ 0x16 Battery Status □ 0x17 Cycle Count □ 0x17 Cycle Count □ 0x18 Design Capacity □ 0x07 At Rate 0K □ 0x08 Temperature □ 0x08 Temperature □ 0x09 Voltage □ 0x09 Voltage □ 0x10 Acturent □ 0x10 Acturent □ 0x10 AverageCurrent □ 0x10 Max Error □ 0x00 Max Error □ 0x00 Relative State of Charge □ 0x20 Device Chemistry □ 0x20 Explore Chemistry □ 0x0E Absolute State of Charge □ 0x20 Device Chemistry □ 0x20 Device Chemistry □ 0x20 Device Chemistry □ 0x20 Device Chemistry □ 0x20 Period Chemistry
cutorit
version Import of the end of the end of the product of the end o
Bystem Image of the Next of K Image of the Next of K Battery Image of the Next of K Image of the Next of K Image of the Next of K Image of the Next of K Image of the Next of K Image of the Next of K Image of the Next of K Image of the Next of K Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of the Next of Charge Image of the Next of Charge Image of the Next of Charge Image of the Next of
Jattery Index of Penpendule Index of Penpendule Index of Penpendule Charger Index of Penpendule Index of Penpendule Index of Penpendule Charger Index of Penpendule Index of Penpendule Index of Penpendule Charger Index of Penpendule Index of Penpendule Index of Penpendule Charger Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendule Index of Penpendue Index of Penpendue Index of Penpendue Index of Penpenpendue Index of Pen
ive 0x00 Votage 0x10 Manufacture Date ive 0x00 AverageCurrent 0x1C Serial Number ive 0x00 Max Error 0x20 Manufacturer Name icoring 0x00 Relative State of Charge 0x21 Device Name icoring 0x00 Absolute State of Charge 0x22 Device Chemistry
sive 0x0C AverageCurrent 0x1C Serial Number 0x1C Serial Number 0x0C Max Error 0x20 Manufacturer Name 0x20 Manufacturer Name 0x20 Device Name 0x21 Device Name 0x22 Device Chemistry 0x0E Absolute State of Charge 0x22 Device Chemistry 0x22 Device Ch
sive low developed in the low
Bus C 0x0D Relative State of Charge 0x21 Device Name itoring 0x0E Absolute State of Charge 0x22 Device Chemistry
itoring 0x0E Absolute State of Charge 0x22 Device Chemistry
UxUF Remaining Capacity
0x23 Mfgr Data
Dx0F Remaining Capacity

Figure 3. Smart Battery Command Panel



Figure 4. MAX8731A EV Kit Schematic

M/IXI/M

8



Figure 5. MAX8731A EV Kit Schematic—Smart Battery Connector



Figure 6. MAX8731A EV Kit Component Placement Guide—Component Side



Figure 7. MAX8731A EV Kit PCB Layout—Component Side



Figure 8. MAX8731A EV Kit PCB Layout—VDD and Power Ground Plane



Figure 9. MAX8731A EV Kit PCB Layout—Ground Plane





Figure 10. MAX8731A EV Kit PCB Layout—Solder Side

Revision History

Pages changed at Rev 1: Title change-all pages, 1–14

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600

14

© 2007 Maxim Integrated Products

is a registered trademark of Maxim Integrated Products, Inc.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Maxim manufacturer:

Other Similar products are found below :

EVAL-ADM1168LQEBZ EVB-EP5348UI MIC23451-AAAYFLEV MIC5281YMMEEV DA9063-EVAL ADP122-3.3-EVALZ ADP130-0.8-EVALZ ADP130-1.2-EVALZ ADP130-1.5-EVALZ ADP130-1.8-EVALZ ADP1712-3.3-EVALZ ADP1714-3.3-EVALZ ADP1715-3.3-EVALZ ADP1716-2.5-EVALZ ADP1740-1.5-EVALZ ADP1752-1.5-EVALZ ADP1828LC-EVALZ ADP1870-0.3-EVALZ ADP1871-0.6-EVALZ ADP1873-0.6-EVALZ ADP1874-0.3-EVALZ ADP1882-1.0-EVALZ ADP199CB-EVALZ ADP2102-1.25-EVALZ ADP1871-0.6-1.875EVALZ ADP2102-1.8-EVALZ ADP2102-2-EVALZ ADP2102-3-EVALZ ADP2102-4-EVALZ ADP2106-1.8-EVALZ ADP2147CB-110EVALZ AS3606-DB BQ24010EVM BQ24075TEVM BQ24155EVM BQ24157EVM-697 BQ24160EVM-742 BQ24296MEVM-655 BQ25010EVM BQ3055EVM NCV891330PD50GEVB ISLUSBI2CKITIZ LM2744EVAL LM2854EVAL LM3658SD-AEV/NOPB LM3658SDEV/NOPB LM3691TL-1.8EV/NOPB LM4510SDEV/NOPB LM5033SD-EVAL LP38512TS-1.8EV