

# AR1000 Series Resistive Touch Screen Controller

#### **Contact Information**

Microchip Technology, Inc.
mTouch Touchscreen Controller Products
9055 N. 51<sup>st</sup> Street, Suite H
Brown Deer, WI 53223
www.Microchip.com

Phone: 414-355-4675 Fax: 414-355-4775

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

# QUALITY MANAGEMENT SYSTEM CERTIFIED BY DNV ISO/TS 16949:2002 ===



#### Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, rfPIC and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.


FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MXDEV, MXLAB, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Omniscient Code Generation, PICC, PICC-18, PICkit, PICDEM, PICDEM.net, PICtail, PIC32 logo, REAL ICE, rfLAB, Select Mode, Total Endurance, TSHARC, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2009, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

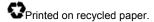

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELoQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

# **TABLE OF CONTENTS**

1	GENE	ERAL	1
2	FEAT	URES	1
3	APPL	ICATIONS	2
4		ERING	
5		CK DIAGRAM	
6		DIAGRAM	
7		CTIONAL DESCRIPTION	
-			
		MAIN SCHEMATIC	
		, 5, 8-Wire Sensor Selection	
		-WIRE TOUCH SENSOR INTERFACE	
-		-WIRE TOUCH SENSOR INTERFACE	
		-WIRE TOUCH SENSOR INTERFACE	
		COMMUNICATION INTERFACE	
•	7.7.1	^	
	7.7.2		
_	7.7.3		
	-	STATUS LEDSD CONSIDERATIONS	
		IOISE CONSIDERATIONS	
		OUCH REPORTING PROTOCOL	
		CONFIGURATION REGISTERS	
′	7.12.1		
	7.12.2	e i	
	7.12.2		
	7.12.4		
	7.12.5		
	7.12.6		
	7.12.7		
	7.12.8		
	7.12.9		
	7.12.1		
	7.12.1		
	7.12.1	12 CalibrationInset Register (offset 0x0E)	16
	7.12.1	13 PenStateReportDelay Register (offset 0x0F)	17
	7.12.1	14 TouchReportDelay Register (offset 0x11)	17
	7.12.1		
7	7.13 C	COMMAND FORMAT	
7	'.14 C	COMMAND RESPONSE	.18
7	'.15 C	COMMANDS	. 18
	7.15.1	1 Enable Touch - 0x12	18
	7.15.2	2 Disable Touch - 0x13	18
	7.15.3	3 Calibrate - 0x14	19
	7.1	5.3.1 How the Calibration Data is Encoded and Stored in EEPROM	20
	7.15.4		
	7.15.5		
	7.15.6		
	7.15.7	· · · · · · · · · · · · · · · · · · ·	
	7.15.8		
	7.15.9		
	7.15.3		
7		ALIBRATION OF TOLICH SENSOR WITH CONTROLLER	23

8 BASICS OF RESISTIVE SENSORS	25
8.1 Terminology	
8.2 GENERAL	
8.3 4-Wire Sensor	
8.5 5-WIRE SENSOR	
8.6 Summary	
9 ELECTRICAL SPECIFICATIONS	29
9.1 ABSOLUTE MAXIMUM RATINGS(†)	
10 PACKAGING	
10.1 20 LEAD SOIC	
10.2 20 LEAD SSOP	
FIGURES	
Figure 1: Block Diagram	2
Figure 2: Pin Diagrams – SOIC / SSOP and QFN Packages	3
Figure 3: Main Schematic (SOIC, SSOP package pin out)	
Figure 4: 4-wire Touch Sensor Interface	
Figure 5 : 5-wire Touch Sensor Interface	
Figure 6 : 8-wire Touch Sensor Interface	
Figure 7: I <sup>2</sup> C Timing Diagram – Receive Data	8
Figure 8: I <sup>2</sup> C Timing Diagram – Transmit Data	8
Figure 9: I <sup>2</sup> C Timing Diagram – Touch Report Protocol	
Figure 10: I <sup>2</sup> C Timing Diagram – Command Protocol	
Figure 11: SPI Timing Diagram – Bit TimingFigure 12: SPI Timing Diagram – Touch Report Protocol	
Figure 13: SPI Timing Diagram – Command Protocol	
Figure 14: 4-Wire Decoding	
Figure 15: 8-Wire Decoding	
Figure 16: 5-Wire Decoding	
Figure 17: 20 Lead SOIC Package	30
Figure 18: 20 Lead SSOP Package	
Figure 19: 20 Lead QFN Package	32
TABLES	
Table 1: Ordering Part Numbers	
Table 2: Pin Descriptions	
Table 3: Bill of Materials	
Table 4: 4/8-wire vs 5-wire Selection	
Table 5: Communication Selection	
Table 6: Communication Pins	
Table 7 : Touch Coordinate Reporting Protocol	
Table 9 : Command Set Summary	
Table 10 : Sensor Comparison	
Table 10. Oction Comparison	23

## 1 GENERAL

The mTouch AR1000 Series Resistive Touch Screen Controller is a complete, easy to integrate, cost effective, and universal touch screen controller chip solution.

The AR1000 Series is designed for high volume, small form factor touch solutions with quick time to market requirements.

Developed by touch experts with over 15 years experience, the AR1000 Series has sophisticated proprietary touch screen decoding algorithms allowing it to send your application fully processed and reliable touch coordinates.

## 2 FEATURES

#### **Special Features:**

- RoHS Compliant
- · Power-Saving Sleep mode
- Industrial Temperature Range
- Built in drift compensation algorithm
- 128 Bytes of user EEPROM
- 4 x 4 mm QFN package

#### **Power Requirements:**

- Operating Voltage: 3.3 to 5.0 volts ±5%
- Standby Sleep Current: <1uA</li>
- Operating "No touch" Current: 3.0mA typ.
- Operating "Touch" Current: 17mA typ with a touch sensor having 200Ω layers.
  - Actual current is dependent on the touch sensor used.

#### **Touch Modes:**

· Off, Stream, Down, Up, and more.

## **Touch Sensor Support:**

- 4 wire, 5 wire, and 8 wire analog resistive
- Lead to Lead Resistance:  $50\Omega$  to  $2,000\Omega$
- Layer to Layer Capacitance: 0 to 0.5uF
- Touch Sensor Time Constant: 500us maximum

#### Touch Resolution:

• 10-bit resolution maximum

#### **Touch Coordinate Report Rate:**

- 140 reports per second typ.
  - with a touch sensor of 0.02uF with  $200\Omega$  layers.
  - Actual report rate is dependent on the touch sensor used.

#### Communications:

- SPI, slave mode, p/n AR1020
- I<sup>2</sup>C™, slave mode, p/n AR1020
- UART, 9600 bps, p/n AR1010

#### Sensor Support

All 4, 5, and 8-wire sensors are supported, regardless of manufacturer or construction. See *BASICS OF RESISTIVE SENSORS* section.

#### Low-Power Wake-Up

Wake-up from power saving sleep mode, via a touch or communication input.

#### Configuration Registers

Configuration registers provide user configuration of controller features.

See Configuration Registers section.

#### **Touch Algorithms**

Algorithms provide for good calibration-corrected coordinates, with no additional development or code.

- Touch decoding
- Coordinate data filtering
- Calibration corrected coordinate option
- Built-in touch modes

## **Communication Control**

AR1010 supports UART communication. AR1020 supports I2C and SPI communication.

See Communication Interface section.

# 3 APPLICATIONS

The AR1000 is suitable for any application that requires fast and reliable integration of touch in the design, including but not limited to:

- Mobile communication devices
- Personal Digital Assistants (PDA)
- Global Positioning Systems (GPS)
- Touch Screen Monitors
- KIOSK
- Media Players
- Portable Instruments
- Point of Sale Terminals

## 4 ORDERING

Part Number	Communication	Temp Range	Pin Package	Packing						
	Туре									
AR1010-I/ML	UART	-40°C to +85°C	QFN, 20 pin	Tube						
AR1010-I/SO	UART	-40°C to +85°C	SOIC, 20 pin	Tube						
AR1010-I/SS	UART	-40°C to +85°C	SSOP, 20 pin	Tube						
AR1010T-I/ML	UART	-40°C to +85°C	QFN, 20 pin	T/R						
AR1010T-I/SO	UART	-40°C to +85°C	SOIC, 20 pin	T/R						
AR1010T-I/SS	UART	-40°C to +85°C	SSOP, 20 pin	T/R						
AR1020-I/ML	I <sup>2</sup> C/SPI	-40°C to +85°C	QFN, 20 pin	Tube						
AR1020-I/SO	I <sup>2</sup> C/SPI	-40°C to +85°C	SOIC, 20 pin	Tube						
AR1020-I/SS	I <sup>2</sup> C/SPI	-40°C to +85°C	SSOP, 20 pin	Tube						
AR1020T-I/ML	I <sup>2</sup> C/SPI	-40°C to +85°C	QFN, 20 pin	T/R						
AR1020T-I/SO	I <sup>2</sup> C/SPI	-40°C to +85°C	SOIC, 20 pin	T/R						
AR1020T-I/SS	I <sup>2</sup> C/SPI	-40°C to +85°C	SSOP, 20 pin	T/R						

**Table 1: Ordering Part Numbers** 

# 5 BLOCK DIAGRAM

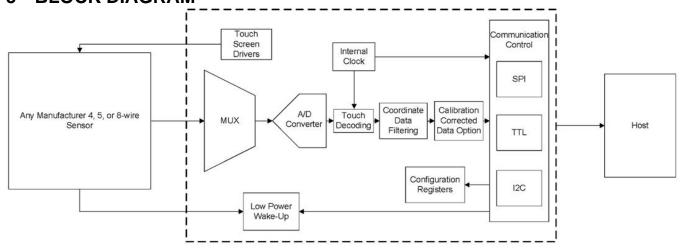


Figure 1: Block Diagram

# **6 PIN DIAGRAM**

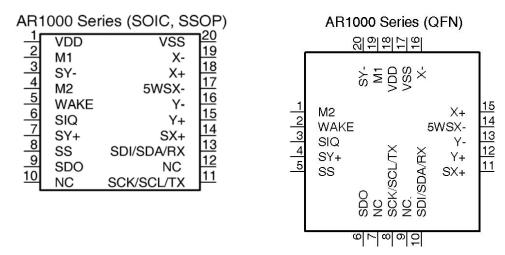


Figure 2: Pin Diagrams - SOIC / SSOP and QFN Packages

Pin Name	Pin #		Pin Description		
	SOIC, SSOP	QFN	·		
VDD	1	18	Supply Voltage		
M1	2	19	Communication Selection		
SY-	3	20	Sense Y- (8-Wire). Tie to VSS, if not used.		
M2	4	1	4/8-wire or 5-wire Sensor Selection		
WAKE	5	2	Touch Wake-Up		
SIQ	6	3	LED drive / SPI Interrupt. No Connect, if not used.		
SY+	7	4	Sense Y+ (8-Wire). Tie to VSS, if not used.		
SS	8	5	Slave Select (SPI). Tie to VSS, if not used.		
SDO	9	6	SPI Serial Data Output / I <sup>2</sup> C Interrupt. Tie to VSS, if UART.		
NC	10	7	No Connection. No Connect or tie to VSS or VDD.		
SCK/SCL/TX	11	8	SPI/I <sup>2</sup> C Serial Clock / UART Transmit		
NC	12	9	No Connection. No Connect or tie to VSS or VDD.		
SDI/SDA/RX	13	10	I <sup>2</sup> C Serial Data / SPI Serial Data Input / UART Receive		
SX+	14	11	Sense X+ (8-Wire). Tie to VSS, if not used.		
Y+	15	12	Y+ Drive		
Y-	16	13	Y- Drive		
5WSX-	17	14	5W Sense (5-Wire) / Sense X- (8-Wire). Tie to VSS, if not used.		
X+	18	15	X+ Drive		
X-	19	16	X- Drive		
VSS	20	17	Supply Voltage Ground		

**Table 2: Pin Descriptions** 

## 7 FUNCTIONAL DESCRIPTION

#### 7.1 Main Schematic

A main application schematic is shown below for the SOIC/SSOP package pinout. See the *Pin Diagram* section for the QFN package pinout.

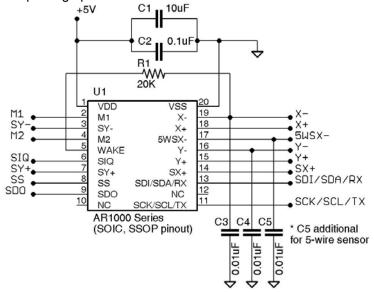


Figure 3: Main Schematic (SOIC, SSOP package pin out)

#### 7.2 Bill of Materials

Modifying, removing, or adding components may adversely affect touch performance.

Specific manufacturers and part numbers are provided only as a guide. Equivalents can be used.

Label	Label Qty Value		Description	Manufacturer	Part Number	
C1	1	10 uF	Capacitor – Ceramic, 10uF, 20%, 6.3V, X7R, 0603	AVX	06036D106MAT2A	
C2	1	0.1 uF	Capacitor – Ceramic, 0.1uF, 10%, 16V, X7R, 0603	AVX	0603YC104KAT2A	
C3, C4, C5 <sup>1</sup>	2-3	0.01 uF	Capacitor - Ceramic, 0.01uF, 10%, 50V, X7R, 0603	AVX	06035C103KAT2A	
D1-D8 <sup>2</sup>	4-8	130 W	Diode – Bi-dir., 130W, ESD Protection, SOD323	NXP	PESD5V0S1BA	
R1	1	20K ohm	Resistor - 20K ohm, 1/10W, 5%, 0603	Yageo America	RC0603JR-0720KL	
U1	1	Na	Touch controller IC	Microchip	AR1010 or AR1020	

Table 3: Bill of Materials

Note 1: C5 is only needed for 5-wire applications.

Note 2: D1-D8 are for ESD protection.

- 4-wire touch screen, use D1-D4
- 5-wire touch screen, use D1-D5
- 8-wire touch screen, use D1-D8

The capacitance of alternate ESD diodes may adversely affect touch performance. A lower capacitance is better. The PESD5V0S1BA parts shown in the reference design have a typical capacitance of 35pF. Test to ensure that selected ESD protection does not degrade touch performance.

ESD protection is shown in the reference design, but acceptable protection is dependent on your specific application. Ensure your ESD solution meets your design requirements.

## 7.3 4, 5, 8-Wire Sensor Selection

The desired sensor type of 4/8-Wire or 5-Wire is hardware selectable using pin M2.

Type	M2 pin
4/8-wire	VSS
5-wire	VDD

Table 4: 4/8-wire vs 5-wire Selection

If 4/8-wire has been hardware selected, then the choice of 4-wire or 8-wire is software selectable, via the *TouchOptions* configuration register. When 4/8-Wire is hardware selected, the controller defaults to 4-wire operation. If 8-wire operation is desired, then the *TouchOptions* configuration register must be changed.

#### 7.4 4-wire Touch Sensor Interface

Sensor tail pin-outs can vary by manufacturer and part number. Ensure both sensor tail pins for one sensor axis (layer) are connected to the controller's X–/X+ pins and the tail pins for the other sensor axis (layer) are connected to the controller's Y–/Y+ pins. The controller's X–/X+ and Y–/Y+ pin pairs do not need to connect to a specific sensor axis. The orientation of controller pins X– and X+ to the two sides of a given sensor axis is not important. Likewise, the orientation of controller pins Y– and Y+ to the two sides of the other sensor axis is not important.

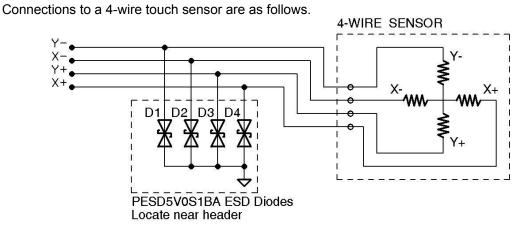


Figure 4: 4-wire Touch Sensor Interface

The capacitance of alternate ESD diodes may adversely affect touch performance. A lower capacitance is better. The PESD5V0S1BA parts shown in the reference design have a typical capacitance of 35pF. Test to ensure that selected ESD protection does not degrade touch performance.

ESD protection is shown in the reference design, but acceptable protection is dependent on your specific application. Ensure your ESD solution meets your design requirements.

Tie unused controller pins 5WSX-, SX+, SY-, and SY+ to VSS.

#### 7.5 5-wire Touch Sensor Interface

Sensor tail pin-outs can vary by manufacturer and part number. Ensure sensor tail pins for one pair of diagonally related sensor corners are connected to the controller's X–/X+ pins and the tail pins for the other pair of diagonally related corners are connected to the controller's Y–/Y+ pins. The controller's X–/X+ and Y–/Y+ pin pairs do not need to connect to a specific sensor axis. The orientation of controller pins X– and X+ to the two selected diagonal sensor corners is not important. Likewise, the orientation of controller pins Y– and Y+ to the other two selected diagonal sensor corners is not important. The sensor tail pin connected to its topsheet must be connected to the controller's 5WSX– pin.

Connections to a 5-wire touch sensor are as follows.

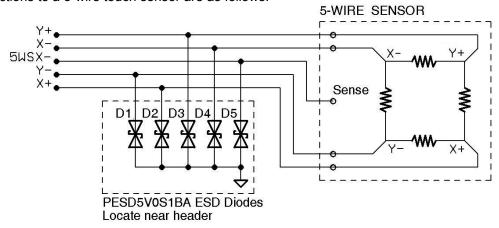


Figure 5: 5-wire Touch Sensor Interface

The capacitance of alternate ESD diodes may adversely affect touch performance. A lower capacitance is better. The PESD5V0S1BA parts shown in the reference design have a typical capacitance of 35pF. Test to ensure that selected ESD protection does not degrade touch performance.

ESD protection is shown in the reference design, but acceptable protection is dependent on your specific application. Ensure your ESD solution meets your design requirements.

Tie unused controller pins SX-, SY-, and SY+ to VSS.

#### 7.6 8-wire Touch Sensor Interface

Sensor tail pin-outs can vary by manufacturer and part number. Ensure both sensor tail pins for one sensor axis (layer) are connected to the controller's X–/X+ pins and the tail pins for the other sensor axis (layer) are connected to the controller's Y–/Y+ pins. The controller's X–/X+ and Y–/Y+ pin pairs do not need to connect to a specific sensor axis. The orientation of controller pins X– and X+ to the two sides of a given sensor axis is not important. Likewise, the orientation of controller pins Y– and Y+ to the two sides of the other sensor axis is not important.

The 8-wire sensor differs from a 4-wire sensor in that each edge of an 8-wire sensor has a secondary connection brought to the sensor's tail. These secondary connections are referred to as "sense" lines. The controller pins associated with the sense line for an 8-wire sensor contain an 'S' prefix in their respective names. For example, the SY- pin is the sense line connection associated with the main Y- pin connection.

Consult with the sensor manufacturer's specification to determine which member of each edge connected pair is the special 8-wire "sense" connection. The controller requires that the main and "sense" tail pin pairs for sensor edges be connected to controller pin pairs as follows.

- Y- and SY-
- Y+ and SY+
- X- and 5WSX-
- X+ and SX+

Connections to a 8-wire touch sensor are as follows.

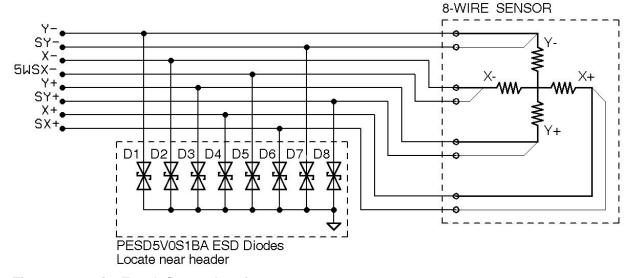


Figure 6: 8-wire Touch Sensor Interface

The capacitance of alternate ESD diodes may adversely affect touch performance. A lower capacitance is better. The PESD5V0S1BA parts shown in the reference design have a typical capacitance of 35pF. Test to ensure that selected ESD protection does not degrade touch performance.

ESD protection is shown in the reference design, but acceptable protection is dependent on your specific application. Ensure your ESD solution meets your design requirements.

## 7.7 Communication Interface

The desired communication type is hardware selectable by chip part number and using pin M1.

Type	Chip P/N	M1 pin
I <sup>2</sup> C	AR1020	VSS
SPI	AR1020	VDD
UART	AR1010	VDD

**Table 5: Communication Selection** 

The communication interface pins are shown below for each communication type.

Type	Communication Pins						
UART	RX, TX, VSS						
I <sup>2</sup> C	SCL, SDA, SDO (Irq), VSS						
SPI	SCK, SDI, SDO, SS, SIQ (Irq), VSS						

**Table 6: Communication Pins** 

# 7.7.1 $I^2C$

I<sup>2</sup>C operates in slave mode with 7-bit address of 0x9A.

The SDO pin functions as an interrupt output. It is asserted high when data is available.

Timing diagrams are shown below.

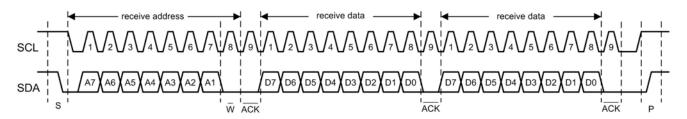


Figure 7: I<sup>2</sup>C Timing Diagram – Receive Data

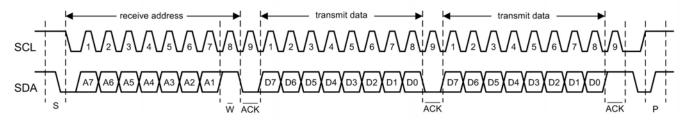


Figure 8: I<sup>2</sup>C Timing Diagram – Transmit Data

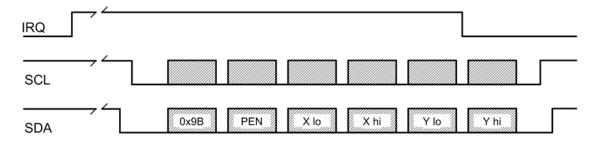


Figure 9: I<sup>2</sup>C Timing Diagram – Touch Report Protocol

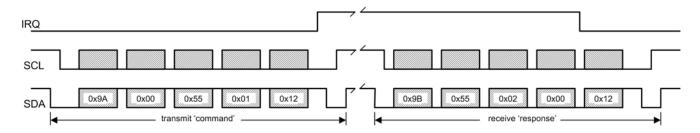


Figure 10: I<sup>2</sup>C Timing Diagram – Command Protocol

#### 7.7.2 SPI

SPI operates in slave mode with an idle low SCK and data transmitted on the SCK falling edge.

The SIQ pin functions as an interrupt output. It is asserted high when data is available. The pin has a dual purpose with driving an optional LED.

The SS pin is optional for "Slave Select" functionality. It is active (selects) when pulled low to VSS. Tie to VSS if not used.

If data is clocked out when the controller has no valid data to provide, then 0x4d (ASCII "M") will be presented.

Timing diagrams are shown below.

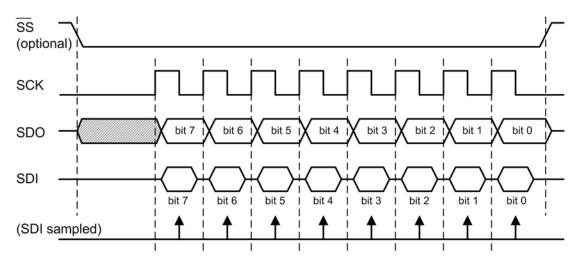


Figure 11: SPI Timing Diagram - Bit Timing

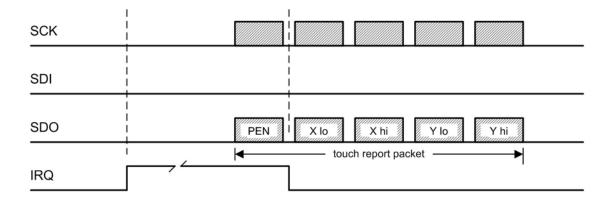


Figure 12: SPI Timing Diagram – Touch Report Protocol

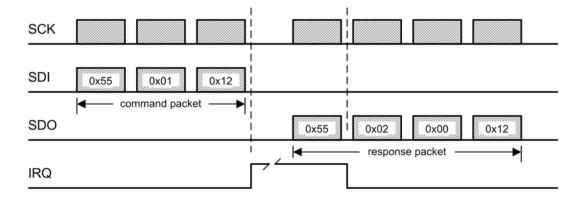


Figure 13: SPI Timing Diagram – Command Protocol


#### **7.7.3 UART**

The SDO pin is not used and must be left as a "no connect". Do NOT tie it directly to VSS or VDD.

UART communication is at a fixed 9600 baud rate.

#### 7.8 Status LED

The LED and associated resistor are optional.

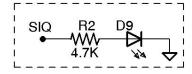

The LED serves as a status indicator that the controller is functioning. It will slow flash when the controller is running with no touch in progress. It will flicker quickly (mid level On) when a touch is in progress.

If the LED is used with SPI communication, then the LED will be off with no touch and flicker quickly (mid level On) when a touch is in progress.

If the SIQ pin is not used, it must be left as a no connect and NOT tied to circuit VDD or VSS.

#### 7.9 ESD Considerations

ESD protection is shown on the 4-wire, 5-wire, and 8-wire interface applications schematics.

The capacitance of alternate ESD diodes may adversely affect touch performance. A lower capacitance is better. The PESD5V0S1BA parts shown in the reference design have a typical capacitance of 35pF. Test to ensure that selected ESD protection does not degrade touch performance.

ESD protection is shown in the reference design, but acceptable protection is dependent on your specific application. Ensure your ESD solution meets your design requirements.

#### 7.10 Noise Considerations

Touch sensor filtering capacitors are included in the reference design.

Warning: Changing the value of the capacitors may adversely affect performance of the touch system.

## 7.11 Touch Reporting Protocol

Touch coordinates are sent from the controller to the host system in a 5-byte data packet, which contains the X-axis coordinate, Y-axis coordinate, and a "Pen-Up/Down" touch status.

The range for X-axis and Y-axis coordinates is from 0-4095 (12-bit). The realized resolution is 1024, as this product currently defines, in a non-calibrated state, bits X1:X0 and Y1:Y0 as zeros.

It is recommended that applications be developed to read the 12-bit coordinates from the packet and use them in a 12-bit format. This enhances the application robustness, as it will work with either 10 or 12 bits of coordinate information.

The touch coordinate reporting protocol is shown below.

Byte #	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
1	1	R	R	R	R	R	R	Р
2	0	X6	X5	X4	X3	X2	X1	X0
3	0	0	0	X11	X10	X9	X8	X7
4	0	Y6	Y5	Y4	Y3	Y2	Y1	Y0
5	0	0	0	Y11	Y10	Y9	Y8	Y7

**Table 7: Touch Coordinate Reporting Protocol** 

where:

P : 0 Pen-Up, 1 Pen-Down

R : Reserved

X11-X0: X-axis coordinate Y11-Y0: Y-axis coordinate

#### 7.12 Configuration Registers

The Configuration Registers allow application specific customization of the controller. The default values have been optimized for most applications and are automatically used, unless you choose to change them.

Unique sensors and/or product applications may benefit from adjustment of configuration registers.

The factory default settings for the Configuration registers can be recovered by writing a value of 0xFF to address 0x00 of the EEPROM, then cycling power.

Register Name	Address	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Default
	Offset									Value
TouchThreshold	0x02	Value of	f: 0-255							0xC5
SensitivityFilter	0x03	Value of	f: 0-255							0x04
SamplingFast	0x04	Value of	f: 1, 2, 4	, 8, 16, 3	2, 64, 12	<u>.</u> 8				0x04
SamplingSlow	0x05	Value of	f: 1, 2, 4	, 8, 16, 3	2, 64, 12	:8				0x10
AccuracyFilterFast	0x06	Value of	f: 1-8							0x02
AccuracyFilterSlow	0x07	Value of	f: 1-8							0x08
SpeedThreshold	0x08	Value of	f: 0-255							0x04
SleepDelay	0x0A	Value of	f: 0-255							0x64
PenUpDelay	0x0B	Value of	f: 0-255							0x80
TouchMode	0x0C	PD2	PD1	PD0	PM1	PM0	PU2	PU1	PU0	0xB1
TouchOptions	0x0D	_	_	_	_	_	_	48W	CCE	0x00
CalibrationInset	0x0E	Value of	f: 0-40							0x19
PenStateReportDelay	0x0F	Value of	f: 0-255							0xC8
TouchReportDelay	0x11	Value of	f: 0-255							0x00

**Table 8: Configuration Registers** 

Configuration registers are defined as an Offset value from the Start address for the register group.

To read or write to a register, do the following.

- 1) Issue the < Register Start Address Request> command to obtain the Start address for the register group.
- 2) Calculated the desired register's absolute address by adding the register's *Offset* value to *Start* address for the register group.
- 3) Issue the <Register Read> or <Register Write> command, using the calculated register's absolute address.

Warning: Use of invalid register value will yield unpredictable results!

#### 7.12.1 TouchThreshold Register (offset 0x02)

The TouchThreshold register sets the threshold for a touch condition to be detected as a touch. A touch is detected if it is below the *TouchThreshold* setting. Too small of a value might prevent the controller from accepting a real touch, while too large of a value might allow the controller to accept very light or false touches conditions. Valid values are as follows.

0 ≤ TouchThreshold ≤ 255

#### 7.12.2 SensitivityFilter Register (offset 0x03)

The SensitivityFilter register sets the level of touch sensitivity. A higher value is more sensitive to a touch (accepts a lighter touch), but may exhibit a less stable touch position. A lower value is less sensitive to a touch (requires a harder touch), but will provide a more stable touch position. Valid values are as follows.

0 ≤ SensitivityFilter ≤ 255

## 7.12.3 SamplingFast Register (offset 0x04)

The SamplingFast register sets the level of touch measurement sample averaging, when touch movement is determined to be fast. See the SpeedThreshold register for information on the touch movement threshold. A lower value will provide for a higher touch coordinate reporting rate when touch movement is fast, but may exhibit more high frequency random noise error in the touch position. A higher value will reduce the touch coordinate reporting rate when touch movement is fast, but will reduce high frequency random noise error in the touch position. Valid values are as follows.

SamplingFast: 1, 2, 4, 8, 16, 32, 64, 128

#### 7.12.4 SamplingSlow Register (offset 0x05)

The SamplingSlow register sets the level of touch measurement sample averaging, when touch movement is slow. See the SpeedThreshold register for information on the touch movement threshold. A lower value will increase the touch coordinate reporting rate when the touch motion is slow, but may exhibit a less stable more jittery touch position. A higher value will decrease the touch coordinate reporting rate when the touch motion is slow, but will provide a more stable touch position. Valid values are as follows.

SamplingSlow: 1, 2, 4, 8, 16, 32, 64, 128

## 7.12.5 AccuracyFilterFast Register (offset 0x06)

The AccuracyFilterFast register sets the level of an accuracy enhancement filter, used when the touch movement is fast. See the SpeedThreshold register for information on the touch movement threshold. A lower value will provide better touch coordinate resolution when the touch motion is fast, but may exhibit more low frequency noise error in the touch position. A higher value will reduce touch coordinate resolution when the touch motion is fast, but will reduce low frequency random noise error in the touch position. Valid values are as follows.

1 ≤ AccuracyFilterFast ≤ 8

#### 7.12.6 AccuracyFilterSlow Register (offset 0x07)

The AccuracyFilterSlow register sets the level of an accuracy enhancement filter, used when the touch movement is slow. See the SpeedThreshold register for information on the touch movement threshold. A lower value will provide better touch coordinate resolution when the touch motion is slow, but may exhibit more low frequency noise error in the touch position. A higher value will reduce touch coordinate resolution when the touch motion is slow, but will reduce low frequency random noise error in the touch position. Valid values are as follows.

1 ≤ AccuracyFilterSlow ≤ 8

#### 7.12.7 SpeedThreshold Register (offset 0x08)

The SpeedThreshold register sets the threshold for touch movement to be considered as slow or fast. A lower value reduces the touch movement speed that will be considered as fast. A higher value increases the touch movement speed that will be considered as fast. Valid values are as follows.

0 ≤ SpeedThrshhold ≤ 255

## 7.12.8 SleepDelay Register (offset 0x0A)

The SleepDelay register sets the time duration with no touch or command activity that will cause the controller to enter a low power sleep mode. Valid values are as follows.

 $0 \le \text{SleepDelay} \le 255$ 

Sleep Delay Time = SleepDelay \* 100ms

A value of zero disables the Sleep Mode, such that the controller will never enter low power sleep mode.

A touch event will wake the controller from low power sleep mode and start sending touch reports. Communications sent to the controller will wake it from the low power sleep mode and initiate action to the command.

## 7.12.9 PenUpDelay Register (offset 0x0B)

The PenUpDelay register sets the duration of a pen up event that the controller will allow, without sending a pen up report for the event. The delay time is started upon detecting a pen up condition. If a pen down is reestablished before the delay time expires, then pen down reports will continue without a pen up being sent. This effectively debounces a touch event in process.

A lower value will make the controller more responsive to pen ups, but will cause more touch drop outs with a lighter touch. A higher value will make the controller less responsive to pen ups, but will reduce the number of touch drop outs wit a lighter touch. Valid values are as follows.

 $0 \le PenUpDelay \le 255$ 

Pen Up Delay Time ≈ PenUpDelay \* 240µs

## 7.12.10 TouchMode Register (offset 0x0C)

The TouchMode register configures the action taken for various touch states.

There are three states of touch for which the controller touch reporting action can be independently controlled.

#### Touch States:

1) Pen down (initial touch)

User defined 0-3 touch reports, with selectable pen states.

2) Pen Movement (touch movement after initial touch)

User defined no touch reports or streaming touch reports, with selectable pen states.

3) Pen Up (touch release)

User defined 0-3 touch reports, with selectable pen states.

Every touch report include a "P" (Pen) bit that indicates the pen state.

Pen Down : P = 1Pen Up : P = 0

#### R = Readable bit, W = Writable bit, U = Unimplemented bit read as '0'

R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
PD2	PD1	PD0	PM1	PM0	PU2	PU1	PU0
Bit 7							Bit 0

bit 7-5 **PD<7:5>:** Pen Down State bits (action taken upon pen down).

000 = No Touch Report

001 = Touch Report with P=0

010 = Touch Report with P=1

011 = Touch Report with P=1, then Touch Report with P=0

100 = Touch Report with P=0, then Touch Report with P=1, then Touch Report with P=0

101 = Touch Report with P=0, then Touch Report with P=1

bit 4-3 **PM<4:3>:** Pen Movement State bits (action taken upon pen movement).

00 = No Touch Report

01 = Touch Report with P=0

10 = Touch Report with P=1

bit 2-0 **PU<2:0>:** Pen Up State bits (action taken upon pen up).

000 = No Touch Report

001 = Touch Report with P=0

010 = Touch Report with P=1

011 = Touch Report with P=1, then Touch Report with P=0

100 = Touch Report with P=0, then Touch Report with P=1, then Touch Report with P=0

101 = Touch Report with P=0, then Touch Report with P=1

A couple of typical setup examples for the TouchMode are as follows.

- Report a pen down P=1 on initial touch, followed by reporting a stream of pen downs P=1 during the touch, followed by a final pen up P=0 on touch release. TouchMode = 0b01010001 = 0x51
- Report a pen up P=0 then a pen down P=1 on initial touch, followed by reporting a stream of pen downs P=1 during the touch, followed by a final pen up P=0 on touch release. TouchMode = 0b10110001 = 0xB1

## 7.12.11 TouchOptions Register (offset 0x0D)

The TouchOptions register contains various "touch" related option bits.

R = Readable bit, W = Writable bit, U = Unimplemented bit read as '0'

U-0	U-0	U-0	U-0	U-0	U-0	R/W	R/W
_	_	-	-	-	_	48W	CCE
Bit 7							Bit 0

#### bit 7-2 Unimplemented: Read as '0'

bit 1 48W: 4-wire or 8-wire Sensor Selection bit

1 = Selects 8-wire sensor operating mode

0 = Selects 4-wire sensor operating mode

bit 0 CCE: Calibrated Coordinates Enable bit

1 = Enables calibrated coordinates, if the controller has been calibrated

0 = Disables calibrated coordinates

A 4-wire touch sensor will not work if the 48W configuration bit is incorrectly defined as one, which selects 8-wire.

An 8-wire touch sensor will provide basic operation if the *48W* configuration bit is incorrectly defined as zero, which selects 4-wire. However, the benefit of the 8-wire sensor will only be realized, if the *48W* configuration bit is correctly defined as one, selecting 8-wire.

#### 7.12.12 CalibrationInset Register (offset 0x0E)

The CalibrationInset register defines the expected position of the calibration points, inset from the perimeter of the touch sensor's active area, by a percentage of the full scale dimension.

This allows for the calibration targets to be placed inset from edge to make it easier for a user to touch them.

The CalibrationInset register value is only used when the *Calibration Mode* command is issued to the controller. In *Calibration Mode*, the controller will extrapolate the calibration point touch report values by the defined CalibrationInset percentage to achieve full scale.


A software application that issues the *Calibration Mode* command must present the displayed calibration targets at the same inset percentage as defined in this CalibrationInset register.

Valid values are as follows.

0 ≤ CalibrationInset ≤ 40

Calibration Inset = (CalibrationInset / 2) %, Range of 0–20% with 0.5% resolution

For example, CalibrationInset = 25 (0x19) yields a calibration inset of (25 / 2) or 12.5%. During the calibration procedure, the controller will internally extrapolate the calibration point touch values in *Calibration Mode* by 12.5% to achieve full scale.

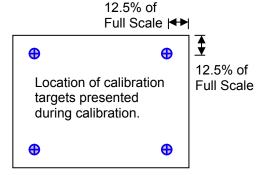

#### 7.12.13 PenStateReportDelay Register (offset 0x0F)

The PenStateReportDelay register sets the delay time between sending of sequential touch reports for the "Pen Down" and "Pen Up" touch mode states. See *TouchMode Register* section for touch modes.

For example, if "Pen Up" state of the *TouchMode* register is configured to send a touch report with P=1, followed by a touch report with P=0, then this delay occurs between the two touch reports. This provides some timing flexibility between the two touch reports that may be desired is certain applications. Valid values are as follows.

0 ≤ PenStateReportDelay ≤ 255

Pen State Report Delay Time = PenStateReportDelay \* 50µs

#### 7.12.14 TouchReportDelay Register (offset 0x11)

The TouchReportDelay register sets a forced delay time between successive touch report packets. This allows slowing down of the touch report rate, if desirable for a given application. For example, a given application may not need a high rate of touch reports and may want to reduce the overhead used to service all of the touch reports being sent. In this situation, increased the value of this register will reduce the rate at which the controller sends touch reports. Valid values are as follows.

0 ≤ TouchReportDelay ≤ 255

Touch Report Delay Time ≈ TouchReportDelay \* 500µs

#### 7.12.15 User Configuration – Spiking

If the reported touch position contains some spiking position errors, then this can be improved by changing the following *Configuration Register* values.

SamplingFast (offset 0x04) = 8
 AccuracyFilterFast (offset 0x06) = 8

The trade off with the above change is that the touch report rate (points per second) will be decreased. This is fine for many applications.

#### 7.13 Command Format

The controller supports application specific configuration commands.

To ensure command communication is not interrupted by touch activity, it is recommended that the controller touch is disabled, prior to other commands. This can be done as follows.

- 1) Send Disable Touch command
- 2) Wait 50ms
- 3) Send desired command/s
- 4) Send Enable Touch command

The format for sending commands is: <Header><DataSize><Command><Data>...<Data>

- <Header> is defined as a value of 0x55 and is used to mark the beginning of the command packet.
- <DataSize> is the number of bytes being sent in the command packet, after <DataSize>.
- <Command> is a value assigned to a specific command.
- <Data> represent from zero to eight bytes of command specific data.

## 7.14 Command Response

A received command will be responded to as follows.

<Header><DataSize><Response><Command><Data>...<Data>

- <Header> is defined as a value of 0x55 and is used to mark the beginning of the response packet.
- <DataSize> is the number of bytes being sent in the response packet, after <DataSize>.
- <Response> is a returned status to the received command.

Value<br/>0x00Description<br/>Success0x01Unrecognized Command0x03Unrecognized Header0x04Command Timeout (entire command not received within 100ms)0xFCCalibration Cancel

## 7.15 Commands

Command	Command Description
Value	
0x12	Enable Touch
0x13	Disable Touch
0x14	Calibrate Mode
0x20	Register Read
0x21	Register Write
0x22	Register Start Address Request
0x23	Registers Write to Eeprom
0x28	EEPROM Read
0x29	EEPROM Write
0x2B	EEPROM Write to Registers

Table 9: Command Set Summary

#### **7.15.1 Enable Touch - 0x12**

Controller will send touch coordinate reports for valid touch conditions.

Send : <0x55><0x01><0x12>

Receive : <0x55><0x02><Response><0x12>

#### **7.15.2 Disable Touch - 0x13**

Controller will not send any touch coordinate reports. A touch will, however, still wake up the controller if asleep.

Send : <0x55><0x01><0x13>

Receive : <0x55><0x02><Response><0x13>

<sup>&</sup>lt;Command> is a confirmation of the command being responded to.

<sup>&</sup>lt;Data> represent from zero to eight bytes of returned data.

#### 7.15.3 Calibrate - 0x14

Enter "calibration" mode. This instructs the controller to enter a mode of accepting the next four touches as the calibration point coordinates. See section *Calibration of Touch Sensor with Controller* for an example.

Completion of calibration mode will automatically store the calibration point coordinates in on-board controller memory and set (to 1) the CCE bit of the *TouchOptions* register. This bit enables the controller to report touch coordinates that have been processed with the pre-collected calibration data.

The "calibration" mode will be cancelled by sending any command before the mode has been completed.

 Send
 : <0x55><0x02><0x14><Calibration Type>

 Calibration Type 0x04
 Description 4 point

 Receive
 : <0x55><0x02><Response><0x14> for initial command response for response to 1st target touch release cox55><0x02><Response><0x14> for response to 2nd target touch release for response to 3nd target touch release for response to 4nd target touch rel

To provide for proper touch orientation, the four sequential calibration touches must be input in the following physical order on the touch sensor.

# 1 # 2
Upper Left Upper Right

Touch Sensor

# 4 # 3
Lower Left Lower Right

#### 7.15.3.1 How the Calibration Data is Encoded and Stored in EEPROM

This section is informational only. No user action is required.

The raw touch coordinates, decoded by the controller, for each of the four calibration touches are extrapolated if CalibrationInset was non-zero. The four coordinate pairs are then re-oriented, if required, such that the upper left corner is the minimum (X,Y) "origin" value pair and the lower right corner is the maximum (X,Y) value pair.

The manipulated calibration values are stored in 17 address locations of the EEPROM. In the EEPROM, the calibration data follows the storage of the controller operating parameters. The controller operating parameters and the calibration data are each preceded by a separator value of 0x55. Coordinates are 10-bit significant values, scaled to 16-bit and stored in a Hi and Lo byte pair.

	Separator	Upper Left (Node 1)			Upper Right (Node 2)			Lower Right (Node 3)			Lower Left (Node 4)			Flip				
		>	(	,	1	)	<b>(</b>	,	1	)	(	,	<b>′</b>	)	(	)	1	State
		Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	Lo	Hi	
Address	0x14	0x15	0x16	0x17	0x18	0x19	0x1A	0x1B	0x1C	0x1D	0x1E	0x1F	0x20	0x21	0x22	0x23	0x24	0x25
Value	0x55																	

Decode the above data to as follows:

- 1) Swap the order of stored Lo and Hi bytes for a given coordinate.
- 2) Convert the 16-bit value (stored Hi and Lo bytes) from hexadecimal to decimal.
- 3) Divide the result by 64 to properly rescale the 16-bit stored value back to a 10-bit significant coordinate.

Example of Lo = 0x40 and Hi = 0xF3:

: 0xF340 Swap Hex to Decimal: 62272 Divide by 64 : 973

Flip State Byte: R = Readable bit, W = Writable bit, U = Unimplemented bit read as '0'

U-0	U-0	U-0	U-0	U-0	R/W	R/W	R/W
_	-	-	-	-	XYFLIP	XFLIP	YFLIP
Bit 7							Bit 0

bit 7-3 Unimplemented: Read as '0'

XYFLIP: X and Y axis flip bit bit 2

1 = X and Y axis are flipped

0 = X an Y axis are not flipped

XFLIP: X-axis flip bit bit 1

1 = X-axis flipped

0 = X-axis not flipped

YFLIP: Y-axis flip bit bit 0

1 = Y-axis flipped

0 = Y-axis not flipped

## **7.15.4 Register Read - 0x20**

Read a value from a controller register location. This can be used to determine a controller configuration setting.

Configuration registers are defined as an *Offset* value from the Start address for the register group. Read a register as follows.

- 1) Issue the < Register Start Address Request > command to obtain the Start address for the register group.
- 2) Calculate the desired register's absolute address by adding the register's *Offset* value to *Start* address for the register group.
- 3) Issue this <Register Read> command, as follows, using the calculated register's absolute address

Send : <0x55><0x04><0x20><Register Address High byte><Register Address Low byte><# of Registers to Read>

# of Registers to Read : 0x01 thru 0x08

Register Address High byte : 0x00

Receive : <0x55><0x02 + # of Registers Read><Response><0x20><Register value>...<Register value>

## **7.15.5** Register Write - 0x21

Write a value to a controller register location. This can be used to change a controller configuration setting.

Configuration registers are defined as an *Offset* value from the Start address for the register group. Write a register as follows.

- 1) Issue the < Register Start Address Request> command to obtain the Start address for the register group.
- 2) Calculate the desired register's absolute address by adding the register's *Offset* value to *Start* address for the register group.
- 3) Issue this <Register Write> command, as follows, using the calculated register's absolute address

Send: <0x55><0x04 + # Registers to Write><0x21><Register Address High byte><Register Address Low byte>
<# of Registers to Write><Data>...<Data>

# of Registers to Write : 0x01 thru 0x08

Register Address High byte : 0x00

Receive : <0x55><0x02><Response><0x21>

#### 7.15.6 Register Start Address Request - 0x22

Configuration registers are defined as an *Offset* value from the Start address for the register group. This command returns the Start address for the register group.

Send : <0x55><0x01><0x22>

Receive : <0x55><0x03><Response><0x22><Register Start Address>

#### 7.15.7 Registers Write to EEPROM - 0x23

Save Configuration Register values to EEPROM. This allows the controller to remember configurations settings through controller power cycles.

Send : <0x55><0x01><0x23>

Receive : <0x55><0x02><Response><0x23>

#### 7.15.8 EEPROM Read - 0x28

The controller has 256 bytes of on-board EEPROM.

- The first 128 bytes (address range 0x00–0x7F) are reserved by the controller for the configuration register settings and calibration data.
- The second 128 bytes (address range 0x80–0xFF) are provided for the user's application, if desired.

This command provides a means to read values from the EEPROM.

Send : <0x55><0x04><0x28><EEPROM Address High byte><EEPROM Address Low byte><# of EEPROM to Read>

# of EEPROM to Read : 0x01 thru 0x08

EEPROM Address High byte : 0x00

Receive : <0x55><0x02 + # EEPROM Read><Response><0x28><EEPROM value>...<EEPROM value>

#### **7.15.9 EEPROM Write - 0x29**

The controller has 256 bytes of on-board EEPROM.

- The first 128 bytes (address range 0x00–0x7F) are reserved by the controller for the configuration register settings and calibration data.
- The second 128 bytes (address range 0x80–0xFF) are provided for the user's application, if desired.

This command provides a means to write values to the EEPROM.

Warning: ONLY write to user EEPROM addresses of 0x80-0xFF.

One of the following actions is required for EEPROM changes to be used by the controller.

- The controller power must be cycled from OFF to ON or
- Issue the "EEPROM Write to Registers" command

Write to EEPROM as follows.

Send: <0x55><0x04 + # EEPROM to Write><0x29><EEPROM Address High byte><EEPROM Address Low byte>
<# of EEPROM to Write><Data>...<Data>

# of EEPROM to Write : 0x01 thru 0x08

EEPROM Address High byte : 0x00

Receive : <0x55><0x02><Response><0x29>

#### 7.15.10 EEPROM Write to Registers - 0x2B

Write applicable EEPROM data to Configuration Registers. This will cause the controller to immediately begin using changes made to EEPROM stored Configuration Register values. A power cycle of the controller will automatically cause the controller to use changes made to the EEPROM stored Configuration Register values, without the need for issuing this command. This command eliminates the need for the power cycle.

Send : <0x55><0x01><0x2B>

Receive: <0x55><0x02><Response><0x2B>

#### 7.16 Calibration of Touch Sensor with Controller

The reported coordinates from a touch screen controller are typically calibrated to the application's video display. The task is often left up to the host to perform. This controller provides a feature for it to send coordinates that have already been calibrated, rather than the host needing to perform this task. If enabled, the feature will apply pre-collected 4-point calibration data to the reported touch coordinates. Calibration only accounts for X and Y directional scaling. It does not correct for angular errors due to rotation of the touch sensor on the video display.

The calibration process can be cancelled at anytime by sending a command to the controller.

Upon completion of the calibration process, the calibration data is automatically stored to the EEPROM and "Calibrated Coordinates" is enabled

The process of "calibration" with the controller is described below.

1) Disable touch reporting by issuing *Disable Touch* command.

Send : <0x55><0x01><0x13>

Receive : <0x55><0x02><Response><0x13>

2) Get register group Start address by issuing < Register Start Address Request > command.

A register Start address of 0x07 is used below, for this example.

Send : <0x55><0x01><0x22>

Receive : <0x55><0x03><0x00><0x22><0x07>

3) Calculate the CalibrationInset register's address by adding it's offset value of 0x0E to the register group *Start* address of 0x07.

Register Address = Register Start Address + CalibratioInset Register Offset = 0x07 + 0x0E = 0x15

4) Calculate the desired value for the CalibrationInset register.

A Calibration Inset of 12.5% is used below for this example.

CalibrationInset = 2 \* Desire Calibration Inset % = 2 \* 12.5 = 25 = 0x19

5) Set the Calibration Inset by writing the desired value to the CalibrationInset register.

Send : <0x55><0x05><0x21><0x00><0x15><0x01><0x19>

Receive : <0x55><0x02><0x00><0x21>

6) Issue the *Calibrate Mode*> command.

Send : <0x55><0x02><0x14><0x04> Receive : <0x55><0x02><0x00><0x14>

7) Software to display the first calibration point target in the upper left quadrant of the display and prompt the user to touch and release the target.



Touch and release target

8) Wait for the user to touch and release the first calibration point target. Do this by looking for a controller response of: <0x55><0x02><0x04>

9) Software to display the second calibration point target in the upper right quadrant of the display and prompt the user to touch and release the target.



- 10) Wait for the user to touch and release the second calibration point target. Do this by looking for a controller response of: <0x55><0x02><0x00><0x14>
- 11) Software to display the third calibration point target in the lower right quadrant of the display and prompt the user to touch and release the target.



- 12) Wait for the user to touch and release the third calibration point target. Do this by looking for a controller response of: <0x55><0x02><0x00><0x14>
- 13) Software to display the fourth calibration point target in the lower left quadrant of the display and prompt the user to touch and release the target.



- 14) Wait for the user to touch and release the fourth calibration point target. Do this by looking for a controller response of: <0x55><0x02><0x04>
- 15) Enable touch reporting by issuing *<Enable Touch>* command.

Send : <0x55><0x01><0x12>

Receive : <0x55><0x02><Response><0x12>

## 8 BASICS OF RESISTIVE SENSORS

## 8.1 Terminology

<u>ITO</u> (Indium Tin Oxide) is the resistive coating that makes up the active area of the touch sensor. ITO is a transparent semiconductor that is sputtered onto the touch sensor layers.

<u>Flex or Film or Topsheet</u> is the top sensor layer that a user touches. *Flex* refers to the fact that the top layer physically flexes from the pressure of a touch.

Stable or Glass is the bottom sensor layer that interfaces against the display.

Spacer Adhesive is a frame of adhesive that connects the Flex and Stable layers together around the perimeter.

<u>Spacer Dots</u> maintain physical and electrical separation between the Flex and Stable layers. The dots are typically printed onto the Stable layer.

<u>Bus Bars or Silver Frit</u> electrically connect to the ITO on the Flex and Stable layers to the sensor's interface tail. Bus bars are typically screen printed silver ink. They are usually much lower in resistivity than the ITO.

X-Axis is the left and right direction on the touch sensor.

Y-Axis is the top and bottom direction on the touch sensor.

<u>Drive Lines</u> supply a voltage gradient across the sensor.

#### 8.2 General

Resistive 4, 5, and 8-wire touch sensors consist of two facing conductive layers, held in physical separation from each other. The force of a touch causes the top layer to move and make electrical contact with the bottom layer.

Touch position measurements are typically made by applying a linear voltage gradient across a layer or axis of the touch sensor. The touch position voltage for the axis can be measured using the opposing layer.

A comparison of typical sensor constructions is shown below.

Sensor	Comments
4 Wire	Less expensive than 5-wire or 8-wire
	Lower power than 5-wire
	More linear (without correction) than 5-wire
	Touch inaccuracies occur from flex layer damage or resistance changes
5 Wire	Maintains touch accuracy with flex layer damage
	Inherent non-linearity often requires touch data correction
	Touch inaccuracies occur from resistance changes
8 Wire	More expensive than 4 wire
	Lower power than 5 wire
	More linear (without correction) than 5-wire
	Touch inaccuracies occur from flex layer damaged
	Maintains touch accuracy with resistance changes

**Table 10: Sensor Comparison** 

#### 8.3 4-Wire Sensor

A 4-wire resistive touch sensor consists of a *Stable* and *Flex* layer, electrically separated by spacer dots. The layers are assembled perpendicular to each other. The touch position is determined by first applying a voltage gradient across the flex layer and using the stable layer to measure the flex layer's touch position voltage. The second step is applying a voltage gradient across the stable layer and using the flex layer to measure the stable layer's touch position voltage.

The measured voltage at any position across a driven axis is predictable. A touch moving in the direction of the driven axis will yield a linearly changing voltage. A touch moving perpendicular to the driven axis will yield a relatively unchanging voltage.

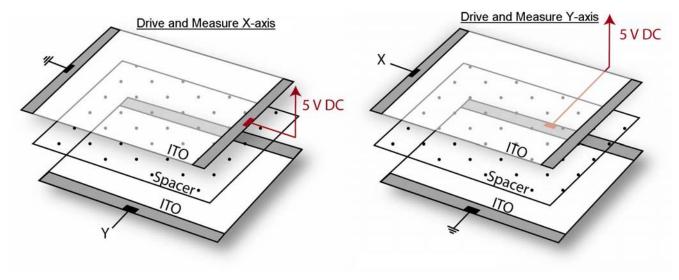


Figure 14: 4-Wire Decoding

#### 8.4 8-Wire Sensor

An 8-wire resistive touch sensor consist of a *Stable* and *Flex* layer, electrically separated by spacer dots. The layers are assembled perpendicular to each other. The touch position is determined by first applying a voltage gradient across the flex layer and using the stable layer to measure the flex layer's touch position voltage. The second step is applying a voltage gradient across the stable layer and using the flex layer to measure the stable layer's touch position voltage.

The measured voltage at any position across a driven axis is predictable. A touch moving in the direction of the driven axis will yield a linearly changing voltage. A touch moving perpendicular to the driven axis will yield a relatively unchanging voltage.

The basic decoding of an 8-wire sensor is similar to a 4-wire. The difference is that an 8-wire sensor has four additional interconnects used to reference sensor voltage back to the controller.

A touch system may experience voltage losses due resistance changes in the bus bars and connection between the controller and sensor. The losses can vary with product use, temperature, and humidity.

In a 4-wire sensor, variations in the losses manifest themselves as error or drift in the reported touch location. An 8-wire touch sensor automatically adjusts for the changes, with the additional four reference lines. The reference lines allow the controller to know what the voltage is, at the touch sensor bus bars.

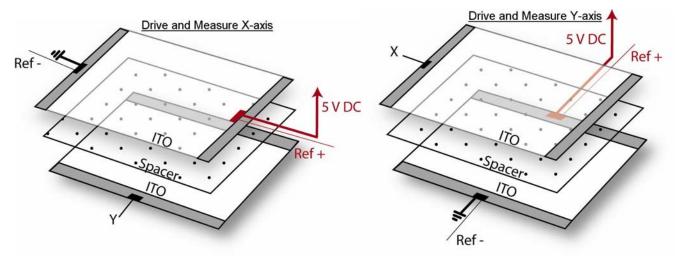


Figure 15: 8-Wire Decoding

#### 8.5 5-Wire Sensor

A 5-Wire resistive touch sensor consists of a flex and stable layer, electrically separated by spacer dots. The touch position is determined by first applying a voltage gradient across the stable layer in the X-axis direction and using the stable layer to measure the axis touch position voltage. The second step is applying a voltage gradient across the stable layer in the Y-axis direction and using the flex layer to measure the axis touch position voltage.

The voltage is not directly applied to the edges of the active layer, as it is for 4-wire and 8-wire sensors. The voltage is applied to the corners of a 5-wire sensor.

To measure the X-axis, the left edge of the layer is driven with 0 Volts (ground), using connections to the upper left and lower left sensor corners. The right edge is driven with +5Vdc, using connections to the upper right and lower right sensor corners.

To measure the Y-axis, the top edge of the layer is driven with 0 Volts (ground), using connections to the upper left and upper right sensor corners. The bottom edge is driven with +5Vdc, using connections to the lower left and lower right sensor corners.

The measured voltage at any position across a driven axis is predictable. A touch moving in the direction of the driven axis will yield a linearly changing voltage. A touch moving perpendicular to the driven axis will yield a relatively unchanging voltage.

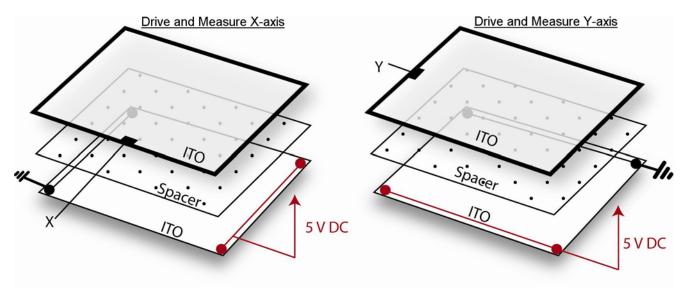


Figure 16: 5-Wire Decoding

#### 8.6 Summary

The AR1000 series resistive touch screen controllers will work with any manufacturers of analog resistive 4, 5, and 8-wire touch screens. The communications and decoding are included, allowing the user the quickest simplest method of interfacing analog resistive touch screens into their applications.

The AR1000 series was designed with an understanding of the materials and processes that make up resistive touch screens. The AR1000 series touch controller is not only reliable, but can enhance the reliability and longevity of the resistive touch screen.

# 9 ELECTRICAL SPECIFICATIONS

## 9.1 Absolute Maximum Ratings(†)

Ambient temperature under bias	40° to +125°C
Storage temperature	65°C to +150°C
Voltage on VDD with respect to VSS	
Voltage on all other pins with respect to VSS	0.3V to (VDD + 0.3V)
Total power dissipation	800 mW
Maximum current out of VSS pin	
Maximum current into VDD pin	250 mA
Input clamp current (VI < 0 or VI > VDD)	± 20 mA
Maximum output current sunk by any I/O pin	25 mA
Maximum output current sourced by any I/O pin	25 mA

† NOTICE: Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at those or any other conditions above those indicated in the operation listings of this specification is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability.




This device is sensitive to ESD damage and must be handled appropriately. Failure to properly handle and protect the device in an application may cause partial to complete failure of the device.

## 10 PACKAGING

## 10.1 20 Lead SOIC

## 20-Lead Plastic Small Outline (SO) - Wide, 7.50 mm Body [SOIC]

Note: For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging

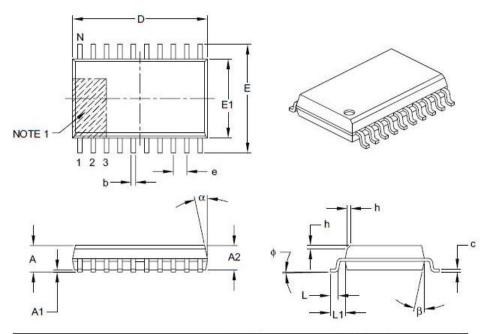

	Units			MILLIMETERS			
Din	nension Limits	MIN	NOM	MAX			
Number of Pins	N	20					
Pitch	е		1.27 BSC				
Overall Height	Α	-	-	2.65			
Molded Package Thickness	A2	2.05	-	-			
Standoff §	A1	0.10	=	0.30			
Overall Width	E	10.30 BSC					
Molded Package Width	E1	7.50 BSC					
Overall Length	D	12.80 BSC					
Chamfer (optional)	h	0.25	<u> </u>	0.75			
Foot Length	L	0.40		1.27			
Footprint	L1		1.40 REF				
Foot Angle	ф	0°	=	8°			
Lead Thickness	С	0.20	_	0.33			
Lead Width	b	0.31	_	0.51			
Mold Draft Angle Top	α	5°	-	15°			
Mold Draft Angle Bottom	β	5°	_	15°			

#### Notes:

- 1. Pin 1 visual index feature may vary, but must be located within the hatched area.
- 2. § Significant Characteristic.
- 3. Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed 0.15 mm per side.
- 4. Dimensioning and tolerancing per ASME Y14.5M.
  - BSC: Basic Dimension. Theoretically exact value shown without tolerances.
  - REF: Reference Dimension, usually without tolerance, for information purposes only.


Microchip Technology Drawing C04-094B

Figure 17: 20 Lead SOIC Package

## 10.2 20 Lead SSOP

# 20-Lead Plastic Shrink Small Outline (SS) - 5.30 mm Body [SSOP]

Note: For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging

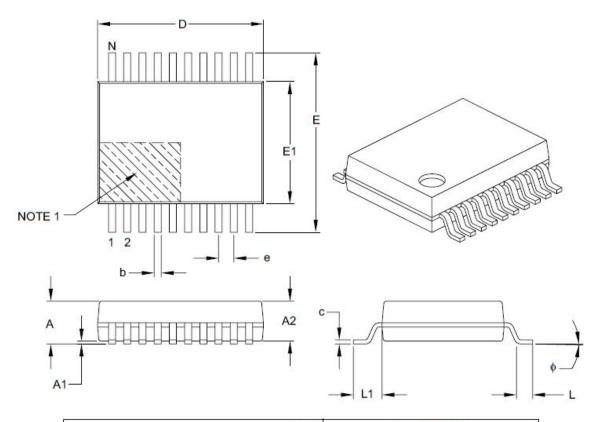

	Units	MILLIMETERS				
	Dimension Limits	MIN	NOM	MAX		
Number of Pins	N	20				
Pitch	е		0.65 BSC	20		
Overall Height	A	=	_	2.00		
Molded Package Thickness	A2	1.65	1.75	1.85		
Standoff	A1	0.05	_	_		
Overall Width	E	7.40	7.80	8.20		
Molded Package Width	E1	5.00	5.30	5.60		
Overall Length	D	6.90	7.20	7.50		
Foot Length	L	0.55	0.75	0.95		
Footprint	L1	1.25 REF				
Lead Thickness	С	0.09	-	0.25		
Foot Angle	ф	0°	4°	8°		
Lead Width	b	0.22	<del></del>	0.38		

#### Notes:

- 1. Pin 1 visual index feature may vary, but must be located within the hatched area.
- 2. Dimensions D and E1 do not include mold flash or protrusions. Mold flash or protrusions shall not exceed 0.20 mm per side.
- 3. Dimensioning and tolerancing per ASME Y14.5M.

BSC: Basic Dimension. Theoretically exact value shown without tolerances.

REF: Reference Dimension, usually without tolerance, for information purposes only.


Microchip Technology Drawing C04-072B

Figure 18: 20 Lead SSOP Package

## 10.3 20 Lead QFN (ML)

The metal plate on the package bottom can be floated, but connecting it to VSS (circuit ground) is recommended. 20-Lead Plastic Quad Flat, No Lead Package (ML) – 4x4x0.9 mm Body [QFN]

**Note:** For the most current package drawings, please see the Microchip Packaging Specification located at http://www.microchip.com/packaging

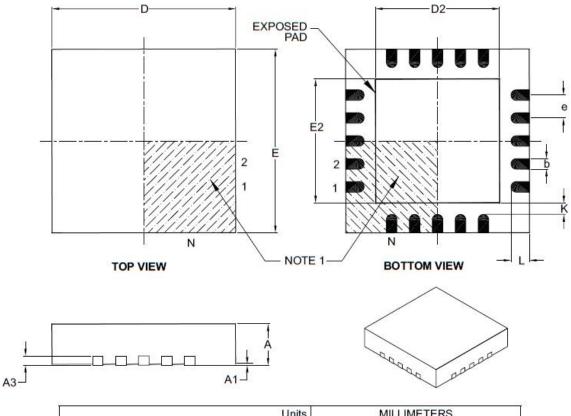

	Units		MILLIMETERS	3	
С	Dimension Limits	MIN	NOM	MAX	
Number of Pins	N	20			
Pitch	е		0.50 BSC	35	
Overall Height	A	0.80	0.90	1.00	
Standoff	A1	0.00	0.02	0.05	
Contact Thickness	A3	0.20 REF			
Overall Width	E	4.00 BSC			
Exposed Pad Width	E2	2.60	2.70	2.80	
Overall Length	D	4.00 BSC			
Exposed Pad Length	D2	2.60	2.70	2.80	
Contact Width	b	0.18	0.25	0.30	
Contact Length	L	0.30	0.40	0.50	
Contact-to-Exposed Pad	K	0.20	=	_	

## Notes:

- 1. Pin 1 visual index feature may vary, but must be located within the hatched area.
- 2. Package is saw singulated.
- 3. Dimensioning and tolerancing per ASME Y14.5M.
  - BSC: Basic Dimension. Theoretically exact value shown without tolerances.
  - REF: Reference Dimension, usually without tolerance, for information purposes only.

Microchip Technology Drawing C04-126B

Figure 19: 20 Lead QFN Package



# WORLDWIDE SALES AND SERVICE

#### **AMERICAS**

Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200

Tel: 480-792-7200 Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Atlanta Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Boston Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Cleveland Independence, OH Tel: 216-447-0464 Fax: 216-447-0643

Dallas Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

Santa Clara Santa Clara, CA Tel: 408-961-6444 Fax: 408-961-6445

Toronto Mississauga, Ontario, Canada

Tel: 905-673-0699 Fax: 905-673-6509

#### ASIA/PACIFIC

Asia Pacific Office Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon Hong Kong

Tel: 852-2401-1200 Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Hong Kong SAR Tel: 852-2401-1200 Fax: 852-2401-3431

China - Nanjing Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

China - Qingdao Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Wuhan Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xiamen Tel: 86-592-2388138 Fax: 86-592-2388130

China - Xian Tel: 86-29-8833-7252 Fax: 86-29-8833-7256

China - Zhuhai Tel: 86-756-3210040 Fax: 86-756-3210049

#### ASIA/PACIFIC

India - Bangalore Tel: 91-80-3090-4444 Fax: 91-80-3090-4080

India - New Delhi Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama Tel: 81-45-471-6166 Fax: 81-45-471-6122

Korea - Daegu Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan - Hsin Chu Tel: 886-3-6578-300 Fax: 886-3-6578-370

Taiwan - Kaohsiung Tel: 886-7-536-4818 Fax: 886-7-536-4803

Taiwan - Taipei Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok Tel: 66-2-694-1351 Fax: 66-2-694-1350

#### EUROPE

Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340

Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 UK - Wokingham

Tel: 44-118-921-5869 Fax: 44-118-921-5820

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Touch Sensor Development Tools category:

Click to view products by Microchip manufacturer:

Other Similar products are found below:

ATMXT1066T2-DEV-PCB ATMXT336UDEVPCB ATMXT641TDAT-I2C-PCB 1374 MIKROE-1906 1602 SEN0164 1982 STEVAL-PCC009V3 ATSAMD20-QTRDEMO ATQT2-XPRO ATQT6-XPRO 2340 DM160221 DM160229 DM160222 ATQT5-XPRO DFR0129 SEN0170 SLEXP8019A SLEXP8018A 1375 DFR0386 SEN0186 SEN0148 DK-000013-03 ROB0103 cs-useful-01 DFR0385 SEN0184 SX8651EVKA 1362 1580 2024 3575 4830 AS8579-TS\_EK\_DB ATQT600 IQS227/228ASEV01 SKU-6515 CY3280-MBR2 CY3280-MBR3 DFR0030 DM160219 AC160219 AC320007 ATEVK-MXT1066T2-A ATEVK-MXT1189TAT-C ATEVK-MXT1189TDAT-A ATEVK-MXT1665TAT-C