

UG9124
Software Installation and Licensing Guide
Libero SoC

May 2020



a  **MICROCHIP** company

Contents

1 Revision History	1
Revision 36.....	1
Revision 35.....	1
Revision 34.....	1
2 Introduction	2
2.1 Purpose.....	2
2.2 Internal References.....	2
2.3 Definitions, Acronyms, and Abbreviations	2
3 Libero SoC Software Installation and Configuration.....	3
3.1 Prerequisites.....	3
3.1.1 System Requirements	3
3.2 Login	3
3.3 Downloading the Libero SoC Software	3
3.4 Installing the Libero SoC Software	4
3.4.1 Installing the Libero SoC Software on Windows	4
3.4.2 Installing the Libero SoC Software on Linux	16
3.4.3 Tips for Launching Libero on Linux RH Operating Systems	28
3.5 Obtaining the Licenses.....	28
3.5.1 Libero License Options	28
3.5.2 Obtaining Free Licenses	29
3.5.3 Obtaining a Paid License	32
3.5.4 Retrieving Copies of Existing Licenses.....	35
3.5.5 License Changes and Information	36
3.6 Installing Licenses	36
3.6.1 Installing a Node Locked Disk ID License on Windows.....	37
3.6.2 Installing a Node-Locked USB Dongle License on Windows.....	37
3.6.3 Installing a Floating License on a Windows Server.....	38
3.6.4 Installing a Floating License on a Linux Server	38
3.6.5 Installing a Floating License on a Solaris Server	39
3.6.6 Connecting the Client Machines (PCs and Linux) to the License Server.....	39
3.6.7 Installing a Server-Based Node-Locked License for Symphony Model Compiler ME	40
3.7 Installation in Environments without a Consistent Internet Connection.....	41
3.7.1 Change Your Vault Location	41
3.7.2 Disable Internet Options	41
3.7.3 Download Direct Cores and SgCore (SmartDebug) Cores to Populate your Vault	41
3.7.4 Download Firmware Cores.....	42

1 Revision History

The revision history describes the changes that were implemented in the document. The changes are listed by revision, starting with the most current publication.

Revision 36

Revision 36 is published in May 2020. The following are the changes made in this document.

- In section 3.4.2, updated the screens for v12.4.

Revision 35

Revision 35 is published in May 2020. The following are the changes made in this document.

- In section 3.6.6.1, added a space between “LM_LICENSE_FILE” and “Variable” in the variable name.

Revision 34

Revision 34 is published in April 2020. The following are the changes made in this document.

- Revised the section [Installing the Libero SoC Software on Windows](#).

2 Introduction

Libero[®] SoC Software offers high productivity with its comprehensive, easy-to-learn, easy-to-adopt development tools for designing with Microsemi's PolarFire, IGLOO2, SmartFusion2, RTG4, SmartFusion, IGLOO, ProASIC3, and Fusion families. The following table lists the Libero license types and their features.

You can download the Libero SoC Software at

<http://www.microsemi.com/products/fpga-soc/design-resources/design-software/libero-soc#downloads>.

You must have a license to run the Libero SoC Software. See the Licensing web page to select the right license at <https://www.microsemi.com/products/fpga-soc/design-resources/licensing>.

Need help selecting the right license for your design? - Download the Libero License Selector Guide.

2.1 Purpose

This document provides information about how to download and install the Libero SoC Software and the prerequisites that are needed to run the application on your system. Also, it does describe how to obtain and install licenses on your system.

2.2 Internal References

- See the licensing information at, <https://www.microsemi.com/products/fpga-soc/design-resources/licensing>.
- View IP information at, <http://www.microsemi.com/products/fpga-soc/design-resources/ip-cores/direct-cores>.
- View the tool and device support for the various licenses at, <https://www.microsemi.com/products/fpga-soc/design-resources/licensing>.
- See the Libero License Selector Guide for more information about license offerings.
- See the PCN17031 for the ceased operating system support.
- See the CN17012: Customer Notification for the Libero SoC Software license offering changes.
- See <https://www.microsemi.com/product-directory/design-resources/5092-ip-cores> for DirectCore licenses.
- See <https://www.microsemi.com/product-directory/technology/3861-imaging#imaging-software-and-ip> for Video Cores licenses.
- See <https://www.microsemi.com/applications/motor-control#ip-suite> for Motor Control licenses.
- See the PDN19017: Product Discontinuation Libero USB Dongle Licenses for discontinued Libero licenses.

2.3 Definitions, Acronyms, and Abbreviations

In this document, the term “Libero” means Libero SoC Design Suite.

3 Libero SoC Software Installation and Configuration

This section explains how to install the Libero SoC Design Suite and configure.

3.1 Prerequisites

You must meet the mentioned specifications to install the Libero SoC Software on your system.

3.1.1 System Requirements

To know more information about the Product Families and Platforms; details about the current System Requirements are available at [http://www.microsemi.com/products/fpga-](http://www.microsemi.com/products/fpga-soc/design-resources/design-software/libero-soc#device-support)

[soc/design-resources/design-software/libero-soc#device-support](http://www.microsemi.com/products/fpga-soc/design-resources/design-software/libero-soc#device-support).

Notes:


1. Only 64-bit Windows and Linux operating systems are supported.
2. Setup instructions for using the Libero SoC on Red Hat Enterprise Linux OS are available on the Libero SoC Documents web page. As noted in that document, installation step 2 now includes running a shell script (bin/check_linux_req.sh) to confirm the presence of all required run time packages.

3.2 Login

You need an SoC login account to download the required Libero Design Suite and licenses. To login,

1. Enter the URL in a browser, Login or Create a new Login Account. The Login page is displayed.
2. Enter the credentials in the required fields, if you are an existing user. Or you should create a new account by clicking **New User** to register yourself.

Figure 1 • Login

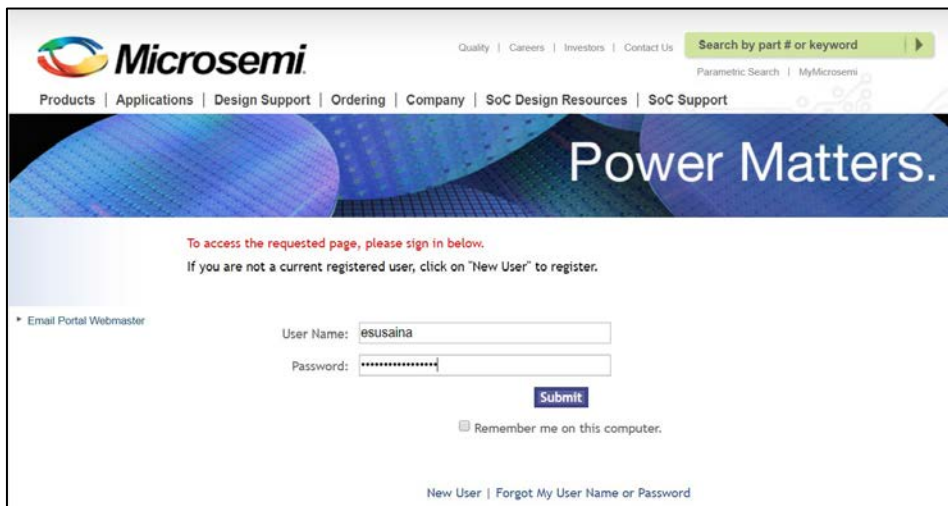

3. Click **Submit**.

3.3 Downloading the Libero SoC Software

You must have Admin rights on the installation machine to install the Libero SoC Software.

To run the Libero SoC Software on your system, you need to download the software from the website.

1. Visit the Libero SoC Software page at Libero SoC Software Design. The **Libero SoC v12.0 and later** page is displayed.

- Go to the **Downloads** tab on this page, and click the latest Libero SoC software download link. The download page is displayed.
- Download the Libero SoC software to your system.

3.4 Installing the Libero SoC Software

You can install the Libero SoC Software on your system for Windows or Linux.

Note: You must have the Administrator rights on the installation machine to install the Libero SoC Software.

3.4.1 Installing the Libero SoC Software on Windows

Install the Libero SoC Software from a DVD or over the web. The installation process varies slightly, depending on which method you choose.


Note: If you have a USB Hardware Key Dongle license, DO NOT attach the USB dongle prior to installing Libero or USB drivers. The USB dongle must be attached after the software and USB driver installation. See *"Installing a Node-Locked USB Dongle License on Windows"* on page 17 regarding USB Driver installation.

3.4.1.1 Installing the Software from the Web (Recommended)

Download the Libero SoC software from website to your local machine. Launch the EXE file, select the features you wish to install. The features that you select are installed on your local machine. There are options provided for configuring the features. Either you can select Default Components or Customize Components.

To install the Libero SoC Software over the web:

- Navigate to the download page Windows EXEs Download.

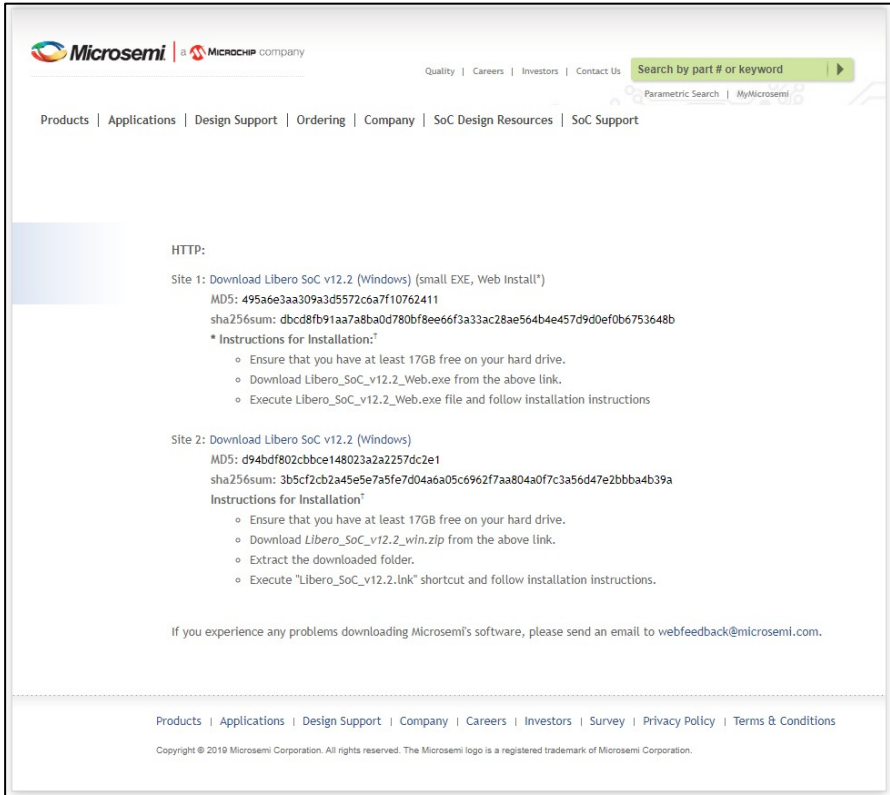

The screenshot shows the Microsemi website's download page for Libero SoC v12.2 (Windows). The page includes a navigation menu with links for Products, Applications, Design Support, Ordering, Company, SoC Design Resources, and SoC Support. A search bar is located at the top right. The main content area lists two download sites:

- Site 1: Download Libero SoC v12.2 (Windows) (small EXE, Web Install*)**
 MD5: 495a6e3aa309a3d5572c6a7f10762411
 sha256sum: dbc88fb91aa7a8ba0d780bf8ee66f3a33ac28ae564b4e457d9d0ef0b6753648b
 * Instructions for Installation:[†]
 - Ensure that you have at least 17GB free on your hard drive.
 - Download Libero_SoC_v12.2_Web.exe from the above link.
 - Execute Libero_SoC_v12.2_Web.exe file and follow installation instructions
- Site 2: Download Libero SoC v12.2 (Windows)**
 MD5: d94bdf802cbbce148023a2a22570c2e1
 sha256sum: 3b5cf2cb2a45e5e7a5fe7d04a6a05c6962f7aa804a0f7c3a56d47e2bbba4b39a
 Instructions for Installation[†]
 - Ensure that you have at least 17GB free on your hard drive.
 - Download Libero_SoC_v12.2_win.zip from the above link.
 - Extract the downloaded folder.
 - Execute "Libero_SoC_v12.2.Ink" shortcut and follow installation instructions.

At the bottom of the page, there is a footer with navigation links and a copyright notice: "Copyright © 2019 Microsemi Corporation. All rights reserved. The Microsemi logo is a registered trademark of Microsemi Corporation."

- Choose one of the download options, depending on your need.
- Click the Download Libero SoC (Windows) link.


4. Extract the **.exe** file from the downloaded folder.
5. Click on the shortcut link and follow the installation instructions.

3.4.1.2 Installing the Software from a DVD (or large ZIP file from the Web)

To install the software from a DVD:

1. Insert the Liberio SoC Software DVD or double-click the ZIP file you downloaded from the web.
2. Unzip/extract the ZIP archive.
3. Run or double-click the **setup.exe** in the extracted folder. The **Liberio SoC <version> InstallAnywhere Wizard** appears.


Figure 2 • Liberio InstallAnywhere Wizard

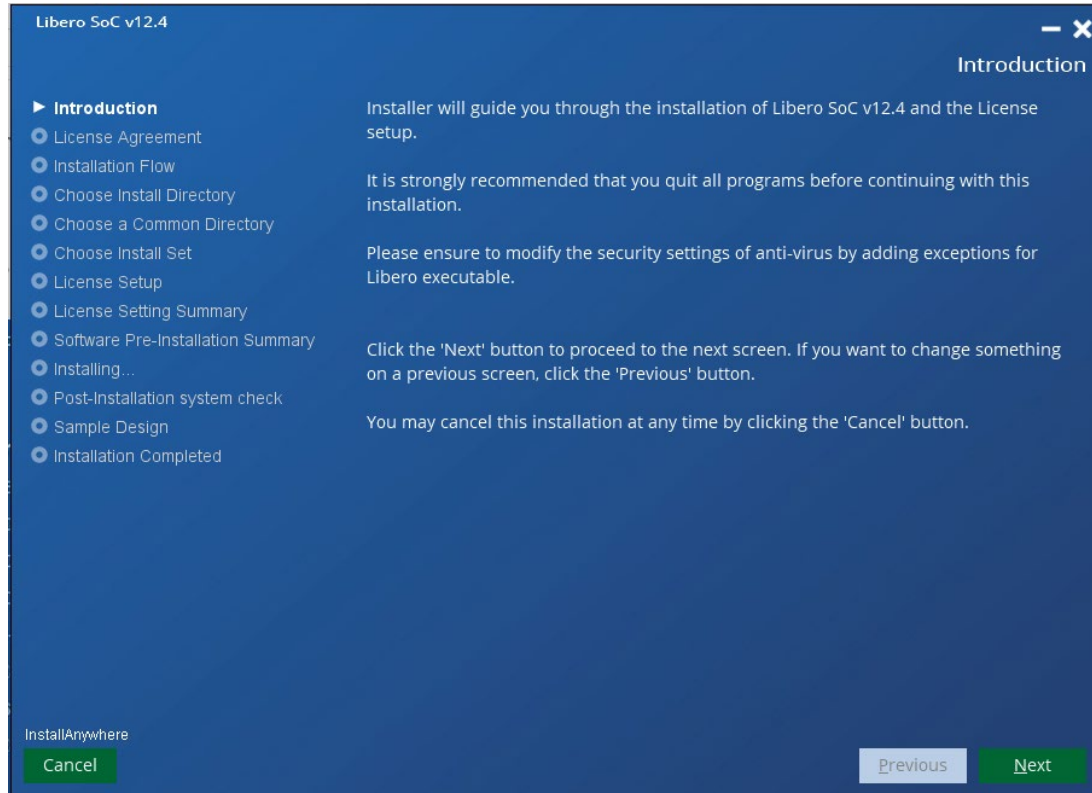

4. Click **Next**. The License Agreement appears.


5. Read the License Agreement and check the **I accept the terms in the License Agreement** check box.

Figure 3 • License Agreement

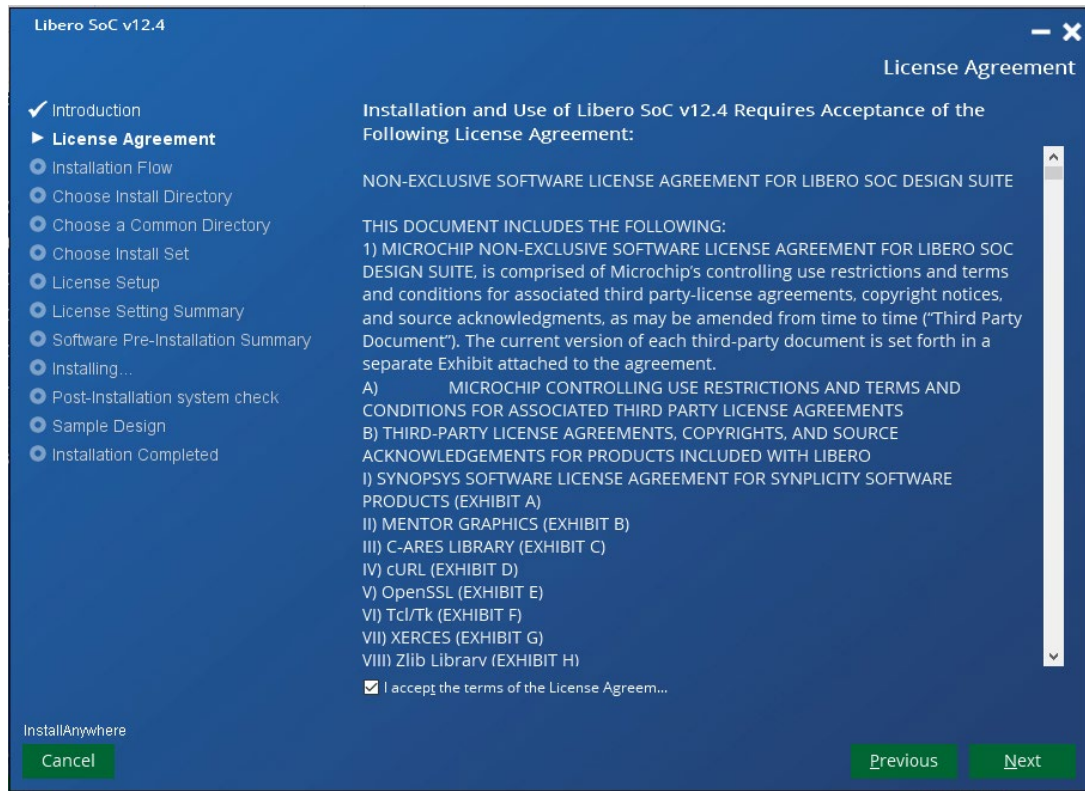


6. Starting with Libero SoC v12.4, for ease of use, the Libero SoC v12.4 installer has been enhanced to include an optional Libero license installation flow. The Libero installer now supports three integrated flows:
 - Libero tool installation (default selection – for customers with existing license setup)
 - Libero license installation (Optional – recommended for first time license setup)
 - Both (integrated tool and license installation)

Figure 4 • Libero Tool and License Installation Selection

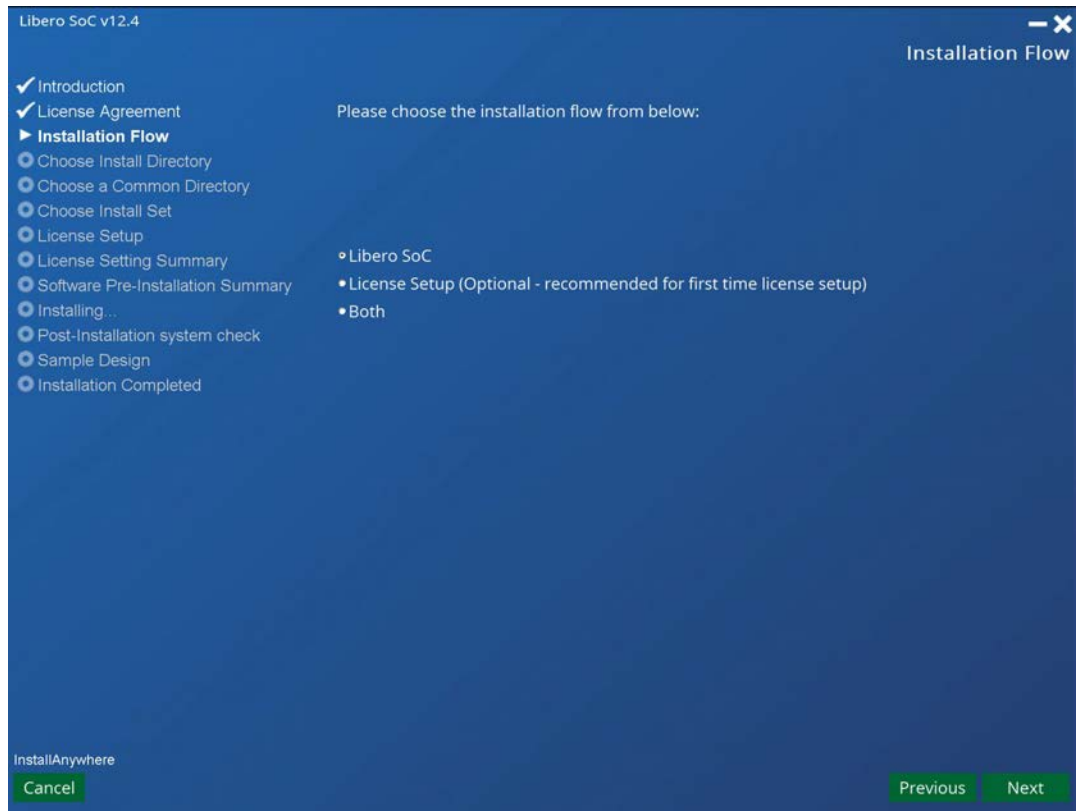

7. Click **Next** to continue. The Destination Folder appears and shows the default installation location in C:\ drive.


Figure 5 • Choose Install Directory

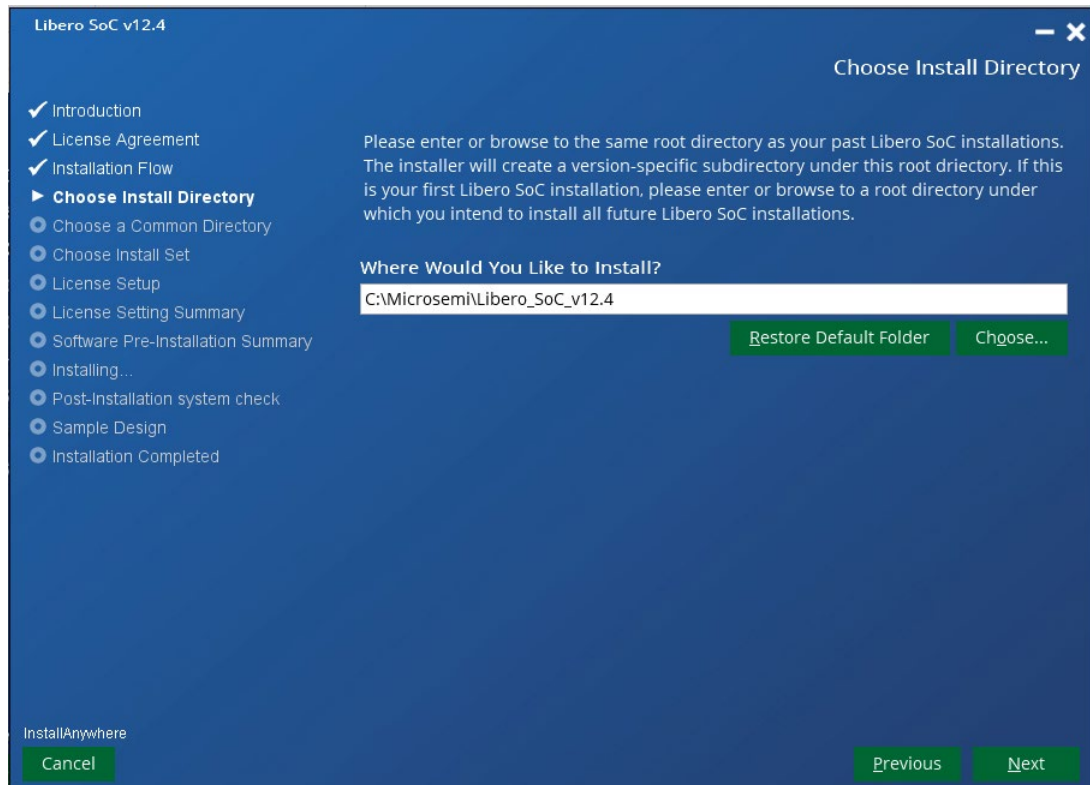

8. Click **Next** to accept the default installation location or click **Choose** to navigate to a different installation location and then click **Next**.

9. Accept the default installation location to install the common files or click **Choose** to navigate to a different installation location and then click **Next**.


Figure 6 • Choose Common Directory

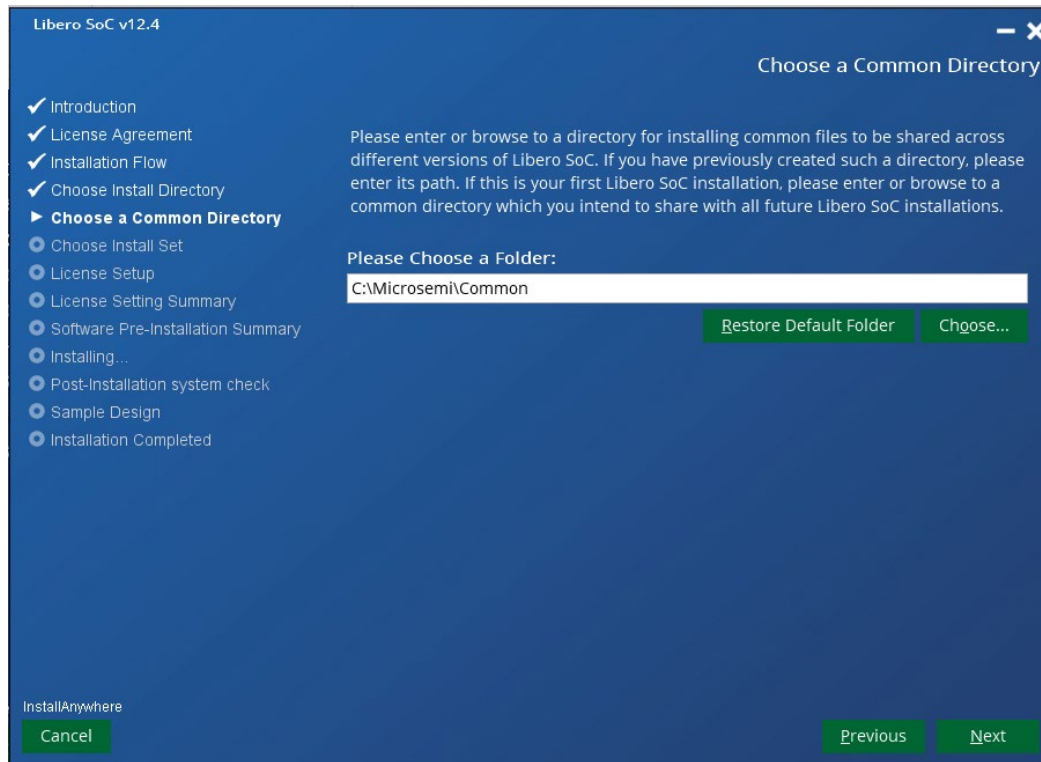


10. The **Libero SoC** selection below installs all features by default. This complete setup is recommended for beginners. It installs all Libero SoC program features, but also consumes the most disk space.

The **Custom** selection allows you to choose which program feature to install.

Figure 7 • Install Set

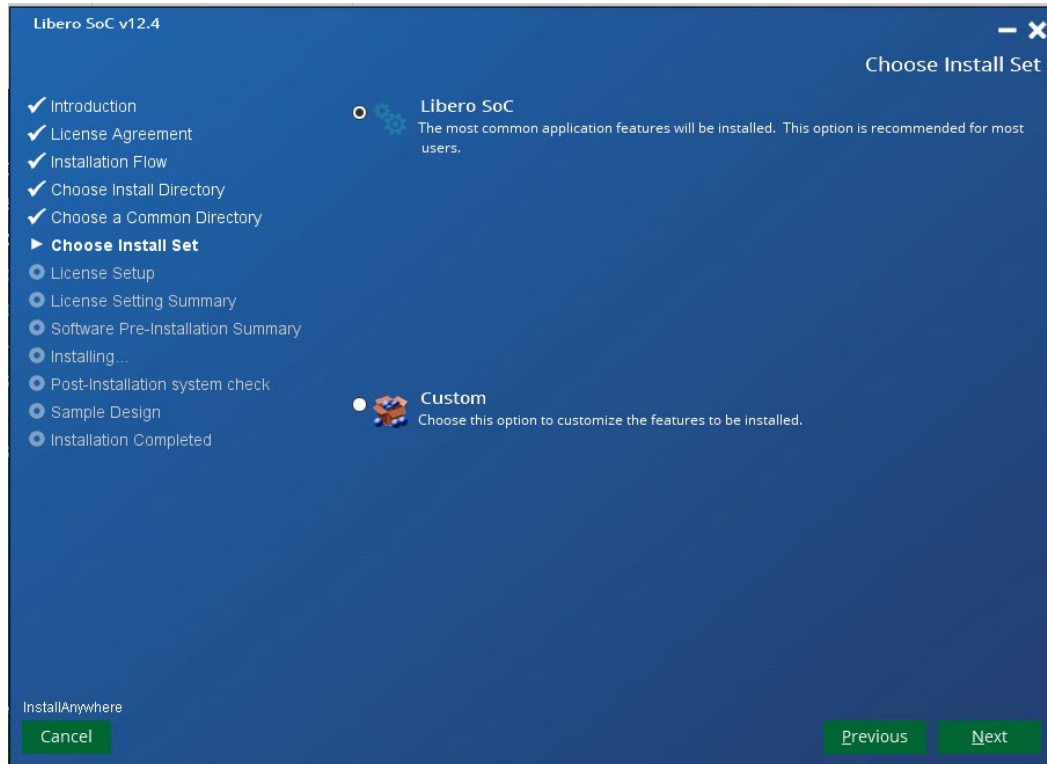


- If you chose License Setup or both Libero Tool Installation and License Setup, then the next screen will appear. If you have received a Libero license from Microsemi, select **Yes**, click **Next** and go to the next step. Otherwise, select **No**, click **Next**, and then go to Step 13.

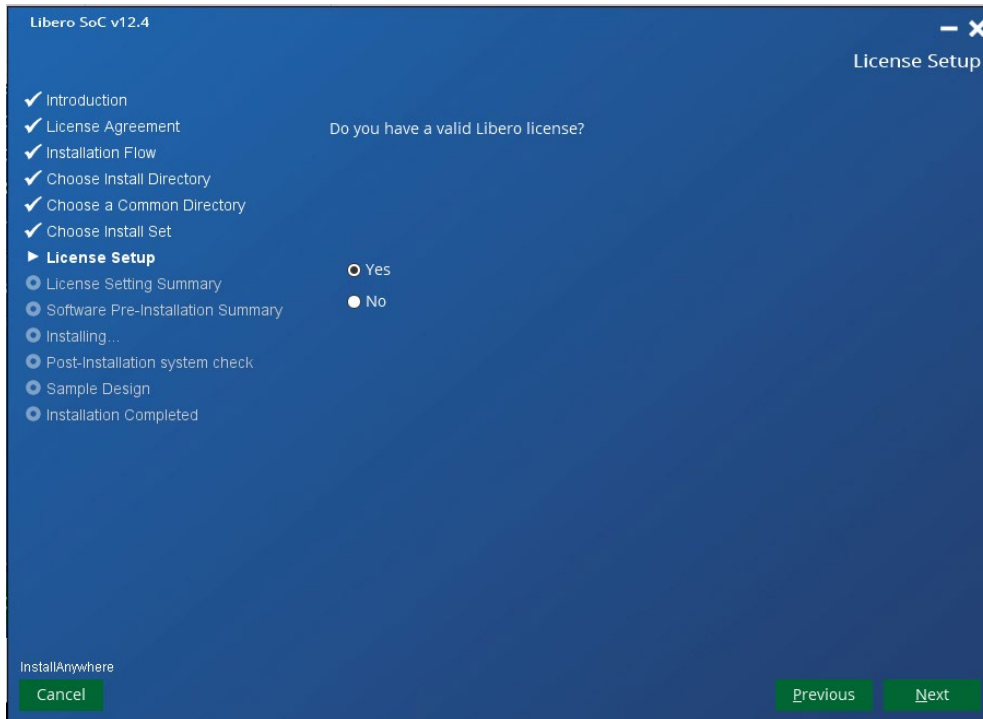


- Select the license type: **Disk ID Note Locked** or **USB License Dongle** or **Floating License (MAC ID)**. Click **Next**.

- For a Disk ID Node Locked or USB Dongle license, type a path to the license file that you receive from Microsemi. For example: C:\flexlm\License.dat. You can also click **Choose** to open an explorer, then navigate to the license file location and select the license file. Click **Next**.

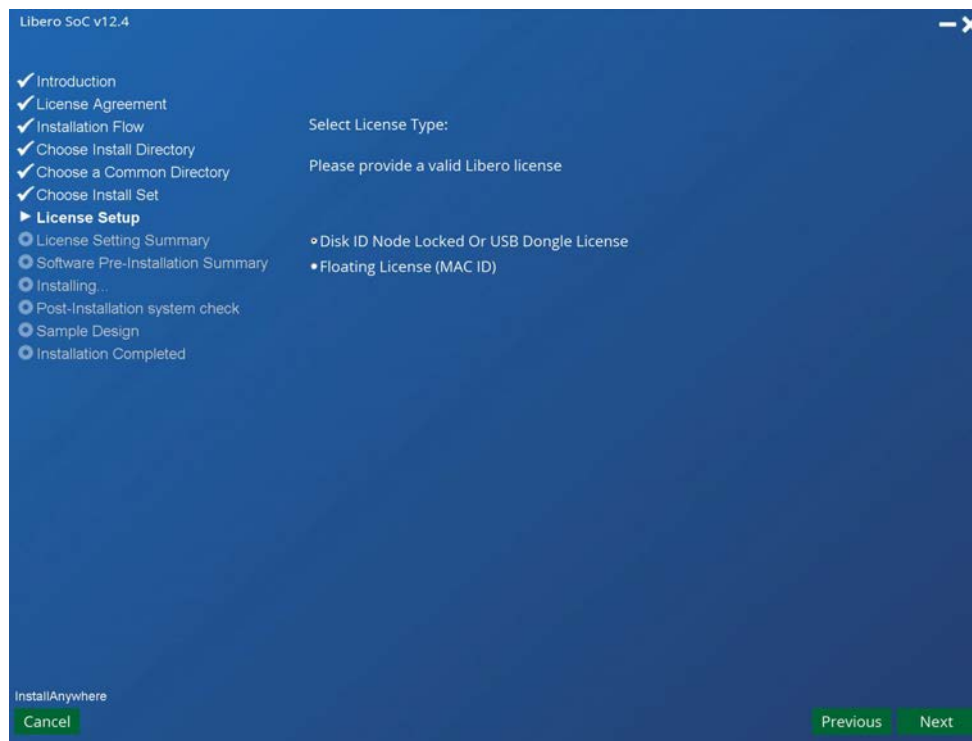


- For a MAC ID floating license, type the MAC ID Floating License port@server name, and then click **Next**. For example: 2020@my-server-name.

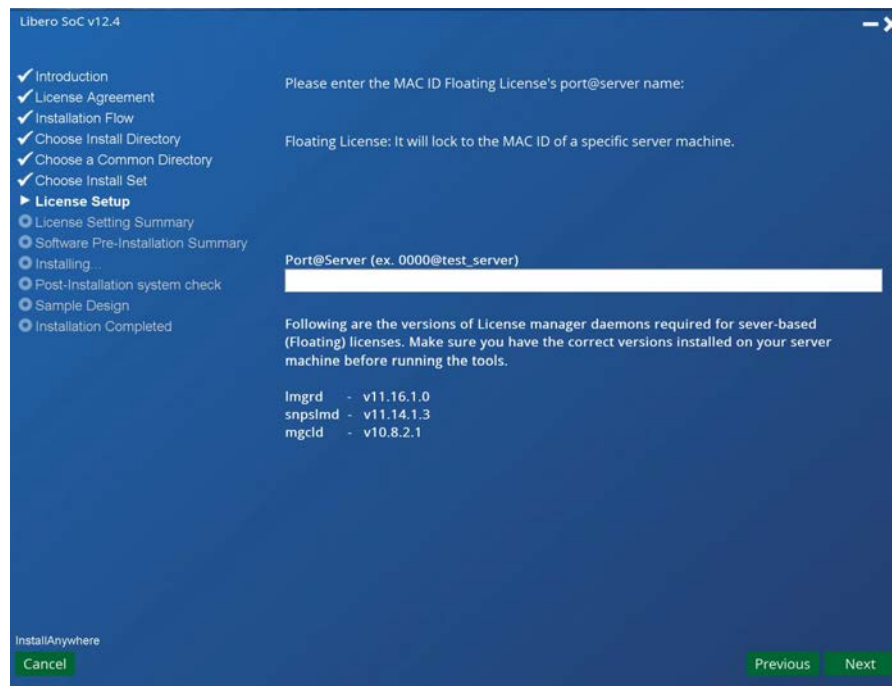

13. If you do not have a valid Libero license, you will be taken to the Microsemi SoC Customer Portal. Here you sign in, register as a new user, or retrieve your user name and password.

- To sign in, type your user name and password, and then click **Submit**.
- To register as a new user, click **New User**, and then follow the instructions to generate a license.
- To retrieve your user name or password, click **Forgot My User Name or Password**.

When you receive your license, go back to Step 12, and then enter your license.

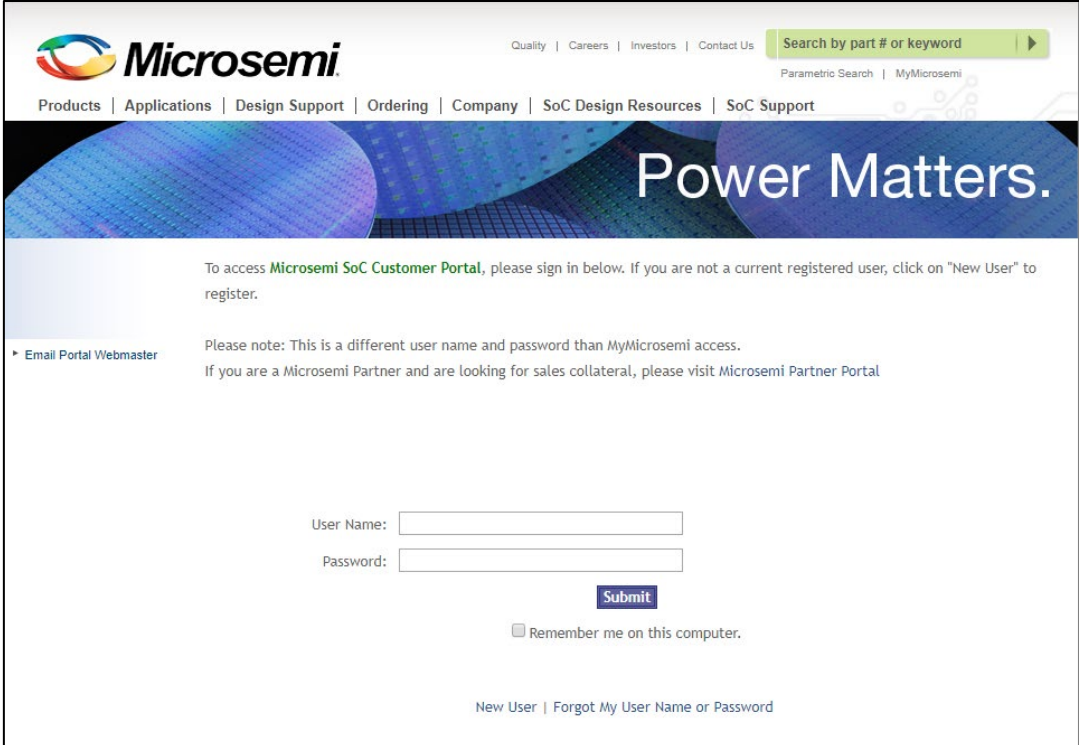

The screenshot shows the Microsemi SoC Customer Portal login page. At the top, there is a navigation bar with the Microsemi logo on the left and links for Quality, Careers, Investors, and Contact Us on the right. A search bar is located in the top right corner. Below the navigation bar, there is a banner with the text "Power Matters." and a background image of a circuit board. The main content area contains a sign-in prompt, a link to email the portal webmaster, a sign-in form with fields for User Name and Password, a Submit button, and a checkbox for "Remember me on this computer." At the bottom, there are links for "New User" and "Forgot My User Name or Password".

Microsemi Quality | Careers | Investors | Contact Us Search by part # or keyword
Parametric Search | MyMicrosemi
Products | Applications | Design Support | Ordering | Company | SoC Design Resources | SoC Support

Power Matters.

To access **Microsemi SoC Customer Portal**, please sign in below. If you are not a current registered user, click on "New User" to register.

► Email Portal Webmaster Please note: This is a different user name and password than MyMicrosemi access.
If you are a Microsemi Partner and are looking for sales collateral, please visit Microsemi Partner Portal


User Name:
Password:

Remember me on this computer.

[New User](#) | [Forgot My User Name or Password](#)

14. In the Software Pre-Installation Summary page, click **Install**.


Figure 8 • Pre-Installation Summary

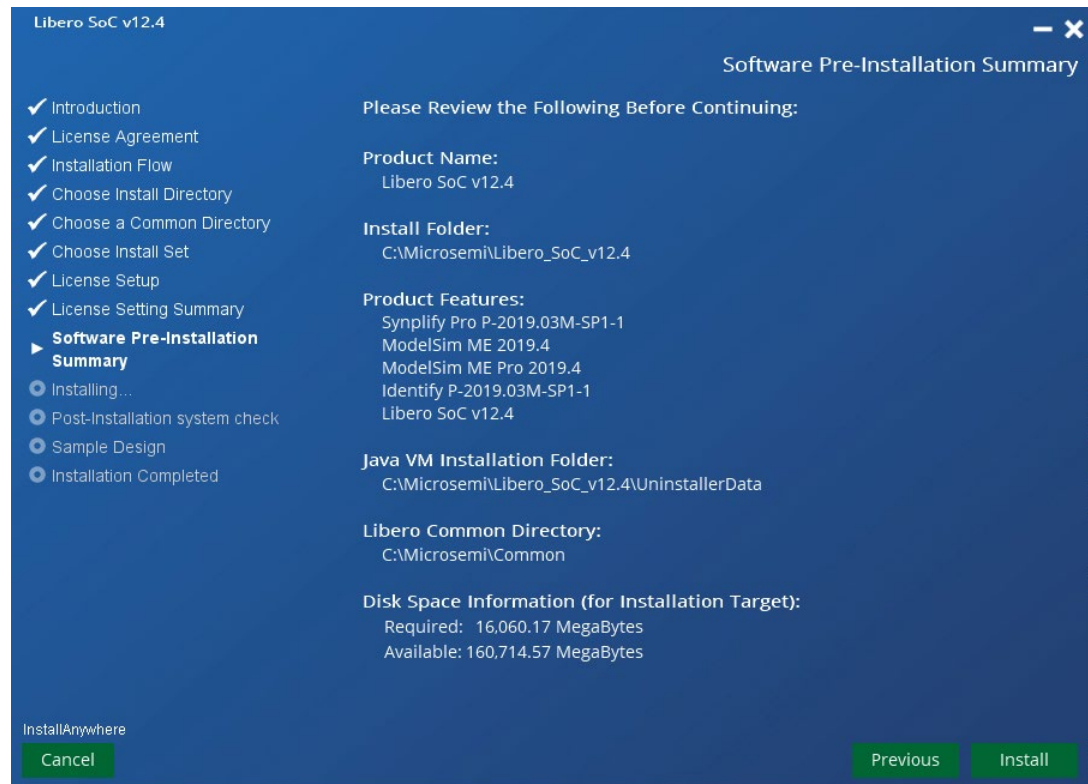


15. Click **Install**. The installation dialog box appears.

Note: Beginning with the Libero SoC v11.8 release, both ModelSim ME and ModelSim ME Pro are installed by default. After installation, ModelSim ME is the default simulator in the Tool Profile (Project > Tool Profile). If ModelSim ME Pro, and not ModelSim ME, is the desired simulator for you, change the Simulator in the tool profile (Project > Tool Profile) to point to ModelSim ME Pro. ModelSim ME and ModelSim ME Pro are identified by different feature lines in the Microsemi Libero SoC license file. Ensure that the Libero SoC license file has the feature line that supports the specific ModelSim version you want to use.

16. When the software installation and license setup are complete, click **Next**.

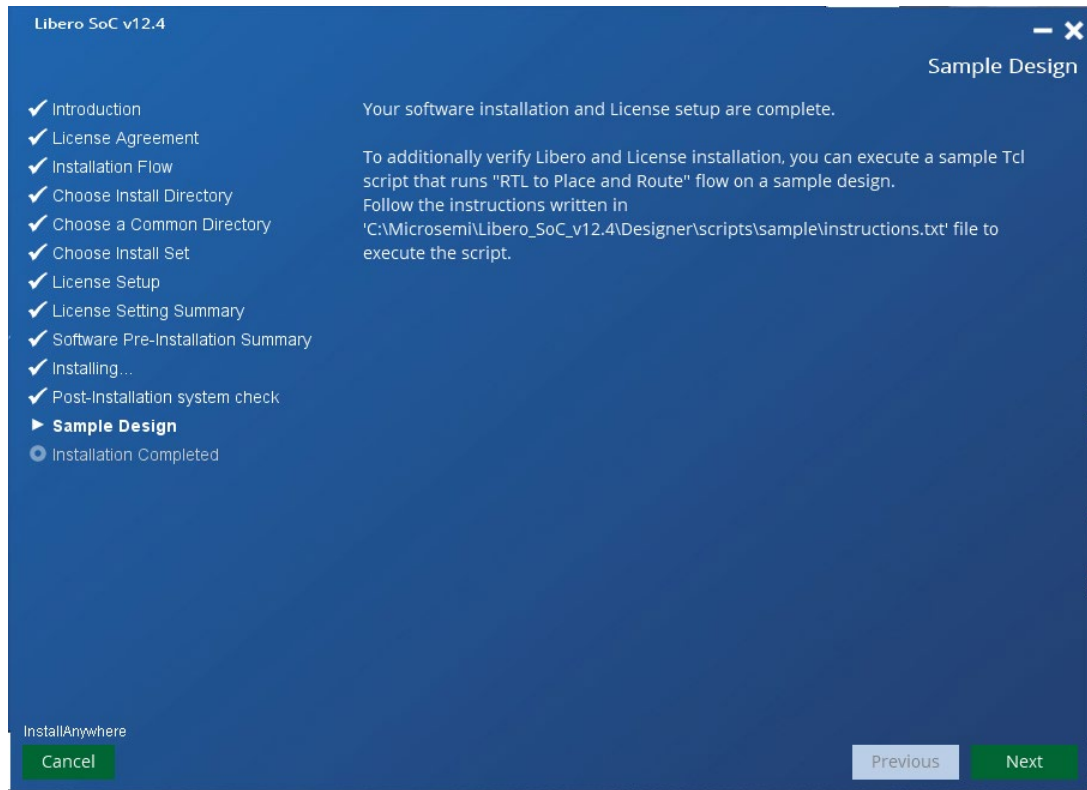

17. When the installation is complete, click **Done**.

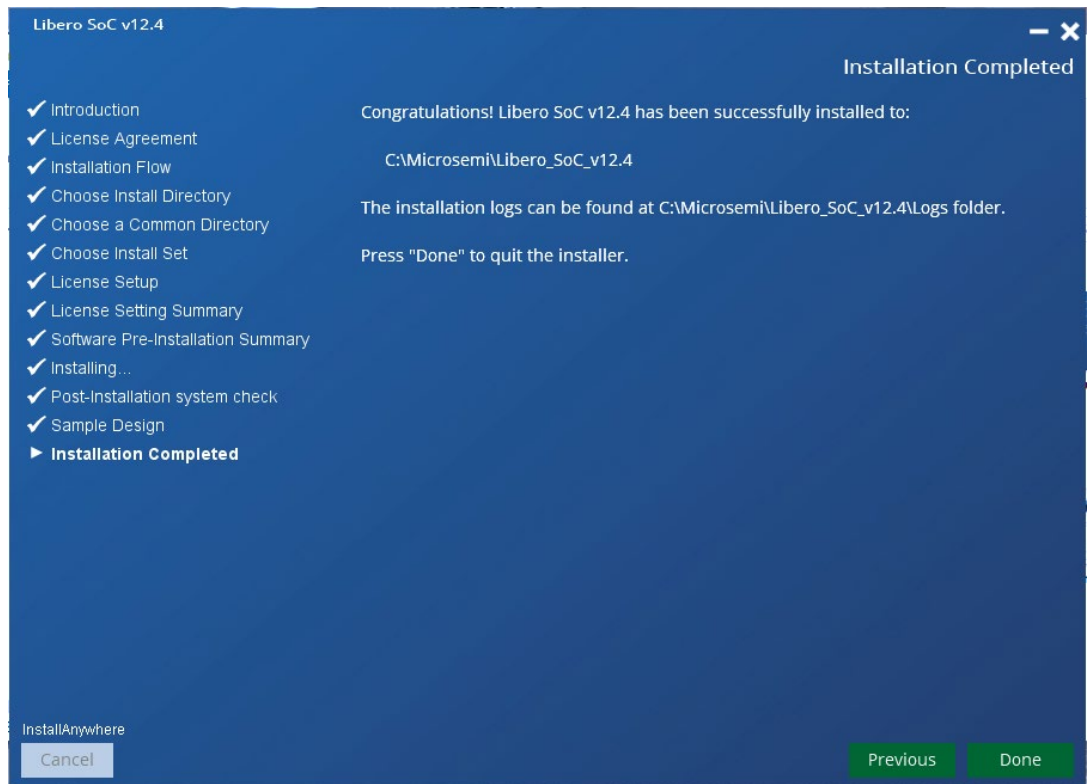

18. Click **Start > All Programs > Microsemi Libero SoC v12.4 > About Your Installation** to confirm that all tools and libraries are installed.

3.4.2 Installing the Liberio SoC Software on Linux


You can install the Liberio SoC Software on Linux in GUI and Console modes.

Note: You may see the Liberio SoC Linux Environment Setup User Guide where it details how to set up the Linux environment.

3.4.2.1 Installing the Liberio SoC Software in the GUI Mode

Perform the following steps to install the Liberio SoC Software in GUI mode. This is the default installation procedure.

1. Download the Installation file from <http://www.microsemi.com/products/fpga-soc/design-resources/design-software/libero-soc#downloads>.

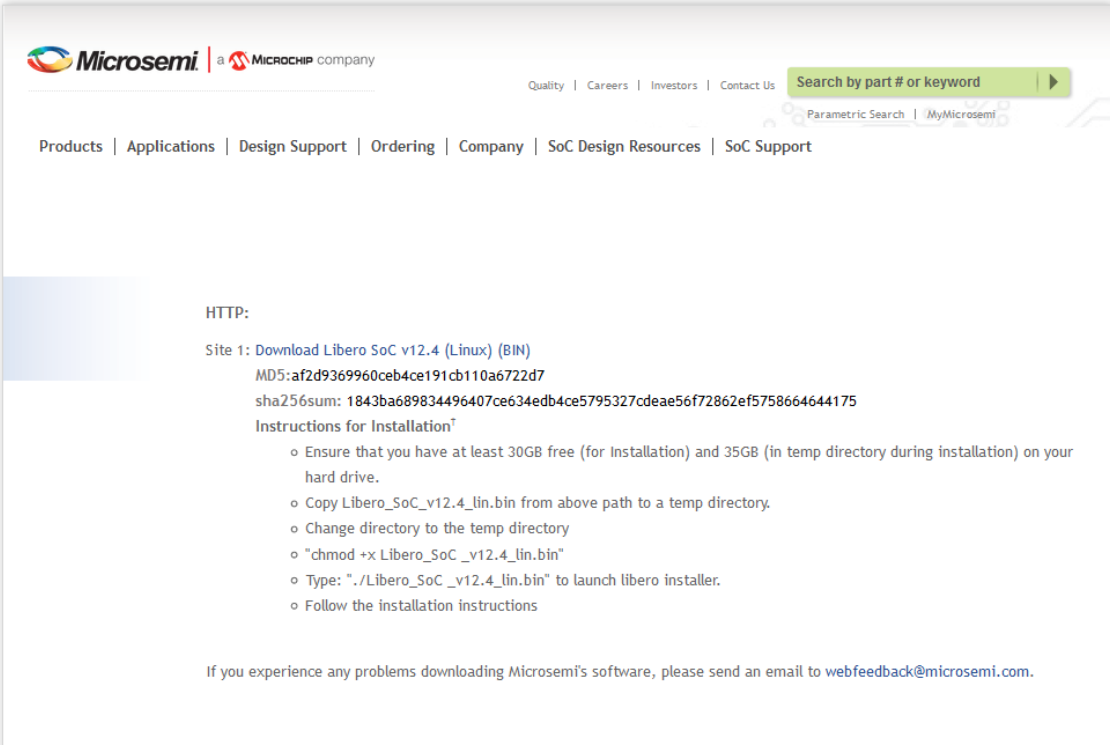

The screenshot shows the Microsemi website interface. At the top, there is a navigation bar with the Microsemi logo, a search bar, and links for Quality, Careers, Investors, and Contact Us. Below the navigation bar, there are links for Products, Applications, Design Support, Ordering, Company, SoC Design Resources, and SoC Support. The main content area displays the following information:

```

HTTP:
Site 1: Download Liberio SoC v12.4 (Linux) (BIN)
MD5:af2d9369960ceb4ce191cb110a6722d7
sha256sum: 1843ba689834496407ce634edb4ce5795327cdae56f72862ef5758664644175
Instructions for Installation†
  ○ Ensure that you have at least 30GB free (for Installation) and 35GB (in temp directory during installation) on your hard drive.
  ○ Copy Liberio_SoC_v12.4_lin.bin from above path to a temp directory.
  ○ Change directory to the temp directory
  ○ "chmod +x Liberio_SoC_v12.4_lin.bin"
  ○ Type: "./Liberio_SoC_v12.4_lin.bin" to launch libero installer.
  ○ Follow the installation instructions


If you experience any problems downloading Microsemi's software, please send an email to webfeedback@microsemi.com.
  
```

2. Installation instructions:

- a) Make sure your hard drive has at least 30GB free for Installation and 35GB in the temp directory during installation.
- b) Download *Liberio_SoC_<version>_lin.bin* installer to a temp directory.
- c) Change directory to the temp directory.
- d) Change installer executable mode:
% `chmod +x Liberio_SoC_<version>_lin.bin`
- e) Launch Liberio SoC installer:
% `./Liberio_SoC_<version>_lin.bin`


The InstallAnywhere Introduction page appears.

Figure 9 • InstallAnywhere Introduction Page

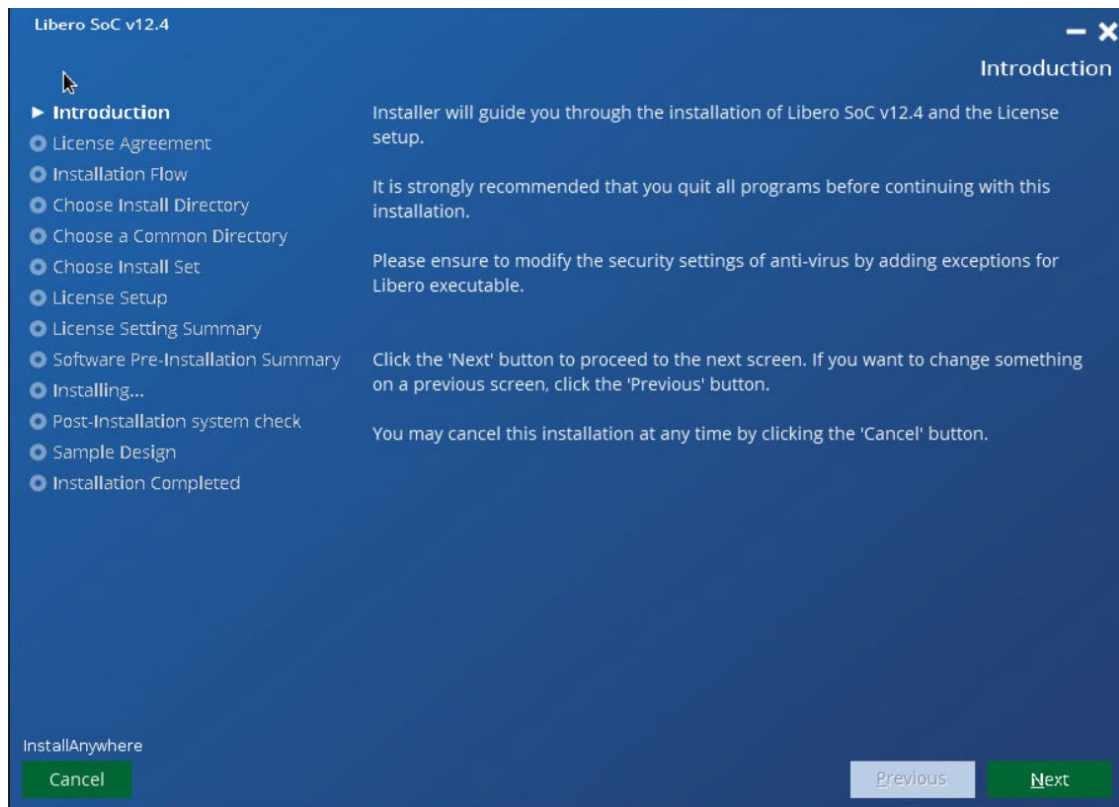


3. Read the License Agreement and check the **I accept the terms of the License Agreement** check box.

Figure 10 • License Agreement

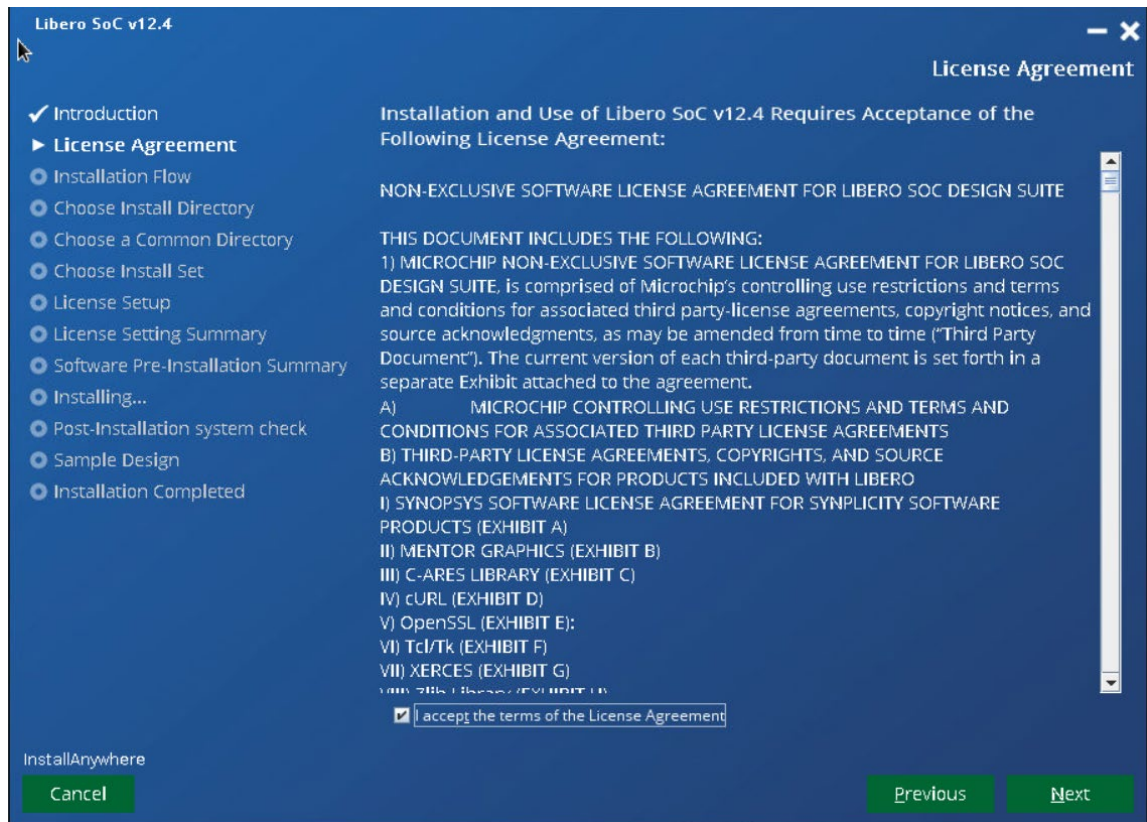


4. Starting with Libero SoC v12.4, for ease of use, the Libero SoC v12.4 installer has been enhanced to include an optional Libero license installation flow. The Libero installer now supports three integrated flows:
- **Libero SoC** - Libero tool installation (default selection – for customers with existing license setup)
 - **License Setup** - Libero license installation (optional – recommended for first time license setup)
 - **Both** - integrated tool and license installation

Figure 11 • Libero Tool and License Installation Selection

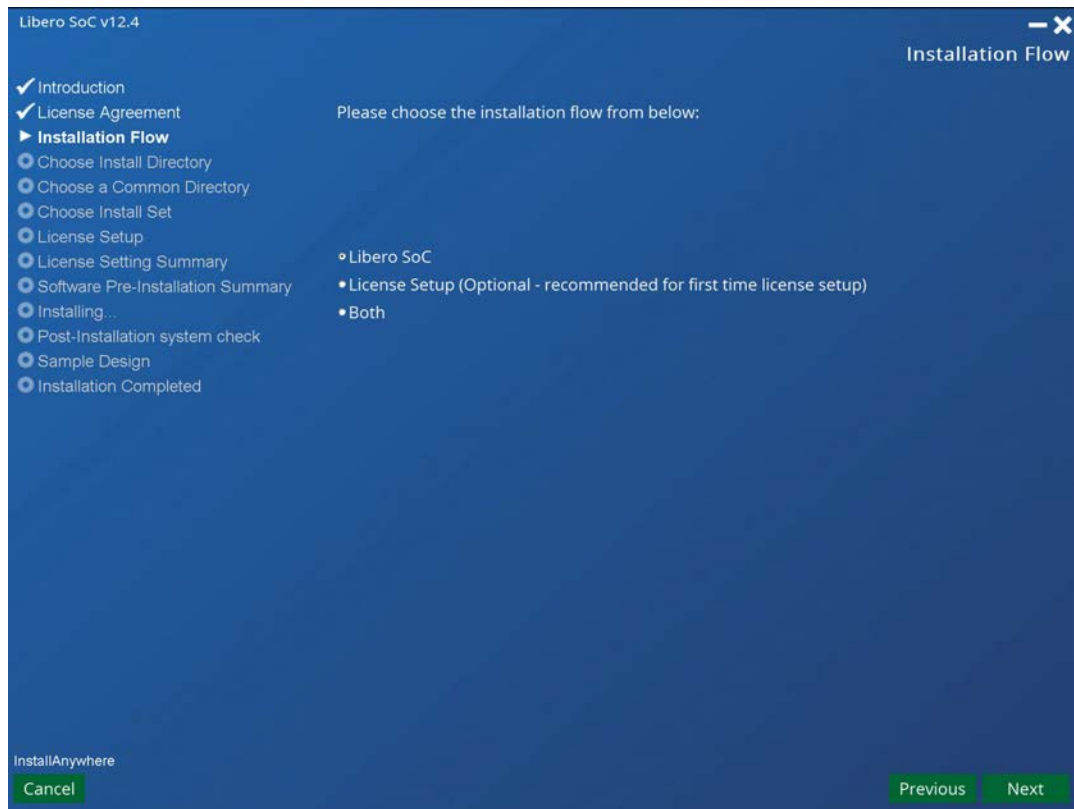


5. Enter the Installation folder location. Click **Next** to accept the default location or click **Choose** to navigate to a location and then click **Next**.

Figure 12 • Choose Install Directory

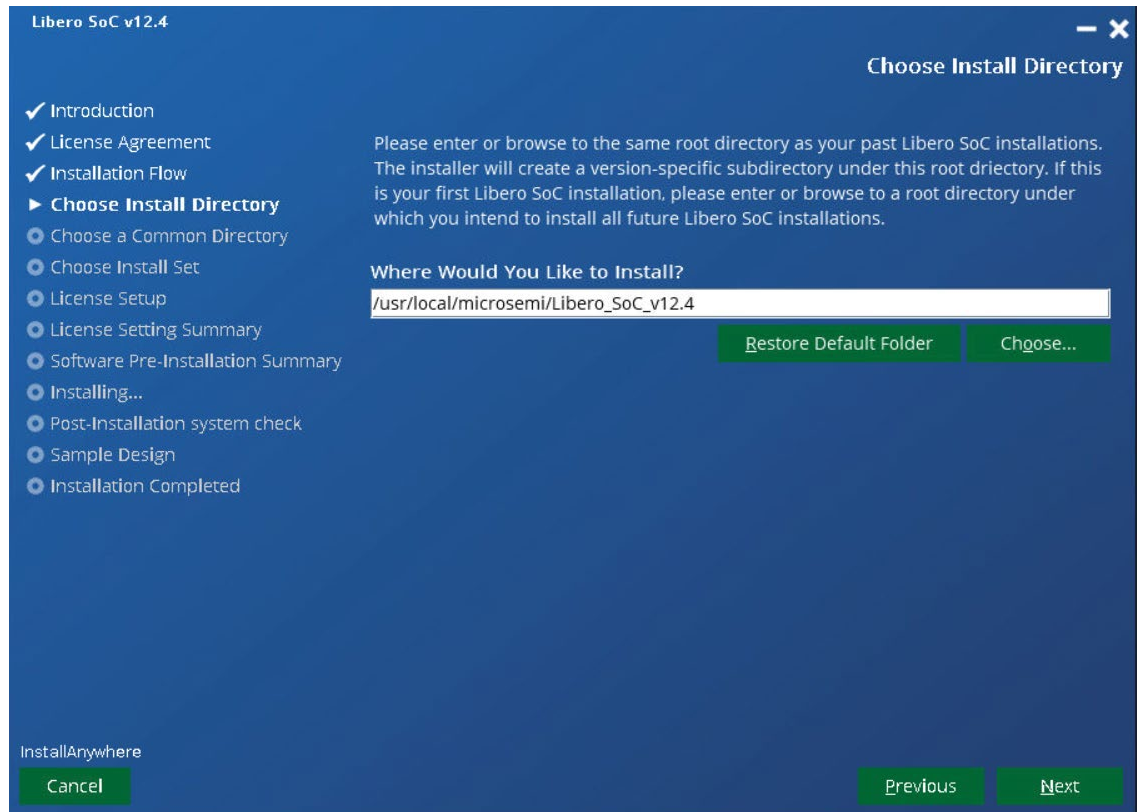

6. Choose a **Common File Directory** as shown in the following figure. You can store common files that are shared across different versions of Liberio. The default Common File directory location is **`/usr/local/microsemi/common`**.

Figure 13 • Choose Common Directory

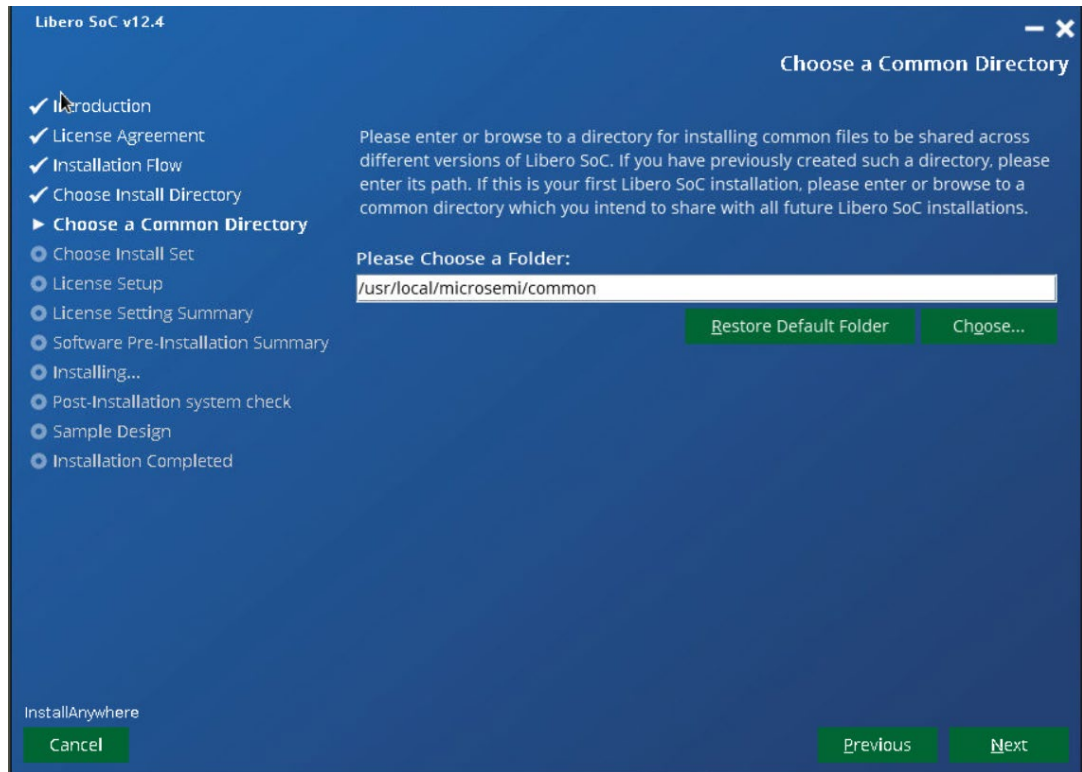

7. The **Libero SoC** selection below installs all features by default. This complete setup is recommended for beginners. It installs all Libero SoC program features, but also requires the most disk space. The **Custom** selection allows you to select which program feature to install.

Figure 14 • Choose Install Set



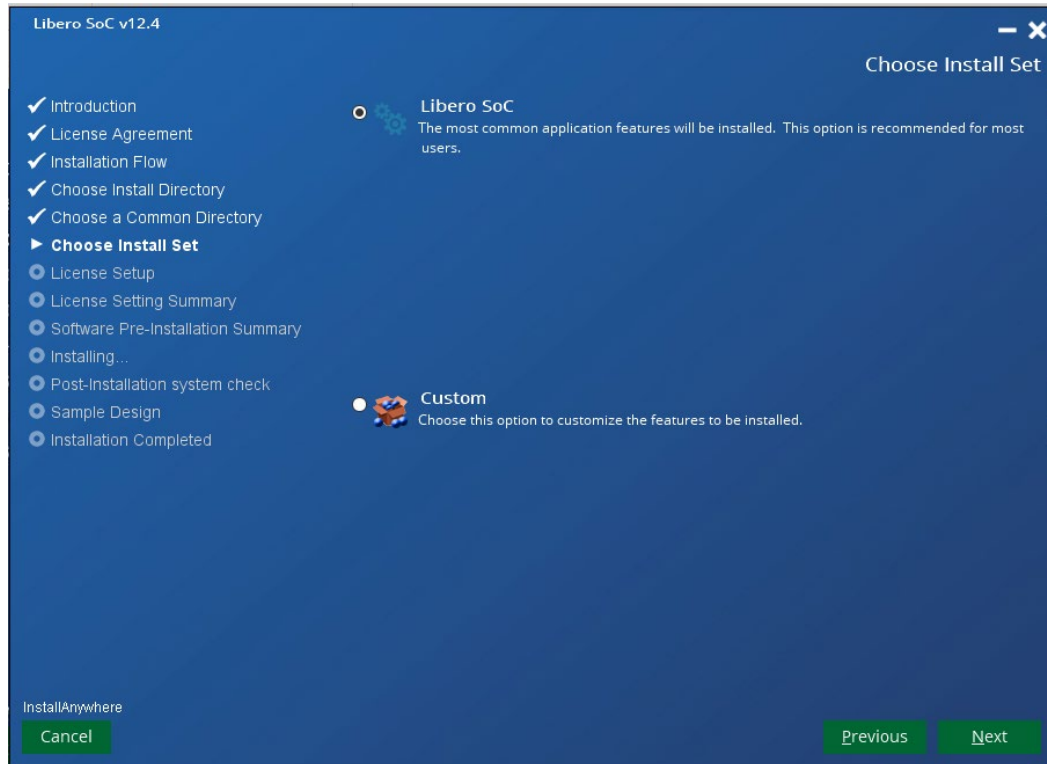


Figure 15 • Choose Install Custom Set

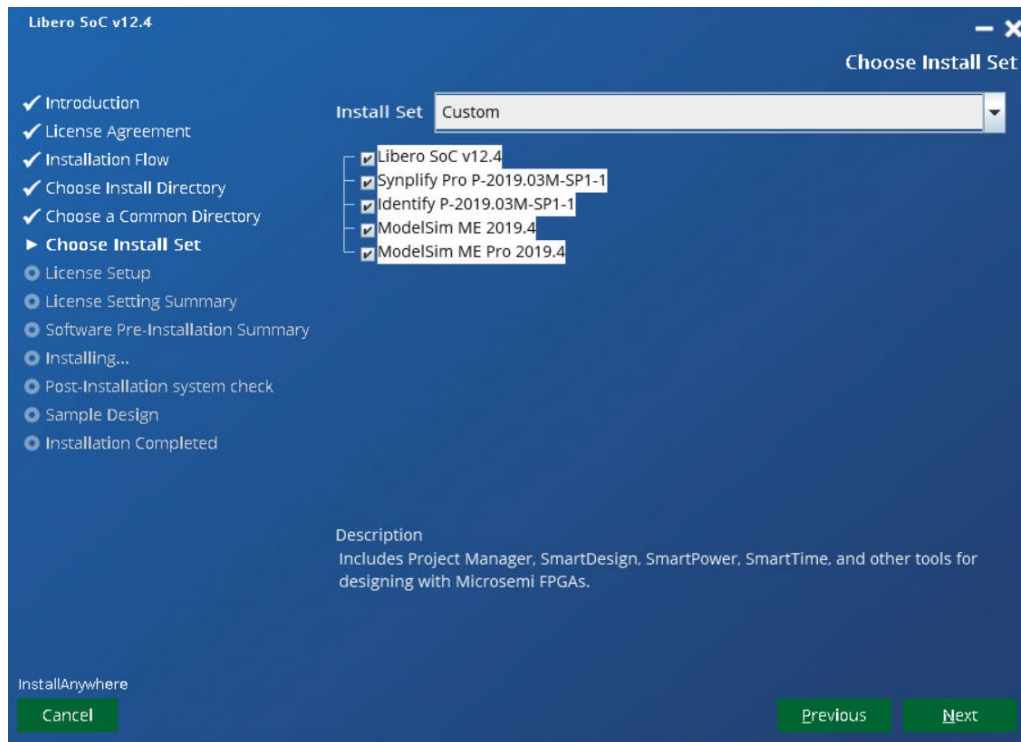


8. If you selected **License Setup** or **Both** Libero Tool Installation and License Setup, the next screen will appear. If you received a Libero license from Microsemi, select **Yes**, click **Next**, and go to the next step. Otherwise, select **No**, click **Next**, and then go to Step 10.

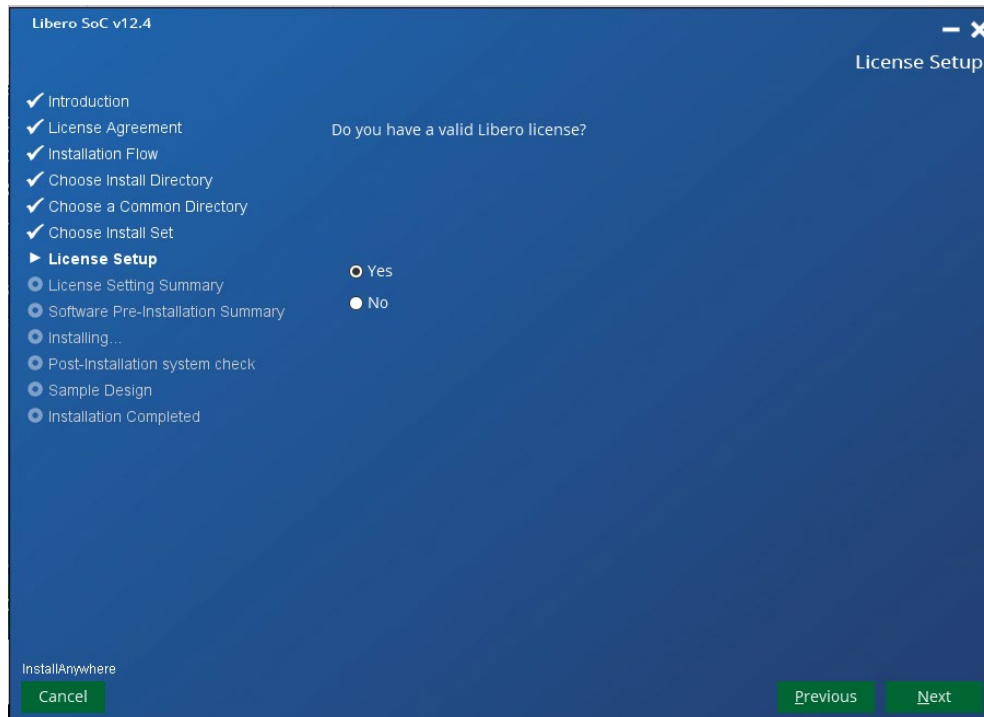

9. When the License Setting Summary screen appears, click **Next**.

Figure 16 • License Setting Summary

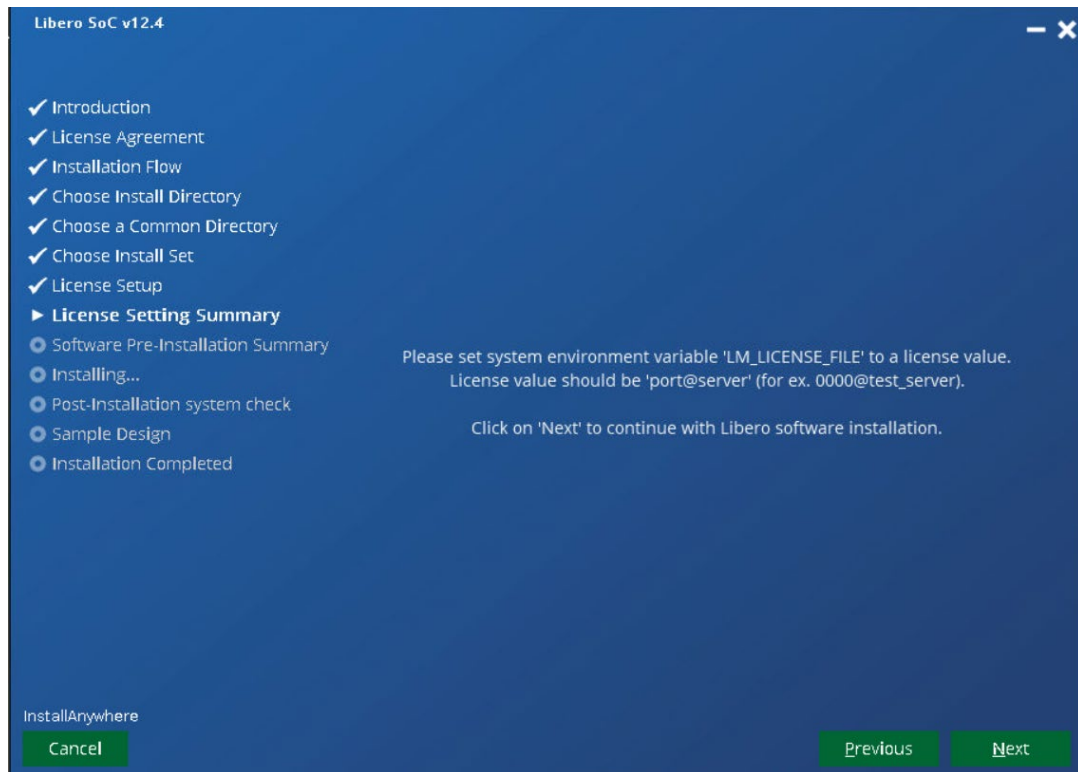


10. If you do not have a valid Libero license, you are taken to the Microsemi SoC Customer Portal. From the Portal, you can sign in, register as a new user, or retrieve your user name and password.

- To sign in, type your user name and password, and then click **Submit**.
- To register as a new user, click **New User**, and then follow the instructions to generate a license.
- To retrieve your user name or password, click **Forgot My User Name or Password**.

When you receive your license, return to Step 9, and then enter your license.

11. Review the Pre-Installation Summary dialog box to see the selected components for installation.

Figure 17 • Pre-Installation Summary

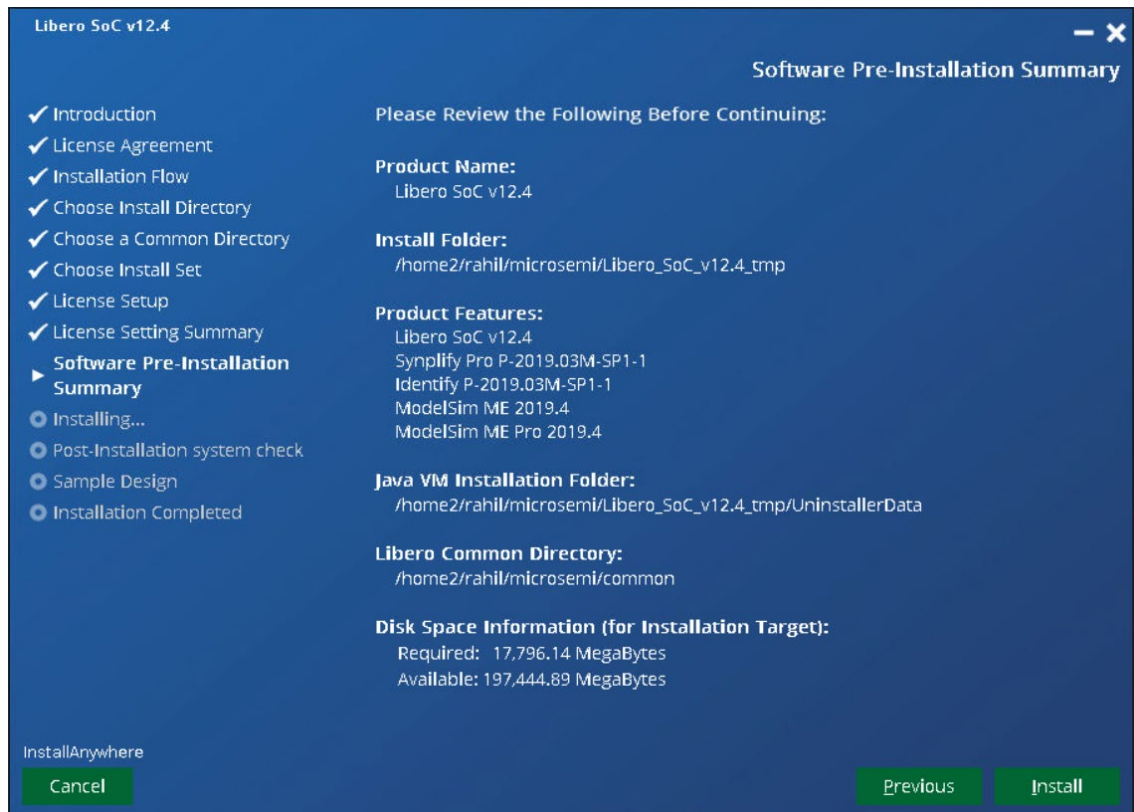

12. Click **Install** to continue your installation. The progress bar appears.

13. Click **Done** to complete your installation.

For information about installation in console mode, see [Installing the Libero SoC Software in Console Mode](#) on page 26.

3.4.2.2 Installing the Libero SoC Software in Console Mode

Perform the following instructions to install the software in Console mode:

1. Type the following command:

```
./Libero_SoC_<version>_lin.bin -i console
```

The **Console Mode Installation** page is displayed.

Figure 18 • Console Mode Installation Screen

```

Preparing to install...
Extracting the JRE from the installer archive...
Unpacking the JRE...
Extracting the installation resources from the installer archive...
Configuring the installer for this system's environment...

Launching installer...

=====
Libero SoC v12.3                                     (created with InstallAnywhere)
=====
Preparing CONSOLE Mode Installation...

                                     I

=====
Introduction
-----

InstallAnywhere will guide you through the installation of Libero SoC v12.3.
It is strongly recommended that you quit all programs before continuing with
this installation.

Respond to each prompt to proceed to the next step in the installation.  If you
want to change something on a previous step, type 'back'.

You may cancel this installation at any time by typing 'quit'.

PRESS <ENTER> TO CONTINUE: █

```

2. Press **Enter** to continue. The **License Agreement** is displayed.

Figure 19 • License Agreement

```

=====
License Agreement
-----

Installation and use of Libero SoC v12.3 requires acceptance of the following
License Agreement:

MICROSEMI SOC CORP. LIBERO® SOFTWARE LICENSE AGREEMENT
and
MICROSEMI SOC CORP. DIRECTC LICENSE AGREEMENT

THIS DOCUMENT INCLUDES THE FOLLOWING:
1) MICROSEMI SOC CORP. LIBERO® SOFTWARE LICENSE AGREEMENT
A) MICROSEMI SOC CORP. CONTROLLING USE RESTRICTIONS AND TERMS AND CONDITIONS
FOR ASSOCIATED THIRD PARTY LICENSE AGREEMENTS
B) THIRD-PARTY LICENSE AGREEMENTS FOR PRODUCTS INCLUDED WITH LIBERO®
I) SYNOPSYS SOFTWARE LICENSE AGREEMENT FOR SYNPLICITY SOFTWARE (EXHIBIT A)
II) MENTOR GRAPHICS MODEL TECHNOLOGY (EXHIBIT B)
III) C-ARES LIBRARY (EXHIBIT C)
IV) cURL (EXHIBIT D)
V) OpenSSL (EXHIBIT E)
VI) Tcl/Tk (EXHIBIT F)
VII) XERCES (EXHIBIT G)
VIII) Zlib Library (EXHIBIT H)
VIV) PETSc (EXHIBIT I)
X) gSOAP (EXHIBIT J)
XI) COIN-OR (EXHIBIT K)
2) MICROSEMI SOC CORP. DIRECTC LICENSE AGREEMENT
Note: For the remainder of this document, the terms ®you® and ®Licensee® shall

PRESS <ENTER> TO CONTINUE: █

```

3. Review the license agreement. The installer displays the license agreement one screen at a time.

4. Press **ENTER** to view each page and continue. Enter **Y** at the end of the agreement to accept and continue:
 - Specify the installation folder. Do not accept the default path. You must enter the same Microsemi parent directory as your past Libero installations. The installer creates a version- specific sub-directory under this parent directory. If this is your first Libero installation, enter a Microsemi parent install directory under which you intend to install all future Libero installations. Microsemi recommends using **/usr/local/microsemi/libero** as your parent installation directory.
 - Enter **Y** to confirm the installation folder. Enter the absolute path for the Libero Common Directory. A Libero common directory is shared by multiple versions of Libero. Microsemi recommends that you use the common directory **/usr/local/microsemi/common**.
 - Enter the absolute path for the Libero Common Directory. A Libero common directory is shared by multiple versions of Libero. Microsemi recommends that you use the common directory **/usr/local/microsemi/common**.
 - Confirm the Absolute Path for the Libero Common Directory.
 - Enter the number that corresponds to the software features you want to install.

Figure 20 • Choose Common Directory

```

=====
Choose Install Directory
-----

Please enter the same root directory as your past Libero SoC installations. The
installer will create a version-specific subdirectory under this root
directory. If this is your first Libero SoC installation, please enter a root
directory under which you intend to install all future Libero SoC
installations.

Where would you like to install?

  Default Install Folder: /usr/local/microsemi/Libero_v12.3

ENTER AN ABSOLUTE PATH, OR PRESS <ENTER> TO ACCEPT THE DEFAULT
  : /soft/sqatest14/user_joe/microsemi

INSTALL FOLDER IS: /soft/sqatest14/user_joe/microsemi
  IS THIS CORRECT? (Y/N): █
  
```

- Review the **Install Set**. Enter the number corresponding to the **Install Set** you want to install.

Figure 21 • Install Set Selection

```

=====
Choose Install Set
-----

Please choose the Install Set to be installed by this installer.

  ->1- Libero SoC

ENTER THE NUMBER FOR THE INSTALL SET, OR PRESS <ENTER> TO ACCEPT THE DEFAULT
  : █
  
```

- Press **ENTER** to continue. The pre-installation summary is displayed.

Figure 22 • Pre-installation Summary

```

=====
Enter a Common Directory
-----

Please enter a directory for installing common files to be shared across
different versions of Liberio SoC. If you have previously created such a
directory, please enter its path. If this is your first Liberio SoC
installation, please enter a common directory which you intend to share with
all future Liberio SoC installations.

Common Install Path: (Default: n/a): █

```

- Press **Enter** to begin the installation.
- Obtain and set up your license according to the instructions in "Obtaining Licenses" on page 5.

3.4.2.3 Installing the Service Pack

Service Packs are incremental, and must be installed on top of the previous release or releases. To verify your Liberio SoC version, from the Help menu, click **About Liberio**.

IMPORTANT: <Liberio_release>_Lin.tar.gz must be placed in the \$ALSDIR/Liberio directory and the installation must take place on the local system.

1. Log in with read/write permission to system on which Liberio SoC is installed.
2. Download <Liberio_release>_Lin.tar.gz into \$ALSDIR/Liberio. <Liberio_release>_Lin.tar.gz is now located at the same level as adm/, bin/, data/, and so on.
3. Type: `tar xzvf <Liberio_release>_Lin.tar.gz`
4. Type: `./wsupdate.sh` to complete the installation of the update.

3.4.3 Tips for Launching Liberio on Linux RH Operating Systems

See *How to Set Up Your Linux Environment for Liberio* for detailed instructions on how to launch Liberio on Linux RH operating systems.

3.5 Obtaining the Licenses

You must have a license to run the Liberio SoC Software. Navigate to this <https://www.microsemi.com/products/fpga-soc/design-resources/licensing#overview> URL to learn about available licenses, how to purchase new licenses or renew existing licenses, and how to obtain evaluation licenses.

Do you need help with selecting a right license for your design? Use the Liberio License Selector Guide, a license selection tool that enables you to select the right license option based on multiple parameters such as FPGA/SoC device, Liberio version, Operating System, and so on.

3.5.1 Liberio License Options

Two license types are offered: node-locked or floating. A node-locked license is locked to a specific hard disk ID or movable USB hardware key dongle. A USB dongle with the accompanying license file allows the software to operate on any PC to which the dongle is attached and the license file and software are installed.

View the tool and device support for the various licenses at <https://www.microsemi.com/products/fpga-soc/design-resources/licensing>.

Node-locked license installation is covered in [Installing Licenses](#) on page 16.

Notes:

1. Node-locked licenses are supported on Windows platform and Floating license are supported on Windows, Linux, and Solaris platforms.
2. Remote access is not supported for node-locked Evaluation, Gold, Platinum, and Silver licenses. However, it supports a standalone license.

A floating license is typically installed on a network server (Windows, Linux, or Solaris) and allows networked client PCs to access the license from the server. The Client PCs can be Windows or Linux OS. Client seats can be purchased to allow up to 999 users to run the Libero software simultaneously.

Note: Node-locked and floating licenses do not support virtual machine servers.


Libero license manager and vendor daemons for all supported network server platforms are available at <https://www.microsemi.com/products/fpga-soc/design-resources/licensing#downloads>.

Note: If you want to use 64-bit Imgrd you can obtain it directly from Flexera. Floating license installation is covered in "Installing Licenses" on page 16.

3.5.2 Obtaining Free Licenses

Microsemi supports two types of free licenses such as Evaluation and Silver licenses. The following figure shows the Silver License web page. Follow the steps to generate a free license.

Figure 23 • Silver License Web Page

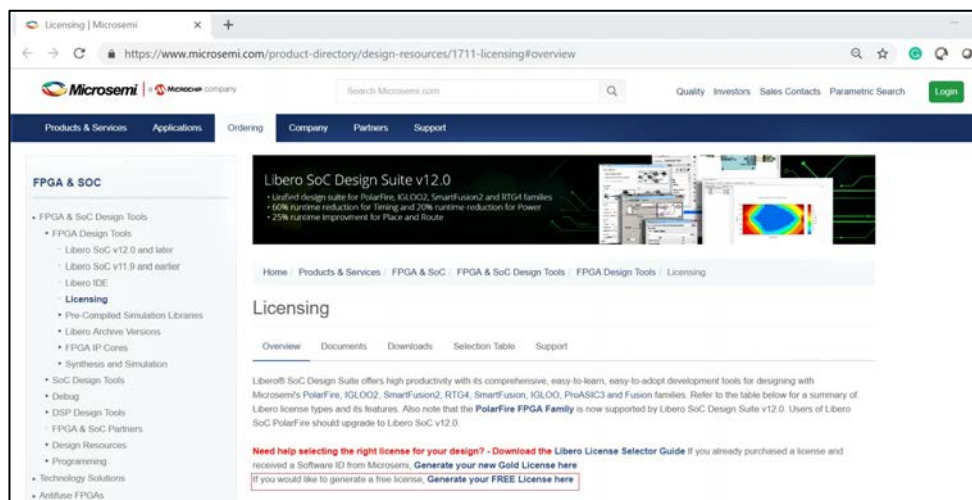

Provide the login details on the Microsemi SoC Customer Portal web page. If you are a new user, register and create an SoC portal account.

Click **Request Free License** on the Microsemi SoC Licensing web page to generate a free license.

Figure 24 • Request for a Free License Web Page


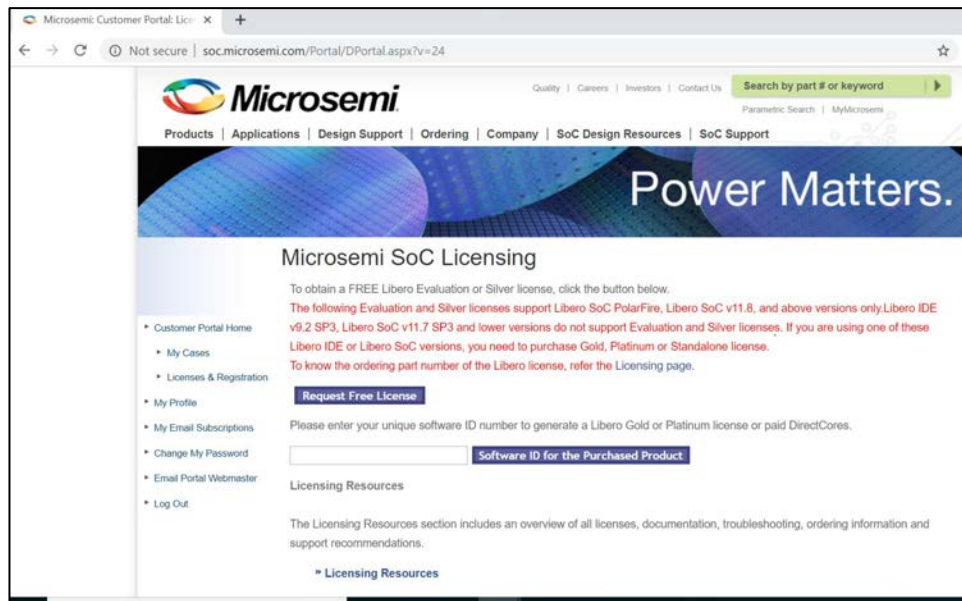


Figure 25 • License Descriptions Page

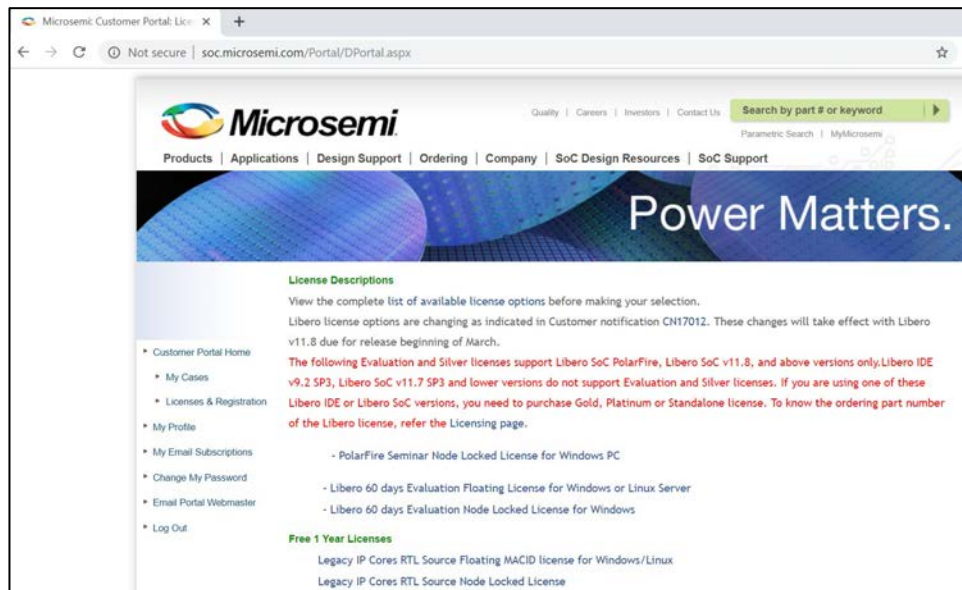

3.5.2.1 How to obtain a Disk ID:

The DISK ID is the computer hard drive's serial number, also called Disk Serial Number. It is typically the "C" drive in your computer. The Disk ID is an 8 character hexadecimal number of the form, xxxx-xxxx, similar to "A085-AFE9". The requested license is sent to you within 45 minutes. If you select a Node Locked License, the registration page that requires the hard disk ID of the PC where the Libero SoC Software is installed. If you are not sure how to find the hard disk ID, click the **How to find a DiskID** link to locate the ID and provide the **Disk ID** in the entry field.


To obtain your computer's Disk ID, type the following at a DOS or Command Prompt:

```
C:> Vol C:
```


Enter your C drive's Disk ID number into the license registration page window where indicated and click **Submit**.

Input the Disk ID number, and click **Submit**.

Figure 26 • License Disk ID

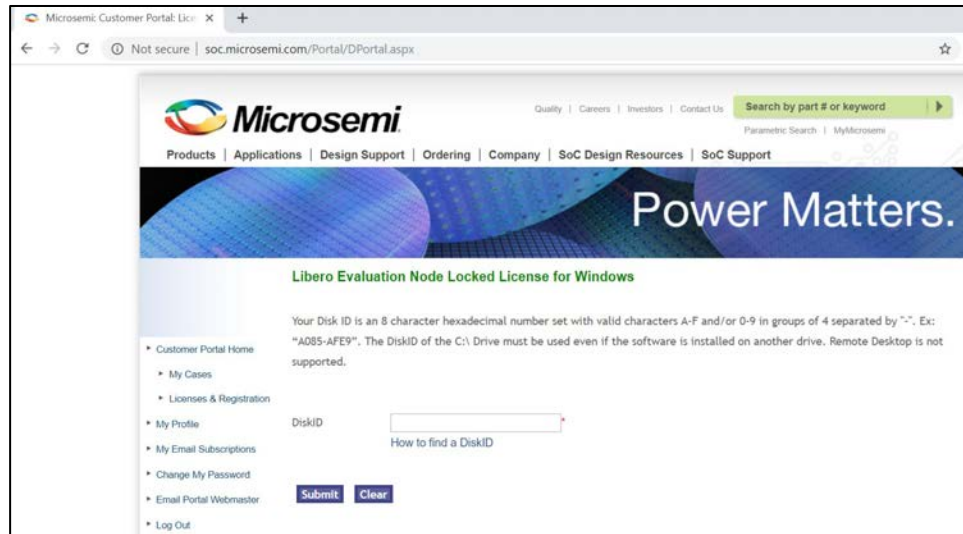


How to obtain a MAC ID

If you select a floating license type, the registration window requires your MAC ID for your Windows or Linux PC, and it requires the Host ID for your Solaris PC or Server.

Linux Node Locked or Floating

If you are not sure how to find the MAC ID, click the **How to find a MAC ID** link to locate the ID and provide the **MAC ID** in the ID entry field.

Figure 27 • MAC ID Based Registration Web Page

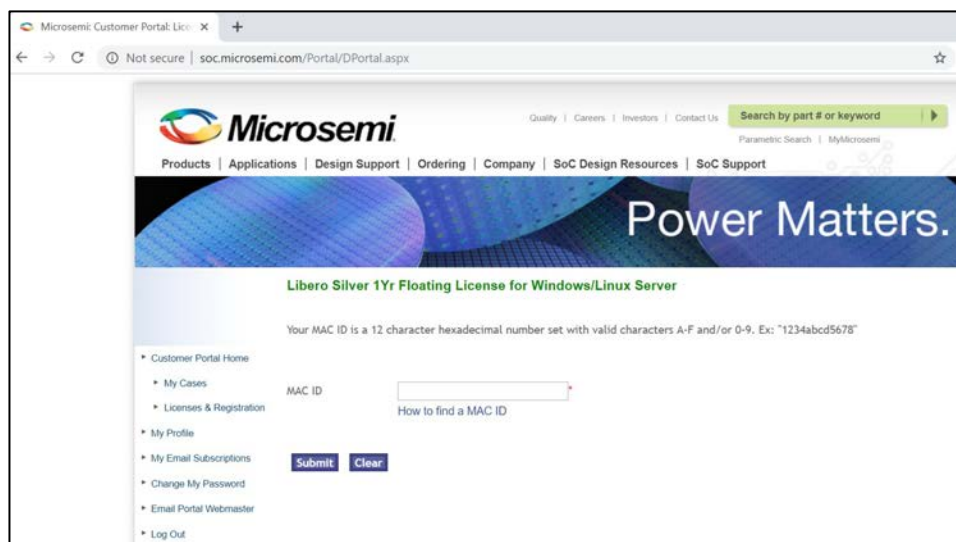

To obtain the MAC ID, from the Command Prompt type:

```
/sbin/ifconfig
```

The Ethernet/MAC ID address will be displayed. The MAC ID address is a twelve character hexadecimal

number, similar to "00A0C982BEE3". Enter your MAC ID into the registration page window where indicated.

Windows Floating or Synplicity "Server-Based Node-Locked" (SBNL) Licenses

To obtain the PC MAC ID, type the following at a DOS or Command Prompt:

```
C:> lmtutil lmhostid
```

You can also use:


```
C:> <path_to_actel_installation\bin\lmhostid>
```

The Ethernet/MAC ID address is displayed. The MAC ID address is a twelve character hexadecimal number, similar to "00A0C982BEE3". Enter the 12 character MAC ID into the registration page window where indicated.

In some PC configurations, there can be more than one MAC ID. Use the MAC ID that you know will be the "active" ID. Some users may configure their laptops to have the wired MAC ID for docked laptop use and the wireless MAC ID for undocked use. Tools using the MAC ID depend on the MAC ID being active for use.

When finished, click **Submit**.

Figure 28 • Registration Complete

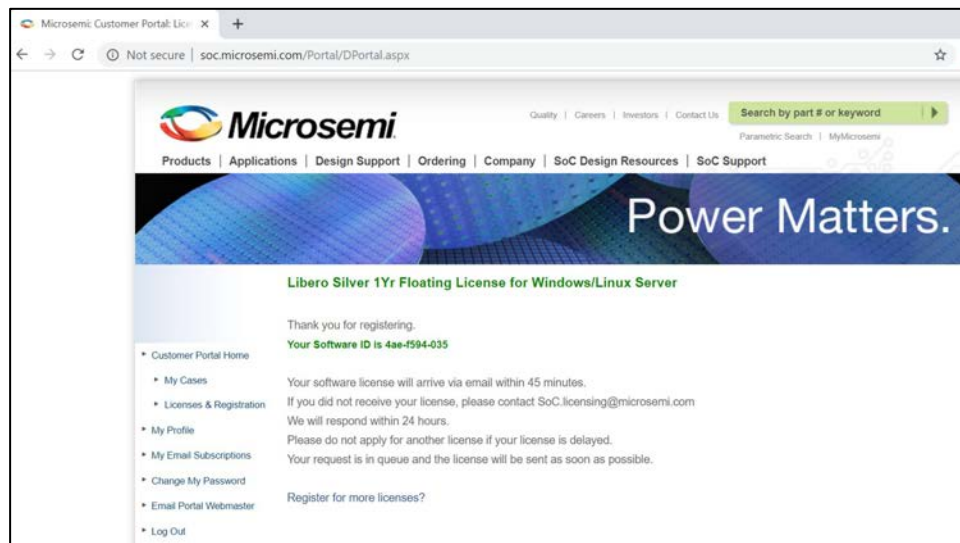

Print or write down the Software ID on the Registration Confirmation web page. Normally the license is generated and sent to your email address in less than 45 minutes. The `License.dat` file is an attachment to the email.

When the email and license arrive, follow the license installation instructions in *"Installing Licenses"* on page 16 of this guide.

3.5.3 Obtaining a Paid License

You can purchase the Libero Gold, Platinum, Standalone, and Archival licenses. Also, Microsemi has Paid DirectCores, Video SolutionCores, and MotorControl SolutionCores.

Visit <https://www.microsemi.com/product-directory/design-resources/1711-licensing> to see all available license types.

Upon receipt of the purchase order, you will receive a SW ID document from Microsemi through an email, which contains the SW ID# number and the instructions to generate the required license.


For USB license type, you will be shipped USB dongle hardware and a software DVD, not the SW ID attached to the DVD. The Software ID number for Libero licenses is in the format LXXX-XXXX-XXXX. The Software ID for Paid DirectCores is in the format of CXXX-XXXX-XXXX. The Software ID for paid Video SolutionCores is in the format of VXXX-XXXX-XXXX. The Software ID for paid MotorControl SolutionCores is in the format of MXXX-XXXX-XXXX *Do not generate the USB dongle license until you receive the USB dongle hardware from Microsemi.*

Note: The Libero SoC Software DVD is not available with node locked or floating licenses. It is available only with USB node-locked licenses.

Note: Starting from 4/16/2019, Microsemi discontinued USB Dongle license for Gold, Platinum, Gold Archival and Platinum Archival licenses because Mentor has discontinued support for the USB dongle license. See the PDN19017: Product Discontinuation Libero USB Dongle Licenses for discontinued Libero licenses.

Enter this Software ID number in the Register Purchased Product window, as shown in the following figure and click **Software ID for the Purchased Product**.

Figure 29 • Register Purchased Product Web Page

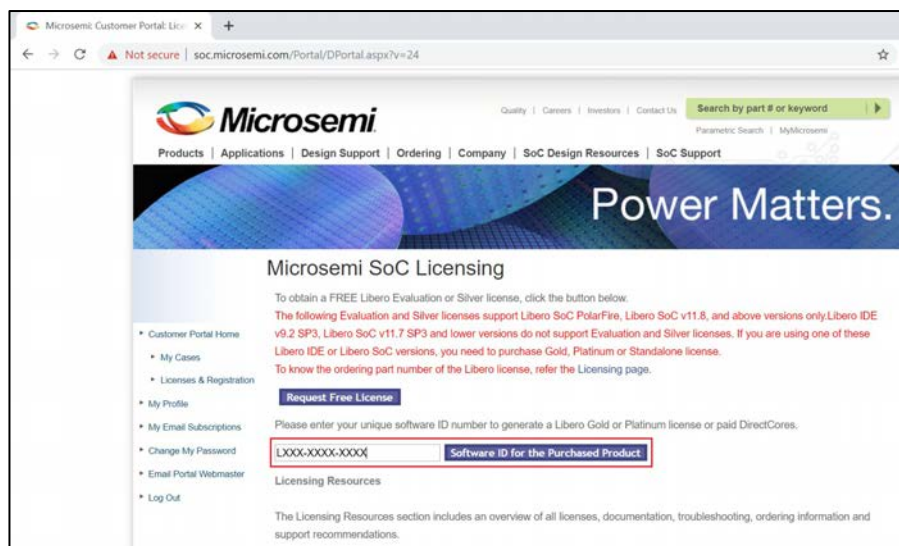


Depending on the type of license you purchased, depending on the Software ID you provide, the web page will ask you for a hard Disk ID, USB Dongle number or MAC ID.

If necessary, determine your DiskID or MAC ID number, enter it into the window, and click **Submit**.

3.5.3.1 How to Obtain a USB Dongle License

If you select a USB Dongle license type, the registration window requires Flex ID available on the dongle key. The following shows an example of the USB Dongle number.

Figure 30 • USB Dongle License Registration Web Page

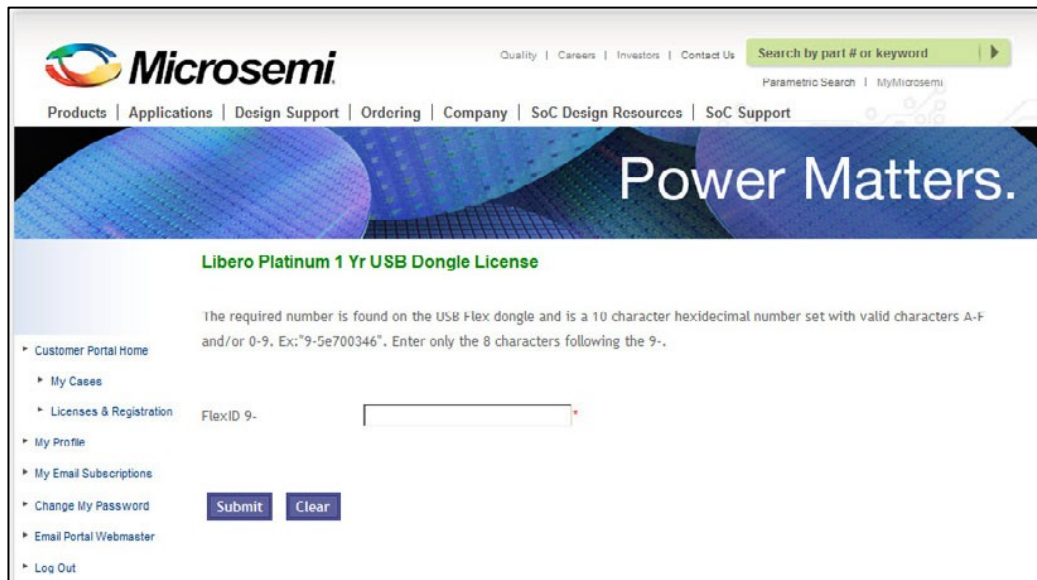

Note: The Flex ID information will be available on the USB Dongle hardware that was shipped by Microsemi.


Figure 31 • Identifying the USB Dongle Hardware Key Number



The Registration Confirmation web page appears when you click **Submit**. Your license will be emailed to you, usually within 45 minutes.

When the email and license arrive, follow the license installation instructions in [Installing the Libero SoC Software](#) on page 4.

Figure 32 • Registration Confirmation Web Page

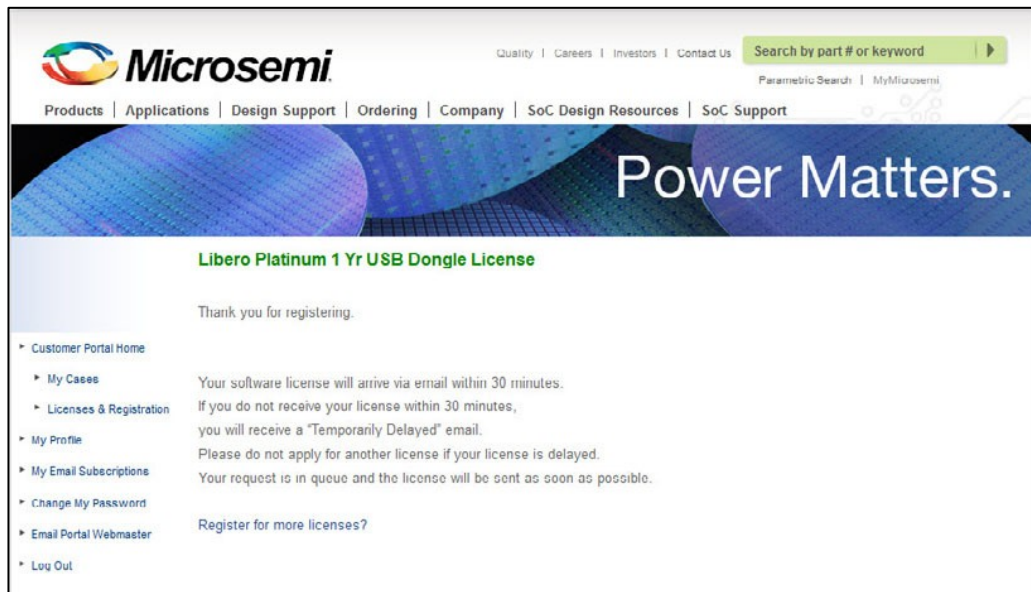


3.5.4 Retrieving Copies of Existing Licenses

You can obtain the copies of licenses from the Microsemi website and Customer Portal.

1. If you are the registered owner of a license, go to your Microsemi Portal Account at <http://soc.microsemi.com/Portal/DPortal.aspx?v=1>.
2. Click the **Licenses & Registration** link. A list of your software licenses is displayed, both current and expired.

Figure 33 • License and Registration

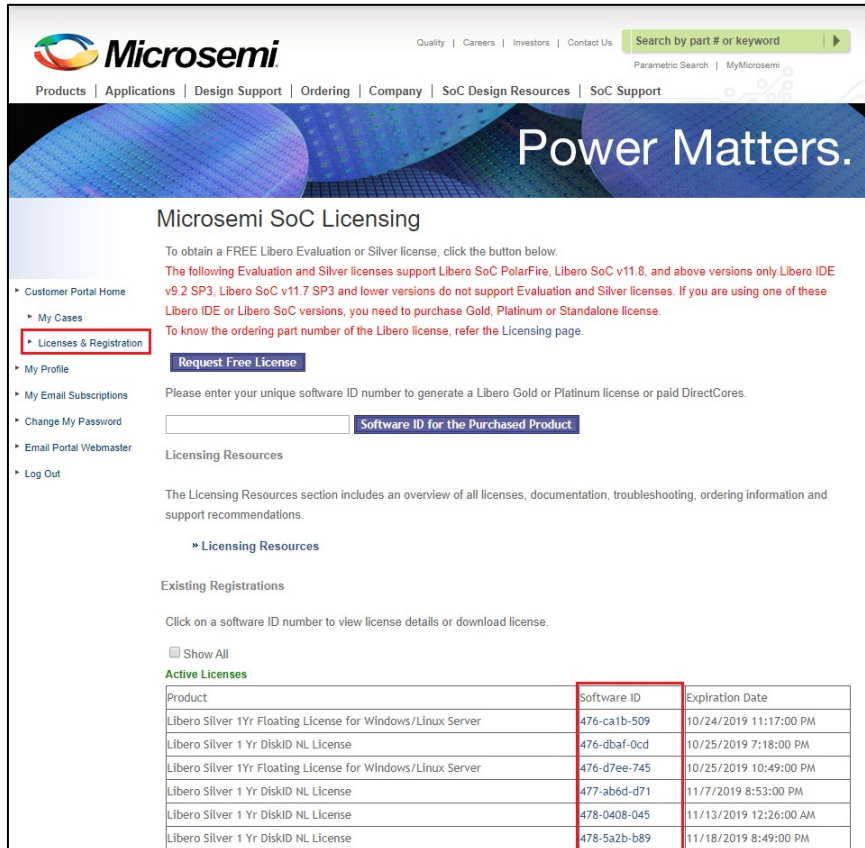

Microsemi SoC Licensing

To obtain a FREE Libero Evaluation or Silver license, click the button below.

The following Evaluation and Silver licenses support Libero SoC PolarFire, Libero SoC v11.8, and above versions only. Libero IDE v9.2 SP3, Libero SoC v11.7 SP3 and lower versions do not support Evaluation and Silver licenses. If you are using one of these Libero IDE or Libero SoC versions, you need to purchase Gold, Platinum or Standalone license.

To know the ordering part number of the Libero license, refer the Licensing page.

Request Free License

Please enter your unique software ID number to generate a Libero Gold or Platinum license or paid DirectCores.

Software ID for the Purchased Product

Licensing Resources

The Licensing Resources section includes an overview of all licenses, documentation, troubleshooting, ordering information and support recommendations.

Licensing Resources

Existing Registrations

Click on a software ID number to view license details or download license.


Show All

Active Licenses

Product	Software ID	Expiration Date
Libero Silver 1Yr Floating License for Windows/Linux Server	476-ca1b-509	10/24/2019 11:17:00 PM
Libero Silver 1 Yr DiskID NL License	476-dbaf-0cd	10/25/2019 7:18:00 PM
Libero Silver 1Yr Floating License for Windows/Linux Server	476-d7ee-745	10/25/2019 10:49:00 PM
Libero Silver 1 Yr DiskID NL License	477-ab6d-d71	11/7/2019 8:53:00 PM
Libero Silver 1 Yr DiskID NL License	478-0408-045	11/13/2019 12:26:00 AM
Libero Silver 1 Yr DiskID NL License	478-5a2b-b89	11/18/2019 8:49:00 PM

3. Click the link under **Software ID** of the desired license and click the **Download License** button to obtain a copy.

Figure 34 • Software ID Details

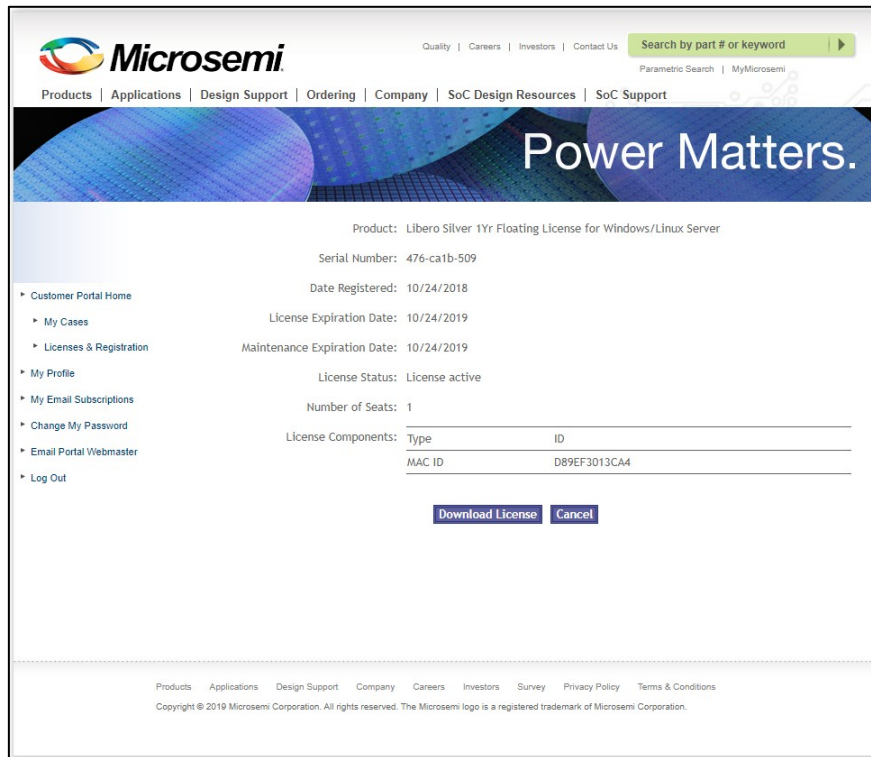

3.5.5 License Changes and Information

If you purchased a license, then some license changes can be performed.

- Change the owner of a license from one person to another. The new licensee must have a Microsemi Portal Account
- Change the Disk ID for a license
- Change the MAC ID for a license
- Change the USB Dongle ID for a license
- Additional email ids can be added to a license registration

The registered owner of a license will be notified 30 days, 15 days, and the last day in advance of the license expiration date. An email will also be sent on the expiration date. There is no renewal for free license.

Consider purchasing an annual license after the evaluation period.

3.6 Installing Licenses

After you have registered for a license on the Microsemi website, your license is automatically emailed to the address you provided. A License.dat file is attached to the email.

Note: You must have Admin rights on the installation machine to install the Libero SoC Software and to set up licensing.

3.6.1 Installing a Node Locked Disk ID License on Windows

1. Create a folder named flexlm on the C drive and save the License.dat file in that folder.
2. Open your Environment Variables dialog box:
 - a. Right-click **Computer** and choose **Properties** to open the System dialog box.
 - b. Click **Advanced System Settings** to open the System Properties dialog box.
 - c. Click the **Advanced** tab.
 - d. Click the **Environment Variables** button.
 - e. In Windows Search, select **Settings** (Windows key +w) and search for **EnvironmentVariable**.
 - f. Double-click the environment variable for your account to open the Editor.
 - g. Opens File Explorer, right-click **This PC** and select **Properties**.
 - h. Click **Advanced System Settings** and Click **Environment Variables**.

If `LM_LICENSE_FILE` is already listed in User variables, proceed to Step 3. If not, go to Step 5.

3. Select it, then click **Edit**.
4. Add the path to the Microsemi License.dat after any existing Variable value, separated with a semicolon (no space), or replace the existing Value.

Go to *Step 10*.

If `LM_LICENSE_FILE` is not listed in USER VARIABLES:

5. Click **New** under User Variable to create a new user variable. The New User Variable dialog box appears.
6. Type `LM_LICENSE_FILE` in the Variable name field.
7. Type `c:\flexlm\License.dat` in the Variable value field (or the path to where you installed the License.dat file). **Note:** Path to the installed license software is case sensitive; check for the case of the folder path in which the license is saved.
8. Click **OK**.
9. Click **OK** to save new Environment Variables and return to System Properties.
10. Click **OK** to exit.

Installation is complete. Libero and all installed tools that require licenses are ready for use.

3.6.2 Installing a Node-Locked USB Dongle License on Windows

1. Create a folder named flexlm under your `c:\` drive.
2. Save the **License.dat** file in the flexlm folder. You can save the License.dat file in a different folder; if you do so, make sure the correct path is defined in `LM_LICENSE_FILE`.
3. Open your Environment Variables dialog box:
 - a. Right-click **Computer** and choose **Properties** to open the System dialog box.
 - b. Click **Advanced System Settings** to open the System Properties dialog box.
 - c. Click the **Advanced** tab.
 - d. Click the Environment Variables button.
 - e. In Windows Search, select **Settings** (Windows key +w) and search for **EnvironmentVariable**.
 - f. Double-click the environment variable for your account to open the Editor.
 - g. Open File Explorer, right-click **This PC** and select **Properties**.
 - h. Click **Advanced System Settings** and click **Environment Variables**.

If `LM_LICENSE_FILE` is already listed in User variables, proceed to Step 4. If not, go to Step 6.

4. Click **New** under User Variable to create a new user variable. The New User Variable dialog box appears.
5. Type `LM_LICENSE_FILE` in the Variable name field.
6. Type `c:\flexlm\License.dat` in the Variable value field. Do not put spaces in the path.

7. Click **OK**. Proceed to Step 10.
- If LM_LICENSE_FILE is already listed in User Variables:
8. Select the existing **LM_LICENSE_FILE** and click **Edit**.
9. Add the path to the Microsemi License.dat after any existing variable value (separated by a space) or replace the existing value.
10. Click **OK**.
11. Click **OK** to save the new Environment Variables and return to System Properties.
12. Click **OK** to exit.
13. Attach the USB dongle hardware that was sent by Microsemi to your PC.

Dongle Driver Version Update

The Liberio SoC Installer does not install the FlexLM drivers for the USB dongle. If you use a dongle-based Liberio SoC license, you are responsible for installing the current version of the dongle driver.

Note: Before installing the USB drivers, Microsemi recommends that you download and run the FlexLM Cleanup Utility (3.9 MB) to remove any older, incompatible FlexLM drivers currently on your system.

To run the Liberio SoC releases with a USB dongle license, you need to update the dongle driver version to the current version.

1. Download the current dongle driver **SCL_FLEXID9_Installer.exe** from:
<https://www.microsemi.com/product-directory/design-resources/1711-licensing#downloads>.
2. When the download completes, run the SCL_FLEXID9_Installer.exe.
3. Follow the prompts to complete the installation.
4. Restart your system after installation for the dongle driver version to take effect.

3.6.3 Installing a Floating License on a Windows Server

1. On the SERVER machine, save the **License.dat** file into a flexlm folder on your c:\ drive.
2. Download the required license manager daemons to your server platform from <https://www.microsemi.com/product-directory/design-resources/1711-licensing#downloads>. In the License Server Daemons section, and select the correct platform download. We recommend placing these files into the same location as the License.dat file.
3. Open **License.dat** and edit the SERVER line by replacing <put.hostname.here> with your hostname. Do not include the brackets. Edit the port number (1702), if necessary, to any unused port.
4. Liberio floating licenses include Liberio, Synplify Pro ME, Identify ME, Symphony Model Compiler ME and ModelSim ME tools. Edit each VENDOR and DAEMON line with the correct path to each vendor daemon and then save the License.dat file. For example: VENDOR snpslmd C:\flexlm\snpslmd DAEMON mgcld C:\flexlm\mgcld DAEMON actlmgrd C:\flexlm\actlmgrd
5. Login to the SERVER machine and run the following command from the command prompt to start the lmgrd License Manager on the server machine:

```
C:\flexlm\lmgrd -c C:\flexlm\License.dat
```

Alternatively, if you prefer to have the License Manager output written to a Logfile, then run the following command at the command prompt:

```
C:\flexlm\lmgrd -c <path_to_License.dat>/License.dat -l
<path_to_logfile>/license.log
```

3.6.4 Installing a Floating License on a Linux Server

1. On the SERVER machine, save the License.dat file.
2. Download the required license manager daemons for your server platform from <http://www.microsemi.com/products/fpga-soc/design-resources/licensing#downloads>. In the License

Server Daemons section, select the correct platform download. Microsemi recommends placing these files into the same location as the License.dat file.

3. Open License.dat using any editor. Edit the SERVER line by replacing <put.hostname.here> with your machine Hostname. Do not include the brackets.
4. Libero Linux floating licenses include Libero, Synplify Pro ME, Identify ME, Symphony Model Compiler ME and ModelSim ME tools. Edit each VENDOR and DAEMON line with the correct path to each vendor daemon and then save the License.dat file.
5. Login to the SERVER machine and run the following command to start the LicenseManager:

```
<path_to_lmgrd>/lmgrd -c <path_to_License.dat>/License.dat
```

Alternatively, if you prefer to have the License Manager output written to a Logfile, then run the following command at the command prompt:

```
<path_to_lmgrd>/bin/lmgrd -c <path_to_License.dat>/License.dat -l \
<path_to_logfile>/license.log
```

3.6.5 Installing a Floating License on a Solaris Server

Libero SoC software does not run on Solaris. Solaris support is only provided for license server applications (License Manager Only). The Solaris License Manager (lmgrd) serves Standalone Libero SoC floating licenses only.

1. On the SERVER machine, save the License.dat file.
2. Download the required license manager daemons for your server platform from <http://www.microsemi.com/products/fpga-soc/design-resources/licensing#downloads>. In the License Server Daemons section, select the correct platform download. Microsemi recommends placing these files into the same location as the License.dat file.
3. Open License.dat using any editor. Edit the SERVER line by replacing <put.hostname.here> with your machine Hostname. Do not include the brackets.
4. Standalone Libero SoC floating licenses include Libero SoC feature only.
5. Login to the SERVER machine and run the following command in a command terminal to start the license manager: <path_to_lmgrd> /lmgrd -c <path_to_License.dat>/License.dat

Alternatively, if you prefer to have the License Manager output written to a Logfile, then run the following command at the command prompt:

```
<path_to_lmgrd>/lmgrd -c <path_to_License.dat>/License.dat -l
<path_to_logfile>/license.log
```

3.6.6 Connecting the Client Machines (PCs and Linux) to the License Server

For Client machines where the FPGA design work will be done, Libero is available for Windows and Linux operating systems.

3.6.6.1 Connecting the PC Client to a Windows or Linux License Server

From **Control Panel > System > System Properties (Advanced tab) > Environment Variables**, add or modify LM_LICENSE_FILE to include port@hostname:

- Variable Name: LM_LICENSE_FILE Variable
- Value: port@hostname. Example: 1702@sage

For Synplify Pro, check out a license by adding or modifying one of the following two environment variables, depending on the version of Synplify Pro used:

- SNPSLMD_LICENSE_FILE - For Synopsys tools released in September 2010 and later (2010.09).
 - Variable Name: SNPSLMD_LICENSE_FILE
 - Variable Value: <port@hostname> Example: 1702@sage

- SYNPLCTYD_LICENSE_FILE - For Synplify Pro releases before September
 - Variable Name: SYNPLCTYD_LICENSE_FILE
 - Variable Value: <port@hostname> Example: 1702@sage

3.6.6.2 Connecting the Linux Client to a Windows, Linux or Solaris License Server

Use the following commands to set the environment variables on the Linux CLIENT machine:

```
setenv LM_LICENSE_FILE <port@hostname>
```

Example: `setenv LM_LICENSE_FILE 1702@sage`

For Synplify Pro, to check out a license, add or modify one of the following two environment variables, depending on the version of Synplify Pro used:

- SNPSLMD_LICENSE_FILE - For Synopsys tools released in September 2010 and later (2010.09). `setenv SNPSLMD_LICENSE_FILE <port@hostname>` Example: `setenv SNPSLMD_LICENSE_FILE 1702@sage`
- SYNPLCTYD_LICENSE_FILE - For Synplify Pro releases before September 2010. `setenv SYNPLCTYD_LICENSE_FILE <port@hostname>` Example: `setenv SYNPLCTYD_LICENSE_FILE 1702@sage`

3.6.7 Installing a Server-Based Node-Locked License for Symphony Model Compiler ME

Prerequisite Software: In order to run Symphony Model Compiler ME, you must have MATLAB/Simulink by MathWorks **installed** with a current license. You cannot run Symphony Model Compiler ME without MATLAB/Simulink.

Symphony Model Compiler ME licenses are included with Libero floating licenses: You do not need to install a separate floating license for Symphony Model Compiler ME.

If you are using a Libero Node Locked license, then follow the instructions below **Note:** Installation and setup of this license is different from other Microsemi licenses. Install Symphony Model Compiler ME software before installing this license file.

A Symphony Model Compiler ME license is a “floating” license. If your PC has a license manager running, it is important to turn off the license manager before proceeding. Visit <http://www.flexerasoftware.com/support.htm#acresso> and consult the FLEXnet Publisher Lmgrd and Utilities Manual for installation instructions.

3.6.7.1 Installing the IP Paid Licenses

After you receive the paid IP license from Microsemi, append the text at the bottom of the original Libero license file. For example, if you have a node locked paid IP license, add this text in Libero node locked license.

3.7 Installation in Environments without a Consistent Internet Connection

If you prefer to disconnect from the Internet while using Liberio, we encourage you to re-connect occasionally and manually **Check for SW Updates** and **Download New IP Cores** to take advantage of new features, enhancements and fixes.

Install the software as described in "Installing Liberio SoC Software" on page 22.

3.7.1 Change Your Vault Location

If you install the Liberio SoC Software onto a network drive for multi-user access, you may want to specify a Vault location that can be shared by all users.

Note: All users must have written permission to the shared vault location.

Note: Microsemi recommends a minimum disk space of 1.2 GB for the vault location. To change your Vault location:

1. Launch Liberio SoC.
2. From the Project menu, choose **Vault/Repositories Settings**.
3. Click **Vault location**.
4. Enter a new Vault location in the text field.
5. Click **OK**.

To install Mega Vault,

Download and set-up of a complete Vault for new installations

1. Using the link above, save the .zip file of the entire vault to your local machine (For example, c:\temp).
2. Unzip the file to a folder on your local machine (for example, c:\vault).

Set the path to the vault as follows:

For Liberio PolarFire v2.1 and later (Windows only):

1. Run the **setup.exe** installer (included in the MegaVault zip file) to complete vault installation.
2. Click **Project** followed by **Vault/Repositories Settings**. The Vault/Repositories Setting dialog box is displayed.
3. Select **Vault location** from the options in the left pane.
4. Select a path for Vault installation folder (by default it will be C:\Microsemi\PolarFire_v2.1_MegaVault, however during installation you can select your preferred path).

3.7.2 Disable Internet Options

You can disable Liberio access to the Internet, or disable the automatic software update features. This is useful if your Internet access is inconsistent. To do so:

1. In the **Project** menu choose **Preferences** to open the Preferences dialog box.
2. Click **Software update** and choose the **Do not check for updates** or **remind me at startup** radio button.
3. Click **Internet Access** and uncheck **Allow Access to Internet**.
4. Click **OK** to continue.

3.7.3 Download Direct Cores and SgCore (SmartDebug) Cores to Populate your Vault

When you maintain a constant Internet connection, you are prompted for download of Cores required for your Liberio project. If you plan to disconnect from the Internet, you must populate your vault after initial Liberio SoC installation and before you disconnect from the Internet. To do so:

1. Launch the Liberio SoC Software.
2. From the **View** menu, choose **Windows > Catalog** to open the Catalog.
3. Click **Download them now**. The download may take several minutes, depending on your Internet speed.

The completion percentage is tracked in the progress bar.

The **Download them now** button disappears when the download is complete. The new cores are now available in your Catalog.

You may also download the Direct Cores and Sgcores at http://www.actel-ip.com/cwps/download_index/DirectCore and http://www.actel-ip.com/cwps/download_index/SgCore.

3.7.4 Download Firmware Cores

You can download Firmware Cores and store them in the same vault location as the DirectCore and Sg (SmartDesign) cores:

1. Access the Firmware Catalog from **All Programs > Microsemi > Liberio SoC_<version> FirmwareCatalog**.
2. Click **Download them Now** to download the Firmware Cores. You may also download the Firmware Cores at http://www.actel-ip.com/cwps/download_index/Firmware.

After the initial setup is completed following the steps above, an Internet connection is no longer required for Liberio operation. However, most documentation and silicon user's guides are available only from our website at <http://www.microsemi.com/products/fpga-soc/design-resources/design-software/libero-soc#documents>. Note that without an Internet connection, some hyperlinks in Liberio log windows will be inaccessible.

**Microsemi**

2355 W. Chandler Blvd.
Chandler, AZ 85224 USA

Within the USA: +1 (480) 792-7200
Fax: +1 (480) 792-7277

www.microsemi.com © 2020 Microsemi and its corporate affiliates. All rights reserved. Microsemi and the Microsemi logo are trademarks of Microsemi Corporation and its corporate affiliates. All other trademarks and service marks are the property of their respective owners.

Microsemi's product warranty is set forth in Microsemi's Sales Order Terms and Conditions. Information contained in this publication is provided for the sole purpose of designing with and using Microsemi products. Information regarding device applications and the like is provided only for your convenience and may be superseded by updates. Buyer shall not rely on any data and performance specifications or parameters provided by Microsemi. It is your responsibility to ensure that your application meets with your specifications. THIS INFORMATION IS PROVIDED "AS IS." MICROSEMI MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL MICROSEMI BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS, DAMAGE, COST OR EXPENSE WHATSOEVER RELATED TO THIS INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROSEMI HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROSEMI'S TOTAL LIABILITY ON ALL CLAIMS IN RELATED TO THIS INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, YOU PAID DIRECTLY TO MICROSEMI FOR THIS INFORMATION. Use of Microsemi devices in life support, mission-critical equipment or applications, and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend and indemnify Microsemi from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microsemi intellectual property rights unless otherwise stated.

Microsemi Corporation, a subsidiary of Microchip Technology Inc. (Nasdaq: MCHP), and its corporate affiliates are leading providers of smart, connected and secure embedded control solutions. Their easy-to-use development tools and comprehensive product portfolio enable customers to create optimal designs which reduce risk while lowering total system cost and time to market. These solutions serve more than 120,000 customers across the industrial, automotive, consumer, aerospace and defense, communications and computing markets. Headquartered in Chandler, Arizona, the company offers outstanding technical support along with dependable delivery and quality. Learn more at www.microsemi.com.

5029124

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Development Software](#) category:

Click to view products by [Microchip](#) manufacturer:

Other Similar products are found below :

[RAPPID-567XFSW](#) [SRP004001-01](#) [SW163052](#) [SYSWINEV21](#) [WS01NCTF1E](#) [W128E13](#) [SW89CN0-ZCC](#) [IPS-EMBEDDED](#) [IP-UART-16550](#) [MPROG-PRO535E](#) [AFLCF-08-LX-CE060-R21](#) [WS02-CFSC1-EV3-UP](#) [SYSMAC-STUDIO-EIPCPLR](#) [LIB-PL-PC-N-1YR-DISKID](#) [1120270005](#) [1120270006](#) [MIKROBASIC PRO FOR FT90X \(USB DONGLE\)](#) [MIKROC PRO FOR FT90X \(USB DONGLE\)](#) [MIKROBASIC PRO FOR AVR \(USB DONGLE LICEN](#) [MIKROBASIC PRO FOR FT90X](#) [MIKROC PRO FOR DSPIC30/33 \(USB DONGLE LI](#) [MIKROPASCAL PRO FOR ARM \(USB DONGLE LICE](#) [MIKROPASCAL PRO FOR FT90X](#) [MIKROPASCAL PRO FOR FT90X \(USB DONGLE\)](#) [MIKROPASCAL PRO FOR PIC32 \(USB DONGLE LI](#) [SW006021-2H](#) [ATATMELSTUDIO](#) [2400573](#) [2702579](#) [2988609](#) [2702546](#) [SW006022-DGL](#) [2400303](#) [2701356](#) [VDSP-21XX-PCFLOAT](#) [VDSP-BLKFN-PC-FULL](#) [88970111](#) [DG-ACC-NET-CD](#) [55195101-101](#) [55195101-102](#) [SW1A-W1C](#) [MDK-ARM](#) [SW006021-2NH](#) [SW006021-1H](#) [SW006021-2](#) [SW006022-2](#) [SW006023-2](#) [SW007023](#) [MIKROE-730](#) [MIKROE-2401](#)