



# HVP-56F82748 Quick Start Guide

Freescale Controller Card

High-Voltage  
Development  
Platform



# Get to know the HVP-56F82748

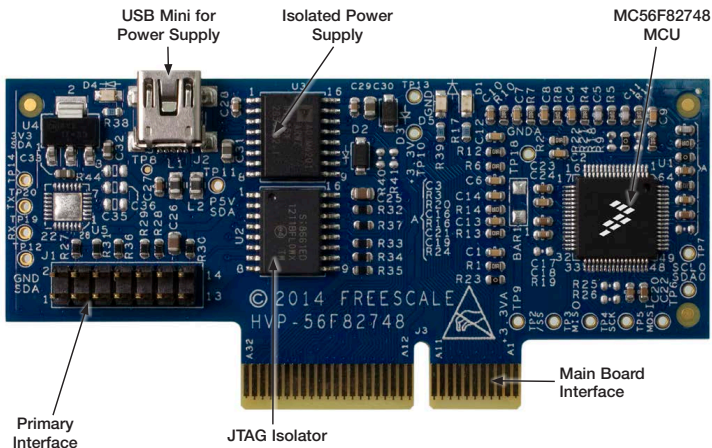


Figure 1: HVP-56F82748

## HVP-56F82748 High-Voltage Development Platform



The Freescale High-Voltage Development Platform is a set of software and hardware tools for evaluation and development of high-voltage motor control and power conversion algorithms. It is ideal for rapid prototyping of high-voltage microcontroller-based applications.

# Introduction to HVP-56F82748 High-Voltage Development Platform

The HVP-56F82748 controller card is a development platform for the DSC56F8xxxx family which in combination with one of HVP-MC3PH High-Voltage Development Platform provides ready-made software and hardware development for high-voltage motor control and power conversion applications.

## **This Quick Start Guide will teach you to:**

- Easily program examples for the DSC56F8xxxx family
- Spin the 3-phase PMSM motor of the HVP-MC3PH module while monitoring the motor with the FreeMASTER tool

## **HVP-56F82748 Controller Card Features**

- Accommodates target MC56F82748VLH MCU (32-bit DSP core with single-cycle math computation, 100 MHz, 64 KB flash, 2x12-bit ADCs, high-resolution PWM, 64 LQFP) SWD isolation up to 5KV
- Galvanic Isolation
- Design optimized for low noise
- On-board isolated power supply, allowing safe debugging
- Controller card allows stand-alone operation

## **Tools Required**

- CodeWarrior Development Studio for MCU version 10.6
- Freescale FreeMASTER for real-time debug monitoring and data visualization

## Step-by-Step Installation Instructions

### 1 Download Software and Tools

Download installation software and documentation under **“Jump Start Your Design”** at [freescale.com/HVP](http://freescale.com/HVP).



### 2 Install the Software and Tools

- Download and install the CodeWarrior Development Studio for MCU version 10.6.
- Download and install the driver for USB to serial controller CP210x.
- Download and install the free debug monitoring and data visualization tool Freescale FreeMASTER, v1.4 or later, at [freescale.com/FreeMASTER](http://freescale.com/FreeMASTER).

### 3 Debug Motor Control Project in CodeWarrior with HVP-MC3PH High-Voltage Development Platform

#### 1) Configuring Hardware

- Plug the controller card HVP-56F82748 into 64-pin PCI connector located at HVP-MC3PH.
- Configure jumpers at HVP-MC3PH as is shown in the table below.

| Option | Setting  |
|--------|----------|
| J1     | 1-2, 2-3 |
| J3     | 1-2, 2-3 |

- Close the lids.
- Connect the servo motor leads to output connector J13. (Applications are tuned for Servo motor type: Mige 60CST-M01330 or Maxsine 60MSLO1330FC).
- Connect mini USB cable between controller card and your computer

## Step-by-Step Installation Instructions

to provide power supply for galvanic isolator.

- Connect debugger (USB TAP, or PE micro multilink ) to J1 JTAG connector.

### 4

## Loading the PMSM Motor Demo Software

- Launch CodeWarrior and Build the “PMSM\_sensorles\_FOC”. Open the CodeWarrior project file .project following the path Project Labs\`PMSM_sensorles_FOC`\ in the Quick Start Package. Clean the project before selecting the action Rebuild All.

**Note:** The compilation may return warning messages without consequence.


- Run CodeWarrior Debug Mode and Download and Debug the “PMSM\_sensorles\_FOC” project.

- Connect a line-isolated, current-limited 110 V DC or 90 V AC power supply to the power input module with the IEC connector. The power supply current limit should be set for less than 3 amps. The DC supply's polarity does not matter. Regardless whether DC or AC power is used, the power is always applied to the input power connector located on the rear panel.
- Start the debug session by selecting the GO option from the toolbar. To spin motor and set motor speed, continue to following section.

## 5-step-by-5-step Installation Instructions

### 5 Monitor the Project with FreeMASTER

- Launch Freescale FreeMASTER v1.4 or later from the Windows Start menu.
- Connect USB cable between USB on HVP-MC3PH and your computer.
- Windows will detect a UART to USB bridge.

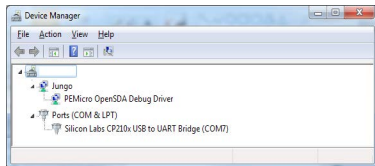

- Open the FreeMASTER project file **PMSM\_Sensorless\_DSC.pmp** following the path Project Labs\Freemaster\PMSM\_Sensorless\_FOC in the Quick Start Package. The PMSM Sensorless Application interface will appear in FreeMASTER to monitor and control the speed, the voltage and the current consumption of the motor.



- In the Project Options, set the COM port affected as the CP210x USB to UART Bridge (information available in Device Manager) and set the baud rate/speed to 19200 bps (check the option Do Not Open Port at Startup to avoid error messages at FreeMASTER startup)
- From the toolbar, select the action Start the Communication.
- Select in FreeMASTER speedometer; the requested speed and the motor will spin automatically.



## et Started



Download installation software and documentation under  
“**Jump Start Your Design**” at [freescale.com/HVP](http://freescale.com/HVP).

## Support

Visit [freescale.com/support](http://freescale.com/support) for a list of phone numbers within your region.

## Warranty

Visit [freescale.com/warranty](http://freescale.com/warranty) for complete warranty information.

For more information, visit [freescale.com/HVP](http://freescale.com/HVP),  
[freescale.com/Kinetis](http://freescale.com/Kinetis), [freescale.com/Kinetis/VSeries](http://freescale.com/Kinetis/VSeries), or [freescale.com/DSC](http://freescale.com/DSC)

Freescale, the Freescale logo and Kinetis are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Tower is a trademark of Freescale Semiconductor, Inc. ARM and Cortex are registered trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. All rights reserved. All other product or service names are the property of their respective owners. © 2015 Freescale Semiconductor, Inc.



## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Development Boards & Kits - Other Processors](#) category:*

*Click to view products by [NXP](#) manufacturer:*

Other Similar products are found below :

[EVB-MEC1418MECC](#) [20-101-1252](#) [C29XPCIE-RDB](#) [CC-ACC-18M433](#) [STM8S/32-D/RAIS](#) [MAX1464EVKIT](#) [RTK0EN0001D01001BZ](#)  
[MAXQ622-KIT#](#) [YR0K50571MS000BE](#) [QB-R5F104PJ-TB](#) [CC-ACC-ETHMX](#) [OV-7604-C7-EVALUATION-BOARD](#) [SK-AD02-](#)  
[D62Q1747TB](#) [SK-BS01-D62Q1577TB](#) [ST7MDT1-EMU2](#) [GROVE BASE KIT FOR RASPBERRY PI](#) [CAB M-M\(40-17-RAINBOW\)](#)  
[CY8CKIT-143A](#) [EK-MPC5744P](#) [KITAURIXTC234TFTTOBO1](#) [ENW89854AXKF](#) [ENWF9201AVEF](#) [QB-R5F104LE-TB](#) [LV18F V6 64-](#)  
[80-PIN TQFP MCU CARD EMPTY](#) [LV-24-33 V6 44-PIN TQFP MCU CARD EMPTY](#) [LV-24-33 V6 64-PIN TQFP MCU CARD EMPTY](#)  
[LV-24-33 V6 80-PIN TQFP 1 MCU CARD EMPTY](#) [32X32 RGB LED MATRIX PANEL - 6MM PITCH](#) [3.3 - 5 VTRANSLATOR](#) [READY](#)  
[FOR XMEGA CASING \(WHITE\)](#) [RELAY4 BOARD](#) [ETHERNET CONNECTOR](#) [RFID CARD 125KHZ - TAG](#) [RFID READER](#) [RFM12B-](#)  
[DEMO](#) [MAROON](#) [3G CLICK \(FOR EUROPE AND AUSTRALIA\)](#) [MAX232](#) [MAX3232 BOARD](#) [ARTY S7-50](#) [TINKERKIT HALL](#)  
[SENSOR](#) [TOUCHPANEL](#) [TOUCHPANEL CONTROLLER](#) [MIKROBOARD FOR AVR WITH ATMEGA128](#) [MIKROBOARD FOR PSOC](#)  
[WITH CY8C27643](#) [MIKROBUS CAPE](#) [MIKRODRIVE](#) [MIKROETH 100 BOARD](#) [MIKROLAB FOR 8051 L](#) [MIKROPROG TO ST-LINK](#)  
[V2 ADAPTER](#)