



# KEA128LEDLIGHTTRD Quick Start Guide

Lighting Control Module Reference  
Design using Kinetis KEA128



# Get to know the KEA128LEDLIGHTRD Board

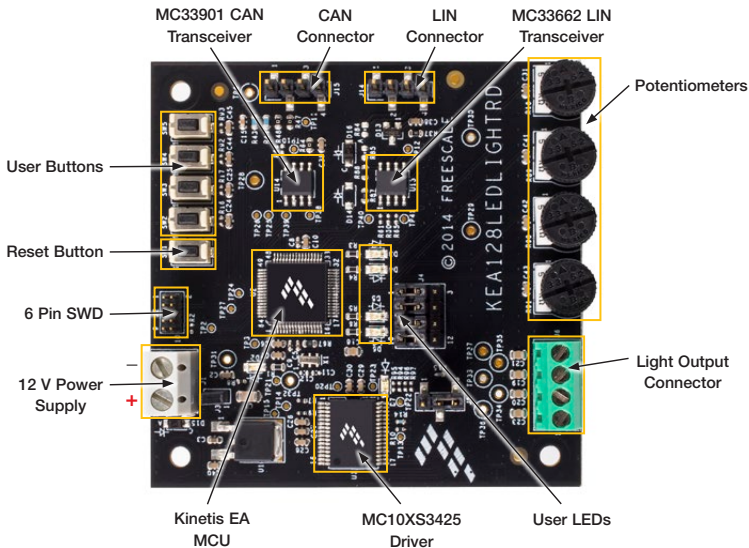


Figure 1: Front side of KEA128LEDLIGHTRD

## NEA120LEDLIGHTRD Features

### Hardware

- SKEAZ128 32-bit ARM® Cortex®-M0+ MCU (64-pin LQFP)
- MC33662 LIN transceiver
- MC33901 CAN transceiver
- MC10XS3425EK multi-chip high-side switch
- 4 LEDs
- 4 Potentiometers
- 4 User buttons
- SWD connector interface for debugging
- Light connector interface

## step-by-step Installation Instructions

### 1 Install CodeWarrior Development Studio

CodeWarrior Development Studio for Microcontrollers installation file is included in the supplied media for your convenience.

The most recent version of CodeWarrior for MCUs (Eclipse IDE) can be downloaded from [www.freescale.com/CodeWarrior](http://www.freescale.com/CodeWarrior).

### 2 Install FreeMASTER

FreeMASTER run-time debugging tool installation file is included on the supplied media for your convenience.

For FreeMASTER updates, please visit [freescale.com/FreeMASTER](http://freescale.com/FreeMASTER).

### 3 Download Application Software

Download and install the reference design application software available at [freescale.com/KEA128LEDLIGHTRD](http://freescale.com/KEA128LEDLIGHTRD).

### 4 Connect a Lamp

Connect up to 4 lamps in to the light output connector of the board.

### 5 Connect the Power Supply

Connect the 12 V power supply to the power supply terminals.

## Step-by-step Installation Instructions (cont.)

### 6 Connect the Debugger

Connect a P&E USB Multilink Universal debugger to the 6 pin SWD connector of the board. Both LEDs on the P&E debugger must turn on.

### 7 Reprogram the MCU using CodeWarrior Development Studio

Import the downloaded reference design application project in the CodeWarrior Development Studio:

1. Start the CodeWarrior application.
2. Click **File – Import**.
3. Select **General – Existing Projects into Workspace**.
4. Select “**Select root directory**” and click **Browse**.

5. Navigate to the extracted application directory: **KEA128LEDLIGHTRD/KEA128\_LIGHTING\_RD** and click **OK**.

6. Click **Finish**.

7. Click **Run>Debug** to download the code to the KEA128. This starts the launching progress until the debugger perspective appears and stops at the line of main () in the source view. Click on the stop button.

### 8 FreeMASTER Setup

1. Start the FreeMASTER application.
2. Open the FreeMASTER Project **KEA128LEDLIGHTRD/KEA128\_LIGHTING\_RD/KEA128LIGHTING.pmp**.
3. Click the red **STOP** button in the FreeMASTER toolbar or press Ctrl+K to enable the communication.

## Application Control in FreeMASTER

The FreeMASTER run-time debugging tool is used to control the application and monitor application variables during run-time. An explanation on how to use the FreeMASTER user interface is given below.

1. Click the **Output Control** button in the **Output Channel** section or press switch **SW2, SW3, SW4, SW5** to control each output state. The output states are **OFF, ON** or **TOGGLE**.
2. To change the PWM duty cycle of the outputs using only the FreeMASTER sliders, click in the **FreeMASTER PWM Control** button located in the **General Settings** section. Button must be in **ON** state. When button state is **OFF** the duty cycle of the outputs can be controlled only using the potentiometers **R18, R89, R90, and R91**.
3. Change the PWM duty cycle of the outputs by moving the **PWM Duty Cycle** slider of each output.
4. In case of an output fault, the corresponding fault label will turn red in the **Diagnostic and Status Flags** section of each output.
5. General faults flags and operation mode of the system are indicated in the **General Settings** section. By default the operation mode is **Normal Mode**.
6. In case of an under voltage fault, stop the FreeMASTER communication by clicking the red **STOP** button. Remove the under voltage condition. Start the FreeMASTER communication by clicking the red **STOP** button. The **Fault Status** and the **Under Voltage** label will turn red and the outputs will be off. To remove this fault click on the **Clear Under Voltage Fault** button or press any switch **SW2, SW3, SW4, SW5** on the board, to return the system to its **Normal Mode**.

## Jumper options

The following is a list of all jumper options. The default installed jumper settings are shown in white text within gray boxes.

Jumper	Option	Setting	Description
J4	Inputs	1-2	Allows independent control of each high side switch output
		4-5	
		7-8	
		10-11	
J3	Wake up	1-2	Allows wake up function of MC10XS3425
J5	FSI	2-3	<b>FSI selection:</b> 1-2: FSI terminal connected through 6.8 kOhm resistor to ground 2-3: FSI terminal connected to ground

## Headers and Connectors List

Header/Connector	Description
J1	12 V DC power input terminals
J2	Kinetis KEA128 Serial Wire Debug (SWD) header
J14	LIN physical interface signal header
J15	CAN physical interface signal header
J6	Lights output connector



## et Started



Download installation software and documentation under  
“**Jump Start Your Design**” at [freescale.com/CodeWarrior](http://freescale.com/CodeWarrior).

## Support

Visit [freescale.com/support](http://freescale.com/support) for a list of phone numbers within your region.

## Warranty

Visit [freescale.com/warranty](http://freescale.com/warranty) for complete warranty information.

**For more information, visit**

[freescale.com/KEA128LEDLIGHTRD](http://freescale.com/KEA128LEDLIGHTRD)

Freescale, the Freescale logo, CodeWarrior and Kinetis are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. ARM and Cortex are registered trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. All rights reserved. © 2014 Freescale Semiconductor, Inc.



Doc Number: KEA128LEDLIGHTQSG REV 0  
Agile Number: 926-28450 Rev A



## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Development Boards & Kits - ARM category](#):*

*Click to view products by [NXP manufacturer](#):*

Other Similar products are found below :

[SAFETI-HSK-RM48](#) [PICOHOBBITFL](#) [CC-ACC-MMK-2443](#) [TWR-MC-FRDMKE02Z](#) [EVALSPEAR320CPU](#) [MAX32600-KIT#](#)  
[TMDX570LS04HDK](#) [TXSD-SV70](#) [OM13080UL](#) [EVAL-ADUC7120QSPZ](#) [OM13082UL](#) [TXSD-SV71](#) [YGRPEACHNORMAL](#)  
[OM13076UL](#) [PICODWARFFL](#) [YR8A77450HA02BG](#) [3580](#) [32F3348DISCOVERY](#) [ATTINY1607](#) [CURIOSITY NANO](#) [PIC16F15376](#)  
[CURIOSITY NANO BOARD](#) [PIC18F47Q10](#) [CURIOSITY NANO](#) [VISIONSTK-6ULL V.2.0](#) [80-001428](#) [DEV-17717](#) [EAK00360](#)  
[YR0K77210B000BE](#) [RTK7EKA2L1S00001BE](#) [SLN-VIZN-IOT](#) [LV18F V6 DEVELOPMENT SYSTEM](#) [READY FOR AVR BOARD](#)  
[READY FOR PIC BOARD](#) [READY FOR PIC \(DIP28\)](#) [AVRPLC16 V6 PLC SYSTEM](#) [MIKROLAB FOR AVR XL](#) [MIKROLAB FOR PIC L](#)  
[MINI-AT BOARD - 5V](#) [MINI-M4 FOR STELLARIS](#) [MOD-09.Z](#) [BUGGY + CLICKER 2 FOR PIC32MX + BLUETOOT](#) [1410](#) [LETS](#)  
[MAKE PROJECT PROGRAM. RELAY PIC](#) [LETS MAKE - VOICE CONTROLLED LIGHTS](#) [LPC-H2294](#) [DSPIC-READY2 BOARD](#)  
[DSPIC-READY3 BOARD](#) [MIKROBOARD FOR ARM 64-PIN](#) [MIKROLAB FOR AVR](#) [MIKROLAB FOR AVR L](#) [MIKROLAB FOR](#)  
[DSPIC](#) [MIKROLAB FOR DSPIC XL](#)