Rheostat and **Tap Switch Hardware**

Knobs, Dials, Mounting Fasteners

KNOBS



with pointer



Finger grip

without pointer



with pointer








Finger grip

Any knob can be used with any rheostat and tap switch model which has the corresponding shaft diameter. Knobs are fastened to shafts with slotted set screws.

Slotted set screw*		Hex socket set socket*		Description	Knob dia.	Hole dia.	Fits model
۰.	5102⊟		—	Bar knob, 21/4" long	—	¹ /4"	H, J, G, K, L
~	5103⊟	~	5103AE	Bar knob, 11/4" long	_	¹ /4"	H, J, G, K, L
~	5104⊟	~	5104AE	Handwheel with pointer	3 ¹ /4"	³ /8"	P, N, R, U
~	5105⊟		-	Handwheel without pointer	31/4"	³ /8"	P, N, R, U
~	5106⊟	•	5106AE	Handwheel with pointer	3 ¹ /4"	¹ /4"	H, J, G, K, L
۰.	5107 ⊟		—	Handwheel without pointer	31/4"	¹ /4"	H, J, G, K, L
~	5109⊟	~	5109AE	Finger-grip with pointer	1 ⁵ /8"	¹ /4"	H, J, G, K, L
~	5110⊟	•	5110A⊟	Finger-grip without pointer	1 ⁵ /8"	¹ /4"	H, J, G, K, L
~	5111⊟	~	5111AE	Finger-grip with pointer	2 ³ /8"	¹ /4"	H, J, G, K, L
۰.	5112⊟	•	5112A⊟	Finger-grip without pointer	2 ³ /8"	¹ /4"	H, J, G, K, L
~	5150⊟	•	5150AE	Finger-grip	1 ¹ /2"	¹ /4"	H, J, G, K, L
~	5151⊟		-	Finger-grip	³ /4"	¹ /8"	C, E
	_	~	5152A⊟	Like 5104 (shorter pointer)	31/4"	¹ /4"	H, J, G, K, L

RHEOSTAT TANDEM COUPLING KITS

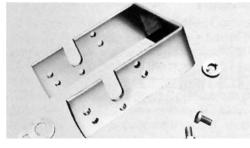

Ohmite coupling kits permit tandem mounting of two rheostat units. A coupling fastens to the shaft of the back unit; projections on the coupling engage the recesses in the driving hub of the front unit.

Each kit consists of a steel "U" frame, a coupling with set screw, mica washer, allen wrench and instructions.

Part No.*	Front mount models	Rear mount models	Max. panel thickness
✔ 6532⊟	H, J	H, J, G, K, L	⁵ /32"
✔ 6533E	G, K, L	H, J, G, K, L	1/8"
♦ 6591⊟	E	E	¹ /16"

* Part available in RoHS (with "E" suffix) and non-RoHS version


Standard values

⁼ Non-standard values subject to minimum handling charge per item

Rheostat and Tap Switch Hardware

Knobs, Dials, Mounting Fasteners

DIALS

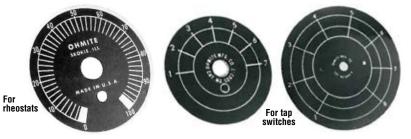

Handsomely finished, black-enameled, aluminum dials for Ohmite rheostats and tap switches. Figures and lines are etched on a black background for contrast and ease of readability. On rheostat dials, divisions indicating approximate percentage of rheostat resistance in circuit are marked from 0 to 100. On tap switch dials, Number of dial positions are identical with number of switch positions.

Part No.*	For model	For knob	Dial dia.	
✔ 5007⊟	C, E	5151	1 ¹ /4"	
√ 5000E	H, J, G, K, L	5150, 5116, 5103	2 ³ /16"	
√ 5001E	P, N, R, U	5104, 5106	5 ¹ /2"	
✔ 5002⊑-†	111, 212 (single), 312 (single)	5109, 5116, 5150	2 ³ /4"	
✔ 5003⊑-†	212 (tandem), 312 (tandem), 412	5111, 5152A	3 ³ /4"	
✔ 5004⊑-†	608	5104	5 ¹ /2"	
t Specify number of positions as suffix				

Specify number of positions as suffix.

RHEOSTAT REPAIR KITS

Electrical contact replacement kit. Kit includes contact/slip ring assemblies (for round and ribbon wire rheostats), copper graphite washer, spring arm and hub. Instructions included.



Rheostat Part No.* model		
√ 7070E	Р	
√ 7071E	N	
√ 7072⊟	R	
√ 7074E	U	

EXTRA MOUNTING HARDWARE

Kit contains 25 each, nuts and lock washers for panel mounting units.

Part No.* For model
✔ 7090E E
✓ 7091E H, J, G, K, L, 111, 212, 711

 * Part available in RoHS (with "E" suffix) and non-RoHS version

Standard values

 \bullet = Non-standard values subject to minimum handling charge per item



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Ohmite manufacturer:

Other Similar products are found below :

 OG1825
 5910E
 6017E
 608-8E
 6112-EP-252E
 62645-10/10/10
 630HR025
 CU1511
 D100K5R0
 D100K600
 D225K2K2E
 D25K300

 D25K750
 EVFL170EN4R7JE
 EVFT119EM47RJE
 EVFT170EN100JE
 F20J25KE
 F20J3K0E
 F30J50R
 F40J200
 F55J100
 F55J20K
 76303

 805F10K
 805F250
 805F75R
 80FR499
 810F20KE
 83FR121
 850F250
 MOX-750232506FE
 MOX-H-021004J

 MOX-H-042505JE
 MOX-J-045006F
 MOX-J-046004J
 PFE5K4R50
 PFR5K25R0
 90J10KE-B
 90J12K
 90J47K
 90J56R
 90J5R6E
 91J2K2

 91J91RE
 92J1K0
 93J33R
 93J470
 95J15K