# **Advanced Digital Temperature Controller**

# E5CN-H (48 x 48 mm)

CSM\_E5CN-H\_DS\_E\_4\_1

# A New High-performance Controller: High Resolution, High Speed, and High Input Accuracy.

# **Logic Operations and Preventive Maintenance Function.**

- High-resolution display with 5 digits/0.01°C display in a compact Controller (48 x 48 mm).
- High-speed sampling cycle of 60 ms.
- High Accuracy
   Thermocouple/Pt input: ±0.1% of PV
   Analog input: ±0.1% FS
- Universal inputs on all models (thermocouple, PT, or analog input) to handle various sensors with one Controller.
- A PV/SV-status display function can be set to automatically alternate between displaying the status of the Temperature Controller (auto/manual, RUN/STOP, and alarms) and the PV or SV.
- Flexible contact outputs with logic operations (AND, OR, and delays) set from the Support Software (CX-Thermo Ver. 4.0)
- Preventive maintenance for relays in the Temperature Controller using a Control Output ON/OFF Counter.




48 × 48 mm E5CN-H

Refer to Safety Precautions for E5\_N/E5\_N-H.

Refer to *Operation for E5\_N/ E5\_N-H* for operating procedures.

#### Main I/O Functions

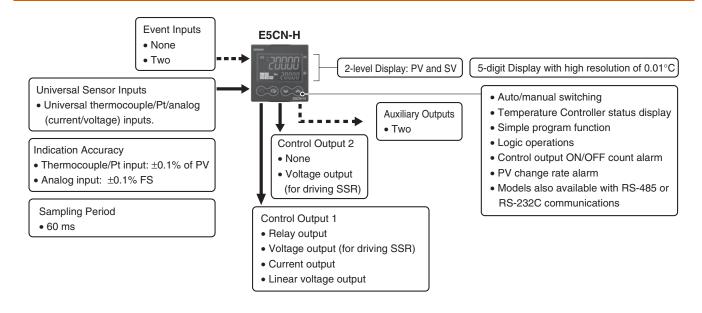


This data sheet is provided as a guideline for selecting products. Be sure to refer to the following user manuals for application precautions and other information required for operation before attempting to use the product.

E5CN-H/E5AN-H/E5EN-H Digital Controllers User's Manual Advanced Type (Cat. No. H157)

E5CN-H/E5AN-H/E5EN-H Digital Controllers Communications Manual Advanced Type (Cat. No. H159)

### Lineup

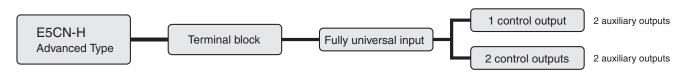

Note: Models with one control output and models with two control outputs can be used for heating/cooling control.

#### **Model Number Structure**

# **Model Number Legend**

#### **Controllers**

**E5CN-**1 2 3 4 5 6 7

1. Type

H: Advanced

2. Control Output 1

R: Relay output

Q: Voltage output (for driving SSR)

C: Current output

V: Linear voltage output

3. Auxiliary Outputs

2: Two outputs

4. Option 1

M: Option Unit can be mounted.

5. Power Supply Voltage

Blank: 100 to 240 VAC D: 24 VAC/VDC

6. Case Color

Blank: Black W: Silver

7. Terminal Cover

-500: With terminal cover

**Option Units** 

1. Applicable Controller

CN: E5CN-H or E5CN

2. Function 1

Blank: None

Q: Control output 2 (voltage output for driving SSR)

P: Power supply for sensor

C: Current output

3. Function 2

Blank: None

H: Heater burnout/SSR failure/Heater overcurrent detection (CT1)

HH: Heater burnout/SSR failure/Heater overcurrent detection (CT2)

B: Two event inputs

03: RS-485 communications

H03: Heater burnout/SSR failure/Heater overcurrent detection

(CT1) + RS-485 communications

HB: Heater burnout/SSR failure/Heater overcurrent detection (CT1) + Two event inputs

HH03: Heater burnout/SSR failure/Heater overcurrent detection

(CT2) + RS-485 communications

H01: Heater burnout/SSR failure/Heater overcurrent detection (CT1)/RS-232C communications

F: Transfer output

BF: Two event inputs/Transfer output

4. Version

N2: Available only to models released after January 2008

Note: Not all combinations of function 1 and function 2 specifications are possible for Option Units (E53-□□□).

# **Ordering Information**

#### **Controllers**

Size	Case Color	Power supply voltage	Auxiliary output	Control output 1	Model
				Relay output	E5CN-HR2M-500
		100 to 240 VAC	2	Voltage output (for driving SSR)	E5CN-HQ2M-500
		100 to 240 VAC	2	Current output	E5CN-HC2M-500
	Black			Linear voltage output	E5CN-HV2M-500
	DIACK			Relay output	E5CN-HR2MD-500
		24 VAC/VDC	2	Voltage output (for driving SSR)	E5CN-HQ2MD-500
1/16 DIN 48 × 48 × 78			2	Current output	E5CN-HC2MD-500
$(W \times H \times D)$				Linear voltage output	E5CN-HV2MD-500
(				Relay output	E5CN-HR2M-W-500
		100 to 240 VAC	2	Voltage output (for driving SSR)	E5CN-HQ2M-W-500
	Silver			Current output	E5CN-HC2M-W-500
	Silvei			Relay output	E5CN-HR2MD-W-500
		24 VAC/VDC	2	Voltage output (for driving SSR)	E5CN-HQ2MD-W-500
				Current output	E5CN-HC2MD-W-500

#### **Option Units**

One of the following Option Units can be mounted to provide the E5CN with additional functions.

		Functio	ns			Model
Communications RS-485		3-phase heater burnout/SSR failure/ Heater overcurrent detection				E53-CNHH03N2
		Heater burnout/SSR failure/ Heater overcurrent detection	Event inputs			E53-CNHBN2
Communications RS-485				Control output 2 (Voltage for driving SSR)		E53-CNQ03N2
Communications RS-485		Heater burnout/SSR failure/ Heater overcurrent detection				E53-CNH03N2
Communications RS-485						E53-CN03N2
			Event inputs			E53-CNBN2
		Heater burnout/SSR failure/ Heater overcurrent detection		Control output 2 (Voltage for driving SSR)		E53-CNQHN2
		3-phase heater burnout/SSR failure/ Heater overcurrent detection		Control output 2 (Voltage for driving SSR)		E53-CNQHHN2
			Event inputs	Control output 2 (Voltage for driving SSR)		E53-CNQBN2
				Control output 2 (Voltage for driving SSR)	Transfer Output	E53-CNQFN2
			Event inputs		Transfer Output	E53-CNBFN2
	Communications RS-232C			Control output 2 (Voltage for driving SSR)		E53-CNQ01N2
	Communications RS-232C					E53-CN01N2
	Communications RS-232C	Heater burnout/SSR failure/ Heater overcurrent detection				E53-CNH01N2

Note: These Option Units are applicable only to models released after January 2008.

# **Accessories (Order Separately)**

#### **USB-Serial Conversion Cable**

Model	
E58-CIFQ1	

#### **Terminal Cover**

Model									
	E53-COV17								
 -	T T : 10 :: 15 FEON								

Note: 1. The Terminal Cover comes with the E5CN-□□-500 models.

2. The E53-COV10 cannot be used.

#### **Waterproof Packing**

Model	
Y92S-29	

Note: Waterproof Packing is included with the controller only for models with terminal blocks.

#### **Current Transformers (CTs)**

Hole diameter	Model					
5.8 dia.	E54-CT1					
12.0 dia.	E54-CT3					

#### **Adapter**

Connectable models	Model					
Terminal type	Y92F-45					

Note: Use this Adapter when the panel has been previously prepared for the E5B□.

#### Front cover

Туре	Model					
Hard Front Cover	Y92A-48B					
Soft Front Cover	Y92A-48D					

#### **CX-Thermo Support Software**

Model	
EST2-2C-MV4	

# **Specifications**

# Ratings

ııatıng	,0									
Power supply voltage		No D in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC								
Operating	g voltage range	85% to 110% of rated supply voltage								
Power co	onsumption	100 to 240 VAC: 8.5 VA (max.) (E5CN-HR2 at 100 VAC: 3.0 VA) 24 VAC/VDC: 5.5 VA (24 VAC)/3.5 W (24 VDC) (max.) (E5CN-HR2D at 24 VAC: 2.7 VA)  Any of the following can be selected (i.e., fully universal input). Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V								
Sensor ir	nput									
Input imp	edance	Current input: 150 $\Omega$ max., Voltage input: 1 M $\Omega$ min. (Use a 1:1 connection when connecting the ES2-HB.)								
Control n	nethod	ON/OFF control or 2-PID control (with auto-tuning)								
	Relay output	SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA								
Control	Voltage output (for driving SSR)	Output voltage: 12 VDC ±15% (PNP), max. load current: 21 mA, with short-circuit protection circuit								
output	Current output	4 to 20 mA DC/0 to 20 mA DC, load: 600 Ω max., resolution: approx. 10,000 *								
	Linear voltage output	0 to 10 VDC (load: 1 kΩ min.), Resolution: Approx. 10,000								
Auvilianz	Number of outputs	2 max.								
Auxiliary output	Output specifications	Relay output: SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA								
	Number of outputs	2								
Event	External contact	Contact input: ON: 1 k $\Omega$ max., OFF: 100 k $\Omega$ min.								
input	input	Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max.								
	specifications	Current flow: Approx. 7 mA per contact								
	Number of operations	8 max. (Combinations can be made using work bits.)								
Logic opera- tions	Operations	<ul> <li>Logic operation: Any of the following four patterns can be selected. The input status may be inverted.         (A and B) or (C and D), (A or C) and (B or D), A or B or C or D, A and B and C and D         C, and D are four inputs.)</li> <li>Delay: ON delay or OFF delay for the results of the logic operation given above.         Setting time: 0 to 9999 s or 0 to 9999 min</li> </ul>								
	Outputs	Output inversion: Possible     One work bit per operation								
	Work bit assignments	Any of the following can be assigned to up to eight work bits (logic operation results): Event input operations, auxiliary outputs, or control outputs.								
	Number of outputs	1 max.								
Transfer outputs	Output specifications	Current output: 4 to 20 mA DC, Load: 600 Ω max., Resolution at 4 to 20 mA: Approx. 10,000								
RSP inpu	it	Not supported								
Setting m	nethod	Digital setting using front panel keys								
Indication	n method	11-segment digital display and individual indicators (7-segments displays also possible) Character height: PV: 11 mm, SV: 6.5 mm								
Bank switching		Supported (number of banks: 8) Local SP, alarm settings, PID sets (PID constants, MV upper limit, MV lower limit, etc.)								
Other functions		Manual output, heating/cooling control, loop burnout alarm, SP ramp, other alarm functions, heater burnout detection, 40% AT, 100% AT, MV limiter, input digital filter, self-tuning, temperature input shift, run/stop, protection functions, control output ON/OFF counter, extraction of square root, MV change rate limit, PV/SV status display, logic operations, automatic cooling coefficient adjustment								
Ambient temperat	operating ure	-10 to 55°C (with no condensation or icing), for 3-year warranty: -10 to 50°C								
Ambient	operating humidity	25% to 85%								
Storage t	emperature	−25 to 65°C (with no condensation or icing)								
∗ For mod	els with current outpu	ts, control output 1 can be used as a transfer output.								

<sup>\*</sup>For models with current outputs, control output 1 can be used as a transfer output.

### **Input Ranges**

### Thermocouple/Platinum Resistance Thermometer/Analog Input (Fully Universal Inputs)

Inp	out type	ı		num i			е									Ther	moco	ouple	•									i	nalo nput		
ı	Name		Pt1	100		JPt	100		K			J			Т		Е	L	ι	J	N	R	S	В	W	PL II	4 to 20 mA	0 to 20 mA	1 to 5 V	0 to 0	0 to
Temperature range (°C)	2300 1800 1700 1600 1500 1400 1300 1200	850.0	500.0	100.0	200.00	500.0	100.0		500.0		850.0	400.0	200.00	400.0	400.0			850.0	400.0		1300.C	1700.0	1700.0	1800.0	2300.0	1300.0	Usa rang -19 -19	ble in ges by 999 to	the f	ollowir ing: 00, 40.0,	ng
	-100			0.0			0.0	H							H						HII-	0.0	0.0		0.0	0.0					
	-200	-200.0	-199.9		-50.00	-199.9		-200.0	-20.0	-50.00	-100.0	-20.0	-50.00	-200.0	-199.9	-50.00	-200.0	-100.0		-199.9	200.0	)									
	ting nber	0	1	2	24	3	4	5	6	21	7	8	22	9	10	23	11	12	13	14	15	16	17	18	19	20	25	26	27	28	29

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 584-1

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985

W: W5Re/W26Re, ASTM E988-1990

JPt100: JIS C 1604-1989, JIS C 1606-1989

Pt100: JIS C 1604-1997, IEC 751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)


#### **Alarm Outputs**

Each alarm can be independently set to one of the following 13 alarm types. The default is 2: Upper limit. Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.


Note: For models with heater burnout, SSR failure, and heater overcurrent detection, alarm 1 will be an OR output of the alarm selected from the following alarm types and the alarms for heater burnout, SSR failure, and heater overcurrent. To output only a heater burnout alarm, SSR failure alarm, and heater overcurrent alarm for alarm 1, set the alarm type to 0 (i.e., no alarm function).

		Alarm outp	ut operation					
Set value	Alarm type	When alarm value X is positive	When alarm value X is negative	Description of function				
0	Alarm function OFF	Output OFF		No alarm				
1 *1	Upper- and lower-limit	ON COFF SP	<b>*</b> 2	Set the deviation in the set point by setting the alarm upper limit (H) and alarm lower limit (L).				
2	Upper-limit	ON X SP	ON X - SP	Set the upward deviation in the set point by setting the alarm value (X).				
3	Lower-limit	ON X SP	ON X - SP	Set the downward deviation in the set point by setting the alarm value (X).				
4 *1	Upper- and lower-limit range	ON OFF SP	*3	Set the deviation in the set point by setting the alarm upper limit (H) and alarm lower limit (L).				
5 *1	Upper- and lower-limit with standby sequence	ON OFF SP SP \$5	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *6				
6	Upper-limit with standby sequence	ON X SP	ON OFF SP	A standby sequence is added to the upper-limit alarm (2). *6				
7	Lower-limit with standby sequence	ON X SP	ON OFF SP	A standby sequence is added to the lower-limit alarm (3). *6				
8	Absolute-value upper-limit	ON ←X→	ON OFF 0	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.				
9	Absolute-value lower-limit	ON ←X→ OFF 0	ON OFF 0	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.				
10	Absolute-value upper-limit with standby sequence	ON OFF 0	ON OFF 0	A standby sequence is added to the absolute-value upper-limit alarm (8). *6				
11	Absolute-value lower-limit with standby sequence	ON ←X→ OFF 0	ON OFF 0	A standby sequence is added to the absolute-value lower-limit alarm (9). <b>*</b> 6				
12	LBA (alarm 1 type only)	-		*7				
13	PV change rate alarm	-		*8				

- **\*1.** With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "I" and "H"
- \*2. Set value: 1, Upper- and lower-limit alarm

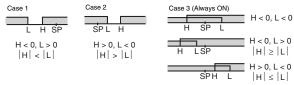

\*3. Set value: 4, Upper- and lower-limit range

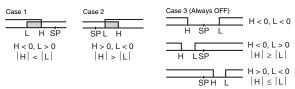

- **\*4.** Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above
  - Case 1 and 2
     <u>Always OFF</u> when the upper-limit and lower-limit hysteresis overlaps.
  - Case 3: Always OFF

- \*5. Set value: 5, Upper- and lower-limit with standby sequence <u>Always OFF</u> when the upper-limit and lower-limit hysteresis overlaps.
- \*6. Refer to the E5CN/E5AN/E5EN/E5GN Digital Temperature Controllers User's Manual Basic Type (Cat. No. H156) for information on the operation of the standby sequence.
- \*7. Refer to the E5CN/E5AN/E5EN/E5GN Digital Temperature Controllers User's Manual Basic Type (Cat. No. H156) for information on the loop burnout alarm (LBA).
- \*8. Refer to the E5CN/E5AN/E5EN/E5GN Digital Temperature Controllers User's Manual Basic Type (Cat. No. H156) for information on the PV change rate alarm.

#### **Characteristics**

Indication accuracy		Thermocouple: $(\pm 0.1\%$ of indicated value or $\pm 1^{\circ}$ C, whichever is greater) $\pm 1$ digit max. $*1$ Platinum resistance thermometer: $(\pm 0.1\%$ of indicated value or $\pm 0.5^{\circ}$ C, whichever is greater) $\pm 1$ digit max. Analog input: $\pm 0.1\%$ FS $\pm 1$ digit max. CT input: $\pm 5\%$ FS $\pm 1$ digit max.		
Transfer output accuracy		±0.3% FS max.		
Influence of temperature *2		Thermocouple input (R, S, B, W, PLII): $(\pm 1\%$ of PV or $\pm 10^{\circ}$ C, whichever is greater) $\pm 1$ digit max. Other thermocouple input: $(\pm 1\%$ of PV or $\pm 4^{\circ}$ C, whichever is greater) $\pm 1$ digit max. $*3$		
Influence of voltage *2		Platinum resistance thermometer: $(\pm 1\%$ of PV or $\pm 2^{\circ}$ C, whichever is greater) $\pm 1$ digit max. Analog input: $(\pm 1\%$ FS) $\pm 1$ digit max.		
Input sampling period		60 ms		
Hysteresis		Temperature input: 0.1 to 3240.0°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS)		
Proportional band (P)		Temperature input: 0.1 to 3240.0°C or °F (in units of 0.1 °C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)		
Integral time (I)		0.0 to 3240.0 s (in units of 0.1 s)		
Derivative time (D)		0.0 to 3240.0 s (in units of 0.1 s)		
Control period		0.5, 1 to 99 s (in units of 1 s)		
Manual reset value		0.0 to 100.0% (in units of 0.1%)		
Alarm setting range		-19999 to 32400 (decimal point position depends on input type)		
Affect of signal source resistance		Thermocouple: $0.1^{\circ}\text{C}/\Omega$ max. (100 $\Omega$ max.) Platinum resistance thermometer: $0.1^{\circ}\text{C}/\Omega$ max. (10 $\Omega$ max.)		
Insulation resistance		20 MΩ min. (at 500 VDC)		
Dielectric strength		2,300 VAC, 50 or 60 Hz for 1 min (between terminals with different charge)		
Vibration	Malfunction	10 to 55 Hz, 20 m/s <sup>2</sup> for 10 min each in X, Y, and Z directions		
resistance	Destruction	10 to 55 Hz, 0.75-mm single amplitude for 2 hrs each in X, Y, and Z directions		
Shock	Malfunction	100 m/s², 3 times each in X, Y, and Z directions		
resistance	Destruction	300 m/s², 3 times each in X, Y, and Z directions		
Weight		Controller: Approx. 150 g, Mounting Bracket: Approx. 10 g		
Degree of protection		Front panel: IP66, Rear case: IP20, Terminals: IP00		
Memory protection		Non-volatile memory (number of writes: 1,000,000 times)		
Setup Tool		CX-Thermo version 4.0 or higher		
Setup Tool port		Provided on the bottom of the E5CN-H. Use this port to connect a computer to the E5CN-H.  An E58-CIFQ1 USB-Serial Conversion Cable is required to connect the computer to the E5CN-H. *4		
Standards	Approved standards	UL 61010-1, CSA C22.2 No. 1010-1		
	Conformed standards	EN 61010-1 (IEC 61010-1): Pollution level 2, overcurrent category II, Lloyd's standards *5		
ЕМС		EMI: EN 61326 Radiated Interference Electromagnetic Field Strength: EN 55011 Group 1, class A Noise Terminal Voltage: EN 55011 Group 1, class A EMS: EN 61326 ESD Immunity: EN 61000-4-2 Electromagnetic Field Immunity: EN 61000-4-3 Burst Noise Immunity: EN 61000-4-6 Conducted Disturbance Immunity: EN 61000-4-6 Surge Immunity: EN 61000-4-5 Power Frequency Magnetic Field Immunity: EN 61000-4-8 Voltage Dip/Interrupting Immunity: EN 61000-4-11		

<sup>\*1.</sup> The indication accuracy of K thermocouples in the -200 to 1300°C range, T and N thermocouples at a temperature of -100°C max., and U and L thermocouples at any temperatures is  $\pm 2^{\circ}$ C  $\pm 1$  digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples in the 400 to 800°C range is ±3°C max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is ±3°C ±1 digit max. The indication accuracy of W thermocouples is ±0.3 of PV or ±3°C, whichever is greater, ±1 digit max. The indication accuracy of PL II thermocouples is ±0.3 of PV or ±2°C, whichever is greater, ±1 digit max. \*2. Ambient temperature: -10°C to 23°C to 55°C, Voltage range: -15% to 10% of rated voltage \*3. K thermocouple at -100°C max.: ±10°C max.

<sup>\*4.</sup> External communications (RS-232C or RS-485) and cable communications for the Setup Tool can be used at the same time.

<sup>\*5.</sup> Refer to information on maritime standards in Safety Precautions for E5\_N/E5\_N-H for compliance with Lloyd's Standards.

#### **USB-Serial Conversion Cable**

Applicable OS	Windows 2000, XP, or Vista
Applicable software	CX-Thermo version 4 or higher
Applicable models	E5AN/E5EN/E5CN/E5CN-U/ E5AN-H/E5EN-H/E5CN-H/E5GN
USB interface standard	Conforms to USB Specification 1.1.
DTE speed	38400 bps
Connector specifications	Computer: USB (type A plug) Temperature Controller: Setup Tool port (on bottom of Controller)
Power supply	Bus power (Supplied from USB host controller.)
Power supply voltage	5 VDC
Current consumption	70 mA
Ambient operating temperature	0 to 55°C (with no condensation or icing)
Ambient operating humidity	10% to 80%
Storage temperature	-20 to 60°C (with no condensation or icing)
Storage humidity	10% to 80%
Altitude	2,000 m max.
Weight	Approx. 100 g

Note: A driver must be installed in the personal computer. Refer to installation information in the operation manual for the Conversion Cable.

#### **Communications Specifications**

•				
Transmission line connection method	RS-485: Multipoint			
connection method	RS-232C: Point-to-point			
Communications	RS-485 (two-wire, half duplex)/RS-232C			
Synchronization method	Start-stop synchronization			
Protocol	CompoWay/F, SYSWAY, or Modbus			
Baud rate	1200, 2400, 4800, 9600, 19200, 38400, or 57600 bps			
Transmission code	ASCII (CompoWay/F, SYSWAY) RTU (Modbus)			
Data bit length *	7 or 8 bits			
Stop bit length *	1 or 2 bits			
Error detection	Vertical parity (none, even, odd) Frame check sequence (FCS) with SYSWAY Block check character (BCC) with CompoWay/F or CRC-16 Modbus			
Flow control	None			
Interface	RS-485, RS-232C			
Retry function	None			
Communications buffer	217 bytes			
Communications	0 to 99 ms			
response wait time	Default: 20 ms			
response wait time	- 10 00 1110			

<sup>\*</sup>The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

# **Current Transformer (Order Separately) Ratings**


Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s <sup>2</sup>
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

#### Heater Burnout Alarms, SSR Failure Alarms, and Heater Overcurrent Alarms

CT input (for heater current detection)	Models with detection for single- phase heaters: One input Models with detection for single- phase or three-phase heaters: Two inputs
Maximum heater current	50 A AC
Input current indication accuracy	±5% FS ±1 digit max.
Heater burnout alarm setting range *1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms
Heater overcurrent alarm setting range *3	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms

- \*1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output assigned to the alarm 1 function will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- \*2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output assigned to the alarm 1 function will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- \*3. For heater overcurrent alarms, the heater current will be measured when the control output is ON, and the output assigned to the alarm 1 function will turn ON if the heater current is higher than the set value (i.e., heater overcurrent detection current value).


# Electrical Life Expectancy Curve for Relays (Reference Values)

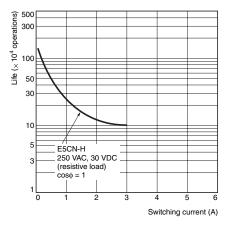


#### **External Connections**

A voltage output (control output, for driving SSR) is not electrically insulated from the internal circuits. When using a grounding thermocouple,
do not connect any of the control output terminals to ground. If the control output terminals are connected to ground, errors will occur in the
measured temperature values as a result of leakage current.

#### **Controllers**

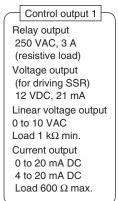

The Temperature Controller is set for a K-type thermocouple (input type = 5) by default. An input error (5.ERR) will occur if the input type setting does not agree with the temperature sensor. Check the input type.

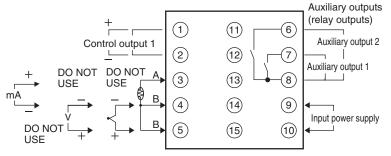


Auxiliary outputs (relay outputs) 250 VAC, 3 A (resistive load)

A heater burnout alarm, SSR failure, heater overcurrent alarm, or input alarm is sent to the output to which the alarm 1 function is assigned.

- 100 to 240 VAC
- 24 VAC/VDC (no polarity)


#### **Option Units**

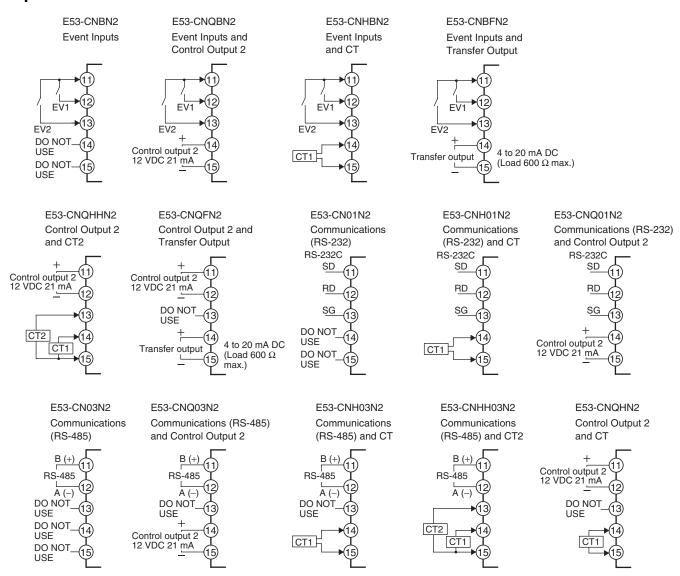


Note: Wire all voltage input terminals correctly. The Controller may fail if voltage input terminals are wired incorrectly.

#### **Nomenclature**

#### E5CN-H

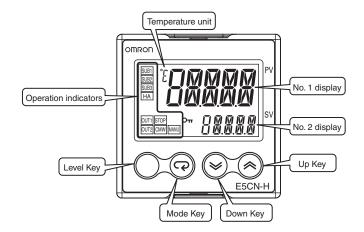


Dimensions (Unit: mm)

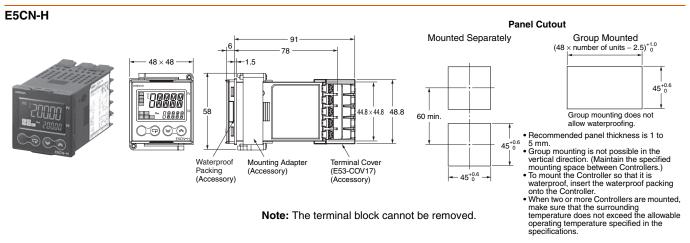

### **Accessories (Order Separately)**

# USB-Serial Conversion Cable E58-CIFQ1




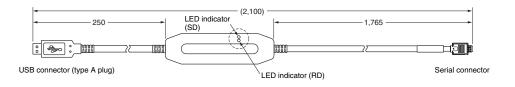

#### **Terminal Cover** E53-COV17



Note: The E53-COV10 can not be used.

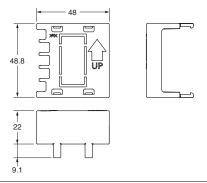

#### Waterproof Packing Y92S-29 (for DIN 48 × 48)



Order the Waterproof Packing separately if it becomes lost or damaged.

The Waterproof Packing can be used to achieve an IP66 degree of protection.


(Deterioration, shrinking, or hardening of the waterproof packing may occur depending on the operating environment. Therefore, periodic replacement is recommended to ensure the level of waterproofing specified in IP66. The time for periodic replacement depends on the operating environment. Be sure to confirm this point at your site. Consider one year a rough standard. OMRON shall not be liable for the level of water resistance if the customer does not perform periodic replacement.)

The Waterproof Packing does not need to be attached if a waterproof structure is not required.

#### **Current Transformers**


#### E54-CT1



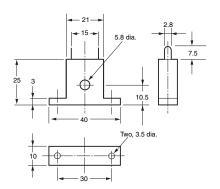


#### E54-CT3



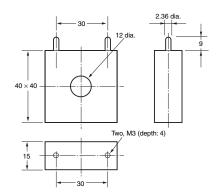


#### E54-CT3 Accessory


#### Armature

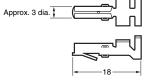

#### Plug

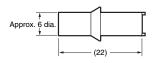


#### **Connection Example**

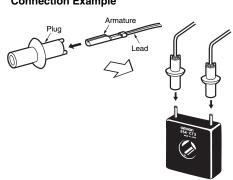

#### E54-CT1

#### Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)


Maximum continuous heater current: 50 A (50/60 Hz) Number of windings: 400±2 Winding resistance: 18±2 Ω

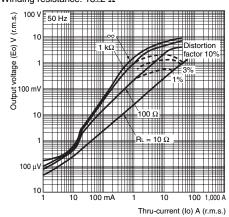

#### E54-CT3 Thru-current (lo) vs. Output Voltage (Eo) (Reference Values)

Maximum continuous heater current: 120 A (50/60 Hz) (Maximum continuous heater current for an OMRON Temperature Controller is 50 A.) Number of windings: 400±2

Winding resistance:  $8\pm0.8~\Omega$ 

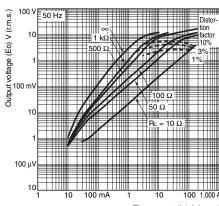



Thru-current (Io) A (r.m.s.)

#### Adapter

Y92F-45 Note: 1. Use this Adapter when the panel has already been prepared for the E5B□.
2. The Adapter is available only in black.




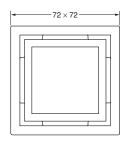


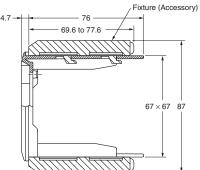

#### Mounted to E5CN-H



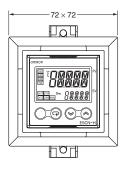

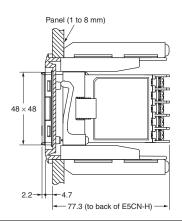

#### Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### Warranty and Limitations of Liability

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION. ABUSE. MISUSE. OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **Disclaimers**

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2011 2

In the interest of product improvement, specifications are subject to change without notice.



# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Omron manufacturer:

Other Similar products are found below:

S8JX-G01512CD S8VM-03024C E2B-M18LS08-M1-B1 OMS NS5-SQ11B-V2 E2B-M18KS08-M1-B1 OMS G5PA-28-MC DC24 E32-D32

2M G8P-1A4P-DC48 G5RL-1A-E-HR-5DC XF2W-1415-1A LY1D-2-5S-AC120 LY3N-DC24 LY4 100/110VDC M165-JG-12D M165
TA-24 CS1G-CPU43-E M22CAT1 61FGPN8DAC120 M7E-01DGN2-B M7E-08DRN2 M7E-20DRN1 M7E-HRN2 M8PHWS

MA15DP21CC MA6APC4 F03-01 SUS304 BINIL F03-02 SUS316 F150LTC20 F39-JA1A F3SJ-A0245P30 F3UVHM F3WD052C5M

MG2-US-AC24 MGN2A-DC24 MK2EP-UA-AC6V MK2PNIAC240 MK310E-DC24 MM4KPDC125 MM4KPDC125NC MM4XPAC120

PH-1-10M G2Q-184P-V-DC5 G2R-1114P-V-US-DC5 G2R13SNDDC24 G2R-1-AC240 G2R-1-H-DC24 G2R1SNAC110S G2R2SDDC12S

G2RL-1A4-DC24 G2RL-24 48VDC