

## **FQ-M VISION SENSOR**

Designed for motion tracking

» A new dimension in pick and place
 » Fast & precise positioning
 » Easy set-up and integration

realizing

# Smart camera to

The new FQ-M series is a vision sensor designed specifically for Pick & Place applications. It comes with EtherCAT embedded and can be integrated easily into any environment. The FQ-M is compact, fast and includes an incremental encoder input for easy tracking calibration. Omron's Sysmac Studio software is the perfect tool for configuring the FQ-M and is complemented by the TouchFinder console for on-site monitoring.

## Key features and benefits

guide your robot!

- Made specifically for pick & place applications
- Encoder input for conveyor tracking and calibration
- Shape based object detection
- Smart calibration wizard
- Sysmac Studio software for vision system operation and setting



## Easy set-up & integration

With intelligent wizards for calibration and communication integration into your machine is easier than ever. The FQ-M communicates with all devices

via EtherCAT, or standard Ethernet. The communication wizard lets you easily configure any robot protocol both as a server or as a client without complex programming.

## Fast detection & high stability

The FQ-M can detect up to 32 pieces at once and more than 5000 pieces per minute. The new contour based search algorithm ensures the highest reliability.

## "On-the-fly" tracking

Synchronized control is even easier, because the FQ-M vision sensor has an in-built encoder input for accurate conveyor tracking and easy calibration. The FQ-M is able to output position coordinates and the correlative encoder values and is able to manage the object queue, so that no object's coordinates are duplicated.







Machine control



## Programable out put format for your pick & place robot

Configuration as a server or as a client without complex programming.



Ethernet

## Sysmac Studio for fast configuration

The Vision Editor of the Sysmac Studio software will help you to program the optimum vision setting. Intuitive and icon driven set-up and configuration.

## TouchFinder for monitoring on-site


With the intuitive TouchFinder console – which fits in the palm of your hand – you can access all functions and settings quickly and easily.




## Fast detection and high stability

The new contour based search algorithm offers unique performance for pick & place applications. Changing lighting conditions, reflection, object inclination or partially hidden objects are no longer a problem. The FQ-M delivers a stable result even at high speed, no matter how many objects have to be detected at the same time.


## Best in class performance

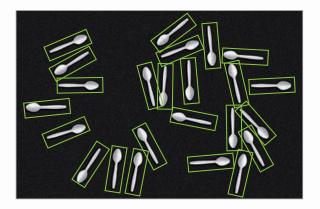

**High-speed processing** 5000 pcs/min with 360° detection.

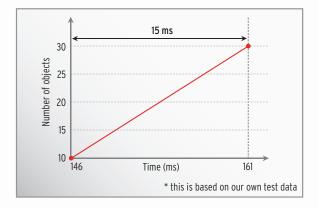

Only 15 ms time difference, detecting 10 objects or 30 objects at once.

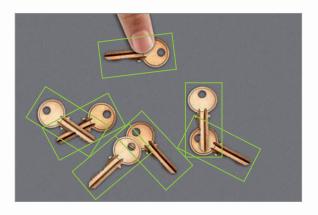

Stable and reliable detection, even if objects are overlapped or partially hidden.



Changing light conditions have no influence on the position accuracy.


## Encoder input for simplified calibration & tracking



**Step 1 - camera** Camera detects all calibration marks. **Step 2 - robot** Robot moves to the calibration marks. The offset to the camera is registered through the encoder value. Step 3 - system Camera, conveyor, robot and encoder are automatically aligned.

## Panorama view - Parameter setting for ideal object detection

A panoramic view can be created from 3 different images, allowing easy parameter optimisation.

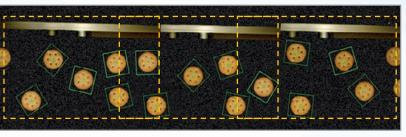

First shot

Second shot


Third shot

Objects that overlap within more than one field of view are segregated and only inserted in the picking queue once.



First shot

The position and orientation of objects 1, 2 and 3 is detected and added to the picking queue.

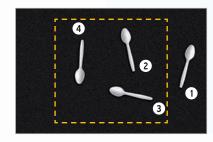

Next shot

Object 2, 3 and 4 are detected, but only the data of object 4 is evaluated. Position and orientation of objects 2 and 3 is ignored because they were already added to the queue with the shot before.

МЕМО

8

## Vision Sensor FQ-M-Series


## Designed for motion tracking

- Connectivity with EtherCAT/Ethernet
- Up to 5000 pieces per minute with 360 degree rotation\*
- Vision sensor with encoder input for tracking function
- Calibration function of the complete system
- Flexible data output depending on the output devices
- \* The processing speed depends on setting conditions.






## System configuration

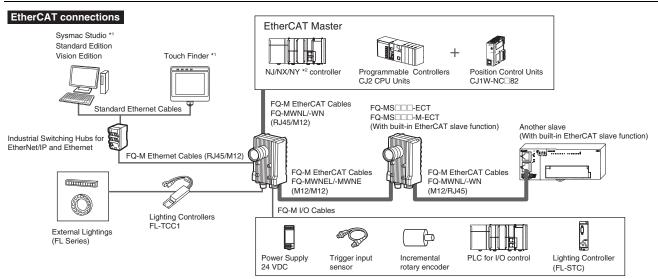

- \*1. Sysmac Studio and Touch Finder can not be used together. When both are connected, Sysmac Studio will have a priority. When you make NJ/NX/NY controller settings with the Sysmac Studio Standard Edition, connect a computer and the controller via a USB connection or an Ethernet network.
- \*2. Industrial PC Platform NY-series IPC Machine Controller only.

#### No-protocol Ethernet and PLC Link Connections

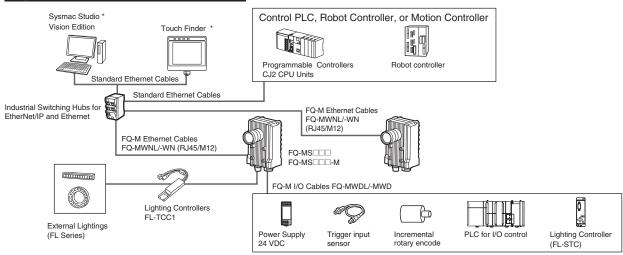

\* Sysmac Studio and Touch Finder can not be used together.

- When both are connected, Sysmac Studio will have a priority.
- Note: 1. EtherCAT and Ethernet (PLC Link) can not be used simultaneously.
  - It is not possible to configure and adjust the FQ-M via an NJ/NX/NY controller, when they are connected via an EtherCAT network. For configuration and adjustment of FQ-M, connect the FQ-M and a computer or a Touch Finder via an Ethernet network.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows is registered trademarks of Microsoft Corporation in the USA and other countries.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

## **FQ-M-Series**

## **Ordering Information**

### Sensors

Appearance		Туре				
	Oslan	NPN		FQ-MS120		
Charles of the	Color	PNP	EtherCAT communication function not provided	FQ-MS125		
Monochrome         NPN           PNP            Color         NPN           PNP		NPN	EtherCAT communication function not provided	FQ-MS120-M		
	Monochrome	PNP		FQ-MS125-M		
	Calar	NPN		FQ-MS120-ECT		
	Color	PNP		FQ-MS125-ECT		
	Managhuana	NPN	EtherCAT communication function provided	FQ-MS120-M-ECT		
Monochrome	Monochrome	PNP		FQ-MS125-M-ECT		

## **Automation Software Sysmac Studio**

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

Product name	Specifications	Number of licenses	Media	Model	Standards
Sysmac Studio	The Sysmac Studio is the software that provides an integrated envi- ronment for setting, programming, debugging and maintenance of machine automation controllers including the NJ/NX-series CPU Units, NY-series Industrial PC, EtherCAT Slave, and the HMI. Sysmac Studio runs on the following OS.	(Media only)	DVD	SYSMAC-SE200D	
Standard Edition Ver.1.⊡ *2	Windows 7 (32-bit/64-bit version)/ Windows 8 (32-bit/64-bit version)/ Windows 8.1 (32-bit/64-bit version)/ Windows 10 (32-bit/64-bit version) This software provides functions of the Vision Edition. Refer to OMRON website for details such as supported models and functions.	1 license *1		SYSMAC-SE201L	
Sysmac Studio Vision Edition Ver.1.□□	Sysmac Studio Vision Edition is a limited license that provides select- ed functions required for FQ-M-series and FH-series Vision Sensor settings. Because this product is a license only, you need the Sysmac Studio Standard Edition DVD media to install it.	1 license		SYSMAC-VE001L	

\*1 Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).
\*2 The FQ-M series is supported by Sysmac Studio version 1.01 or higher.

## **Touch Finder**

Appearance	Туре	Model
	DC power supply	FQ-MD30
	AC/DC/battery *	FQ-MD31

\* AC Adapter and Battery are sold separately.

## **Bend resistant Cables for FQ-M Series**

Cable Type	Appearance	Туре	Cable length	Model
	$\bigcirc$	Angle: M12/ Straight: RJ45	5 m	FQ-MWNL005
		Angle: M12/ Straight: RJ45	10 m	FQ-MWNL010
EtherCAT and Ethernet cable (M12/RJ45)	• 0	Straight type	5m	FQ-WN005
			10 m	FQ-WN010
			20 m	FQ-WN020
	$\bigcirc$	Analo turo	5 m	FQ-MWNEL005
EtherCAT cable		Angle type	10 m	FQ-MWNEL010
(M12/M12)	$\bigcirc$	<b>a</b>	5m	FQ-MWNE005
		Straight type	10 m	FQ-MWNE010

## **FQ-M-Series**

Cable Type	Appearance	Туре	Cable length	Model
	$\bigcirc$	Angle type	5 m	FQ-MWDL005
I/O Cables		Angle type	10 m	FQ-MWDL010
	$\bigcirc$	Straight type	5 m	FQ-MWD005
	9		10 m	FQ-MWD010

## Accessories

Appearance		Туре			
		Panel Mounting Adapter		FQ-XPM	
1 ag		AC Adapter (for models for DC/AC/Battery)		FQ-AC□ *1	
	For Touch Finder	Battery (for models for DC/AC/Battery)		FQ-BAT1 *2	
/*		Touch Pen (enclosed with Touch Finder)		FQ-XT	
M		Strap		FQ-XH	
a state work			2GB	HMC-SD291	
208		SD Card	4GB	HMC-SD491	

\*1 AC Adapters for Touch Finder with DC/AC/Battery Power Supply. Select the model for the country in which the Touch Finder will be used.

Plug type	Voltage	Certified standards	Model
	125 V max.	PSE	FQ-AC1
A	125 V max.	UL/CSA	FQ-AC2
	250 V max.	CCC mark	FQ-AC3
С	250 V max.		FQ-AC4

\*2 The Battery uses a lithium ion secondary battery. Confirm any applicable laws and regulations in the destination country if you export the Battery.

### Industrial Switching Hubs for EtherNet/IP and Ethernet

Appearance	Number of ports	Failure detection	Current consumption	Model
AND	3	None	0.22 A	W4S1-03B
AL .	5	None	0.22 A	W4S1-05B
	5	Supported	- 0.22 A	W4S1-05C

Note: Industrial switching hubs are cannot be used for EtherCAT.

## **EtherCAT junction slaves**

Appearance	Number of ports	Power supply voltage	Current consumption	Model
	3	20.4 to 28.8 VDC	0.08 A	GX-JC03
	6	(24 VDC -15 to 20%)	0.17 A	GX-JC06

Note: 1. Please do not connect EtherCAT junction slave with OMRON position control unit, Model CJ1W-NC\_81/\_82.
2. EtherCAT junction slaves cannot be used for EtherNet/IP and Ethernet.

### **Cameras peripheral devices**

Туре	Model	Remarks
CCTV Lenses	3Z4S-LE Series	
External Lightings	FLV Series	Refer to Vision Accessory Catalog(Q198)
	FL Series	*

## **FQ-M-Series**

## **Specifications**

## Sensors

14	Туре	EtherCAT communication	on function not provided	EtherCAT communica	tion function provided				
tem		Color	Monochrome	Color	Monochrome				
Model	NPN	FQ-MS120	FQ-MS120-M	FQ-MS120-ECT	FQ-MS120-M-ECT				
nouei	PNP	FQ-MS125	FQ-MS125-M	FQ-MS125-ECT	FQ-MS125-M-ECT				
ield of vision, Insta	allation distance	Selecting a lens according t	o the field of vision and instal	lation distance. Refer to the	"Optical Chart" page.				
	Inspection items	Shape search, Search, Lab	eling, Edge position						
	Number of simultaneous	20							
Main functions	inspections	32							
	Number of registered scenes	32 *1	2 *1						
	Image processing method	Real color	Monochrome	Real color	Monochrome				
	Image elements	1/3-inch color CMOS	1/3-inch monochrome CMOS	1/3-inch color CMOS	1/3-inch monochrome CMOS				
mage input	Image filter	High dynamic range (HDR) and white balanceHigh dynamic range (HDR)High dynamic range (HDR) and white balanceHigh dynamic range (HDR)							
	Shutter	Electronic shutter; select sh	utter speeds from 1/10 to 1/3	0000 (sec)					
	Processing resolution	752 (H) × 480 (V)							
	Pixel size	6.0 (μm) × 6.0 (μm)							
	Frame rate (image read time)	60fps (16.7ms)							
External Lightings	Connecting method	Connection via a strobe ligh	t controller						
External Lightings	Connectable lighting	FL series							
	Measurement data	In Sensor: Max. 32000 item	s *2						
Data logging	Images	In Sensor: 20 images *2							
leasurement trigge	er	I/O trigger, Encoder trigger,	Communications trigger (Eth	ernet No-protocol, PLC Link,	or EtherCAT)				
	Input signals	9 signals • Single measurement input • Error clear input (IN0) • Encoder counter reset inp • Encoder input (A±, B±, Z±	ut (IN1)						
I/O specifications	Output signals	5 signals *3 • OUT0 Overall judgement output (OR) • OUT1 Control output (BUSY) • OUT2 Error output (ERROR) • OUT3 (Shutter output: SHTOUT) • OUT4 (Strobe trigger output: STGOUT)							
	Ethernet specifications	100BASE-TX/10BASE-TX							
	EtherCAT specifications	-		Dedicated protocol for Ethe	rCAT 100BASE-TX				
		Special connector cables         • Power supply and I/O:       1 special connector I/O cable         • Touch Finder, Computer and Ethernet:       1 Ethernet cable							
	Connection method	EtherCAT:	2 EtherCAT cat	ble					
LED display	Connection method	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator	2 EtherCAT cat						
.ED display	EtherCAT display	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu	2 EtherCAT cat indicator nications indicator	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> </ul>					
.ED display	EtherCAT display Power supply voltage	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including	2 EtherCAT cat indicator nications indicator  ripple)	• L/A IN (Link/Activity IN) × • L/A OUT (Link/Activity OL • RUN × 1					
	EtherCAT display	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu	2 EtherCAT cat indicator nications indicator  ripple)	• L/A IN (Link/Activity IN) × • L/A OUT (Link/Activity OL • RUN × 1					
	EtherCAT display Power supply voltage	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I	<ul> <li>L/A IN (Link/Activity IN) X</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN X 1</li> <li>ERR X 1</li> </ul>					
	EtherCAT display Power supply voltage Insulation resistance	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When external	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> </ul>					
	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When external Operating: 0 to 50 °C, Storal	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I il lighting is not used.)	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> </ul>					
Ratings	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature range	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When external Operating: 0 to 50 °C, Storal	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I al lighting is not used.) ge: -20 to 65 °C (with no icing	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> </ul>					
LED display Ratings Environmental mmunity	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externat Operating: 0 to 50 °C, Storat Operating and storage: 35% No corrosive gas	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I al lighting is not used.) ge: -20 to 65 °C (with no icing	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> <li>on)</li> </ul>					
Ratings	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externate Operating: 0 to 50 °C, Storate Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplitut	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I al lighting is not used.) ge: -20 to 65 °C (with no icing to 85% (with no condensation	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> <li>on)</li> <li>s, 8 min each, 10 times</li> </ul>					
Ratings	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance (destruction) Shock resistance	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externate Operating: 0 to 50 °C, Storate Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplitut	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I al lighting is not used.) ge: -20 to 65 °C (with no icing to 85% (with no condensation to 85% (with no condensation de: 0.35 mm, X/Y/Z direction	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> <li>on)</li> <li>s, 8 min each, 10 times</li> </ul>					
Ratings Environmental mmunity	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance (destruction) Shock resistance (destruction)	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externat Operating: 0 to 50 °C, Storat Operating and storage: 35% No corrosive gas 10 to 150 Hz, single amplitut 150 m/s <sup>2</sup> 3 times each in 6 of	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I il lighting is not used.) ge: -20 to 65 °C (with no icing to 85% (with no condensation to 85% (with no condensation direction (up, down, right, left,	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> <li>on)</li> <li>s, 8 min each, 10 times</li> </ul>					
Ratings	EtherCAT display Power supply voltage Insulation resistance Current consumption Ambient temperature range Ambient humidity range Ambient atmosphere Vibration resistance (destruction) Shock resistance (destruction)	EtherCAT:     OR: Judgment result     ERR: Error indicator     BUSY: BUSY indicator     ETN: Ethernet commu 21.6 to 26.4 VDC (including Between all lead wires and 450mA max. (When the FL- 250mA max. (When externat Operating: 0 to 50 °C, Storat 10 to 150 Hz, single amplitut 150 m/s <sup>2</sup> 3 times each in 6 of IEC60529 IP40	2 EtherCAT cat indicator nications indicator  ripple) case: 0.5 MΩ (at 250 V) series Strobe controller and I il lighting is not used.) ge: -20 to 65 °C (with no icing to 85% (with no condensation to 85% (with no condensation direction (up, down, right, left, Rear cover: alminium plate	<ul> <li>L/A IN (Link/Activity IN) ×</li> <li>L/A OUT (Link/Activity OL</li> <li>RUN × 1</li> <li>ERR × 1</li> <li>ighting are used.)</li> <li>g or condensation)</li> <li>on)</li> <li>s, 8 min each, 10 times</li> </ul>	IT) × 1				

\*1 The maximum number of resisterable scenes depends on settings due to restrictions on memory.
\*2 If a Touch Finder is used, results can be saved up to the capacity of an SD card.
\*3 The five output signals can be allocated for the judgements of individual inspection items.

#### \*4 Encoder input specifications

Pulse input Specifications (When an open collector type encoder is used.)

Item		Specification			
Input volta	age	24 VDC ±10%	12 VDC ±10%	5 VDC ±5%	
Input current		4.8 mA (at 24 VDC, typical value)	2.4 mA (at 12 VDC, typical value)	1.0 mA (at 5 VDC, typical value)	
NPN	ON voltage *1	4.8 V max.	2.4 V max.	1.0 V max.	
INFIN	OFF voltage *2	19.2 V min.	9.6 V min.	4.0 V min.	
PNP	ON voltage *1	19.2 V min.	9.6 V min.	4.0 V min.	
	OFF voltage *2	4.8 V max.	2.4 V max.	1.0 V max.	
Maximum response frequency *3		50 kHz (I/O cable: when the FQ-MWD005 or FQ-MWDL005 cables is used.) 20 kHz (I/O cable: when the FQ-MWD010 or FQ-MWDL010 cables is used.)			
Input impedance		5.1 kΩ			

\*1 ON voltage: Voltage to change from OFF to ON state. The ON voltage is the difference of voltages between the GND terminal of the encoder power terminals and each input terminal.

\*2 OFF voltage: Voltage to change from ON to OFF state. The ON voltage is the difference of voltages between the GND terminal of the encoder power terminals and each input terminal.

\*3 Select maximum response frequency depending on length of the encoder cable and response frequency of the encoder.

#### Pulse input Specifications (When a line-driver output type encoder is used.)

Item	Specification	
Input voltage	EIA standard RS-422-A line driver level	
Input impedance *1	120 Ω ±5%	
Differential input voltage	0.2 V min.	
Hysteresis voltage	50 mV	
Maximum response frequency *2	200 kHz (I/O cable: when the FQ-MWD005, FQ-MWDL005, FQ-MWD010, or FQ-MWDL010 cables is used.)	

\*1 When terminating resistance function is used.

\*2 Select maximum response frequency depending on length of the encoder cable and response frequency of the encoder.

#### **Touch Finder**

Item		Туре	Model with DC power supply	Model with AC/DC/battery power supply	
Model			FQ-MD30	FQ-MD31	
Number of connectable Sensors			2 max.		
	Types of measurement displays		Last result display, Last NG display, trend monitor, histograms		
Main functions	Types of display images		Through, frozen, zoom-in, and zoom-ou	t images	
Main functions	Data logging		Measurement results, measured images		
	Menu language		English, Japanese		
		Display device	3.5-inch TFT color LCD		
	LCD	Pixels	$320 \times 240$		
		Display colors	16,777,216		
		Life expectancy *1	50,000 hours at 25 °C		
	Backlight	Brightness adjustment	Provided		
		Screen saver	Provided		
Indications	Indicators	Power indicator (color: green)	POWER		
		Error indicator (color: red)	ERROR		
		SD card access indicator (color: yellow)	SD ACCESS		
		Charge indicator (color: orange)		CHARGE	
On another interferes	Tauch annan	Method	Resistance film		
Operation interface	Touch screen	Life expectancy *2	1,000,000 operations		
	Ethernet		100 BASE-TX/10 BASE-T		
External interface	SD card		Omron SD card (Model: HMC-SD291/SI rating is recommended.	0491) or a SDHC card of Class4 or higher	
		DC power connection	20.4 to 26.4 VDC (including ripple)		
	Power supply voltage	AC adapter connection		100 to 240 VAC, 50/60 Hz	
Detines		Battery connection		FQ-BAT1 Battery (1 cell, 3.7 V)	
Ratings	Continuous operation on Battery *3			1.5 h	
	Current consumption		DC power connection: 0.2 A		
	Insulation resistance		Between all lead wires and case: 0.5 M $\Omega$ (at 250 V)		
Environmental immunity	Ambient temperature ra	nge	Operating: 0 to 50 °C Storage: -25 to 65 °C (with no icing or condensation)	Operating: 0 to 50 °C when mounted to DIN Track or panel 0 to 40 °C when operated on a Battery Storage: -25 to 65 °C (with no icing or condensation)	
	Ambient humidity range		Operating and storage: 35% to 85% (with no condensation)		

Item Type		Model with DC power supply	Model with AC/DC/battery power supply	
	Mo	del	FQ-MD30	FQ-MD31
	Ambient atmosphere		No corrosive gas	
Environmental	Vibration resistance (destruction)		10 to 150 Hz, single amplitude: 0.35 mm, X/Y/Z directions 8 min each, 10 times	
immunity	Shock resistance (destruction)		150 m/s <sup>2</sup> 3 times each in 6 direction (up, down, right, left, forward, and backward)	
	Degree of protection		IEC 60529 IP20	
Dimensions			95  imes 85  imes 33 mm	
Materials			Case: ABS	
Weight			Approx. 270 g (without Battery and hand	l strap)
Accessories			Touch Pen (FQ-XT), Instruction Manual	

This is a guideline for the time required for the brightness to diminish to half the initial brightness at room temperature and humidity. No guarantee \*1 is implied. The life of the backlight is greatly affected by the ambient temperature and humidity. It will be shorter at lower or higher temperatures. \*2 This value is only a guideline. No guarantee is implied. The value will be affected by operating conditions.

\*3 This value is only a guideline. No guarantee is implied. The value will be affected by the operating environment and operating conditions.

### **Battery Specifications**

Item Model	FQ-BAT1
Battery type	Secondary lithium ion battery
Nominal capacity	1800 mAh
Rated voltage	3.7 V
Dimensions	35.3 × 53.1 × 11.4 mm
Ambient temperature range	Operating: 0 to 40 °C Storage: -25 to 65 °C (with no icing or condensation)
Ambient humidity range	Operating and storage: 35% to 85% (with no condensation)
Charging method	Charged in Touch Finder (FQ-MD31). AC adapter (FQ-AC□) is required.
Charging time *1	2.0 h
Battery backup life *2	300 charging cycles
Weight	50 g max.

\*1 This value is only a guideline. No guarantee is implied. The value will be affected by operating conditions.

\*2 This is a guideline for the time required for the capacity of the Battery to be reduced to 60% of the initial capacity. No guarantee is implied. The value will be affected by the operating environment and operating conditions.

## Sysmac Studio

Item	Requirement		
Operating system (OS) *1, *2 Japanese or English system	Windows 7 (32-bit/64-bit version)/ Windows 8 (32-bit/64-bit version)/ Windows 8.1 (32-bit/64-bit version)/ Windows 10 (32-bit/64-bit version)		
CPU	Windows computers with Celeron 540 (1.8 GHz) or faster CPU. Core i5 M520 (2.4 GHz) or equivalent or faster recommended		
Main memory	2GB min.		
Hard disk	At least 1.6 GB of available space *3		
Display	XGA 1024 × 768, 1600 million colors. WXGA 1280 × 800 min. recommended		
Disk drive	DVD-ROM drive		
Communications ports	USB port corresponded to USB 2.0, or Ethernet port		

\*1 Sysmac Studio Operating System Precaution: System requirements and hard disk space may vary with the system environment.

\*2 The following restrictions apply when Sysmac Studio is used with Microsoft Windows 7 or Windows 8. Some Help files cannot be accessed.

The Help files can be accessed if the Help program distributed by Microsoft for Windows (WinHlp32.exe) is installed. Refer to the Microsoft homepage listed below or contact Microsoft for details on installing the file. (The download page is automatically displayed if the Help files are opened while the user is connected to the Internet.)

http://support.microsoft.com/kb/917607/en-us To use the file logging function, additional memory area to save \*3 the logging data is necessary.

## FQ-M Series EtherCAT Communications Specifications

Item	Specifications	
Communications standard	IEC 61158 Type12	
Physical layer	100BASE-TX (IEEE802.3)	
Connector	M12 × 2 E-CAT IN : EtherCAT (IN) E-CAT OUT : EtherCAT (OUT)	
Communications media	Use the cables for FQ-MWNO, or FQ-WNO series.	
Communications distance	Use the communication cable within the length of FQ-MWN or FQ-WN series cables.	
Process data Variable PDO Mapping		
Mailbox (CoE) Emergency messages, SDO requests, SDO responses, and SDO information		
Distributed clock Synchronization with DC mode 1		
LED display	L/A IN (Link/Activity IN) × 1, L/A OUT (Link/Activity OUT) × 1, RUN × 1, ERR × 1	

## Version Information


## FQ-M Series and Programming Devices

	Required Programming Device		
FQ-M Series	Sysmac Studio Standard Edition/Vision Edition		
	Ver.1.00	Ver.1.01 or higher	
FQ-MS	Not supported	Supported	

14

## **Components and Functions**

## Sensor

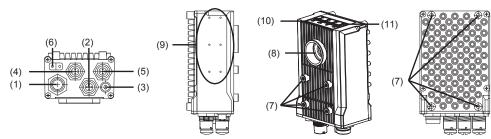

No.	Name	Description
(1)	I/O Cable connector	An I/O Cable is used to connect the Sensor to the power supply and external I/O.
(2)	Ethernet connector	An Ethernet cable is used to connect the Sensor to external devices such as PLCs, the Touch Finder, or computers.
(3)	Lighting connector	Connect an external lighting (strobe controller).
(4)	EtherCAT connector (IN)*	Connect an EtherCAT compatible device.
(5)	EtherCAT connector (OUT)*	Connect an EtherCAT compatible device.
(6)	Node address switch *	Set the node address for EtherCAT communications.
(7)	Installation holes	Holes to install and secure the camera.
(8)	C-mount lens connection part	Install the C-mount lens in this part. Determine the field of view depending on the measurement target and select a suitable CCTV lens (C-mounting lens).

No.	Name		Description
(9)	Strobe controller connection holes		Install the strobe controller in this part. FL-TCC1 can be mounted.
	Measure-	OR	Lit in orange while OR signal is ON.
(10)	ment process Operation indicators	ETN	Lit in orange while in Ethernet communi- cations.
		ERROR	Lit in red when an error occurs.
		BUSY	Lit in green while the sensor is processing.
		L/A IN	Lit in green when Link with EtherCAT device is established and flickers in green when communicating (data IN).
(11)	EtherCAT Operation indicators	L/A OUT	Lit in green when Link with EtherCAT device is established and flickers in green when communicating (data OUT).
		ECAT RUN	Lit in green when EtherCAT communica- tion is available.
		ECAT ERROR	Lit in red when an EtherCAT communica- tions error occurs.

\* FQ-MS -- ECT and FQ-MS -- M-ECT only.

(7)


ġ


(6)

**(** 

 0000000

## **Touch Finder**



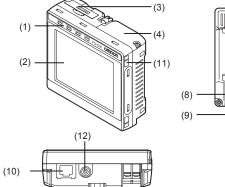


		(10)	
No.	N	ame	Description
	Operation indicators	POWER	Lights green when the Touch Finder is turned ON.
		ERROR	Lights red when an error occurs.
(1)		SD ACCESS	Lights yellow when an SD card is inserted. Flashes yellow when the SD card is being accessed.
		CHARGE *	Lights orange when the Battery is charging.
(2)	LCD/touch panel		Displays the setting menu, measurement results, and images input by the camera.
(3)	SD card slot		An SD card can be inserted.
(4)	Battery cover *		The Battery is inserted behind this cover. Remove the cover when mounting or removing the Battery.
(5)	Power supply switch		The Battery is inserted behind this cover. Remove the cover when mounting or removing the Battery.

No.	Name	Description
(6)	Touch pen holder	The touch pen can be stored here when it is not being used.
(7)	Touch pen	Used to operate the touch panel.
(8)	DC power supply connector	Used to connect a DC power supply.
(9)	Slider	Used to mount the Touch Finder to a DIN Track.
(10)	Ethernet port	Used when connecting the Touch Finder to the Sensor with an Ethernet cable. Insert the connector until it locks in place.
(11)	Strap holder	This is a holder for attaching the strap.
(12)	AC power supply connector *	Used to connect the AC adapter.


Applicable to the FQ-MD31 only.

## Dimensions

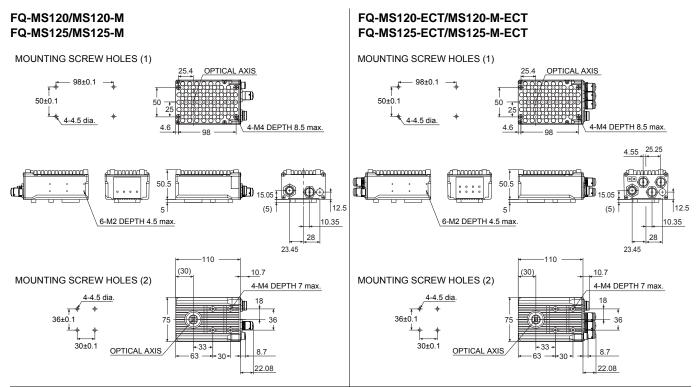

## **Touch Finder**


#### FQ-MD30/MD31

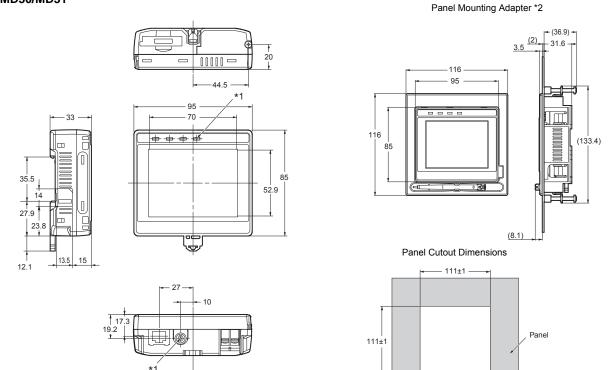


\*1 Provided with FQ-MD31 only.

\*2 The dimension of the panel mounting adapter does not include that of a FQ-MD.

(Unit: mm)

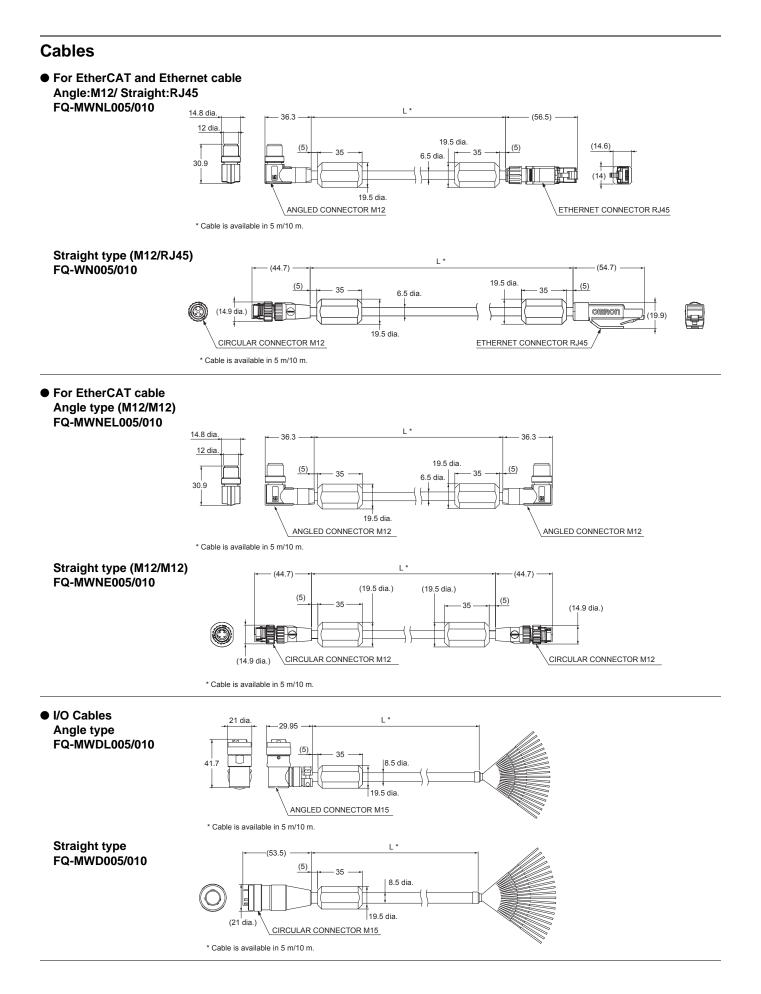


## FQ-M-Series Optical Chart

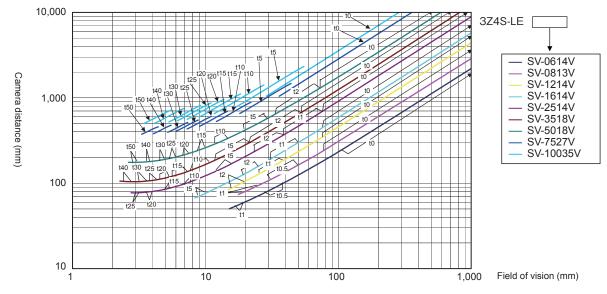

## **Meaning of Optical Chart**

The X axis of the optical chart shows the field of vision (mm) \*1, and the Y axis of the optical chart shows the camera installation distance (mm).\*2

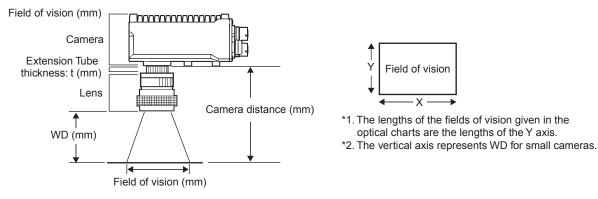

## **Related Manuals**

Cat. No.	Model number	Manual
Z314	FQ-MS (-M) FQ-MS (-M)-ECT	Specialized Vision Sensor for Positioning FQ-M-Series User's Manual
W504	SYSMAC-	Sysmac Studio OPERATION MANUAL

#### READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments.

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles,
- safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### PERFORMANCE DATA

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

#### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

#### Note: Do not use this document to operate the Unit.

#### **OMRON** Corporation **Industrial Automation Company**

#### Tokyo, JAPAN Contact: www.ia.omron.com

#### Regional Headquarters

OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2011 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM\_11\_2\_1217 Cat. No. Q183-E1-01

0911 (0911)

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Ethernet Cables / Networking Cables category:

Click to view products by Omron manufacturer:

Other Similar products are found below :

 73-6670-7
 73-6680-15
 73-7797-25
 MCJB2-10P6Q7-120
 84909-0204
 1200700174
 1200860368
 E16A06002M030
 E200102-009-S1

 AX105346-EW
 MT14-187L
 17-103530
 ERWPAB3002M005
 190-038045-01
 NK5EPC18RDY
 NK5EPC18VLY
 NK5EPC18YLY

 NK5EPC1GRY
 NK5EPC4Y
 NK5EPC6YLY
 NK5EPC8BLY
 NK5EPC9YLY
 1969343-6
 C501100010
 C501106002
 C501106007

 C501106015
 C501106025
 C601102010
 C601104010
 C601106007
 C601106015
 2142758-2
 2168427-2
 CAT1106007
 21949-1
 2J1866A

 RJF SFTP 5E 0500
 AX100351
 MN14CEC/ST
 C501106004
 C501106010
 C551108007
 C601104004
 C601106004

 CA21106004
 CA21106010
 CA21106015
 CA21109007
 C601104004
 C601106004