Switch Mode Power Supply 82J (10/25/50/100/150/300/600-W Models)

CSM_S82J_DS_E_3_1

Low-cost Global Power Supply with CE Marking

- Safety standards: UL: UL508 (Class 2), No.60950-1, cUL: CSA C22.2 No. 14 (Class 2), cUR: 60950-1, EN50178 (= VDE0160) EMC: Conforms to EN61204-3 Class A
- · Mounting bracket available for standard models Front-mounting bracket type DIN Rail mounting type (except 300 W and 600 W)
- RoHS-compliant

A Refer to Safety Precautions for All Power Supplies.



Model Number Structure

Model Number Legend

Note: Not all combinations are possible. Refer to List of Models in Ordering Information on page 2 and 3.

S82J -2 3 4 1

1. Power Ratings

- 010: 10 W 025: 25 W 050: 50 W
- 100: 100 W 150: 150 W 300: 300 W 600: 600 W

2. Output Voltage

- 05: 5 V 12: 12 V
- 15 V 15:
- 24: 24 V

3. Configuration

10-/25-/50-/100-/150-W models

A: Open-frame type, front terminals

D: Covered type, front terminals

4. Mounting Bracket

None: Front-mounting bracket type DIN Rail mounting bracket type

D:

Mounting bracket

None: With mounting bracket

N: Without mounting bracket

OMRON

■ List of Models

Note: For details on normal stock models, contact your nearest OMRON representative.

Front-mounting Bracket Models

Configuration	Input Voltage	Power ratings	Output voltage	Output current	Front-mounting bracket models (Front terminals)
Open-frame type	100 to 240 VAC (free)	10 W	5 V	2 A	S82J-01005A
			12 V	1 A	S82J-01012A
			15 V	0.7 A	S82J-01015A
			24 V	0.5 A	S82J-01024A
		25 W	5 V	5 A	S82J-02505A
			12 V	2.1 A	S82J-02512A
			15 V	1.7 A	S82J-02515A
			24 V	1.1 A	S82J-02524A
		50 W	5 V	10 A	S82J-05005A
			12 V	4.2 A	S82J-05012A
			24 V	2.1 A	S82J-05024A
	100 or 200 VAC	100 W	5 V	20 A	S82J-10005A
	(selected automatically)		12 V	8.5 A	S82J-10012A
			15 V	7 A	S82J-10015A
	100 to 240 VAC (free)		24 V	4.5 A	S82J-10024A
	100 or 200 VAC (selected automatically)	150 W	24 V	6.5 A	S82J-15024A
Covered type	100 to 240 VAC (free)	10 W	5 V	2 A	S82J-01005D
			12 V	1 A	S82J-01012D
			15 V	0.7 A	S82J-01015D
			24 V	0.5 A	S82J-01024D
		25 W	5 V	5 A	S82J-02505D
			12 V	2.1 A	S82J-02512D
			15 V	1.7 A	S82J-02515D
			24 V	1.1 A	S82J-02524D
		50 W	5 V	10 A	S82J-05005D
			12 V	4.2 A	S82J-05012D
			24 V	2.1 A	S82J-05024D
	100 or 200 VAC	100 W	5 V	20 A	S82J-10005D
	(selected automatically)		12 V	8.5 A	S82J-10012D
			15 V	7 A	S82J-10015D
	100 to 240 VAC (free)		24 V	4.5 A	S82J-10024D
	100 or 200 VAC (selected automatically)	150 W	24 V	6.5 A	S82J-15024D
	100 or 200 VAC (selectable)	300 W	24 V	14 A	S82J-30024
					S82J-30024N
		600 W		27 A	S82J-60024
					S82J-60024N

DIN Rail Mounting Bracket Models

Configuration	Input Voltage	Power ratings	Output voltage	Output current	DIN Rail mounting bracket models (Front terminals)
Open-frame type	100 to 240 VAC (free)	10 W	5 V	2 A	S82J-01005AD
			12 V	1 A	S82J-01012AD
			15 V	0.7 A	S82J-01015AD
			24 V	0.5 A	S82J-01024AD
		25 W	5 V	5 A	S82J-02505AD
			12 V	2.1 A	S82J-02512AD
			15 V	1.7 A	S82J-02515AD
			24 V	1.1 A	S82J-02524AD
		50 W	5 V	10 A	S82J-05005AD
			12 V	4.2 A	S82J-05012AD
			24 V	2.1 A	S82J-05024AD
	100 or 200 VAC	100 W	5 V	20 A	S82J-10005AD
	(selected automatically)		12 V	8.5 A	S82J-10012AD
			15 V	7 A	S82J-10015AD
	100 to 240 VAC (free)		24 V	4.5 A	S82J-10024AD
	100 or 200 VAC (selected automatically)	150 W	24 V	6.5 A	S82J-15024AD
Covered type	100 to 240 VAC (free)	10 W	5 V	2 A	S82J-01005DD
		25 W	12 V	1 A	S82J-01012DD
			15 V	0.7 A	S82J-01015DD
			24 V	0.5 A	S82J-01024DD
			5 V	5 A	S82J-02505DD
			12 V	2.1 A	S82J-02512DD
			15 V	1.7 A	S82J-02515DD
			24 V	1.1 A	S82J-02524DD
		50 W	5 V	10 A	S82J-05005DD
			12 V	4.2 A	S82J-05012DD
			24 V	2.1 A	S82J-05024DD
	100 or 200 VAC	100 W	5 V	20 A	S82J-10005DD
	(selected automatically)		12 V	8.5 A	S82J-10012DD
			15 V	7 A	S82J-10015DD
	100 to 240 VAC (free)		24 V	4.5 A	S82J-10024DD
	100 or 200 VAC (selected automatically)	150 W	24 V	6.5 A	S82J-15024DD

■ Accessories (Order Separately)

Front Mounting Bracket (for the S82J-10024A and S82J-10024D)

S82Y-J10F

Replacement Fan

S82Y-JFAN

Specifications

Ratings/Characteristics


Efficienc Input			100 to 240 V (Free)			100/200 (Selected automatically)		100/200 (Selected)		
				25 W	50 W	100 W (24 V)	100 W (5 V, 12 V, 15 V)	150 W	300 W	600 W
nput	Efficiency (typical)		67% min. (Va specifications	aries dependir s)	ng on	83% min.	75% min.	82% min.		
	nput Voltage (See note 2.)		110 to 170 VDC (10-W and 25-W models only) (See 200 VAC (170 to 264 VAC) 200 VAC (1)						100 VAC (85 to 1 200 VAC (170 to	
	Frequency (See n	iote 2.)	note 11.) (selected automatically) (selectable) 50/60 Hz (47 to 450 Hz)							
	Frequency (See note 2.) Current 100-V input									14 A max.
	(See note 3.)	200-V input	0.3 A max.	0.6 A max.	0.8 A max.	1.5 A max.	1.4 A max.	2.1 A max.	8 A max. 4 A max.	7 A max.
	Leakage current	100-V input	0.5 mA max.							1
	(See note 3.)	200-V input	1 mA max.							
	Inrush current	100-V input		or a cold start	at 25°)					30 A max. (for a co start at 25°)
(See note 3.) 200-V input			50 A max. (for a cold start at 25°)							60 A max. (for a co start at 25°)
	Noise filter		Yes							· · · · ·
Output See	Voltage Adjustme (See note 5.)	nt Range	$\pm 10\%$ (with V	(. ADJ)						
note 4.)	Ripple (See note	3.)	2% (p-p) max	κ.						
	Input variation infl	uence	0.4% max.							
	Load variation infl	uence	0.8% max. (1	0% to 100%	load, rated inp	out voltage)				
	Temperature varia	ation influence	0.05%/°C ma	ax. (at rated in	put and outpu	ut)				
	Startup time								300 ms max. (up voltage at rated in	
	Hold time (See no	20 ms min.						-		
Addi- Overload protection ional (See note 6.) func- ions		105% to 160% of rated load current, voltage/current drop, intermittent operation (10-W and 25-W models) gradual current increase/ voltage drop, intermittent operation (50-W, 100-W (24 V) models), automatic reset				105% of rated load current, Inverted L voltage drop, automatic reset (For the 600-W model, the circuit will be shut OFF when the overload exceeds 5 s.)				
Overvoltage protection		No			Yes (See note 7.)	Yes (5-V output only) (See note 7.)	No	Yes (See note 8.)		
	Overheat protection	on	No Yes (See note 8						Yes (See note 8.)	
	Parallel operation		No					Yes (up to 5 units	Yes (up to 5 units)	
	Protection-ON ala	Irm indicator	No Yes (color: red)							
Other	Ambient operating	g temperature	Refer to the derating curve in Engineering Data. (with no icing or condensation)							
	Storage temperate	ure	-25 to 65°C (with no icing or condensation)							
	Ambient operating	g humidity	25% to 85% (Storage humidity: 25% to 90%)							
	Dielectric strength		3.0 k VAC for 1 min. (between all inputs and all outputs) 2.2 k VAC for 1 min. (between all inputs and all outputs/PE terminals) 1.0 k VAC for 1 min. (between all outputs and PE terminal)							
	Insulation resistar	nce	$100 \text{ M}\Omega$ min. (between all outputs and all inputs/ PE terminals) at 500 VDC							
	Vibration resistant	се	10 to 55 Hz, 0.375-mm single amplitude for 2h each in X, Y, and Z directions							
	Shock resistance		300m/s ² , 3 times each in ±X, ±Y, ±Z directions							
	Output indicator		Yes (color: green)							
	EMI	Conforms to EN61204-3 EN55011 Class A and based on FCC Class A								
		(See note 3.) Radiated Emissions	Conforms to	EN61204-3 E	N55011 Class	s A (See note	9.)			
EMS			Conforms to EN61204-3 Low severity levels							
Approved standards		Class 2 a for 5-V ou output) m cUL: CSA C22 10-W, 25- 50-W (on cUR: CSA No. (EN/VDE: EN50	0178 (=VDE0160 (only terminal p VD	V, 25-W (except V (only for 24-V 0-1 2 approved for -V output), and it) models.)	CUL: CSA C2 CUR: CSA NO EN/VDE: ENS Terminal type Based on VEI Models with UL: UL508, CSA: CSA C2 CSA No	Listing), UL1012 2.2 No. 14 (Listit .60950-1 .0178 (=VDE016 s (only terminal .0106/P100 Connectors UL1012, UL609 2.2 No.14 .60950-1	ng) 50) part): DE0106/P100 50-1	UL: UL508, UL10 CSA: EB1402C, C2 EN/VDE: EN50178 Terminal types (only Based on VE0106/F	2.2 No. 14 (=VDE0160) • terminal part): VDE0106/P100	
						IEN/VDE: EN5	50178 (=VDE016	60)	1	

- Note: 1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start. Be sure to select a Power Supply with sufficient capacity. Refer to *Overload Protection* on page 10 for details.
 - 2. Do not use the Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
 - 3. Defined with a 100% load and the rated input voltage (100 or 200 VAC.)
 - 4. The output specification is defined at the power output terminals.
 - 5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than +10% of the voltage adjustment range.
 - When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that the load is not damaged. 6. Refer to *Overload Protection* on page 10 for details.
 - 7. For resetting, turn OFF the power, leave for more than one minute, and then turn it ON again.
 - 8. The protection-ON alarm indicator will light as soon as the output is interrupted. For resetting, turn OFF the input power, leave for more than three minutes (90 seconds min. for the 300-W models), and then turn it back ON again.
 - 9. Radiated emissions: The noise value is affected by factors such as the wiring method. For 300-W and 600-W models, use shielded wire for all wiring, and insert one noise clamp filter (TDK, ZCAT3035-1330) on the input wire, and two noise clamp filters on the load wire.
 - 10. The weight indicated is the weight of the open-frame type. (Includes the covers for 300-W and 600-W models)


Connections

Block Diagrams




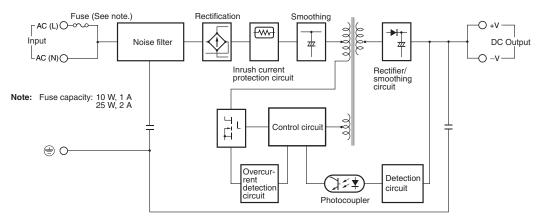


S82J-050 (50 W)

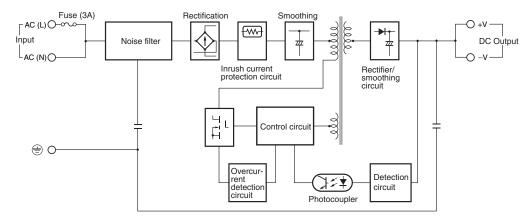


S82J-100 (100 W, 5-/12-/15-V Output)

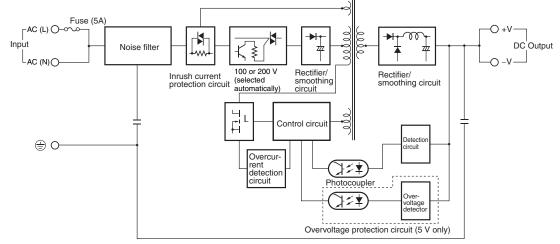


S82J-10024 (100 W, 24-V Output)

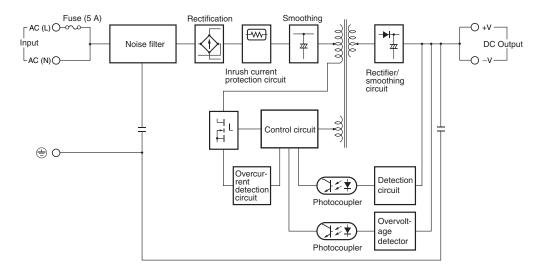



S82J-15024 (150 W)

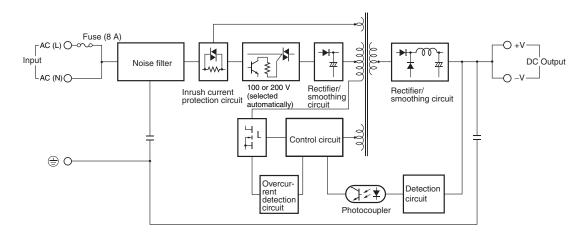


S82J-30024 (300 W)

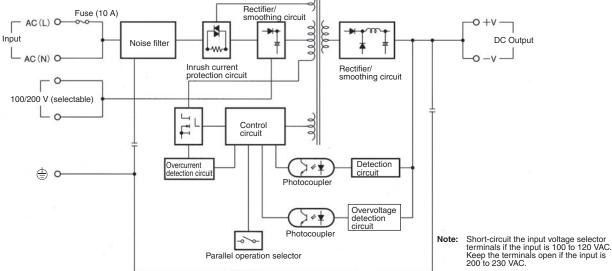

 

 


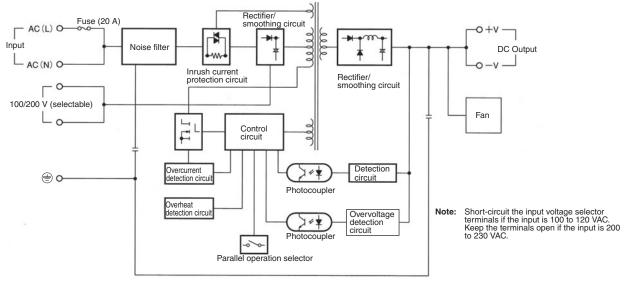


Construction and Nomenclature

■ Nomenclature


10-/25-/50-/100-/150-W Models

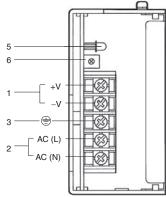

300-W Models

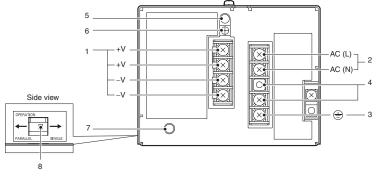


600-W Models

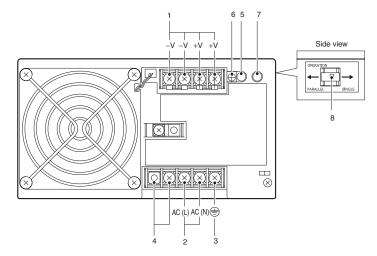


- 1. DC Output Terminals (+V), (-V): Connect the load lines to these terminals.
- 2. AC Input Terminals (L), (N): Connect the input lines to these terminals.
- Note: 1. The fuse is located on the (L) side. It is NOT user replaceable.
 - **2.** For DC input (10-W, 25-W models), use the (L) terminal as the positive terminal.
- Protective Earthing Terminal (⊕): Connect the ground line to this terminal.
- 4. Input Voltage Selector Terminals: Short-circuit the terminals if the input is 100 to 120 VAC and open the terminals if the input is 200 to 230 VAC
- 5. Output Indicator (DC ON: Green): Lights while a Direct Current (DC) output is ON.
- Output Voltage Adjuster (V.ADJ): It is possible to increase or decrease the output voltage by 10%.
- 7. Protection-ON Alarm Indicator (DC ON: Red): The red indicator will be lit if the overvoltage (for a 300-/600-W model) or overheat protection (for a 600-W model) circuit is triggered. This indicator will also be lit when overload (for a 600-W model) is detected.
- 8. Selector of Parallel Operation: Set the selector to PARALLEL if the Units are in parallel operation.


Derating Curve (for Standard Mounting)

10-/25-/50-/100-/150-W Model

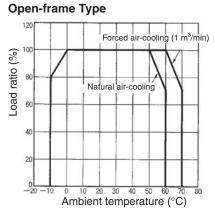

300-W Model

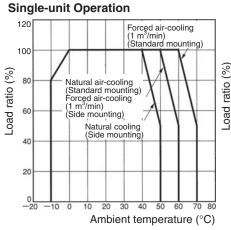

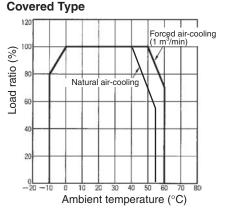

Forced air-cooling – (1 m³/min) (Standard mounting)

Ambient temperature (°C)

80

Parallel Operation

Natural air-cooling (Standard mounting) Forced air-cooling (1 m³/min)

Side mounting)

0 10 20 30

120

100

80

 
60

40

20


0L -20

Standard Mounting




Note: The derating curve shown is for standard mounting. The derating curve depends on the mounting direction of the Power Supply.

Standard Mounting

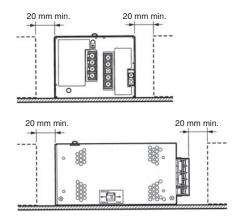

Note: Provide a minimum clearance of 20 mm between the Power Supplies.

600-W Model

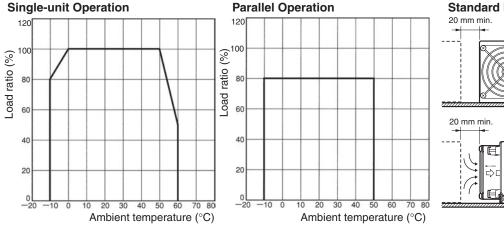

Standard Mounting

Note: Provide a minimum clearance of 20 mm between the Power Supplies.

 
S82J

■ Overload Protection


10- to 300-W Models

The Power Supply is provided with an overload protection function that protects the Power Supply from possible damage by overcurrent. When the output current rises above 105% to 160% of the rated output current, the protection function is triggered, automatically decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.


10 W, 25 W Models



50 W, 100 W (24-V) Models

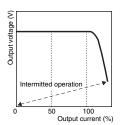

 
100 W (5-V, 12-V, 15-V), 150 W, 300 W Models



The values shown in the above diagrams are for reference only.

- Note: 1. If the S82J is connected to a load with a built-in DC-DC converter, the overload protection function may be triggered at startup, and consequently the S82J may not operate.
 - 2. Internal parts may occasionally deteriorate or be damaged if a short-circuited or other overcurrent state continues during operation.
 - Eliminate the overcurrent state as soon as possible.
 - 3. In actual operation, the output voltage may not fall to 0 V when the overload protection function is triggered. Even with short-circuits on the load side, the drop in voltage will vary depending on factors such as the impedance in the load line.
 - 4. The overload protection function is specified at 105% or more of the rated output current for 300-W models.

600-W Models

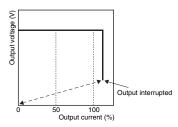


If an excessive current flows for 5 s or more, the output will be turned OFF and simultaneously the protection-ON alarm indicator will be lit. To reset the S82J, turn OFF the power, leave the S82J for at least three minutes, and then turn it ON again.

Note: Internal parts may occasionally deteriorate or be damaged if a short-circuited state continues during operation. Eliminate the overcurrent state as soon as possible.

■ Overvoltage Protection 100-W (5-, 24-V Output) Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 120% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least one minute and then turning it back ON again.

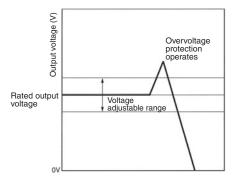

The values shown in the above diagram are for reference only.


300- and 600-W Models

When an excessive voltage that is approximately 120% of the rated voltage or more is output, the output voltage will be turned OFF and simultaneously the protection-ON alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes (90 seconds for 300-W models) and then turning it back ON again.

■ Overheat Protection Function 600-W Models Only

If the internal temperature rises excessively as a result of fan failure or any other reason, the overheat protection circuit will be triggered to protect the internal parts and simultaneously the protection-ON alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

Inrush Current, Startup Time, Hold Time

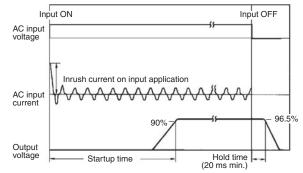


Note: Models with a 100 to 240 V (free) input have a higher inrush current energy than models with a single rated input voltage or models with a switchable input voltage. Be sure to coordinate breaker with the inrush current energy.

Dimensions

Note: All units are in millimeters unless otherwise indicated. Open-frame type and covered type have the same dimensions.


Front-mounting Bracket Models

S82J-010 (10 W)

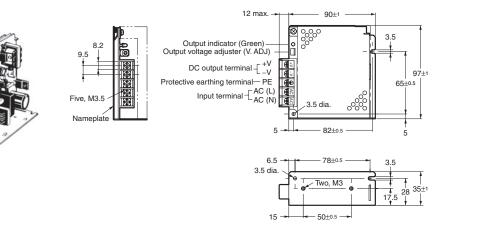




9.5

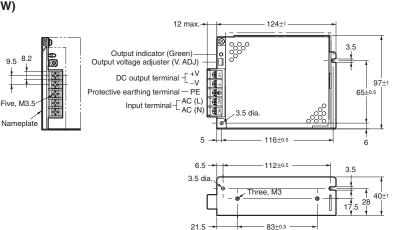

Mounting Holes (Surface Screw Mounting)

 
Side Mounting





Mounting Holes (Surface Screw Mounting)

 Side Mounting




Bottom Mounting




Mounting Holes (Surface Screw Mounting) Side Mounting Two, M3 97±1 65±0.5 153±0.5-






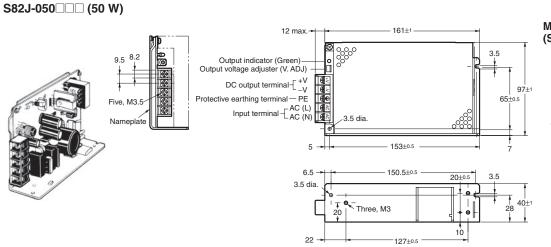

S82J

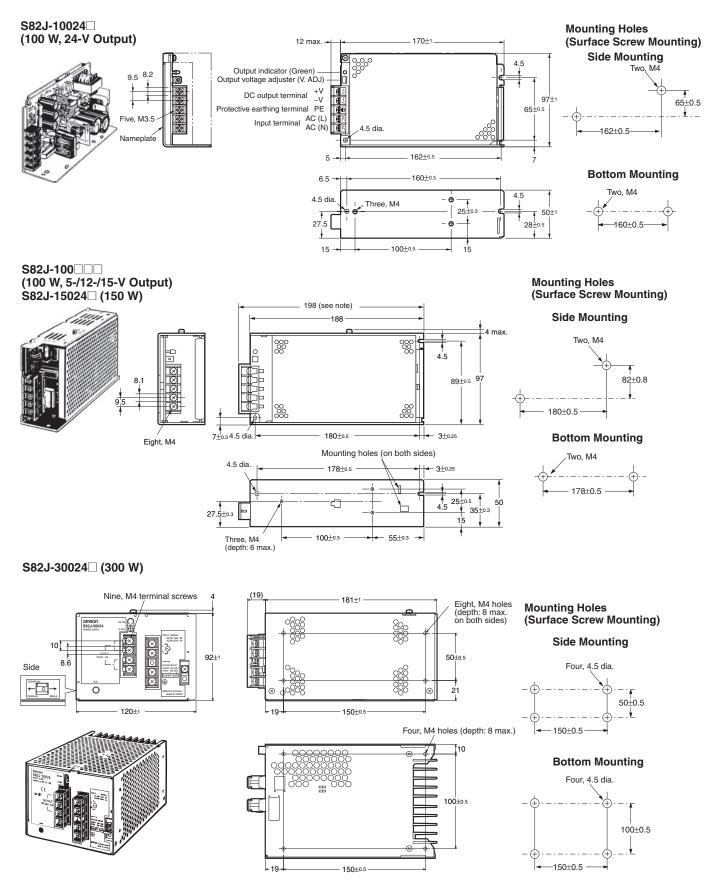

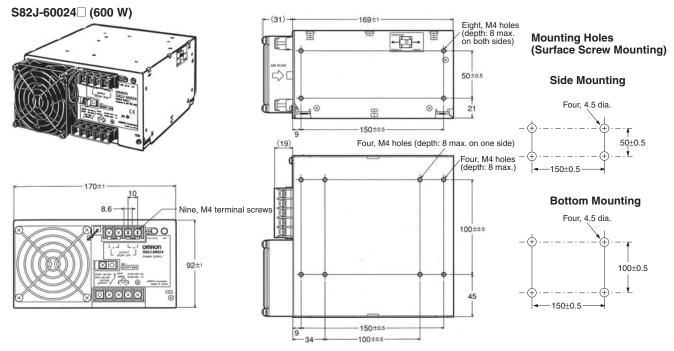


Dimensions with Mounting Brackets

Note: Panel mounting screw are not supplied.

Front-mounting Bracket (Supplied)

For 10-/25-/50-/100 (24 V)-W Models

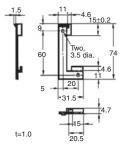


Material: Stainless steel

Mounting Holes




Using the Mounting Bracket

Attach the mounting bracket to the panel and loosely tighten the two screws. Insert the projected parts of the bracket (b) to the square holes of the power supply (a). Then securely tighten the screws.

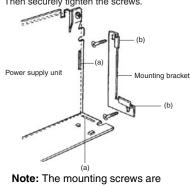


not provided.

For 100- (5, 12, 15 V) and 150-W Models

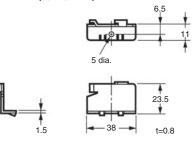


Note: The brackets are for front-mounting.

Dimensions with Mounting Brackets

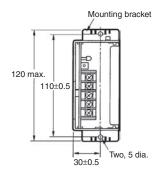


Attaching the Mounting Brackets

 


300-W and 600-W Models


Note: A mounting bracket is included with the S82J-30024 and S82J-60024, but not with the S82J-30024N and S82J-60024N.

 For 300-W Models (S82Y-J30F)

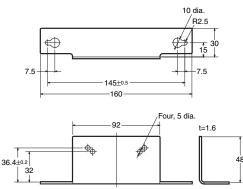





Dimensions with Mounting Brackets For 300-W Models

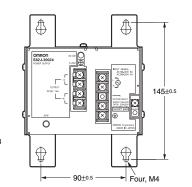

Dimensions with Mounting Brackets For 600-W Models

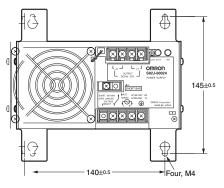


 Attaching the Mounting Brackets For 300-W Models



Note: To provide ventilation space, the body will shift forward by 21.6 mm from the mounting surface.

Attaching the Mounting Brackets For 600-W Models

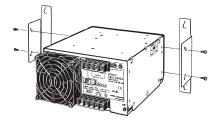

Note: To provide ventilation space, the body will shift forward by 23.6 mm from the mounting surface.

■ DIN Rail Mounting Bracket Models

7 max. 🔸

-35±1-+|+

-4

Note: All units are in millimeters unless otherwise indicated. The open-frame type and connected type have the same dimensions.

12 max. 🔸

13.7

97±

(Sliding: 9 max.)

5.6

97±1

 
5.6

(Sliding: 9 max.)

(Sliding: 9 max.)

5.6

13.7






S82J-025 D (25 W)




S82J-050 D (50 W)

Five, M3.5 0 0 7 max. 124± 12 max. 40 \odot Five, M3.5 134.2 0

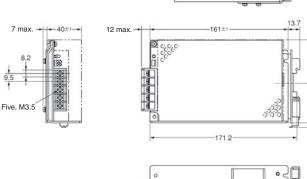

0



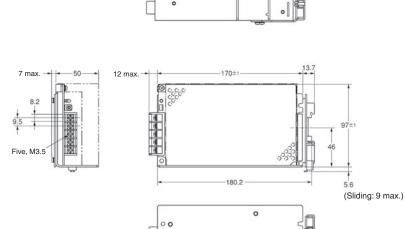

0

 
S82J-10024 D (100 W, 24-V Output)














S82J-100 D (100 W, 5-/12-/15-V Output) S82J-15024 D (150 W)

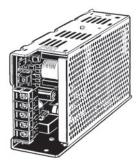

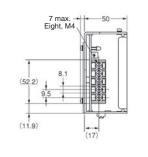

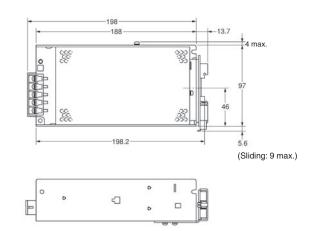

■ Front-mounting Bracket for S82J-10024A/-10024D Power Supply (Order Separately) (Unit: mm)

Product	Model number	Dimensions	Mounting hole dimensions
Front-mounting Bracket	S82Y-J10F	Three, 4.5-dia. holes $ \begin{array}{c} \hline & & & \\ \hline & & \\ \hline & & & \\ \hline \hline & & & \\ \hline & & & \\ \hline \hline \hline & & & \\ \hline \hline \hline & & & \\ \hline \hline \hline \hline & & & \\ \hline \hline$	Three, M4

Note: This Front-mounting Bracket cannot be used with S82J 100-W (5, 12, or 15-V) or 150-W models.


DIN Rail Mounting Bracket (Order Separately)

Can be used with 10-W to 150-W Front-mounting bracket models.

If DIN Rail mounting is necessary, use a DIN Rail Mounting Bracket.

Model	Power Rating	Applicable Quick- mounting Base
S82J	10 W	S82Y-01N
	25 W	S82Y-03N
	50 W	S82Y-05N
	100 W, 150 W	S82Y-10N



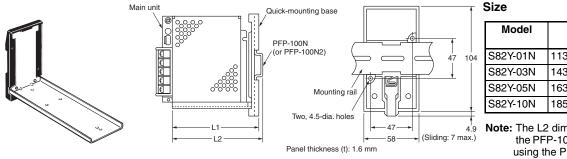

Model	L1	L2 (See note.)
S82Y-01N	113	114.8
S82Y-03N	143	144.8
S82Y-05N	163	164.8
S82Y-10N	185	186.8

Note: The L2 dimension refers to using the PFP-100N on a DIN rail. When using the PFP-100NS, add 10.5 mm to L2.

 
16

■ DIN Rail (Order Separately)

Note: All units are in millimeters unless otherwise indicated.


Mounting Rail (Material: Aluminum)

PFP-100N PFP-50N



Mounting Rail (Material: Aluminum)

 PFP-100N2



Safety Precautions

Refer to Safety Precautions for All Power Supplies.

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product or touch the interior of the Product.

Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.

Fire may occasionally occur. Tighten terminal screws to the specified torque 0.74 N·m for 10-, 25-, 50-, or 100-W models (24-V output); or 1.08 N·m for 100- (5-, 12-, or 15-V output), 150-, 300-, or 600-W models.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied.

Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.

Precautions for Safe Use

Mounting


To improve and maintain the reliability of the Power Supply over a long period of time, adequate consideration must be given to heat radiation.

The Power Supply is designed to radiate heat by means of natural air-flow. Therefore, mount the Power Supply so that air flow takes place around the Power Supply.

When mounting the Power Supply, mounting it to a metal plate is recommended.

When mounting two or more Power Supplies side-by-side, allow at least 20 mm spacing between them, as shown in the following illustration.

Forced air-cooling is recommended.

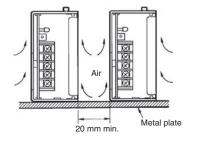


Mounting Methods

The following mounting methods are available.

10-/25-/50-/100 (24-V Output)-W Models


- (A) Side mounting
- (B) Bottom mounting
- (C) Front mounting (see Accessories)

Note: Refer to the section on the Mounting Bracket.

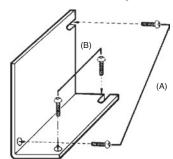


100 (-5, -12, -15 V Output)/150-/300-/600-W Models

- The following 4 mounting methods are possible.
- (A) Side mounting
- (B) Bottom mounting (secured with screws from the inside of the Switching Power Supply) (except for 300- and 600-W models)
- (C) Bottom mounting (secured with screws from the back of the Switching Power Supply)

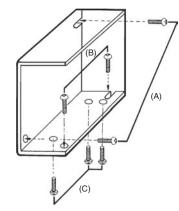

(D) Front mounting Front mounting is possible with the mounting brackets provided. Refer to *Dimensions* on page 11.

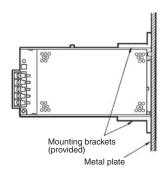

Wiring

Connect the ground completely. Electric shock or malfunction may occur if the ground is not connected completely.


Tighten terminal screws to the following specified torque.

Capacity	Terminal screws	Torque
10-, 25-, 50-, or 100-W (24 V)	M3.5	0.74 N·m
100-W (5-, 12-, or 15-V), 150-, 300-, 600-W	M4	1.08 N·m

Do not apply more than 75-N force to the terminal block when tightening it.

Switching the AC Input Voltage between 100 and 200 V (300- and 600-W Models)

The input voltage can be switched between 100 and 200 V by shorting or opening the input voltage selection terminals. Set the required voltage as shown below. (The voltage is factory-set to 200 V.)

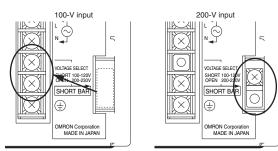


Short with the short bar.

Remove the short bar and leave the terminals open.

Note: A 300-W Model is shown above.

Series Operation

 Only models with power ratings of 50, 100 (-5, -12, -15, 24-output), 150, 300, or 600-W allow series operation.



Model	Output capacity	Rated output voltage
S82J	100 W	5, 12, 15, 24 VDC
	50, 150, 300, 600 W	24 VDC

Up to two of the above Power Supplies can be used in series operation. Models other than the above Power Supplies cannot be used in series operation.

If series operation is attempted for other models, the output from one of the Power Supplies may not come ON when the AC input is applied. If that occurs and the Power Supplies are left in that state, internal circuits may be damaged.

Although Power Supplies having different output capacities and different output voltages can be connected in series, the current flowing through the load must not exceed the smaller rated output current.

With the S82J-05024 \Box or S82J-10024 \Box , if the load is shorted a reverse voltage may result in the Power Supply causing deterioration and damage. It is recommended that diodes are connected as shown in the previous diagram (D₁, D₂).

Туре	Schottky barrier diode
Dielectric strength (VRRм)	Twice the rated output voltage or above
Forward current (IF)	Twice the rated output current or above

Parallel Operation

Only 300- and 600-W models can be in parallel operation. Do not operate any other models in parallel. The output of the models in parallel operation is a maximum of 80% of the rated output.


Set the parallel operation selector to PARALLEL if the Units are in parallel operation and make sure that the thickness and the length of all wires connected to the load are the same to ensure that the wires will have no voltage drop differences.

If you adjust the voltage using the output voltage adjuster (V.ADJ), adjust the output voltage from both Power Supplies.

Fan Replacement

The service life of the fan is approximately 50,000 hours (at 25° C). The service life varies, however, depending on the ambient temperature or other surrounding environmental conditions such as dust. As a preventive maintenance measure, replace the fan within approx. two years if it is used at an ambient temperature of 40° C.


Fans are available as replacements.

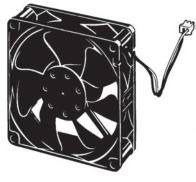

Model: S82Y-JFAN

Fan Set: Fan (above), four M4 x 35 sems screws, instruction sheet, and packing case

Replace the fan as shown in the following illustration.

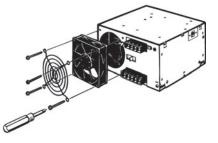

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

OMRON Corporation Industrial Automation Company

http://www.ia.omron.com/

In the interest of product improvement, specifications are subject to change without notice.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for DIN Rail Power Supplies category:

Click to view products by Omron manufacturer:

Other Similar products are found below :

 PS-3015
 PSP-480S48
 PSR-SD25
 PS-S6024
 DR-45-24
 DRP048V120W1BA
 DVP01PU-S
 DVP06AD-S
 DVP06XA-S
 DVPDNET-SL

 DVPDT01-S
 DVPPS01
 DVPPS02
 KHNA30F-5
 KHNA60F-24
 S8JX-G01524
 S8JX-G03512D
 S8VS-09024B-F
 PS-6012

 PS9Z-5R1G
 PS-C24024
 PSC-9648
 5607189
 KHNA30F-24
 KHNA480F-24
 KHNA90F-12
 KHNA90F-24
 DVP08ST11N
 DVPACAB530

 DVPCOPM-SL
 DVPEN01-SL
 DVPPF01-S
 S8JX-G10012
 S8JX-G15024
 CBI1210A
 SS14011524
 S8JX-G01505C
 S8TS-06024-E1
 PS

 S2012
 PSW-12024
 PS-UPS40
 PSC-6024
 S8VS-48024A-F
 PSD-A60W12
 96PS-A120WDIN
 PSD-A60W48
 S8JX-G03515CD
 PSD

 A40W12
 PSD-A40W24
 PSD-A40W24
 PSD-A40W24
 PSD-A40W24
 PSD-A40W24
 PSD-A40W24