

Date of issue: 2011-08-15 097972_eng.xml Release date: 2011-08-15 14:56

1,0

0,5

ŧΥ X


1,5 2,0 2,5 3,0 3,5 4,0

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar. Ø 25 mm


4,5

5,0 5,5 6,0 Distance X [m]

Copyright Pepperl+Fuchs, Printed in Germany

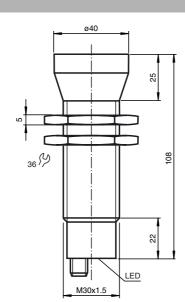

Electrical Connection

 

Wire colors in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

Description of Sensor Functions


Programming procedure

2

The sensor features a programmable switch output with two programmable switch points. Programming the switch points and the operating mode is done by applying the supply voltage $-U_B$ or $+U_B$ to the Program input. The supply voltage must be applied to the Program input for at least 1 s. LEDs indicate whether the sensor has recognized the

Additional Information

Programmable output modes

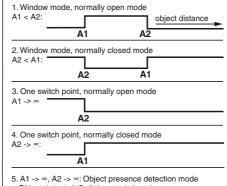

Object detected: Switch output closed No object detected: Switch output open

Accessories

BF 30

Mounting flange, 30 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

UB-PROG2

Programming unit

V15-G-2M-PVC Cable socket, M12, 5-pin, PVC cable

V15-W-2M-PUR Cable socket, M12, 5-pin, PUR cable

target during the programming procedure.

Note:

If a programming adapter UB-PROG2 is used for the programming procedure, button A1 is assigned to -U_B and button A2 is assigned to +U_B.

Programming Switch Point Modes

Normally open (NO) output

- 1. Place the target at the desired switch point position
- 2. Program the switch point by applying +U_B to the Program input (yellow and green LEDs flash)
- 3. Cover the sensor face with hand or remove all objects from sensing range
- 4. Apply -U_B to the Program input (red and yellow LEDs flash)

Normally closed (NC) output

- 1. Place the target at the desired switch point position
- 2. Program the switch point by applying -UB to the Program input (yellow and green LEDs flash)
- 3. Cover the sensor face with hand or remove all objects from sensing range
- 4. Apply +U_B to the Program input (red and yellow LEDs flash)

Programming Window Modes

Normally open (NO) output

- 1. Place the target at the near end of the desired switch window
- 2. Program the switch point by applying -U_B to the Program input (yellow and green LEDs flash)
- 3. Place the target at the far end of the desired switch window
- 4. Apply +U_B to the Program input (yellow and green LEDs flash)

Normally closed (NC) output

- 1. Place the target at the near end of the desired switch window
- 2. Program the switch point by applying +U_B to the Program input (yellow and green LEDs flash)
- 3. Place the target at the far end of the desired switch window
- 4. Apply -U_B to the Program input (yellow and green LEDs flash)

Programming Object Detection Mode

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U_B to the Program input (red and yellow LEDs flash)
- 3. Apply +U_B to the Program input (red and yellow LEDs flash)

Factory settings

Operation mode = switch window mode, normally open (NO)

Near end of the switching window = end of unusable area (see technical data)

Far end of the switching window = nominal sensing range (see technical data)

Display

The sensor provides LEDs to indicate various conditions.

	Green LED	Red LED	Yellow LED
During Normal operation			
Proper operation	On	Off	Switching state
Interference (e.g. compressed air)	Off	Flashing	remains in previous state
During sensor programming			
Object detected	Flashing	Off	Off
No object detected	Flashing	Off	On
Object uncertain (programming invalid)	Off	Flashing	Off

Synchronization

This sensor features a synchronization input for suppressing ultrasonic mutual interference ("cross talk"). If this input is not connected, the sensor will operate using internally generated clock pulses. It can be synchronized by applying an external square wave. The pulse duration must be \geq 100 µs. Each falling edge of the synchronization pulse triggers transmission of a single ultrasonic pulse. If the synchronization signal remains low for ≥ 1 second, the sensor will revert to normal operating mode. Normal operating mode can also be activated by opening the signal connection to the synchronization input.(See note below)

If the synchronization input goes to a high level for > 1 second, the sensor will switch to standby mode, indicated by the green LED. In this mode, the outputs will remain in the last valid output state.

Note:

If the option for synchronization is not used, the synchronization input has to be connected to ground (0 V) or the sensor must be operated via a V1 cordset (4-pin). The synchronization function cannot be activated during programming mode and vice versa.

The following synchronization modes are possible:

- 1. Several sensors (max. number see technical data) can be synchronized together by interconnecting their respective synchronization inputs. In this case, each sensor alternately transmits ultrasonic pulses in a self multiplexing mode. No two sensors will transmit pulses at the same time. (See note below)
- 2. Multiple sensors can be controlled by the same external synchronization signal. In this mode the sensors are triggered in parallel and are synchronized by a common external synchronization pulse.
- 3. A separate synchronization pulse can be sent to each individual sensor. In this mode the sensors operate in external multiplex mode. (See note below)
- 4. A high level (+U_B) on the synchronization input switches the sensor to standby mode.

Note:

Sensor response times will increase proportionally to the number of sensors that are in the synchronization string. This is a result of the multiplexing of the ultrasonic transmit and receive signal and the resulting increase in the measurement cycle time.

Installation conditions

If the sensor is installed in an environment where the temperature can fall below 0 °C, one of these mounting flanges must be used for mounting: BF30, BF30-F, or BF 5-30. If the sensor is mounted in a through hole using the included steel nuts, it must be mounted at the middle of the threaded housing. If it must be mounted at the front end of the threaded housing, plastic nuts with centering ring (optional accessories) must be used.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Proximity Sensors category:

Click to view products by Pepperl & Fuchs manufacturer:

Other Similar products are found below :

 70.340.1028.0
 70.360.2428.0
 8027AL20NL2CPXX
 9221350022
 922AA2W-A9P-L
 GL-12F-C2.5X10(LOT3)
 972AB3XM-A3P-L
 PS3251

 980659-1
 E2E2-X5M41-M4
 E2E-X14MD1-G
 E2E-X2D1-G
 E2E-X4MD1-G
 E2E-X5E1-5M-N
 E2E-X5Y2-N
 EH-302
 EI3010TBOP

 MS605AU
 EP175-32000
 IC08ANC15PO-K
 IFRM04P1513/S35L
 IFRM06P1703/S35L
 IFRM08P1501/S35L
 IFRM12N17G3/L

 IFRM12P3502/L
 IFRM12P37G1/S14L
 ILFK12E9189/I02
 ILFK12E9193/I02
 OISN-013
 25.352.0653.0
 25.352.0753.0

 25.523.3253.0
 9151710023
 922AA1HI-A4P-L
 922AA2XM-B9P-L
 922FS0.8-H4P-G-020
 922FS1.5C-A4P-Z774
 SC606ABV0S30

 SM552A100
 SM851A1200FP
 F3S-A162-U
 GL-12F-C2X10(LOT10)
 GL-8HIBX10
 QT-08L
 RDS-DIN3-PA-D1
 34.110.0010.0
 3U02
 TL

 C2MF1-M3-E4
 TLX5C1GE
 TLX5C1GE
 SU02
 SU02
 SU02
 SU02
 SU02