

| TECHNICAL DATA SHEET 2/3 | | | | | | | |
|--|---|--|--|-------|-------------|--|--|
| F | EMALE-FEMAL | | R222.70 | 5.000 | | | |
| - | | | Series : SMP | | | | |
| | PACKAGING | SPECIFICATION | | | | | |
| Standard | Unit | Other | | | | | |
| 100 | 'W' option | Contact us | | | | | |
| ELECTRICAL CHARACTERISTICS | | | <u>ENVIRONMENTAL</u> | | | | |
| Impedance Frequency VSWR Insertion loss RF leakage Voltage rating | 0-40 1.5 + 0,0000 0.12 - (NA | Ω GHz x F(GHz) Maxi √F(GHz) dB Maxi - F(GHz)) dB Maxi Veff Maxi | Operating temper Hermetic seal Panel leakage | | A Atm.cm3/s | | |
| Dielectric withstanding voltage500Veff miniInsulation resistance5000MΩ mini | | | OTHERS CHARACTERISTICS | | | | |
| | | | Assembly instruc Others : Compliant wih MI | | | | |
| MECHANI | ICAL CHARACTE | RISTICS | | | | | |
| Center contact retenti Axial force – Matin Axial force – Oppos Torque | g end 6.7 site end 6.7 | N mini N mini N.cm mini | | | | | |
| Recommended torque Mating Panel nut | NA | N.cm N.cm | | | | | |
| Mating life Weight | 100 0,1690 | Cycles mini g | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| Issue : 0529 B In the effort to improve our products, we reserve the right to make changes judged to be necessary. | | | | | | | |

TECHNICAL DATA SHEET

FEMALE-FEMALE ADAPTER

R222.705.000

Series : SMP

ADDITIONAL INFORMATIONS MOUNTING AND REPLACEMENT INSTRUCTIONS

1 - INFORMATIONS

Mechanical durability: 100 cycles -> full detent connector . : 500 cycles -> limited detent connector . : 1000 cycles-> smooth bore connector .

Axial misalignement = 0/+0.25 mm. Radial misalignement = ± 0.25 mm.


| Force to: | engage | - | disengage | - | connector |
|-----------|--------------|---|--------------|---|--------------|
| Full det: | 66.75 N maxi | - | 22.25 N mini | - | FULL DETENT |
| Limited: | 44.5 N maxi | - | 8.9 N mini | - | LIMITED DET. |
| Smooth b: | 8.9 N maxi | - | 2.225 N mini | - | SMOOTH BORE |


2 - MOUNTING AND REPLACEMENT

Adaptor must be mounted or removed with tooling R282.918.100.

2-1 - Push in F direction to open the tool .

2-2 - Place the adaptor into the tool , until it bottoms against .

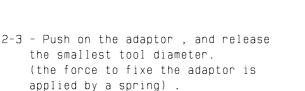

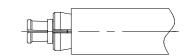

F

2-4 - Push on the biggest tool diameter to place the adaptor .To remove the adaptor , pull off on the biggest tool diameter .



3/3

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for RF Adapters - In Series category:

Click to view products by Radiall manufacturer:

Other Similar products are found below :

 5916-1103-603
 5918-1103-000
 5919-1503-000
 651A505
 82-5552
 9030-9523-502
 PN2C
 A0407000
 R114703000W
 R125771001

 R141710000W
 R141723161
 R141730000
 R143730700
 R143770000
 R161703000W
 R161791530W
 R201705000

 R222705200
 R222M40010W
 R223703180
 R316754000
 R405006000
 R443162000
 AD78TL
 HRM-513S
 1996352-2
 2157155-1
 252169-75

 AD158
 2101130-1
 252186
 R114704000W
 R114720000W
 R125705001
 R125705701
 R125771000
 R125771001W
 R127704001

 R127.870.001
 R127872001
 R141717000
 R142710000
 R142723000
 R143703000
 R143705700
 R161715000W
 R161771000W