

ZL8800-2PH-DEMO1Z Demonstration Board

The ZL8800 is a digital power conversion and management IC that combines an efficient step-down DC/DC converter with key power and thermal management functions in a single package. The ZL8800 incorporates compensation-free ChargeMode control to achieve single-cycle transient response.

The ZL8800-2PH-DEMO1Z demonstration board is a 6-layer board demonstrating a 2 phase 60A synchronous buck converter. Sequencing, margining, plus other features can be evaluated using this demonstration board.

A USB to PMBus™ adapter board is used to connect the demonstration board to a PC. The PMBus command set is accessed by using the Zilker Labs PowerNavigator™ evaluation software from a PC running Microsoft Windows.

Key Features

- 2 phase 60A synchronous buck converter with compensation-free ChargeMode control
- Designed to be easy to use and modify. Optimized for small circuit footprint and dynamic response
- Configurable through PMBus
- V_{IN} range of 4.5V to 14V, V_{OUT} adjustable from 0.54 to 5.5V
- Enable switches and power-good indicators

Ordering Information

PART NUMBER	DESCRIPTION
ZL8800-2PH-DEMO1Z	ZL8800 Demonstration Kit (EVB, USB Adapter, Cable)

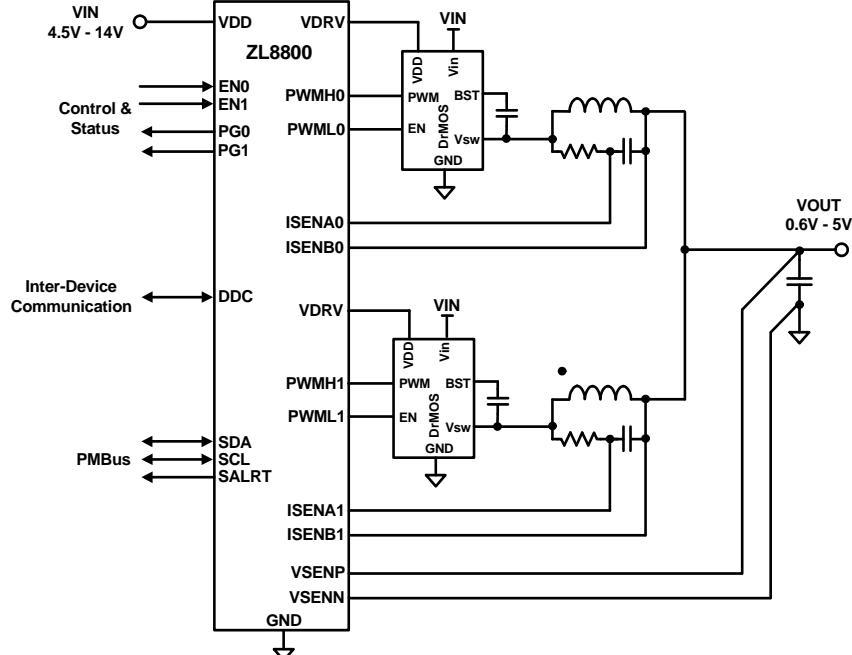


FIGURE 1. ZL8800-2PH-DEMO1Z SIMPLIFIED SCHEMATIC

The hardware enable function is controlled by a toggle switch on the ZL8800-2PH-DEMO1Z board. The power-good (PG) LEDs indicate the correct state of PG for each phase when external power is applied to the ZL8800-2PH-DEMO1Z board and the corresponding phase is functioning properly. The right angle headers at opposite ends of the board are for connecting a USB to PMBus adapter board or for daisy chaining multiple demonstration boards together to build multi-output configurations.

Figures 2 and 3 show the detailed demonstration circuit. Figure 2 shows the ZL8800 IC with its minimal component count to realize a 60A output. Figure 3 has interface circuitry unique to the demonstration board that is not typically contained in a user's application circuit. Figures 4 through 10 show typical performance data, and Figures 15 through 22 demonstrate the PCB board layout. The default configuration file is shown on page 6, and the Bill of Materials (BOM) is included for reference beginning on page 5.

Operation

PMBus Operation

The ZL8800 utilizes the PMBus protocol. The PMBus functionality can be controlled via USB from a PC running the PowerNavigator evaluation software in a Windows XP or Windows 7 operating systems.

Install the evaluation software from the following Intersil website:

<http://www.intersil.com/en/products/power-management/zilker-labs-digital-power/powernavigator.html>

For board operation, connect the included USB-to-PMBus adapter board to J8 of the ZL8800-2PH-DEMO1Z board labeled "DONGLE". Connect the desired load and an appropriate power supply to the input and connect the included USB cable to the PC running the PowerNavigator evaluation software. Place the ENABLE switches in "DISABLE" and turn on the power.

The evaluation software allows modification of all ZL8800 PMBus parameters. The ZL8800 device on the board has been pre-configured as described in this document, but the user may modify the operating parameters through the evaluation software or by loading a predefined set-up from a configuration file.

The ENABLE switch can then be moved to "ENABLE" and the ZL8800-2PH-DEMO1Z board can be tested. Alternately, the PMBus ON_OFF_CONFIG and OPERATION commands may be used from the PowerNavigator GUI.

Quick Start Guide

Stand Alone Operation

1. Set ENABLE switch to "DISABLE"
2. Apply load to VOUT0 and/or VOUT1
3. Connect the USB to PMBus adapter board to J8 (labeled "DONGLE") of ZL8800-2PH-DEMO1Z
4. Connect supplied USB cable from computer to USB to PMBus adapter board
5. Connect power supply to VIN (supply turned off)
6. Turn power supply on
7. Set ENABLE switch to "ENABLE"
8. Monitor ZL8800-2PH-DEMO1Z board operation using an oscilloscope

USB (PMBus) Operation

1. Set ENABLE switch to "DISABLE"
2. Apply load to VOUT and/or VOUT1
3. Connect power supply to VIN (supply turned off)
4. Turn power supply on
5. Connect USB to PMBus adapter board to J8 of ZL8800-2PH-DEMO1Z
6. Connect supplied USB cable from computer to USB to PMBus adapter board.

Install the PowerNavigator evaluation software from the following Intersil website:

<http://www.intersil.com/en/products/power-management/zilker-labs-digital-power/powernavigator.html>

7. Set ENABLE switch to "ENABLE".
8. Monitor and configure the ZL8800-2PH-DEMO1Z board using PMBus commands in the evaluation software.
9. Test the ZL8800-2PH-DEMO1Z operation using an oscilloscope and the evaluation software.

ZL8800-2PH-DEMO1Z Board Schematics


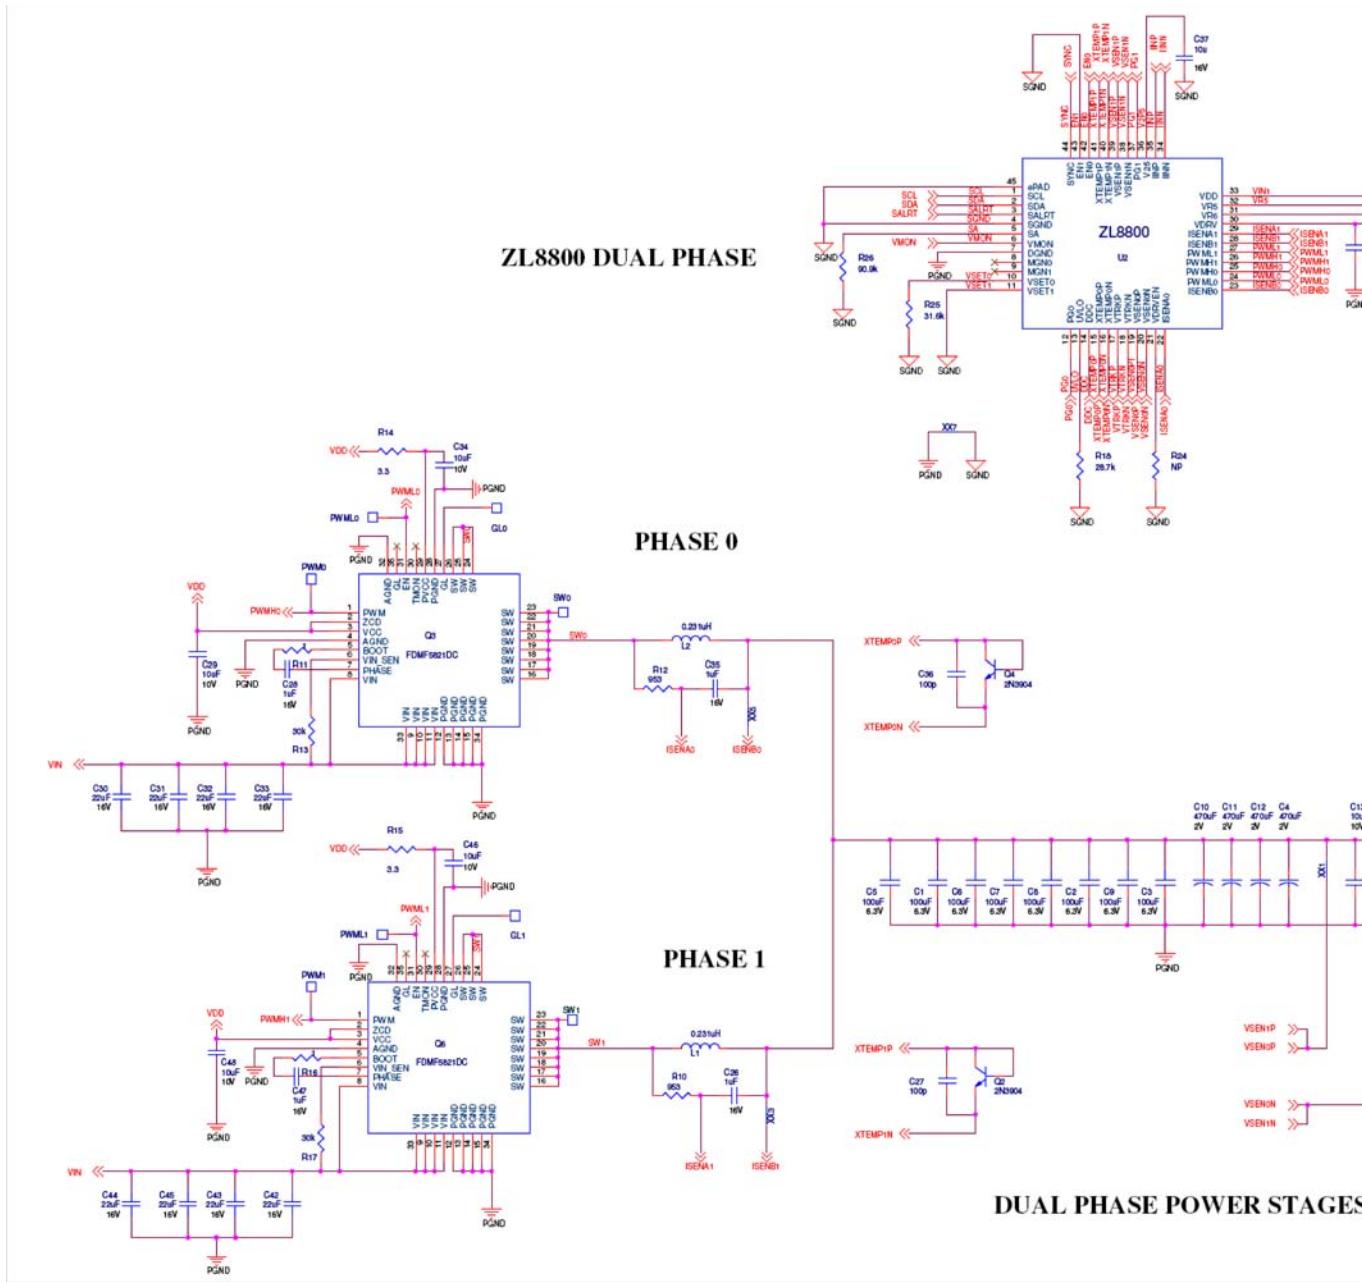



FIGURE 2. APPLICATION CIRCUIT

ZL8800-2PH-DEMO1Z Board Schematics (continued)


BOARD TO BOARD INTERFACE

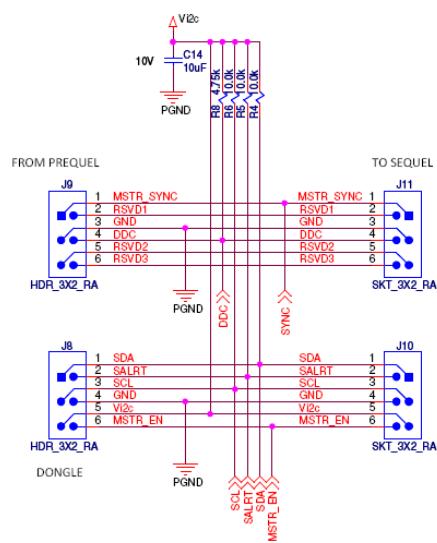


INPUT CONNECTIONS

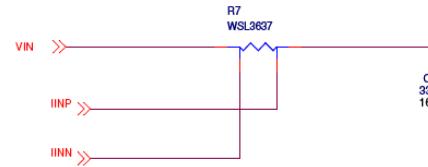


DRIVER SUPPLY CONNECTIONS

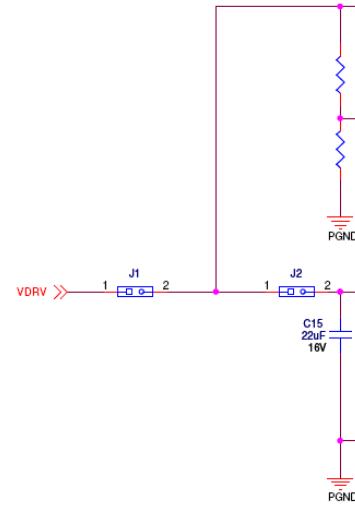

ENABLE

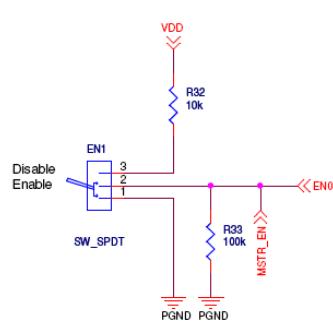

POWER GOOD

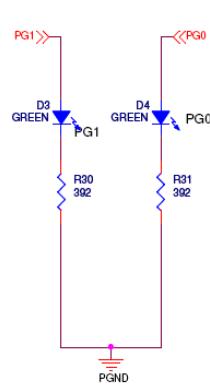

TRACKING

 


FIGURE 3. ZL8800-2PH-DEMO1Z AUXILIARY CIRCUITRY

Application Note 1901

ZL8800-2PH-DEMO1Z Bill of Materials

QTY	REFERENCE	VALUE	TOL	RATING	TYPE	PCB FOOTPRINT	MFR	PART NUMBER
1	U2	ZL8800	-	14V	-	MLF44_7X7_XX	Intersil-Zilker Labs	ZL8800ALAFTK
8	C1, C2, C3, C5, C6, C7, C8, C9	100µF	20%	6.3V	X5R	SM1210	Taiyo Yuden	JMK325BJ107MY-T
4	C4, C10, C11, C12	470µF	20%	2V	AL	SM7343P	Panasonic	EEF-SX0D471E4
5	C13, C46, C34, C48, C29	10µF	10%	10V	X5R	SM0805	Taiyo Yuden	LMK212B7106KG-TD
10	C15, C18, C30, C31, C32, C33, C42, C43, C44, C45	22µF	20%	16V	X5R	SM1206	Murata	GRM31CR61C226ME15L
1	C17	330u	20%	16V	AL POLY	SM_CAP_10.5X10.5	UNITED CHEMI	APXA160ARA331MJCOG
4	C47, C26, C28, C35	1µF	20%	16V	X7R	SM0603	TDK	C1608X7R1C105K
2	C27, C36	100p	5%	50V	NPO	SM0402_WSS	MURATA	GRM1555C1H101JZ01D
4	C38, C39, C41, C37	10µ	0.2	16V	X5R	SM0603	Taiyo Yuden	EMK107BBJ106MA-T
1	C40	2.2µ	10%	25V	X5R	SM0805	MURATA	GRM21BR71E225KA73L
2	L1, L2	0.231µH	5%	35A	FERRITE	IND_SLC1175	Coil Craft	SLC1175-231ME_-
2	Q6, Q3	FDMF5821DC	-	60A/20V	DR MOS	PQFN40_5X5_P5S	Fairchild	FDMF5821DC
2	Q2, Q4	2N3904	-	40V	NPN	SOT-23	ON SEMI	MMBT3904LT1G
2	R1, R33	100k	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-3EKF1003V
1	R2	6.65k	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-3EKF6651V
1	R3	100	1%	100mW	THK FILM	SM0805	Panasonic	ERJ-6ENF1000V
1	R7	5mΩ	1%	3W	THK FILM	WSL3637	Vishay Dale	WSL36375L000FEA
2	R16, R11	1	5%	63mW	THK FILM	SM0603	Panasonic	ERJ-2RKF1R00X
2	R10, R12	953	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-3EKF9530V
1	R18	28.7k	1%	50mW	THK FILM	SM0402	Panasonic	ERJ-3EKF2872V
1	R25	31.6k	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-3EKF3162V
0	R26	90.9k	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-3EKF9092V
2	R17, R13	30k	5%	63mW	THK FILM	SM0603	Panasonic	ERJ-3GEYJ303V
2	R14, R15	3.3Ω	5%	63mW	THK FILM	SM0603	Panasonic	ERJ-3GEYJ3R3V

DEMONSTRATION BOARD SPECIFIC AUXILIARY PARTS BILL OF MATERIALS

2	R30, R31	392	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-3EKF3920V
0	R24	NOT USED	-	-	-	SM0603	-	-
1	R8	4.75k	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-2RKF4751X
4	R4, R5, R6, R32	10.0k	1%	63mW	THK FILM	SM0603	Panasonic	ERJ-2RKF1002X
2	P2	JACK_BANANA	-	15A	-	JACK_F_NI_2P.750SP	EMERSON	108-0740-001
2	D3, D4	GREEN	-	2V, 20mA	LED	SM0805	CHICAGO MINI	CMD17-21VGC/TR8
1	EN1	SW_SPDT	-	-	PCB VERT	SW_TOG_SPDT	NKK	G12AP
3	J1, J2, J105	2 POS	-	-	VERT	SIP2/100	SAMTEC	TSW-102-07-L-S
2	J8, J9	HDR_3X2_RA	-	-	RA	HDRMDUALRA100X100	SAMTEC	TSW-103-08-T-D-RA
2	J10, J11	SKT_3X2_RA	-	-	RA	HDRFDUALRA100X100	SAMTEC	SSQ-103-02-T-D-RA
4	J101, J102, J103, J104	VOUT+, PGND	-	-	-	JACK_F_.175PLUG	Burndy	KPA8CTP
1	C14	10µF	10%	10V	X5R	SM1206	Murata	GRM31CR61A106KA01L
0	VDD	TP	-	Red	PC Test Point	TP_036H_SSREF	Keystone Electronics	5000
0	GND	TP	-	Black	PC Test Point	TP_036H_SSREF	Keystone Electronics	5001

Configuration File

The following text is loaded into the ZL8800 device on the ZL8800-2PH-DEMO1Z as default settings. Each PMBus command is loaded via the PowerNavigator software. The # symbol is used for a comment line.

```
# Initialize device to factory settings
```

```
RESTORE_FACTORY
```

```
STORE_DEFAULT_ALL
```

```
STORE_USER_ALL
```

```
### Begin Default Store
```

```
RESTORE_DEFAULT_ALL
```

```
# Global commands
```

```
FREQUENCY_SWITCH 0xfb20 # 400 kHz
```

```
VIN_OV_FAULT_LIMIT 0xd380 # 14 V
```

```
VIN_OV_FAULT_RESPONSE 0xff
```

```
VIN_OV_WARN_LIMIT 0xd360 # 13.5 V
```

```
VIN_UV_WARN_LIMIT 0xca40 # 4.5 V
```

```
VIN_UV_FAULT_LIMIT 0xca00 # 4 V
```

```
VIN_UV_FAULT_RESPONSE 0xff
```

```
IIN_CAL_GAIN 0xca80 # 5 mV/A
```

```
DDC_ENG 0xa5a
```

```
USER_GLOBAL_CONFIG 0x100
```

```
VMON_OV_FAULT_RESPONSE 0x80
```

```
VMON_UV_FAULT_RESPONSE 0x80
```

```
PRIVATE_PASSWORD
```

```
PUBLIC_PASSWORD
```

```
UNPROTECT
```

```
0x0FFFFFFF
```

```
FFFFFFFFFF
```

```
# PAGE 0 commands
```

```
PAGE 0x0
```

```
ON_OFF_CONFIG 0x17
```

```
VOUT_COMMAND 0x2666 # 1.2 V
```

```
VOUT_TRIM 0x0 # 0 V
```

```
VOUT_CAL_OFFSET 0x0 # 0 V
```

```
VOUT_MAX 0x4000 # 2 V
```

```
VOUT_MARGIN_HIGH 0x2852 # 1.26 V
```

```
VOUT_MARGIN_LOW 0x247b # 1.14 V
```

```
VOUT_TRANSITION_RATE 0xba00 # 1 mV/us
```

```
VOUT_DROOP 0x0 # 0 mV/A
```

```
INTERLEAVE 0x0
```

```
IOUT_CAL_GAIN 0xb127 # 0.288 mV/A
```

```
IOUT_CAL_OFFSET 0xbe00 # -1 A
```

```
VOUT_OV_FAULT_LIMIT 0x2a6f # 1.326 V
```

```
VOUT_OV_FAULT_RESPONSE 0x80
```

```
VOUT_UV_FAULT_LIMIT 0x225e # 1.074 V
```

```
VOUT_UV_FAULT_RESPONSE 0x80
```

```
IOUT_OC_FAULT_LIMIT 0xe370 # 55 A
```

```
IOUT_UC_FAULT_LIMIT 0xe490 # -55 A
```

```
OT_FAULT_LIMIT 0xebc8 # 125 °C
```

```
OT_FAULT_RESPONSE 0x80
```

```
OT_WARN_LIMIT 0xeb70 # 110 °C
```

```
UT_WARN_LIMIT 0xdc40 # -30 °C
```

```
UT_FAULT_LIMIT 0xe530 # -45 °C
```

UT_FAULT_RESPONSE	0x80	
POWER_GOOD_ON	0x228f	# 1.08 V
TON_DELAY	0xca80	# 5 ms
TON_RISE	0xca80	# 5 ms
TOFF_DELAY	0xca80	# 5 ms
TOFF_FALL	0xca80	# 5 ms
DEADTIME_MAX	0x3838	
ISENSE_CONFIG	0x4204	
USER_CONFIG	0x786	
DDC_CONFIG	0x101	
POWER_GOOD_DELAY	0xba00	# 1 ms
PID_TAPS	0x64	
INDUCTOR	0xb114	# 0.27 uH
VOUT_MARGIN_RATIO	0xca80	# 5 %
OVUV_CONFIG	0x0	
XTEMP_SCALE	0xba00	# 11/°C
XTEMP_OFFSET	0x8000	# 0 °C
TEMPCO_CONFIG	0xa7	
DEADTIME	0x1010	
DEADTIME_CONFIG	0x8080	
ASCR_CONFIG	0x15a0100	
SEQUENCE	0x0	
TRACK_CONFIG	0x0	
DDC_GROUP	0x0	
MFR_IOUT_OC_FAULT_RESPONSE	0x80	
MFR_IOUT_UC_FAULT_RESPONSE	0x80	
IOUT_AVG_OC_FAULT_LIMIT	0xe230	# 35 A
IOUT_AVG_UC_FAULT_LIMIT	0xe5d0	# -35 A
SNAPSHOT_CONTROL	0x0	
MFR_VMON_OV_FAULT_LIMIT	0xcb00	# 6 V
MFR_VMON_UV_FAULT_LIMIT	0xca00	# 4 V

```
# PAGE 1 commands
```

PAGE	0x1	
VOUT_COMMAND	0x2666	# 1.2 V
VOUT_MAX	0x4000	# 2 V
VOUT_MARGIN_HIGH	0x2852	# 1.26 V
VOUT_MARGIN_LOW	0x247b	# 1.14 V
IOUT_CAL_GAIN	0xb127	# 0.288 mV/A
IOUT_CAL_OFFSET	0xbe00	# -1 A
VOUT_OV_FAULT_LIMIT	0x2a6f	# 1.326 V
VOUT_UV_FAULT_LIMIT	0x225e	# 1.074 V
IOUT_OC_FAULT_LIMIT	0xe370	# 55 A
IOUT_UC_FAULT_LIMIT	0xe490	# -55 A
POWER_GOOD_ON	0x228f	# 1.08 V
USER_CONFIG	0x786	
DDC_CONFIG	0x2101	
INDUCTOR	0xb114	# 0.27 uH
TEMPCO_CONFIG	0xa7	
IOUT_AVG_OC_FAULT_LIMIT	0xe230	# 35 A
IOUT_AVG_UC_FAULT_LIMIT	0xe5d0	# -35 A
MFR_VMON_OV_FAULT_LIMIT	0xcb00	# 6 V
MFR_VMON_UV_FAULT_LIMIT	0xca00	# 4 V
STORE_DEFAULT_ALL		
### End Default Store		

Measured Data

The following data was acquired using a ZL8800-2PH-DEMO1Z Rev B demonstration board.

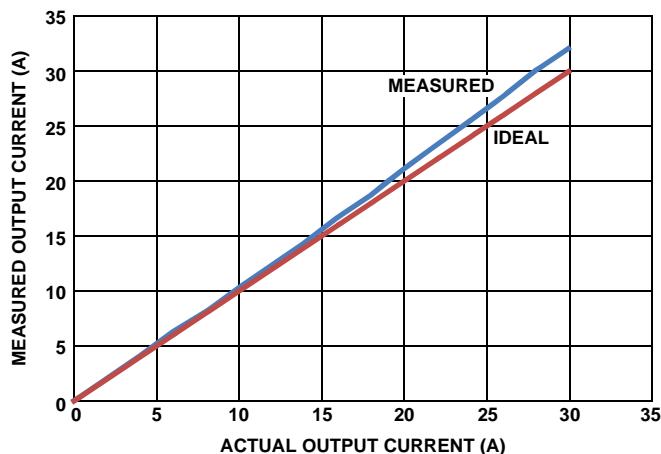


FIGURE 4. OUTPUT CURRENT MEASUREMENT ACCURACY (Single Phase)

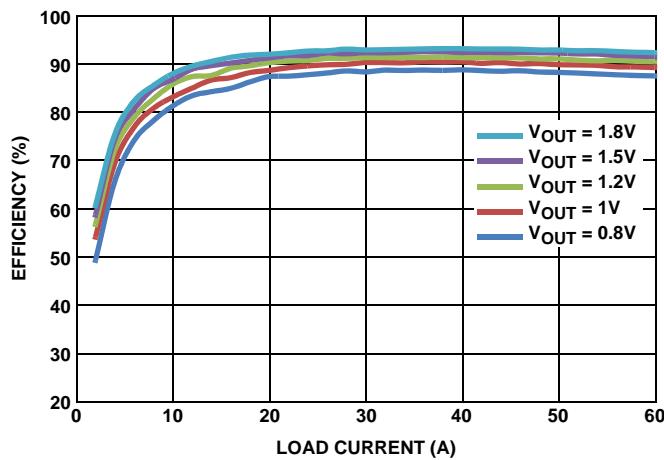


FIGURE 5. EFFICIENCY, $V_{IN} = 12V$, $f_{SW} = 300kHz$

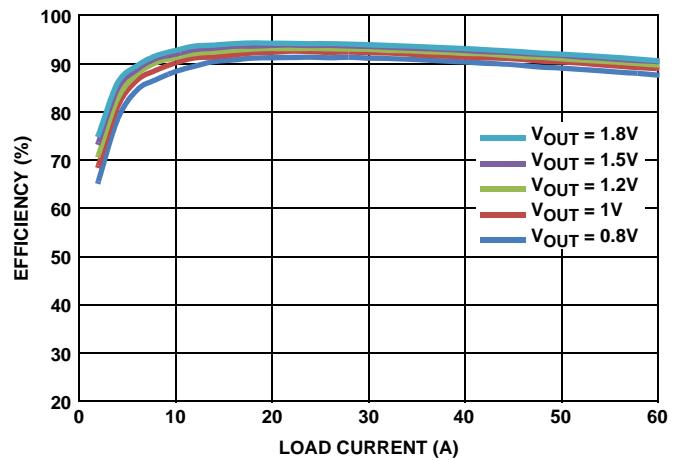


FIGURE 6. EFFICIENCY, $V_{IN} = 5V$, $f_{SW} = 300kHz$

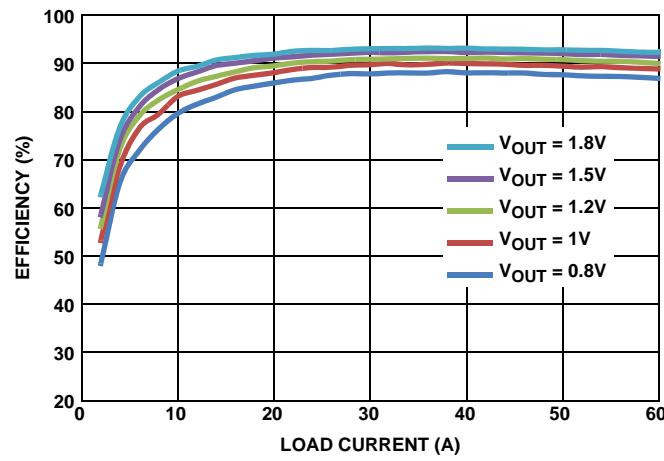


FIGURE 7. EFFICIENCY, $V_{IN} = 12V$, $f_{SW} = 400kHz$

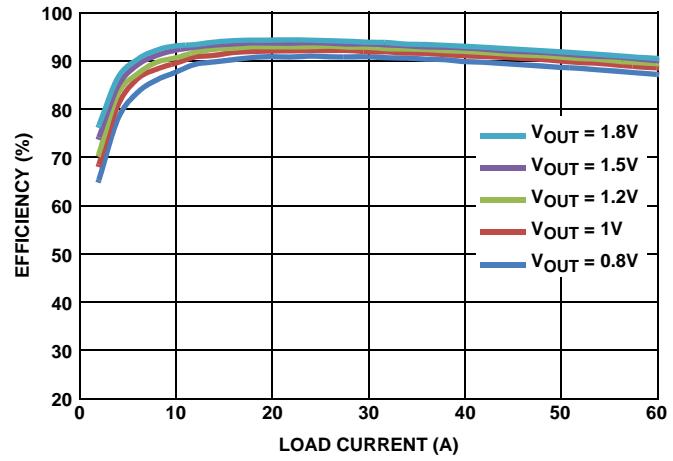


FIGURE 8. EFFICIENCY, $V_{IN} = 5V$, $f_{SW} = 400kHz$

Measured Data

The following data was acquired using a ZL8800-2PH-DEMO1Z Rev B demonstration board. (Continued)

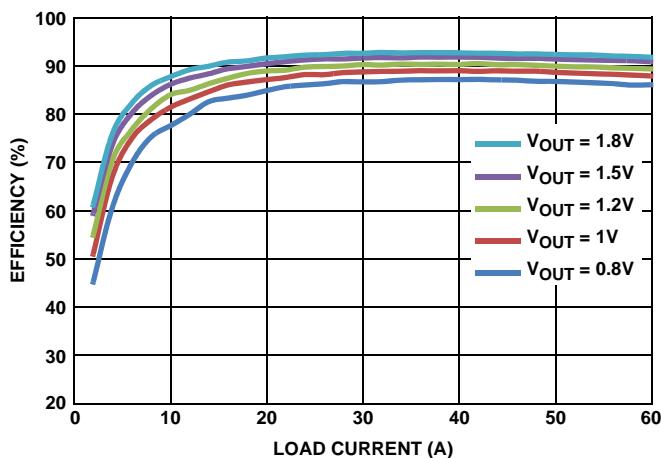


FIGURE 9. EFFICIENCY, V_{IN} = 12V, f_{SW} = 516kHz

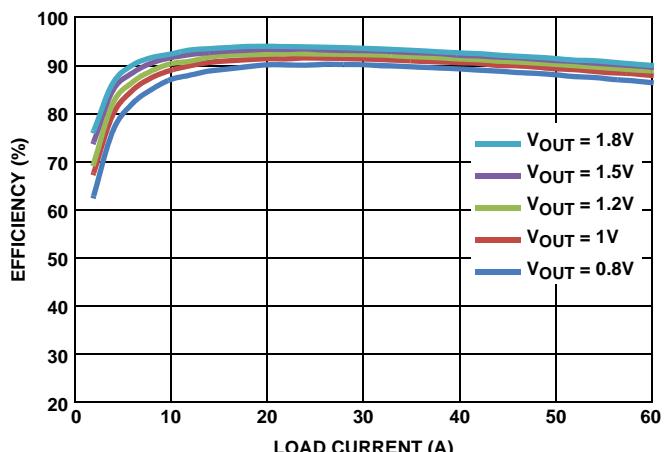


FIGURE 10. EFFICIENCY, V_{IN} = 5V, f_{SW} = 516kHz

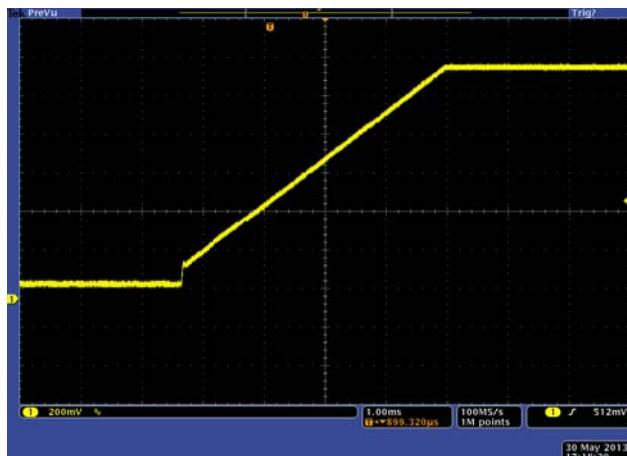


FIGURE 11. RAMP UP



FIGURE 12. RAMP DOWN

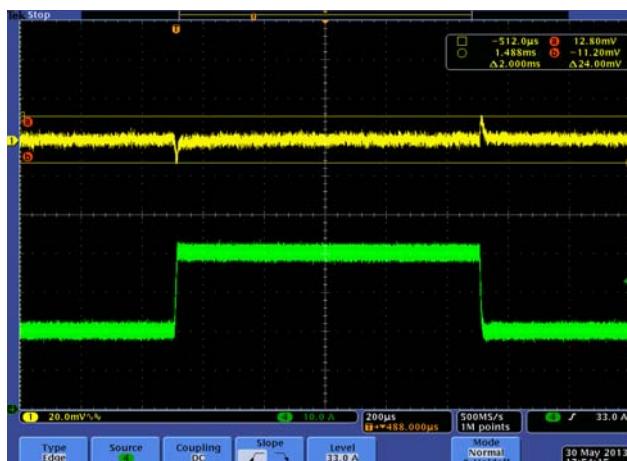


FIGURE 13. STEP RESPONSE, 20A TO 40A @ 5A/μs, ASCR = 1200
TOTAL DEVIATION WINDOW 25mV = 2.5%



FIGURE 14. STEP RESPONSE, 20A TO 40A @ 5A/μs, ASCR = 400
TOTAL DEVIATION WINDOW 50mV = 5%

ZL8800-2PH-DEMO1Z Board Layout

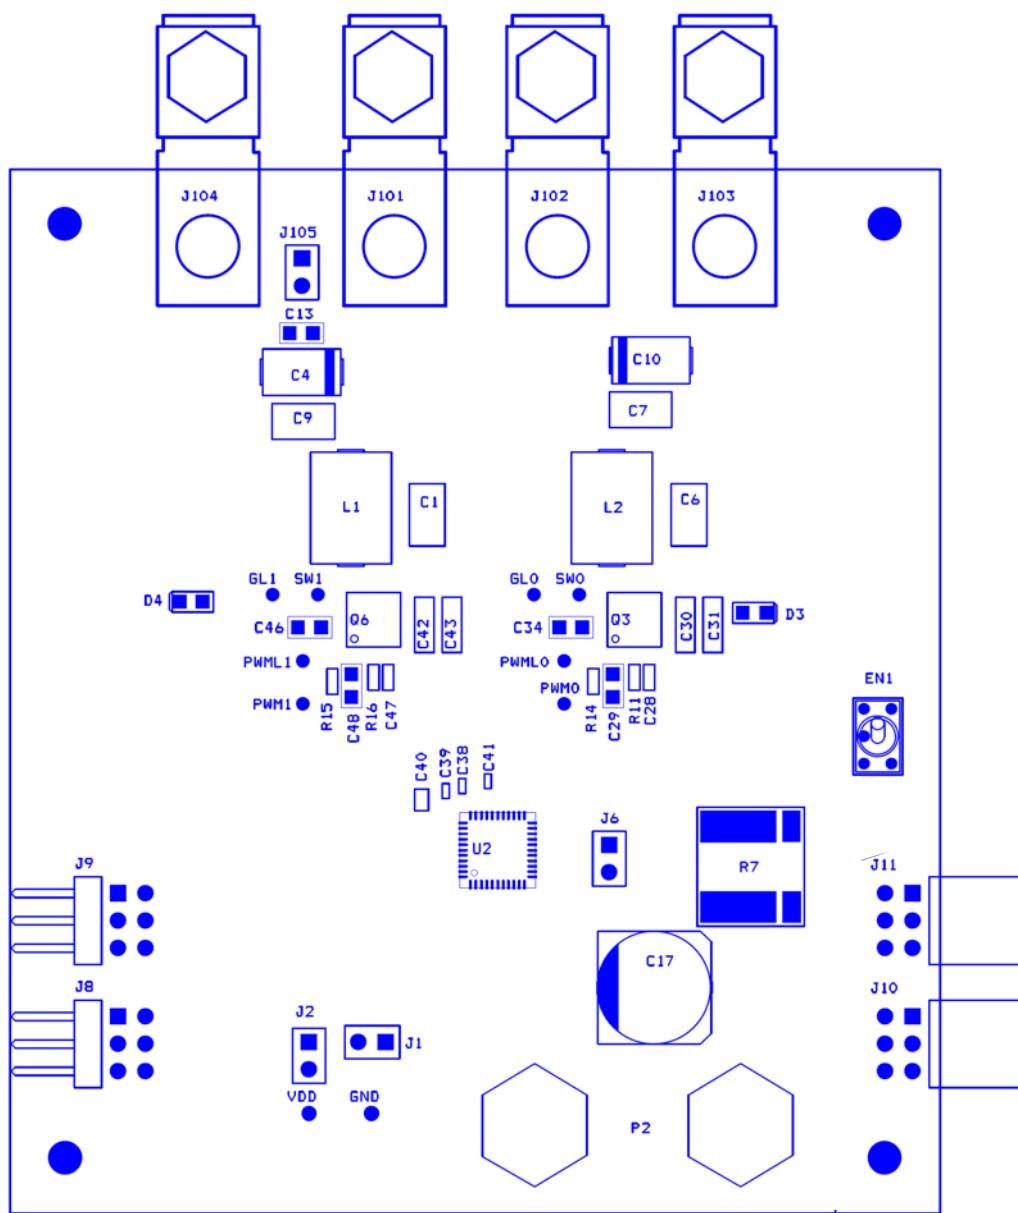


FIGURE 15. PCB - TOP ASSEMBLY

ZL8800-2PH-DEMO1Z Board Layout (Continued)

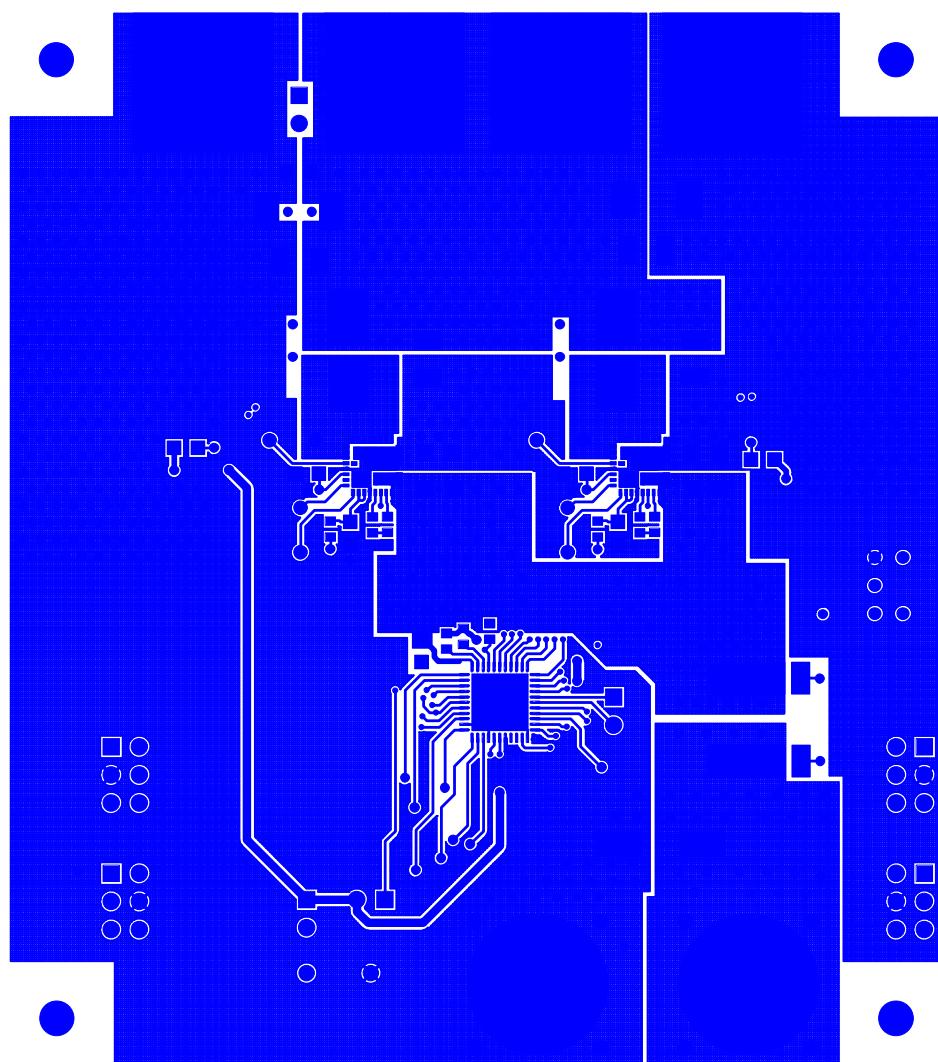


FIGURE 16. PCB - TOP LAYER

ZL8800-2PH-DEMO1Z Board Layout (Continued)

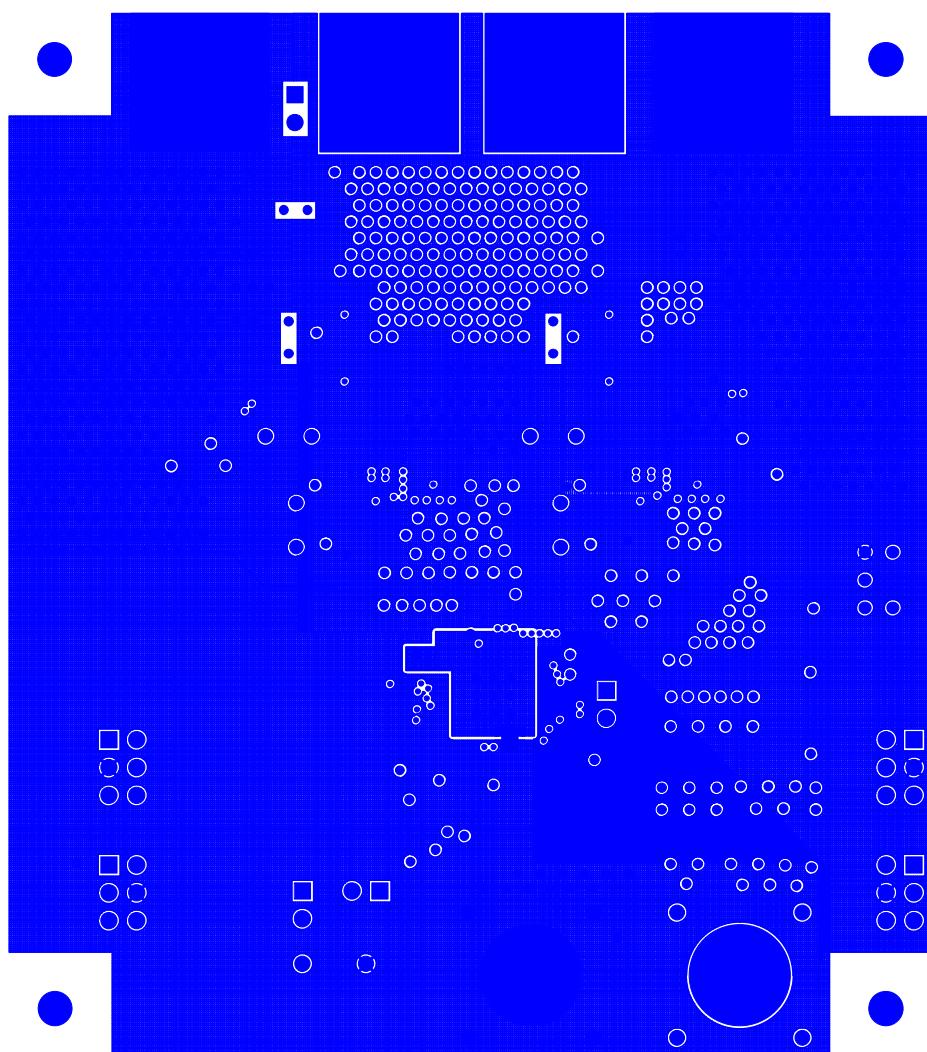


FIGURE 17. PCB - INNER LAYER 1 (TOP VIEW)

ZL8800-2PH-DEMO1Z Board Layout (Continued)

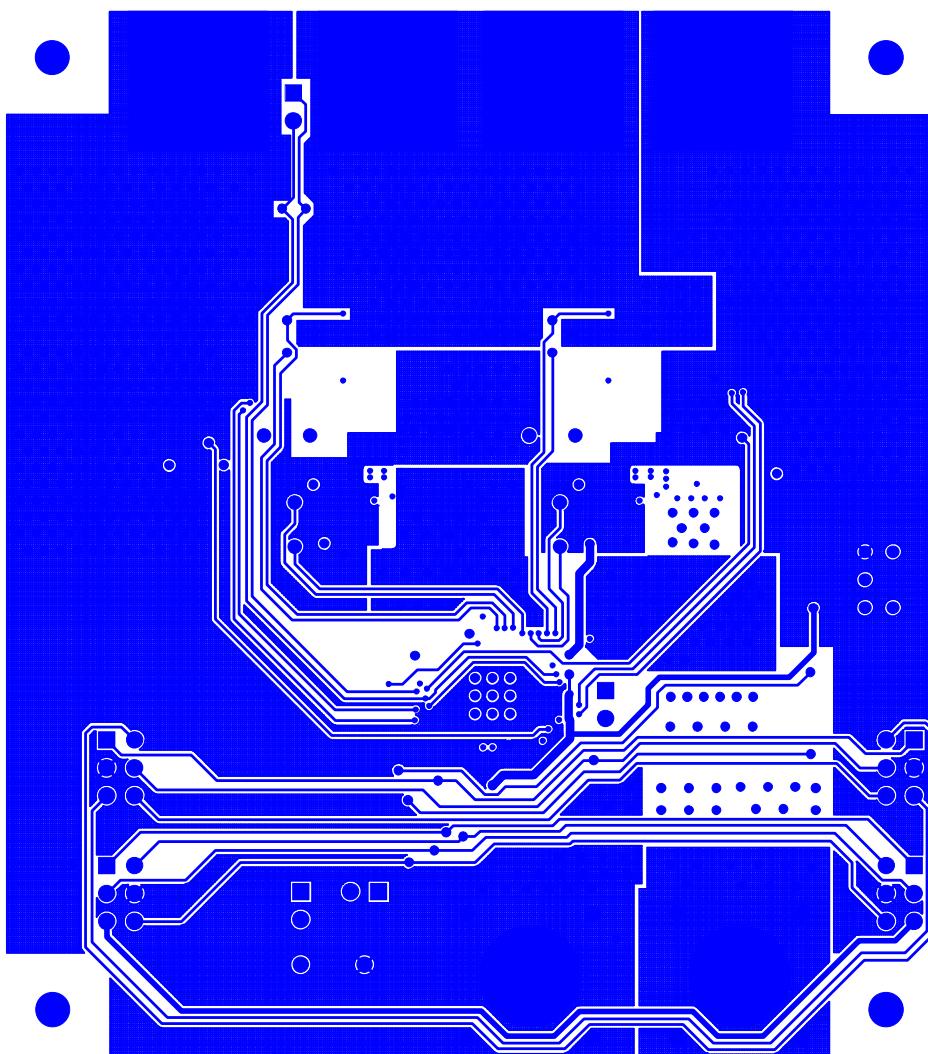


FIGURE 18. PCB - INNER LAYER 2 (TOP VIEW)

ZL8800-2PH-DEMO1Z Board Layout (Continued)

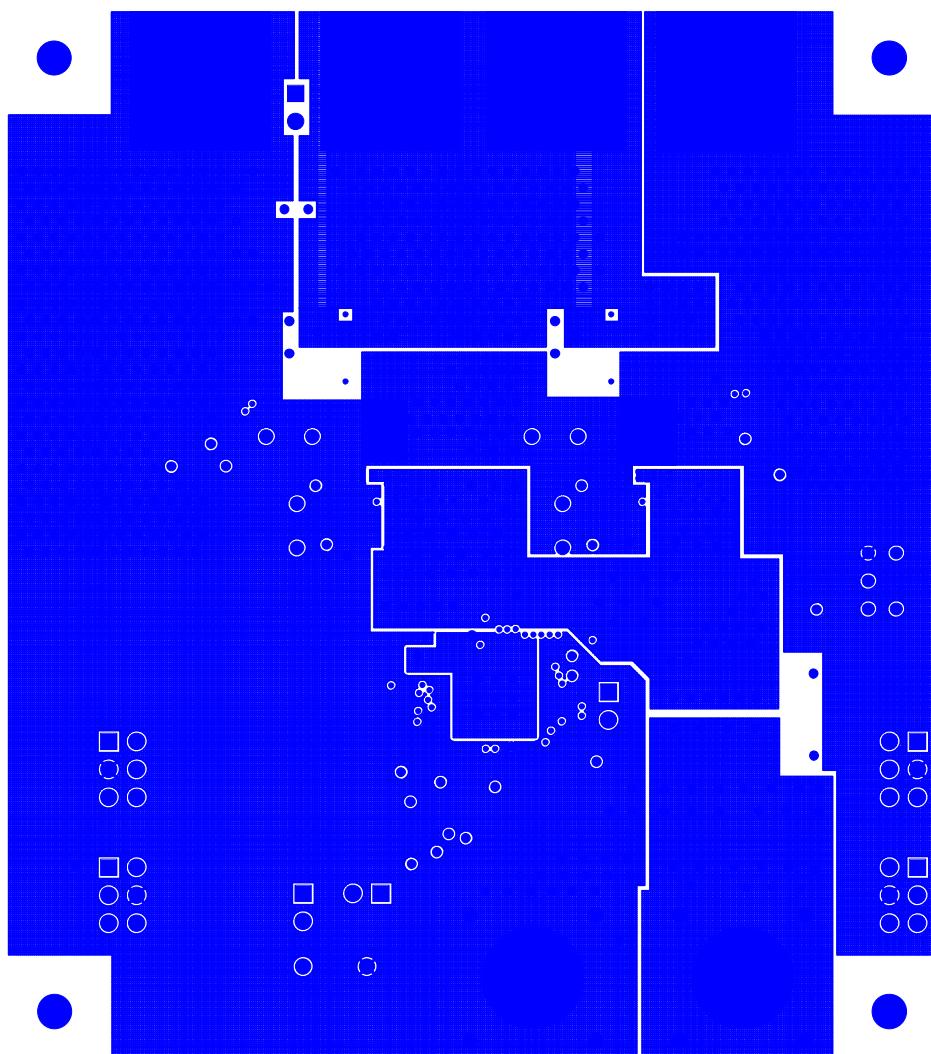


FIGURE 19. PCB - INNER LAYER 3 (TOP VIEW)

ZL8800-2PH-DEMO1Z Board Layout (Continued)

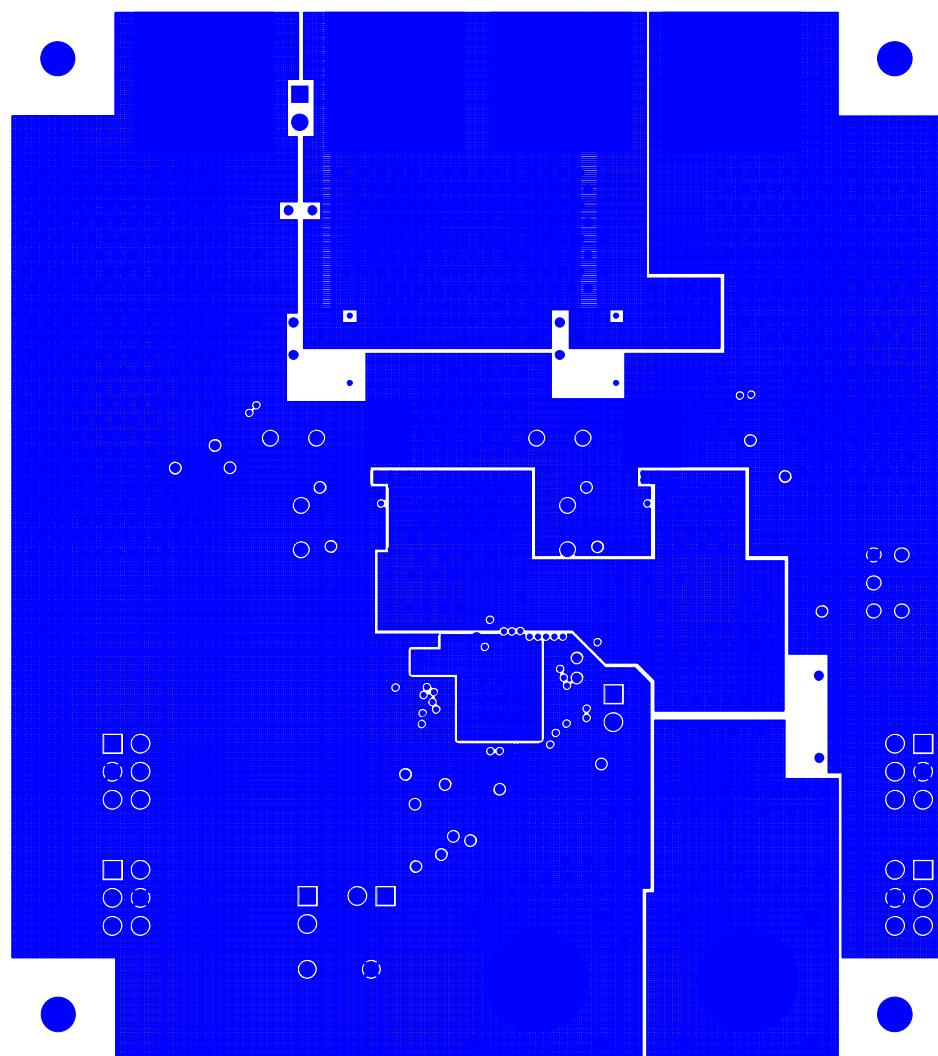


FIGURE 20. PCB - INNER LAYER 4 (TOP VIEW)

ZL8800-2PH-DEMO1Z Board Layout (Continued)

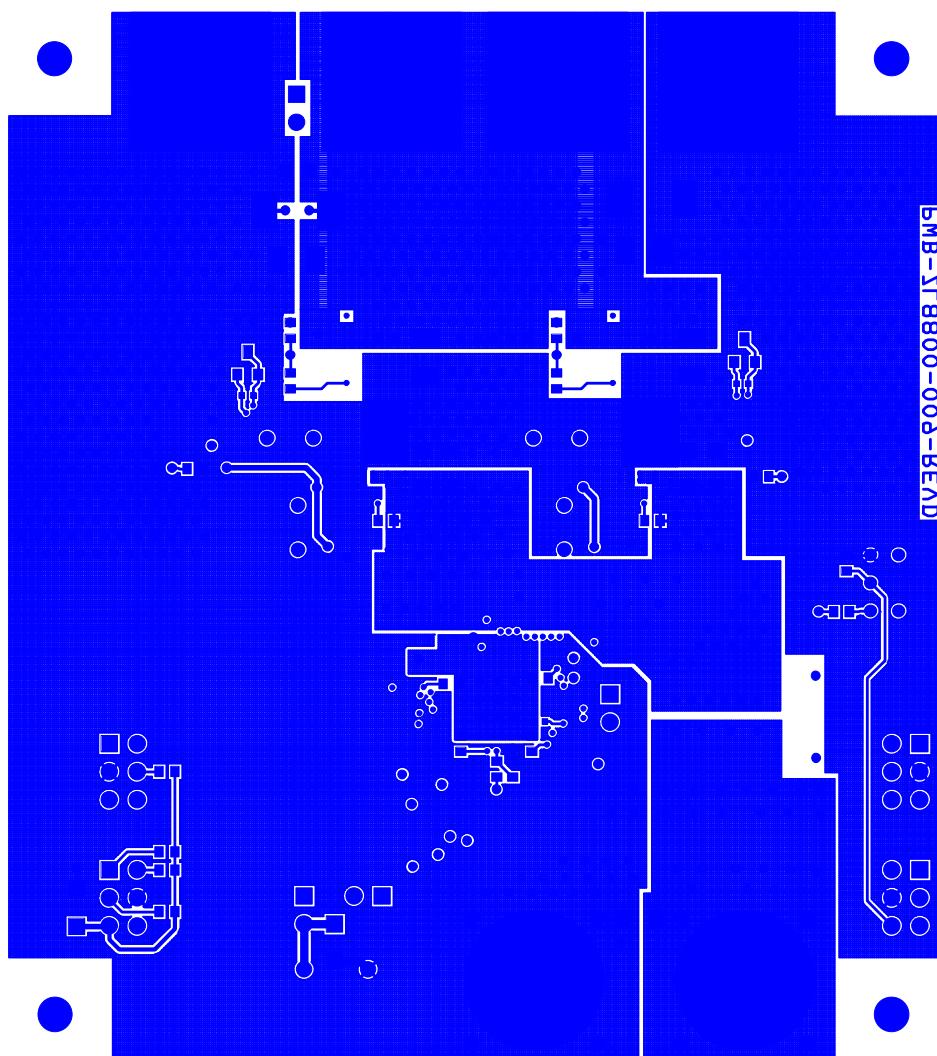


FIGURE 21. PCB - BOTTOM LAYER (TOP VIEW)

ZL8800-2PH-DEMO1Z Board Layout (Continued)

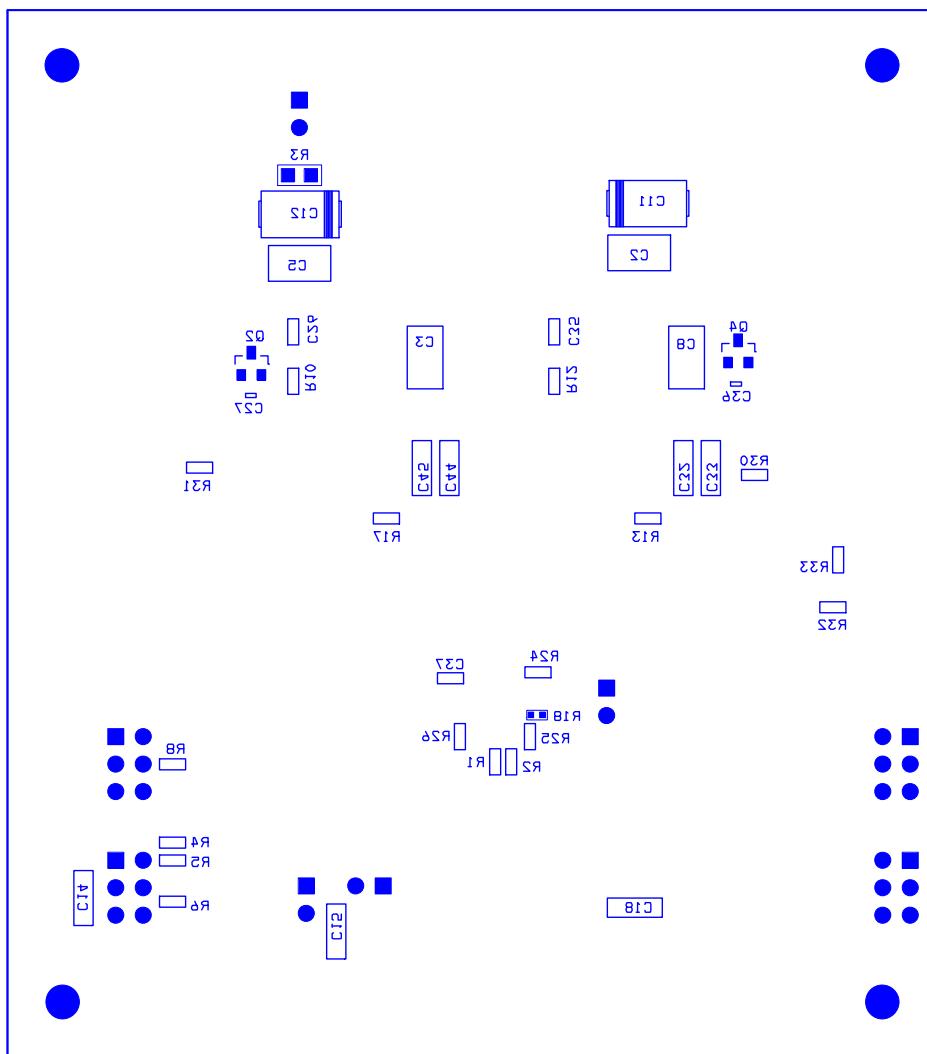


FIGURE 22. PCB - BOTTOM ASSEMBLY (TOP VIEW)

Related Tools and Documentation

DOCUMENT	DESCRIPTION
FN7558	ZL8800 Datasheet, "Dual Channel/Dual Phase PMBus™ ChargeMode Control DC/DC Digital Controller"

Intersil Corporation reserves the right to make changes in circuit design, software and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that the Application Note or Technical Brief is current before proceeding.

For information regarding Intersil Corporation and its products, see www.intersil.com

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Renesas manufacturer:

Other Similar products are found below :

[EVAL-ADM1168LQEBCZ](#) [EVB-EP5348UI](#) [MIC23451-AAAYFL EV](#) [MIC5281YMME EV](#) [DA9063-EVAL](#) [ADP122-3.3-EVALZ](#) [ADP130-0.8-EVALZ](#) [ADP130-1.2-EVALZ](#) [ADP130-1.5-EVALZ](#) [ADP130-1.8-EVALZ](#) [ADP1714-3.3-EVALZ](#) [ADP1716-2.5-EVALZ](#) [ADP1740-1.5-EVALZ](#) [ADP1752-1.5-EVALZ](#) [ADP1828LC-EVALZ](#) [ADP1870-0.3-EVALZ](#) [ADP1871-0.6-EVALZ](#) [ADP1873-0.6-EVALZ](#) [ADP1874-0.3-EVALZ](#) [ADP1882-1.0-EVALZ](#) [ADP199CB-EVALZ](#) [ADP2102-1.25-EVALZ](#) [ADP2102-1.875EVALZ](#) [ADP2102-1.8-EVALZ](#) [ADP2102-2-EVALZ](#) [ADP2102-3-EVALZ](#) [ADP2102-4-EVALZ](#) [ADP2106-1.8-EVALZ](#) [ADP2147CB-110EVALZ](#) [AS3606-DB](#) [BQ24010EVM](#) [BQ24075TEVM](#) [BQ24155EVM](#) [BQ24157EVM-697](#) [BQ24160EVM-742](#) [BQ24296MEVM-655](#) [BQ25010EVM](#) [BQ3055EVM](#) [NCV891330PD50GEVB](#) [ISLUSBI2CKIT1Z](#) [LM2744EVAL](#) [LM2854EVAL](#) [LM3658SD-AEV/NOPB](#) [LM3658SDEV/NOPB](#) [LM3691TL-1.8EV/NOPB](#) [LM4510SDEV/NOPB](#) [LM5033SD-EVAL](#) [LP38512TS-1.8EV](#) [EVAL-ADM1186-1MBZ](#) [EVAL-ADM1186-2MBZ](#)