



**SAMSUNG**  
**ARTIK**<sup>TM</sup> Modules

**5**

**530 Development Board  
User Guide**

SAMSUNG ELECTRONICS RESERVES THE RIGHT TO CHANGE PRODUCTS, INFORMATION AND SPECIFICATIONS WITHOUT NOTICE. Products and specifications discussed herein are for reference purposes only. All information discussed herein is provided on an "AS IS" basis, without warranties of any kind. This document and all information discussed herein remain the sole and exclusive property of Samsung Electronics. No license of any patent, copyright, mask work, trademark or any other intellectual property right is granted by one party to the other party under this document, by implication, estoppel or other-wise. Samsung products are not intended for use in life support, critical care, medical, safety equipment, or similar applications where product failure could result in loss of life or personal or physical harm, or any military or defense application, or any governmental procurement to which special terms or provisions may apply. For updates or additional information about Samsung products, contact your nearest Samsung office. All brand names, trademarks and registered trademarks belong to their respective owners.

# TABLE OF CONTENTS

Table of Contents .....	3
List of Figures .....	4
List of Tables .....	4
<i>Version History</i> .....	5
Handling Guide .....	6
ARTIK 530 Development Board Overview.....	7
<i>features</i> .....	7
<i>Block diagram</i> .....	8
<i>Mechanical Drawings</i> .....	9
ARTIK 530 Module .....	11
<i>ARTIK 530 Module Specification</i> .....	11
ARTIK 530 Development Board Interposer Board .....	12
<i>Interposer Board Boot mode Configuration</i> .....	13
<i>USB OTG</i> .....	14
<i>HDMI 1.4a</i> .....	14
<i>LVDS</i> .....	15
<i>Ethernet</i> .....	15
<i>Antenna</i> .....	16
ARTIK 530 Development Board Platform Board .....	17
<i>Configuration of External Power Source</i> .....	18
<i>SD-Card Interface</i> .....	19
<i>EarJack Interface</i> .....	19
<i>MIPI DSI/CSI Interface</i> .....	19
<i>USB Host 2.0 Interface</i> .....	21
<i>Connector to IF Board Interface</i> .....	22
ARTIK 530 Development Environment IF Board .....	23
<i>Preview on the ARTIK IF board</i> .....	23
<i>Configuration of external Power Source</i> .....	24
ARTIK 530 Development Board Booting .....	25
<i>Serial Port Connection</i> .....	25
<i>Terminal Emulator Installation</i> .....	26
<i>Power on the ARTIK 530 Development Board</i> .....	27
Legal Information .....	29

## LIST OF FIGURES

Figure 1. Preview of the ARTIK 530 Development Board.....	7
Figure 2. ARTIK 530 Development Board .....	8
Figure 3. Mechanical Drawing ARTIK 530 Development Board and Interposer Board all dimensions are in [mm] ..	9
Figure 4. Mechanical Drawing ARTIK 530 Development Board Platform Board all dimensions are in [mm] .....	10
Figure 5. ARTIK 530 Development Board Interposer Board Left Top Side, Right Bottom Side .....	12
Figure 6. ARTIK 530 Development Board Booting Switch Location.....	13
Figure 7. USB OTG Interface location on the Interposer Board.....	14
Figure 8. HDMI 1.4a Interface location on the Interposer Board .....	14
Figure 9. LVDS Interface location on the Interposer Board.....	15
Figure 10. Ethernet Interface location on the Interposer Board .....	15
Figure 11. Antenna location on the Interposer Board .....	16
Figure 12. ARTIK 530 Development Board Platform Board Left Bottom Side, Right Top Side .....	17
Figure 13. Jumper Interface locations JP1-JP4 on Connectors J702, J703 of the Platform Board .....	18
Figure 14. SD-Card Interface location on the Platform Board .....	19
Figure 15. Ear Jack Interface location on the Platform Board .....	19
Figure 16. MIPI DSI Interface location on the Platform Board .....	20
Figure 17. MIPI CSI Interface Location on the Platform Board .....	20
Figure 18 USB2.0 Interface location on the Platform Board .....	21
Figure 19. Expansion Connector Interface location on the Platform Board .....	22
Figure 20. ARTIK 530 Development Board IF Board .....	23
Figure 21. Jumper Interface locations J20, J21 on the IF Board.....	24
Figure 22. Typical Linux® Serial Console .....	25
Figure 23. USB Serial Cable hooked up to the Platform Board.....	26
Figure 24 Connection Power adaptor with development Board .....	27
Figure 25. Power switch location on the development Board .....	28
Figure 26. Power button location on the development Board .....	28

## LIST OF TABLES

Table 1. Main Features of the ARTIK 530 Module .....	11
Table 2. Boot option that can be set on the Interposer Board .....	13
Table 3 Antenna spec .....	16
Table 4. Connector J2.....	23
Table 5. Connector J3.....	24



# HANDLING GUIDE

## Precaution against Electrostatic Discharge

When using the Samsung ARTIK™ 530 Development Board, ensure that the environment is protected against static electricity:

### Contamination

Do not use the ARTIK 530 Development Board in an environment exposed to dust or dirt adhesion.

### Temperature/Humidity

The ARTIK 530 Development Board is sensitive to:

1. Environment
2. Temperature
3. Humidity

High temperature or humidity deteriorates the characteristics of ARTIK 530 Development Board, therefore, do not store or use the ARTIK 530 Development Board under such conditions.

### Mechanical Shock

Do not to apply excessive mechanical shock or force to the ARTIK 530 Development Board.

### Chemical

Do not expose the ARTIK 530 Development Board to chemicals. Exposure to chemicals leads to reactions that deteriorate the characteristics of the ARTIK 530 Development Board.

### EMS (Electro Magnetic Susceptibility)

Strong electromagnetic waves or magnetic fields may affect the characteristics of the ARTIK 530 Development Board during the operation under insufficient PCB circuit design for Electro Magnetic Susceptibility (EMS).

# ARTIK 530 DEVELOPMENT BOARD OVERVIEW

## FEATURES

The ARTIK 530 Development Board consists of one Interposer Board, one Platform Board and one IF Board. The Interposer Board does include the ARTIK 530 Module. The ARTIK 530 Development Board is an affordable approach for developing an IoT solution. *Figure 1* shows the form factors of the various boards that make up the ARTIK 530 Development Board.

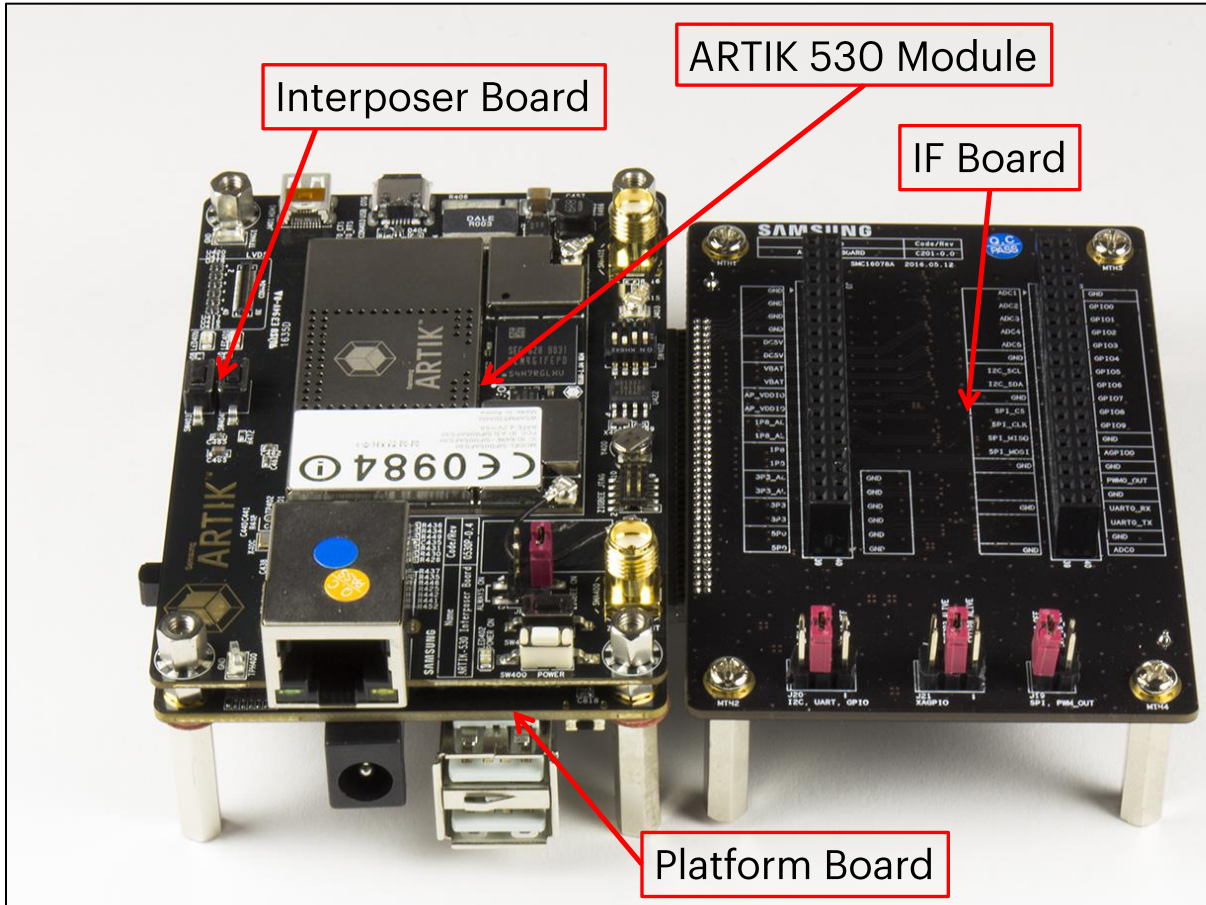


Figure 1. Preview of the ARTIK 530 Development Board

### BLOCK DIAGRAM

Figure 2 shows the block diagram of the ARTIK 530 Development Board, if you want more information on the ARTIK 530 Module please consult the ARTIK 530 Module Datasheet.

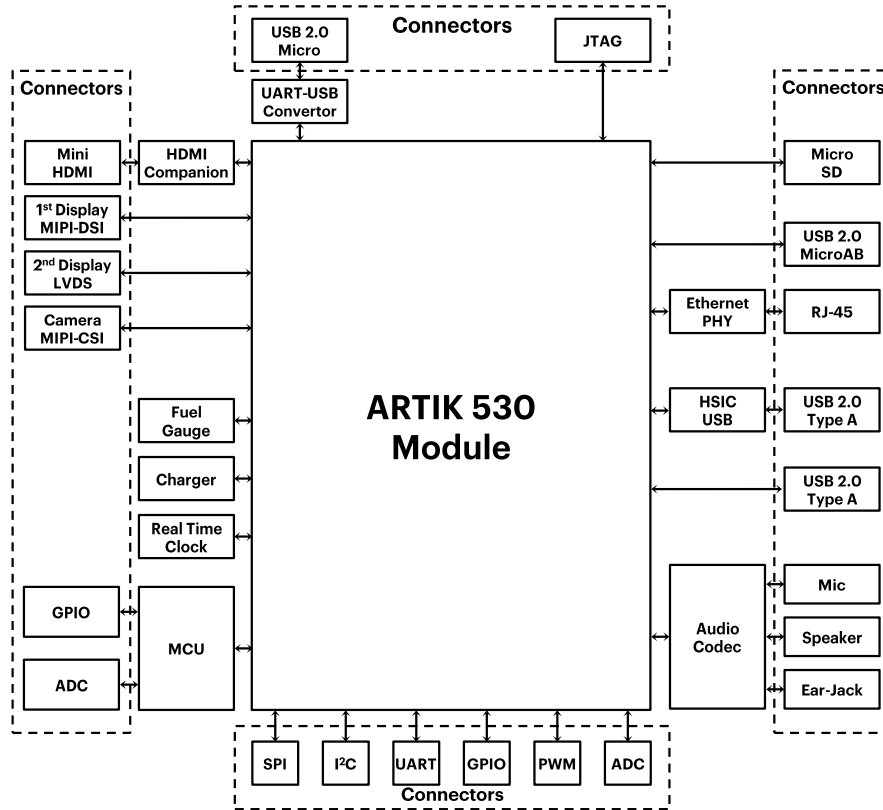


Figure 2. ARTIK 530 Development Board



MECHANICAL DRAWINGS

Figure 3 and Figure 4 show the ARTIK 530 Development Board Interposer Board and the Platform Board respectively.

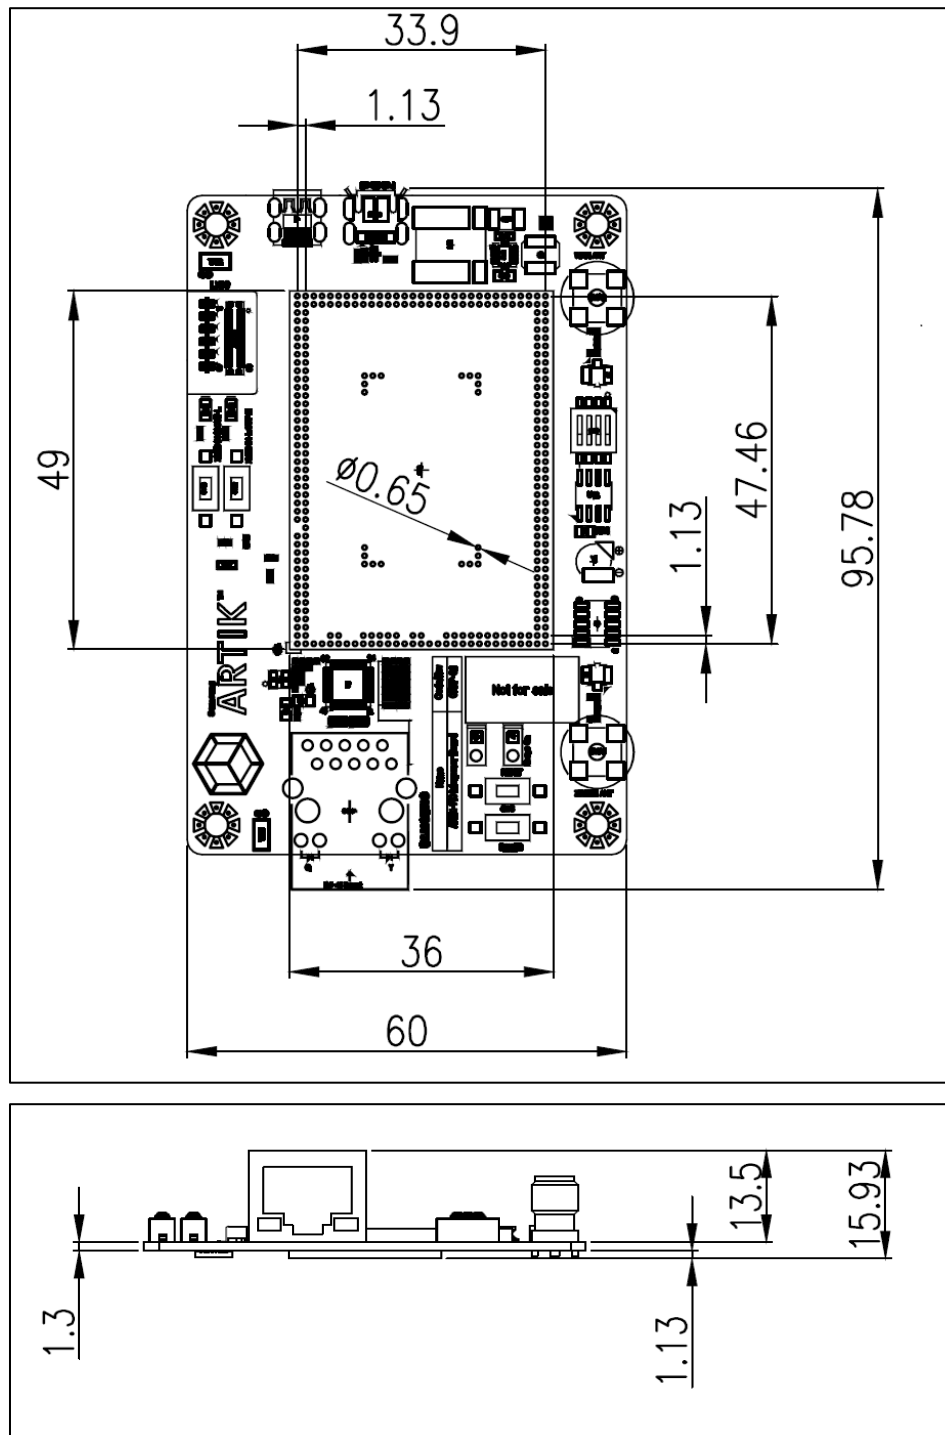


Figure 3. Mechanical Drawing ARTIK 530 Development Board and Interposer Board all dimensions are in [mm]

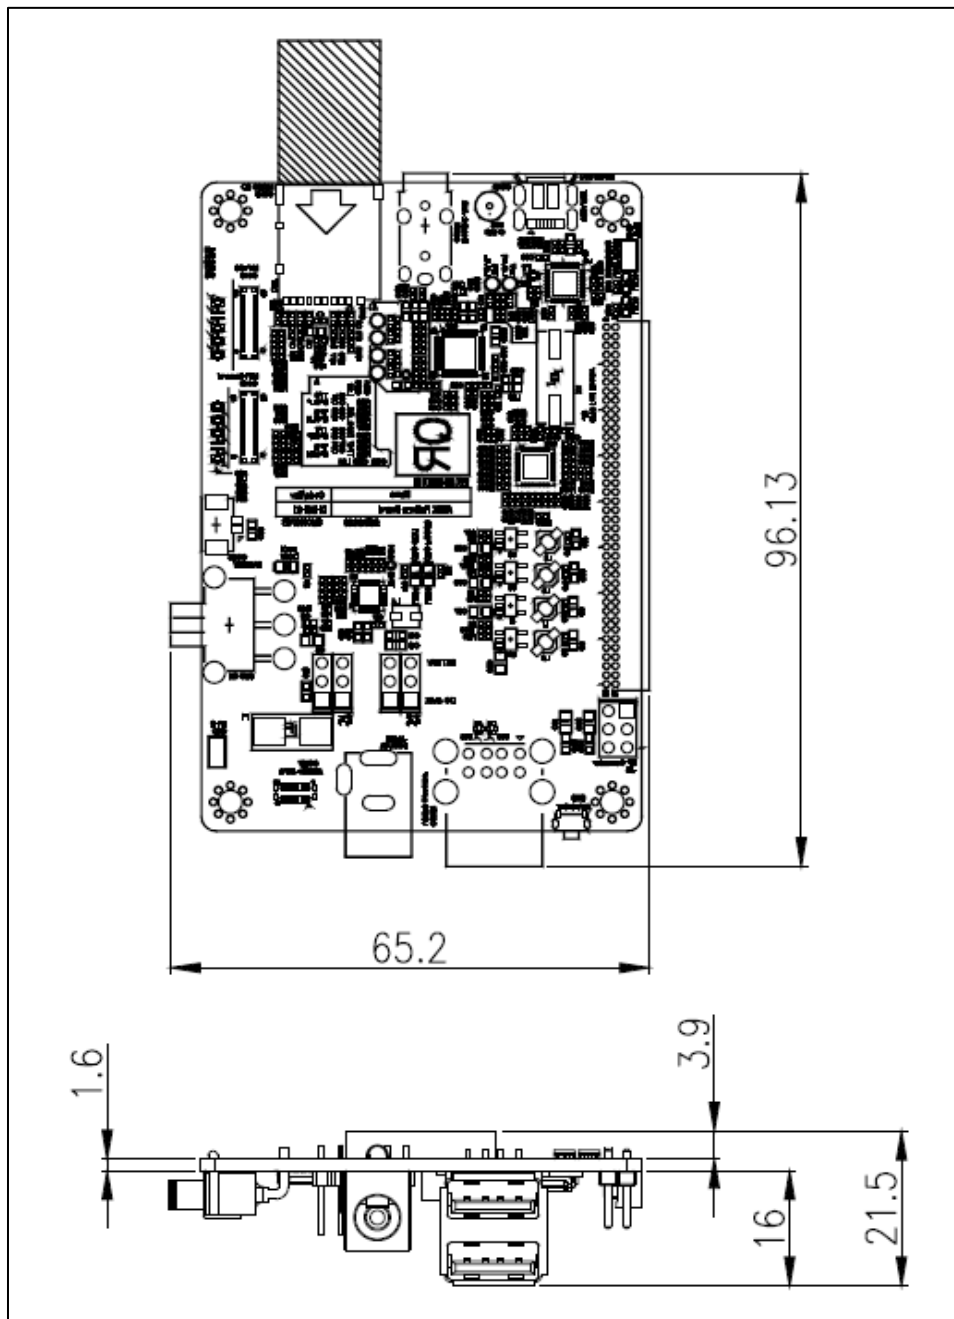


Figure 4. Mechanical Drawing ARTIK 530 Development Board Platform Board all dimensions are in [mm]

# ARTIK 530 MODULE

The ARTIK 530 Development Board contains the ARTIK 530 Module. This section will describe some of the main features of this module. For more information on the ARTIK 530 Module please consult the ARTIK 530 Module datasheet.

## ARTIK 530 MODULE SPECIFICATION

The ARTIK 530 Module is designed for IoT devices and it contains a lot of functions based on a Linux<sup>®</sup> system. Not only multimedia functions but also network functions for example 802.11 or ZigBee<sup>®</sup>. In addition the ARTIK 530 Module has mass storage functionality and its own security solution. Table 1 shows the main features of the ARTIK 530 Module that is part of the ARTIK 530 Development Board.

Table 1. Main Features of the ARTIK 530 Module

<b>Processor</b>	
CPU	Quad core ARM <sup>®</sup> Cortex <sup>®</sup> -A9@1.2GHz
GPU	3D graphics accelerator
<b>Media</b>	
Camera I/F	4-lane MIPI CSI up to 5M (1920x1080@30fps)
Display	4-lane MIPI DSI and HDMI1.4a (1920x1080p@60fps) or LVDS (1280x720p@60fps)
Audio	Two I <sup>2</sup> S audio input/output
<b>Memory</b>	
DRAM	512MB DDR3
FLASH	4GB eMMC v4.5
<b>Security</b>	
Secure Element	Secure point to point authentication and data transfer
<b>Radio</b>	
WLAN	IEEE 802.11a/b/g/n, dual band SISO
Bluetooth <sup>®</sup>	4.2 (BLE+Classic)
802.15.4	ZigBee <sup>®</sup> /Thread
<b>Power Management</b>	
PMIC	Provides all power of the ARTIK 530 Module using on board bucks and LDO's
<b>Interfaces</b>	
Ethernet	10/100/1000Base-T MAC (External PHY required)
Analog and Digital I/O	GPIO, UART, I <sup>2</sup> C, SPI, USB Host, USB OTG, HSIC, ADC, PWM, I <sup>2</sup> S, JTAG

# ARTIK 530 DEVELOPMENT BOARD INTERPOSER BOARD

The Interposer Board as depicted in *Figure 5* highlights the most important components on the Interposer board.

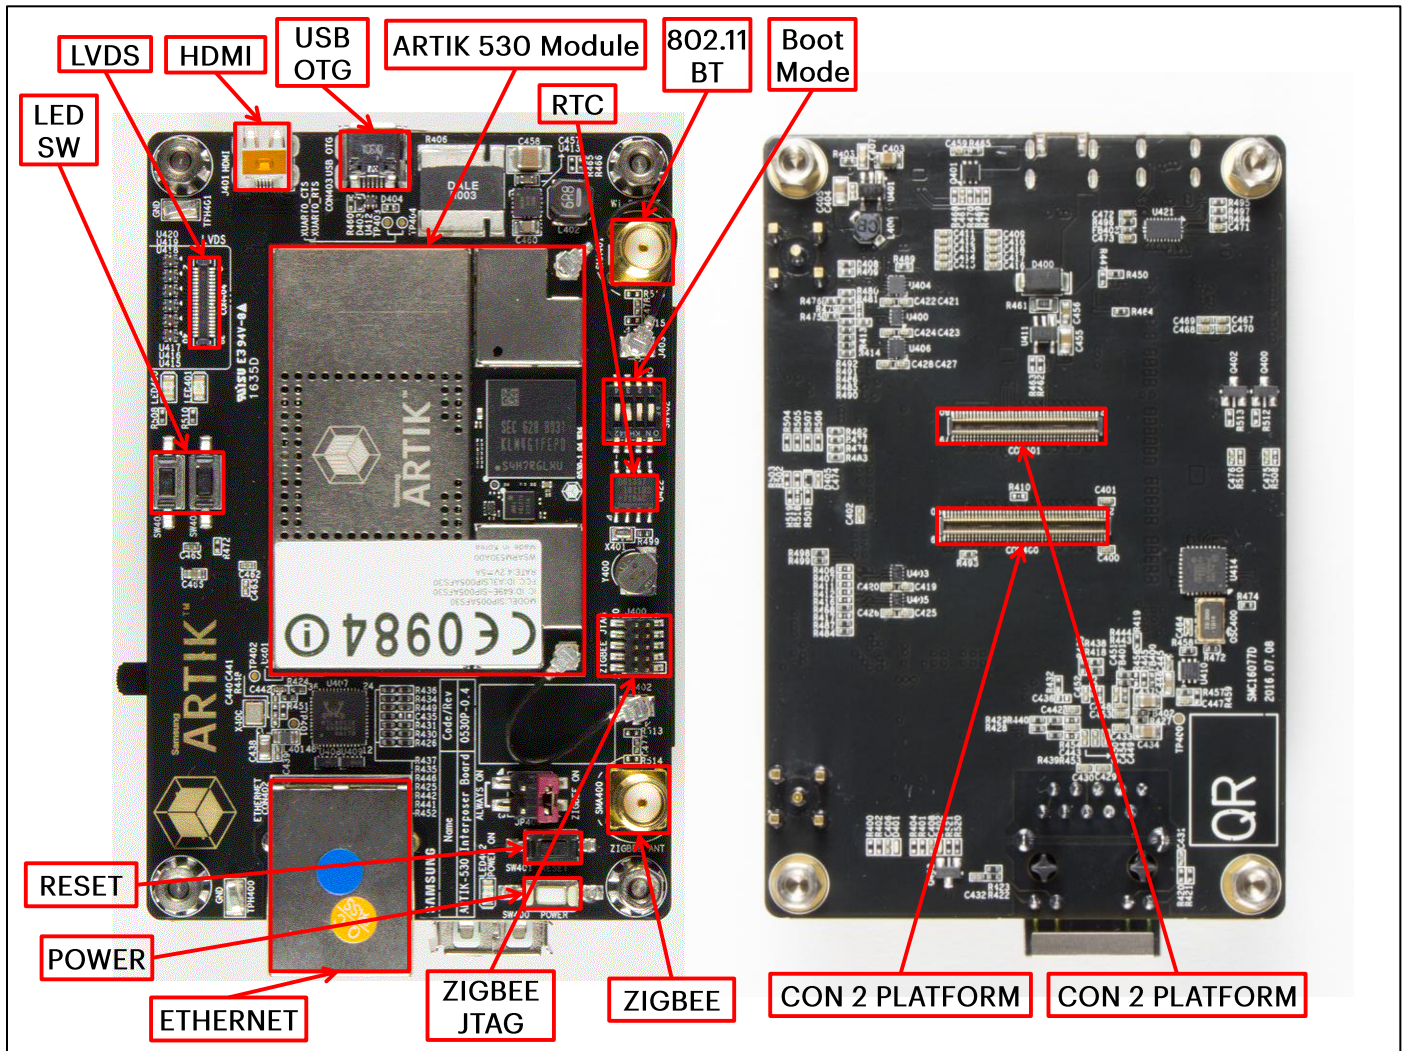


Figure 5. ARTIK 530 Development Board Interposer Board Left Top Side, Right Bottom Side

## INTERPOSER BOARD BOOT MODE CONFIGURATION

This section describes the various boot modes that are supported on the ARTIK 530 Development Board. *Table 2* and *Figure 6* show how to manipulate SW402 and where SW402 is located on the Interposer Board to set the various booting options that are available on the ARTIK 530 Development Board.

When 'eMMC 1<sup>st</sup> Boot' is selected as a booting option, the system will first try to boot from eMMC, if this fails the system will search for an SD Card to boot from. If booting from the SD-Card also fails the system tries to boot from USB. When choosing the SD-Card booting option, the system starts with booting from SD, and if this fails will continue to try a USB boot. When USB is selected as the booting mechanism of choice, only a USB boot will be attempted.

Table 2. Boot option that can be set on the Interposer Board

SW402	eMMC 1 <sup>st</sup> Boot	SD Card 1 <sup>st</sup> Boot	USB 1 <sup>st</sup> Boot
1	Off	Off	On
2	Off	Off	On
3	X	X	X
4	Off	On	X

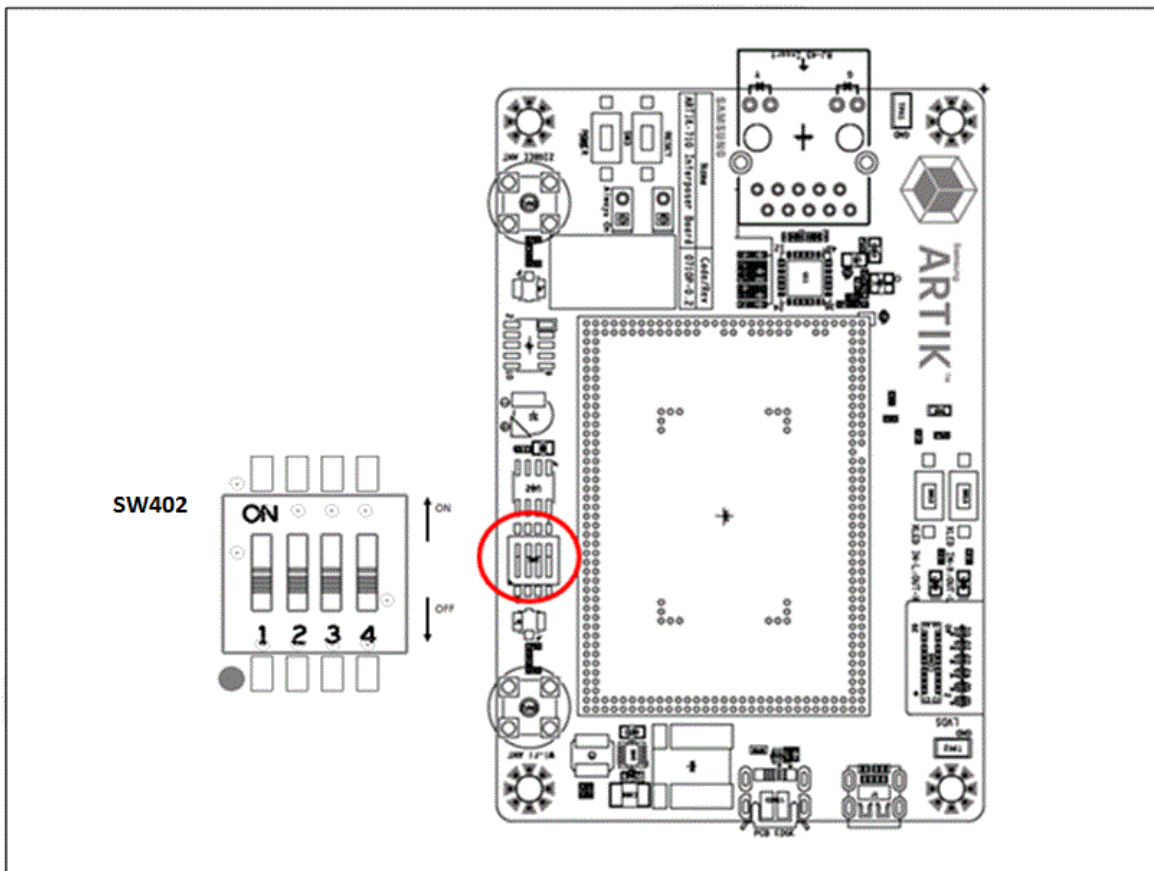


Figure 6. ARTIK 530 Development Board Booting Switch Location

## USB OTG

The Interposer board has one USB OTG connector located as can be seen in [Figure 7](#).

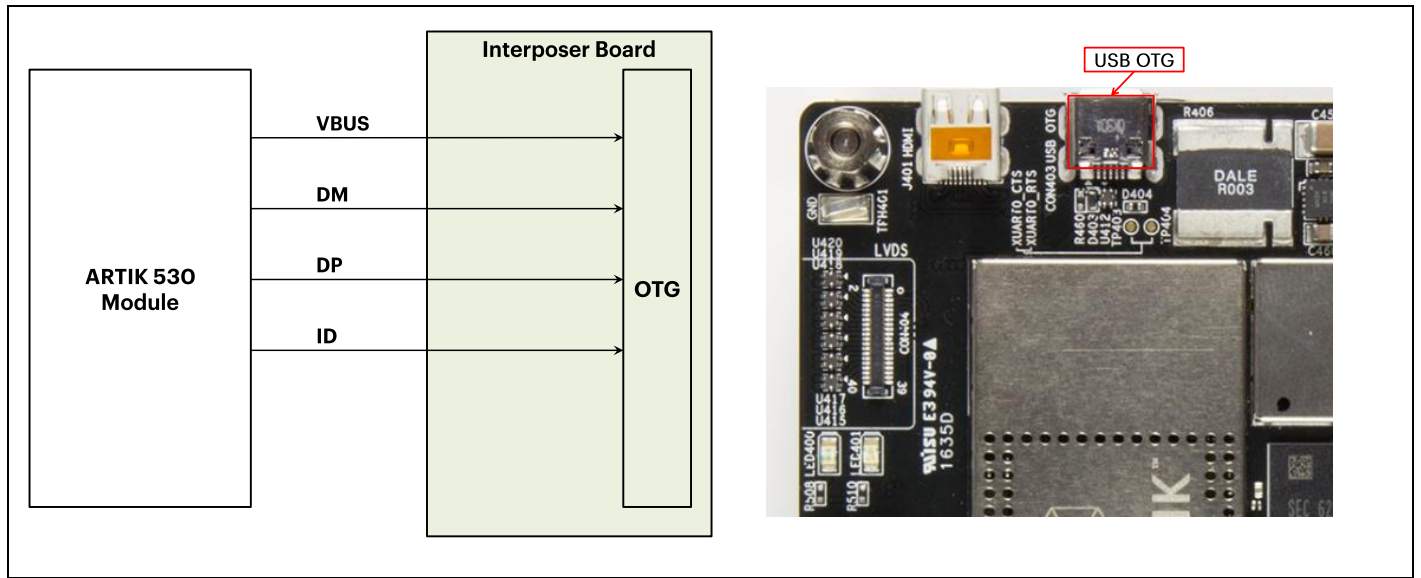


Figure 7. USB OTG Interface location on the Interposer Board

## HDMI 1.4A

The Interposer board has one HDMI 1.4a connector (Micro D-Type) located as can be seen in [Figure 8](#). The following video formats are supported:

1. 480p/480i @59.94Hz/60Hz, 576p/576i@50Hz
2. 720p/720i @50Hz/59.94Hz/60Hz
3. 1080p/1080i @50Hz/59.94Hz/60Hz

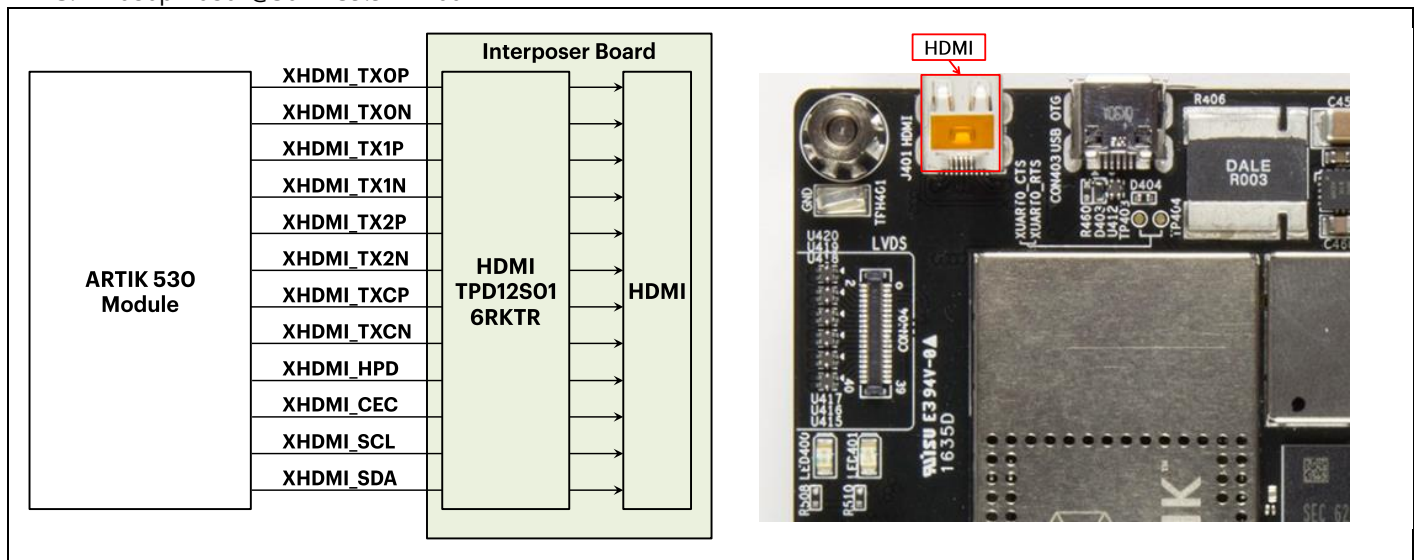


Figure 8. HDMI 1.4a Interface location on the Interposer Board

### LVDS

The Interposer board has one LVDS Interface containing 5x data channels and one clock channel, its location can be seen in *Figure 9*. The available maximum resolution is 1920x1080@60fps.

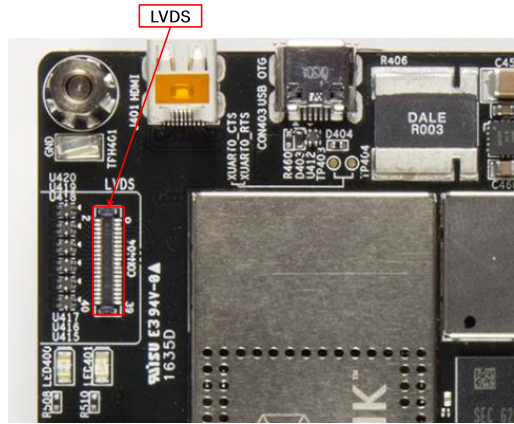
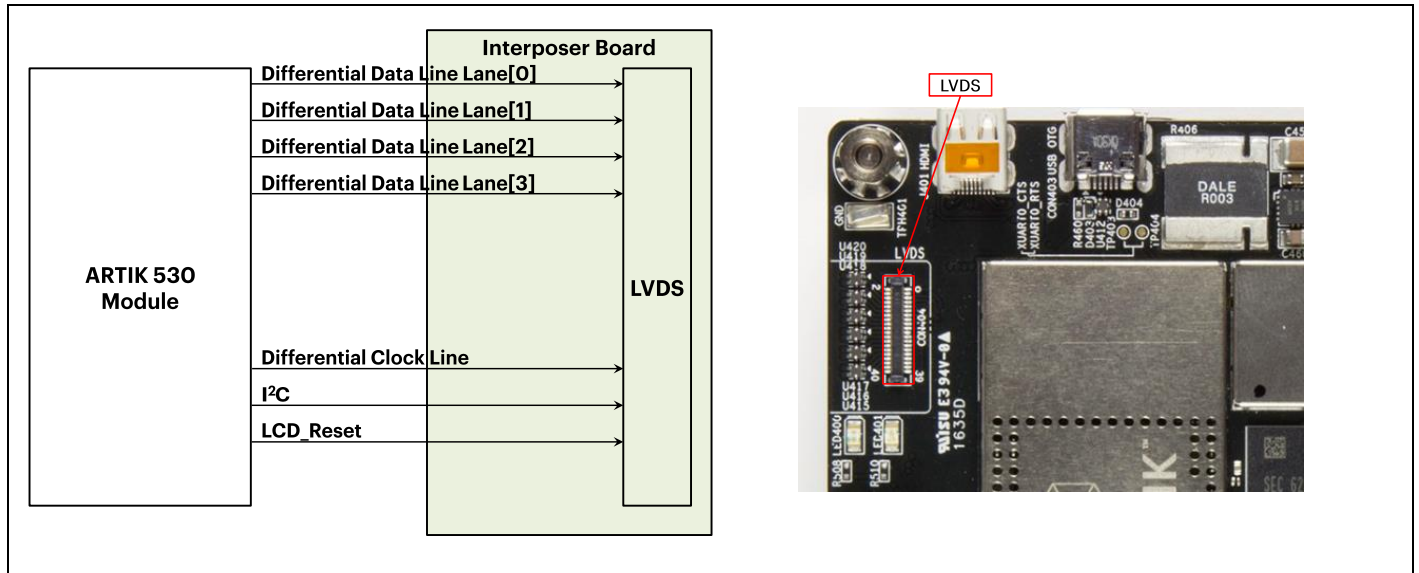


Figure 9. LVDS Interface location on the Interposer Board

### ETHERNET

The Interposer board has one Ethernet Interface, its location can be seen in *Figure 10*. The Ethernet Interface is based on 802.3az-2010 complying to the Energy Efficient Ethernet (EEE) standard. The maximum theoretical speed of the interface is 1000Mbps.

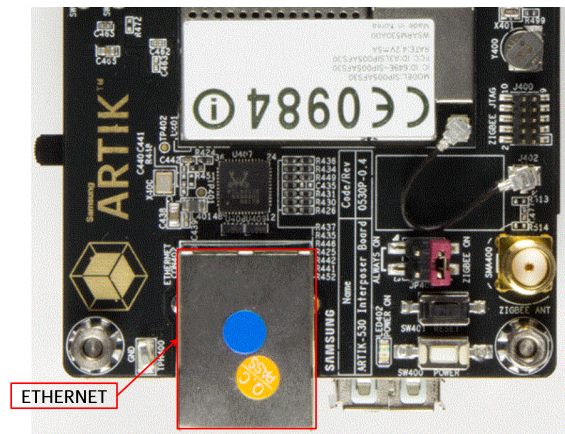
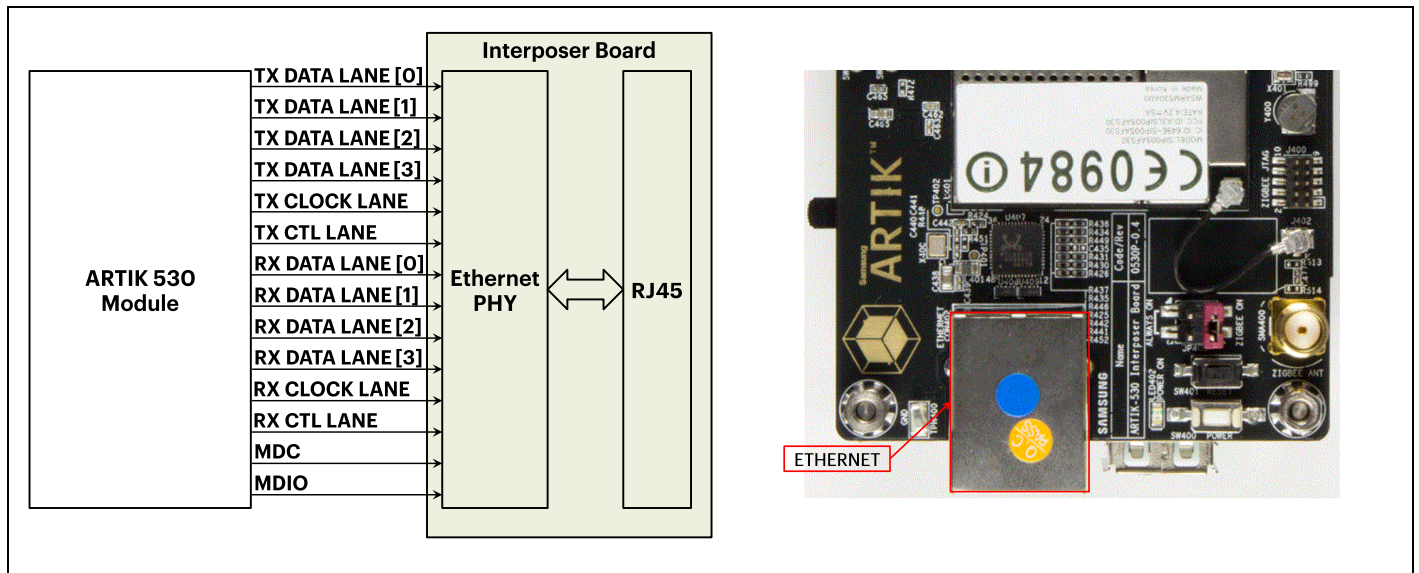


Figure 10. Ethernet Interface location on the Interposer Board

## ANTENNA

If 802.11 or Bluetooth® functionality is required, the antenna which is enclosed as part of the ARTIK 530 Development Kit has to be attached to the Interposer board as depicted in *Figure 11*. More details on the antenna spec is given in *Table 3*.

Table 3 Antenna spec

Property	Description
Antenna Type	Dipole Antenna
Antenna Peak Gain	+1.43(2.4GHz)/ +0.91(5GHz)
Frequency	2.4GHz, 5GHz (for 802.11, Bluetooth®, ZigBee®)
Connector Type	SMA-M
Antenna Size	108.7mm

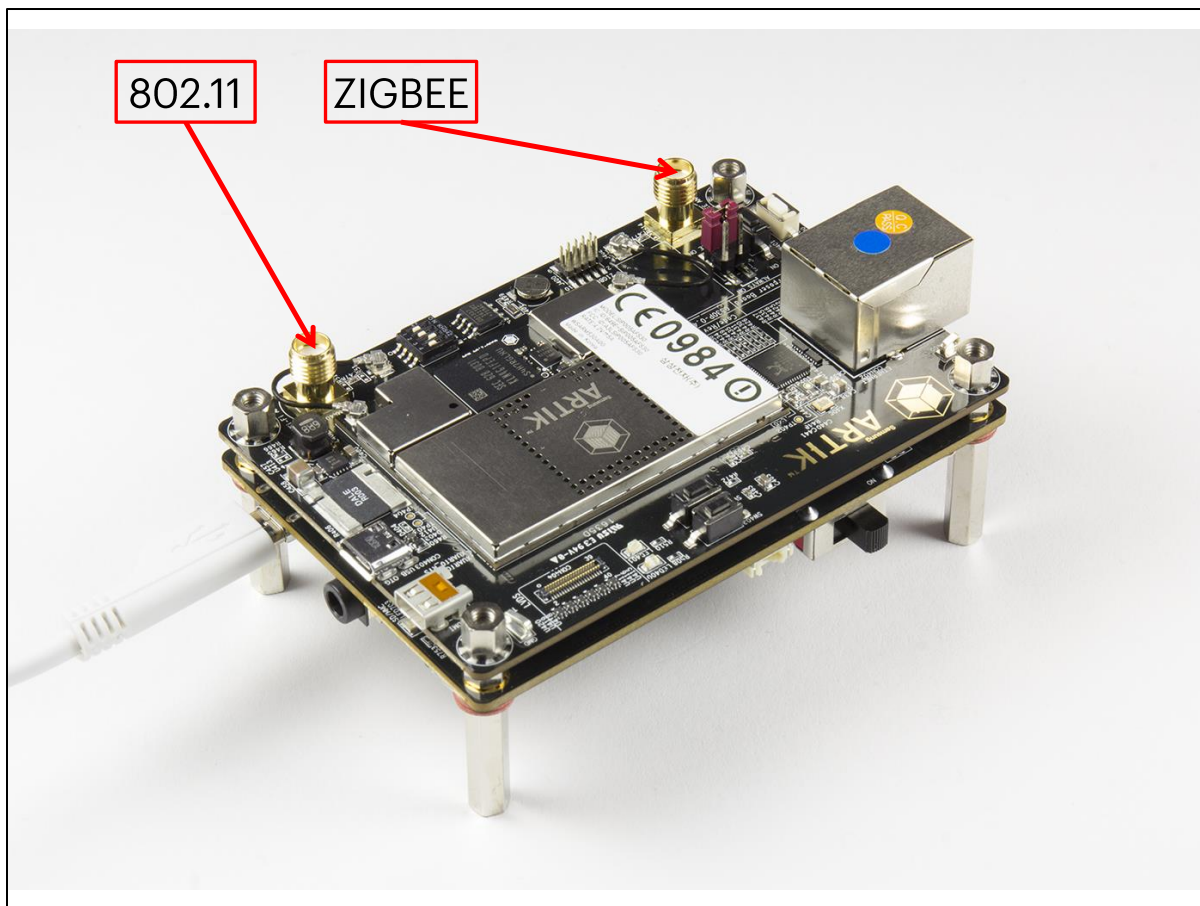


Figure 11. Antenna location on the Interposer Board



# ARTIK 530 DEVELOPMENT BOARD PLATFORM BOARD

The Platform Board as depicted in *Figure 12* highlights the most important components on the Interposer board.

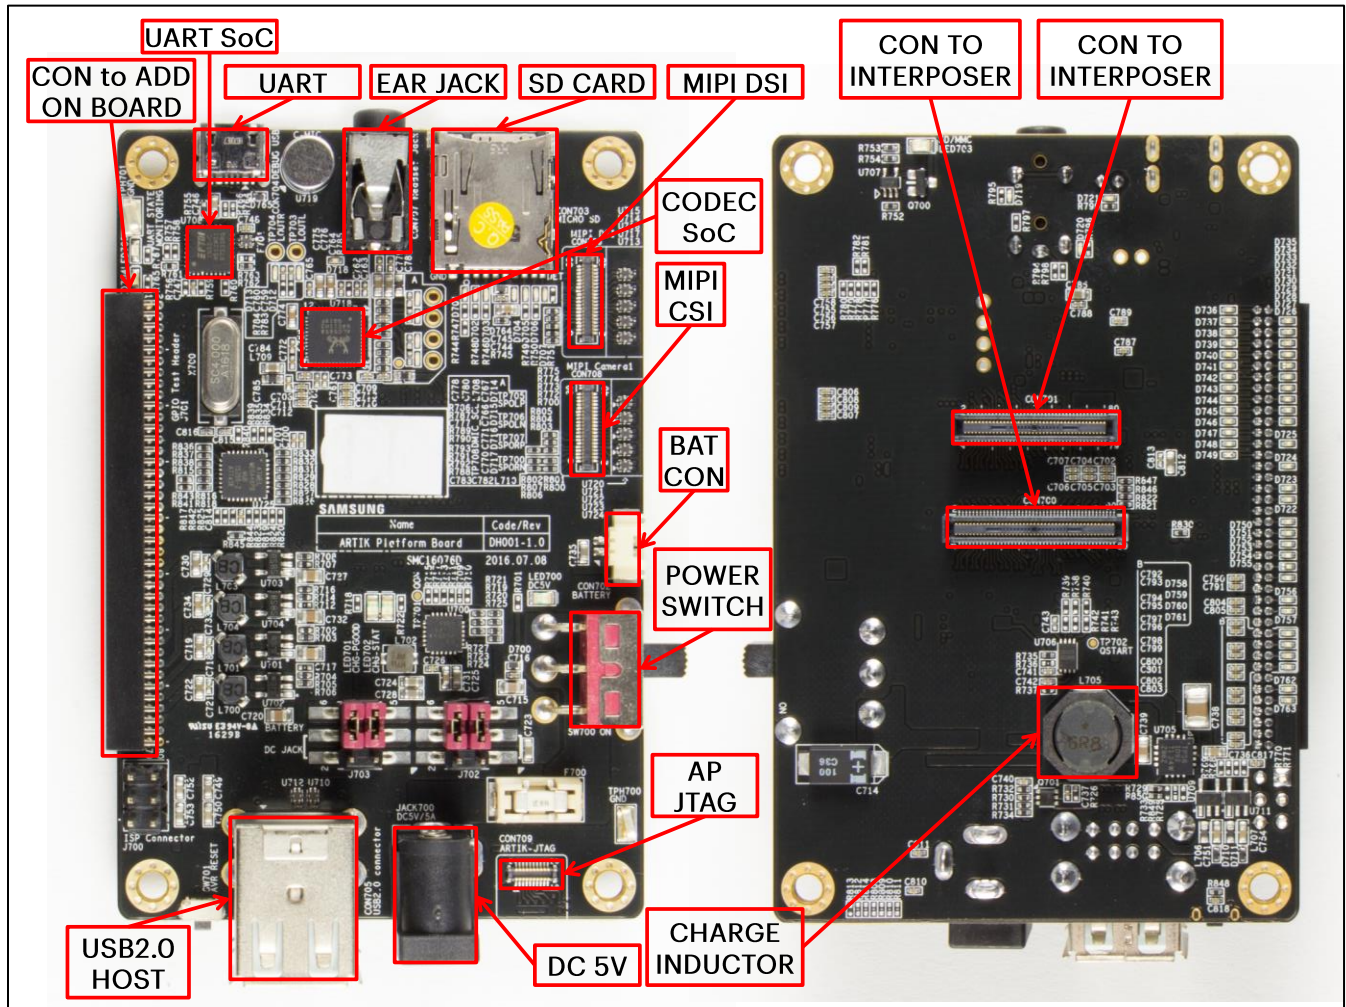


Figure 12. ARTIK 530 Development Board Platform Board Left Bottom Side, Right Top Side

### CONFIGURATION OF EXTERNAL POWER SOURCE

Through selection of the Jumpers JP1-JP4, located on J702, J703, the power source can be selected. When power is provided from a DC-5V Adapter or a Battery, all jumpers are in the 1-2 position. When power is provided from the DC-5V Adapter and at the same time a battery is connected that is being charged (Battery Charging Mode), all jumpers are in the 2-3 position.

When the jumpers [JP1-JP4] are in the 1-2 position, (DC-5V Adapter mode or Battery mode) either connect a battery or the DC-5V adapter but never both at the same time. When the jumpers [JP1-JP4] are in the 2-3 position, (Battery Charging Mode) connect both a battery and the DC-5V Adapter.

*Figure 13* shows the default settings and how to switch between the settings. When the ARTIK 530 Development Board is used with an external power adapter make certain that you use a 5V-5A adapter with a 2.1x5.5mm plug.

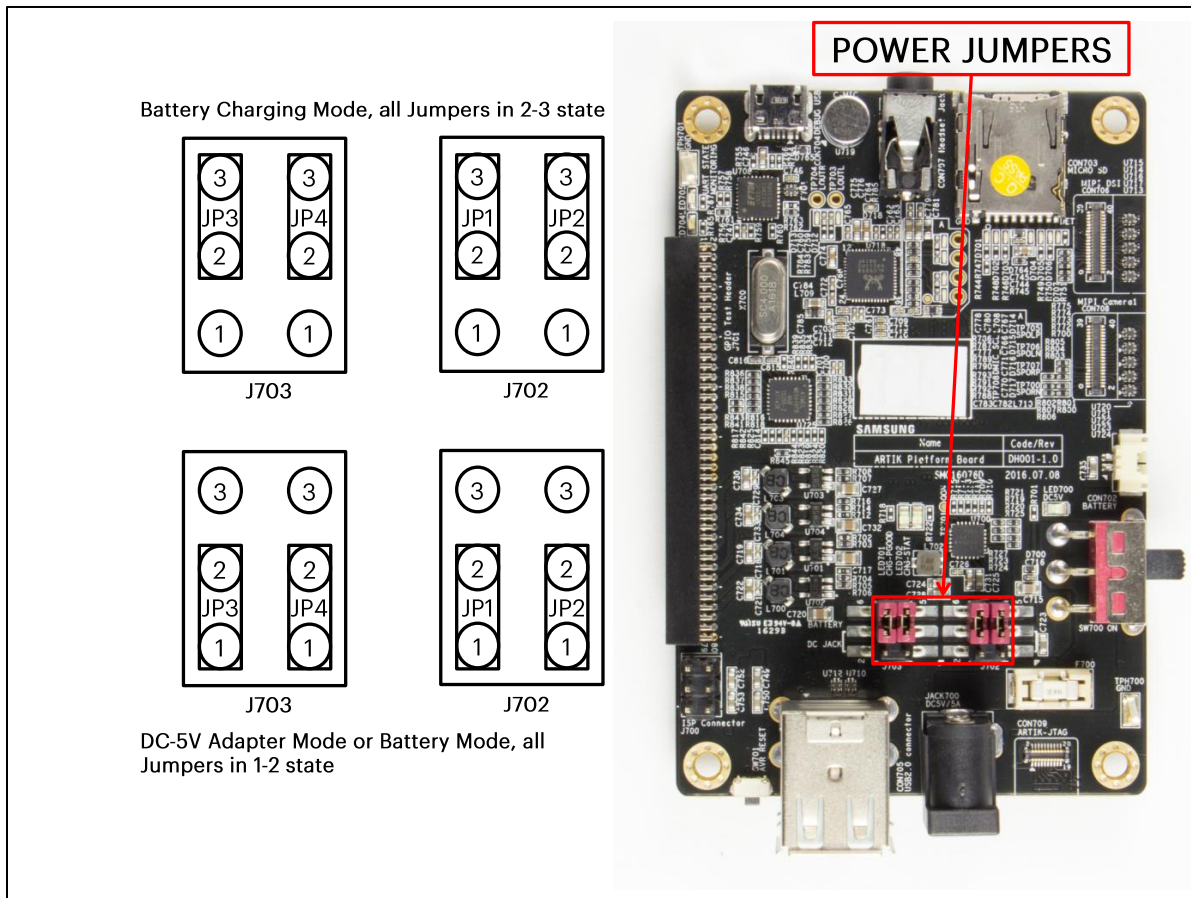


Figure 13. Jumper Interface locations JP1-JP4 on Connectors J702, J703 of the Platform Board

**Warning :** whenever JP1-JP4 are all in 1-2 mode, connect either a Battery or a DC-5V Adapter, but NEVER connect both at the same time!

### SD-CARD INTERFACE

The Platform board has one SD-CARD interface supporting SD3.0 located as can be seen in [Figure 14](#).

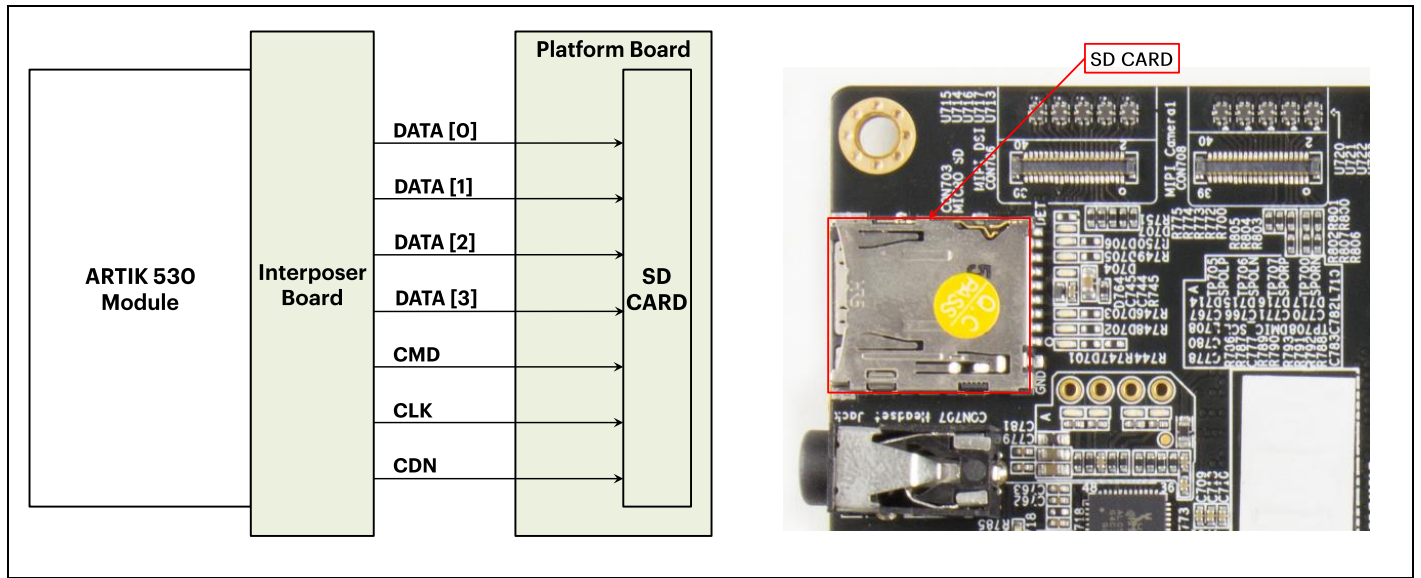


Figure 14. SD-Card Interface location on the Platform Board

### EARJACK INTERFACE

The Platform board has one 4 pin ear jack interface supporting stereo audio as can be seen in [Figure 15](#).

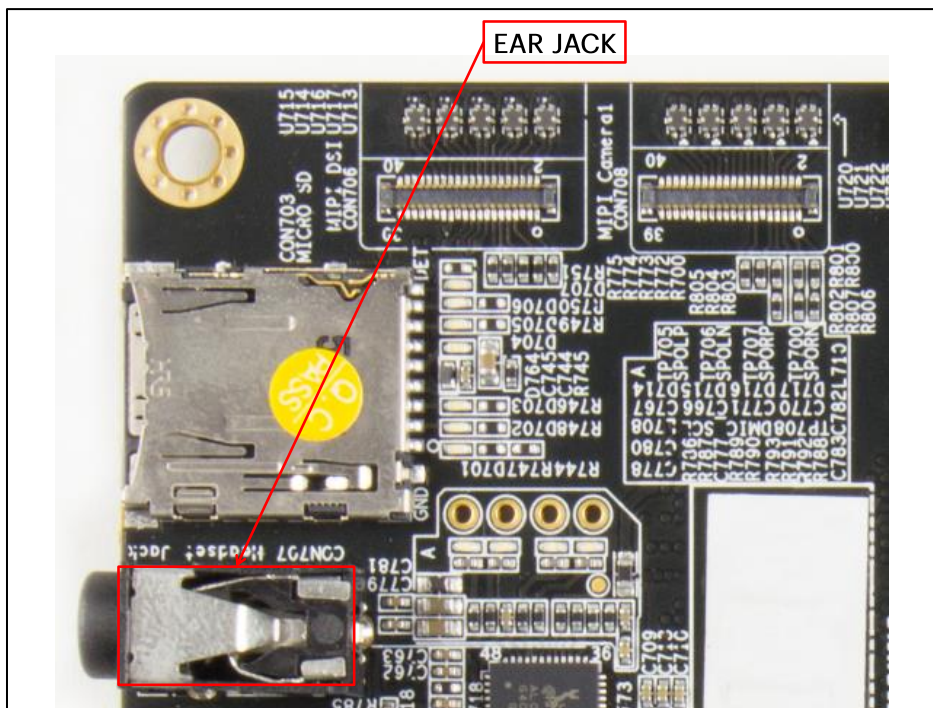


Figure 15. Ear Jack Interface location on the Platform Board

### MIPI DSI/CSI INTERFACE

The Platform board has one MIPI DSI and one MIPI CSI interface. The location of the DSI Display interface can be seen in [Figure 16](#). The location of the MIPI CSI interface can be seen in [Figure 17](#). The MIPI DSI interface can operate at a maximum

resolution of WUXGA (1920x1200), whereas the MIPI CSI interface can have a static resolution of 5M pixels or a dynamic resolution for video capturing of 1080P.

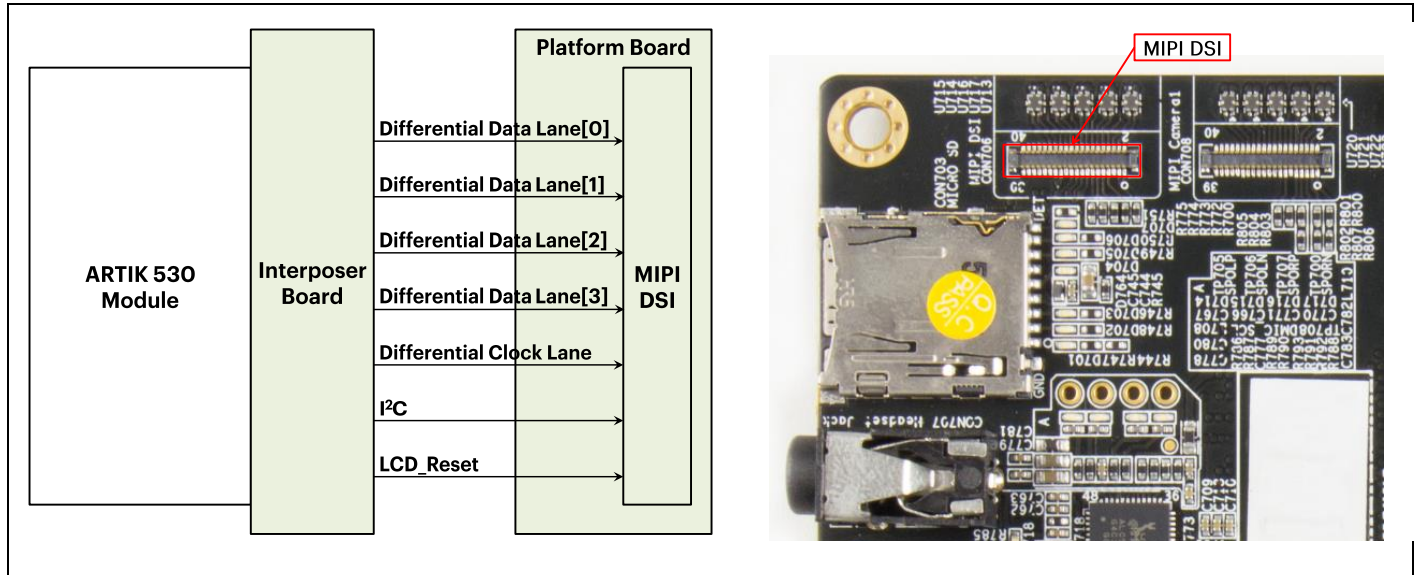


Figure 16. MIPI DSI Interface location on the Platform Board

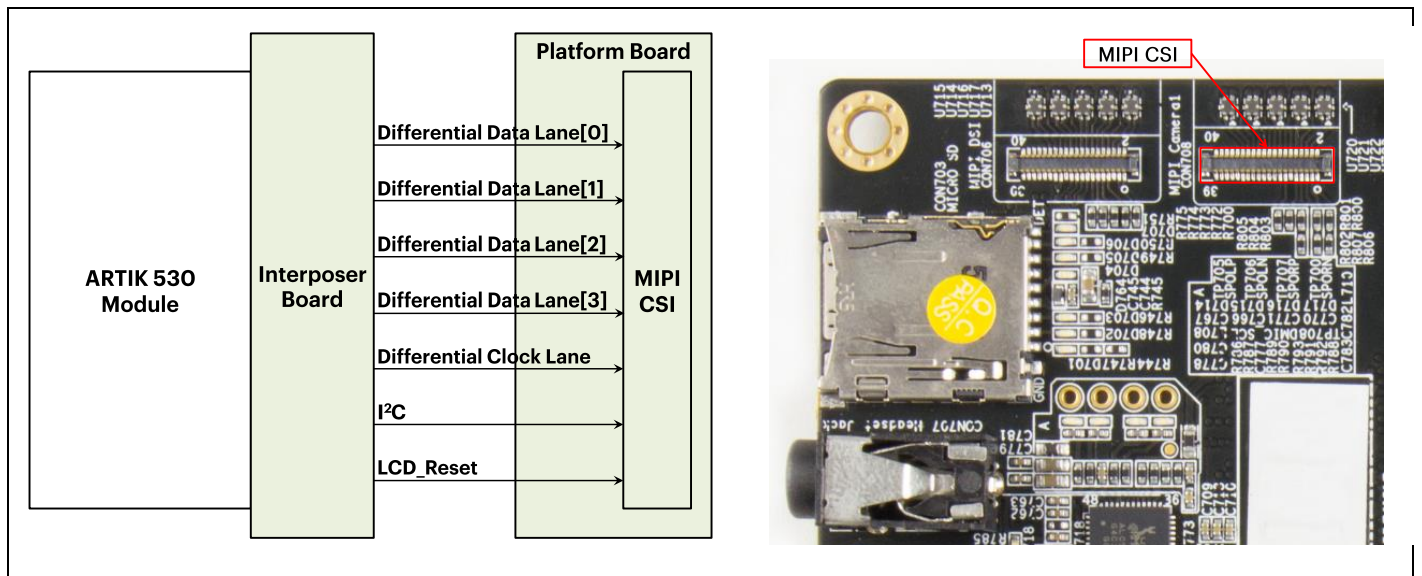


Figure 17. MIPI CSI Interface Location on the Platform Board

## USB HOST 2.0 INTERFACE

The Platform board has one USB 2.0 Interface. The location of the USB 2.0 interface can be seen in .

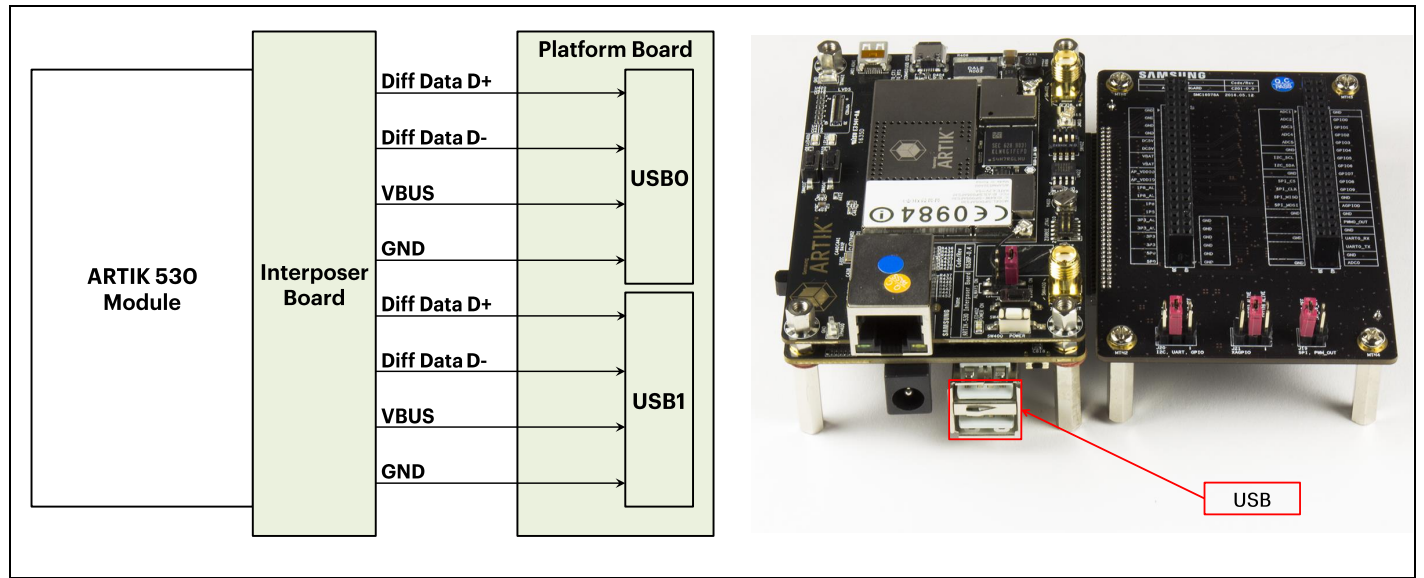


Figure 18 USB2.0 Interface location on the Platform Board

### CONNECTOR TO IF BOARD INTERFACE

The Platform board has one expansion connector that can be seen in *Figure 19*. This connector enables for expansion possibilities.

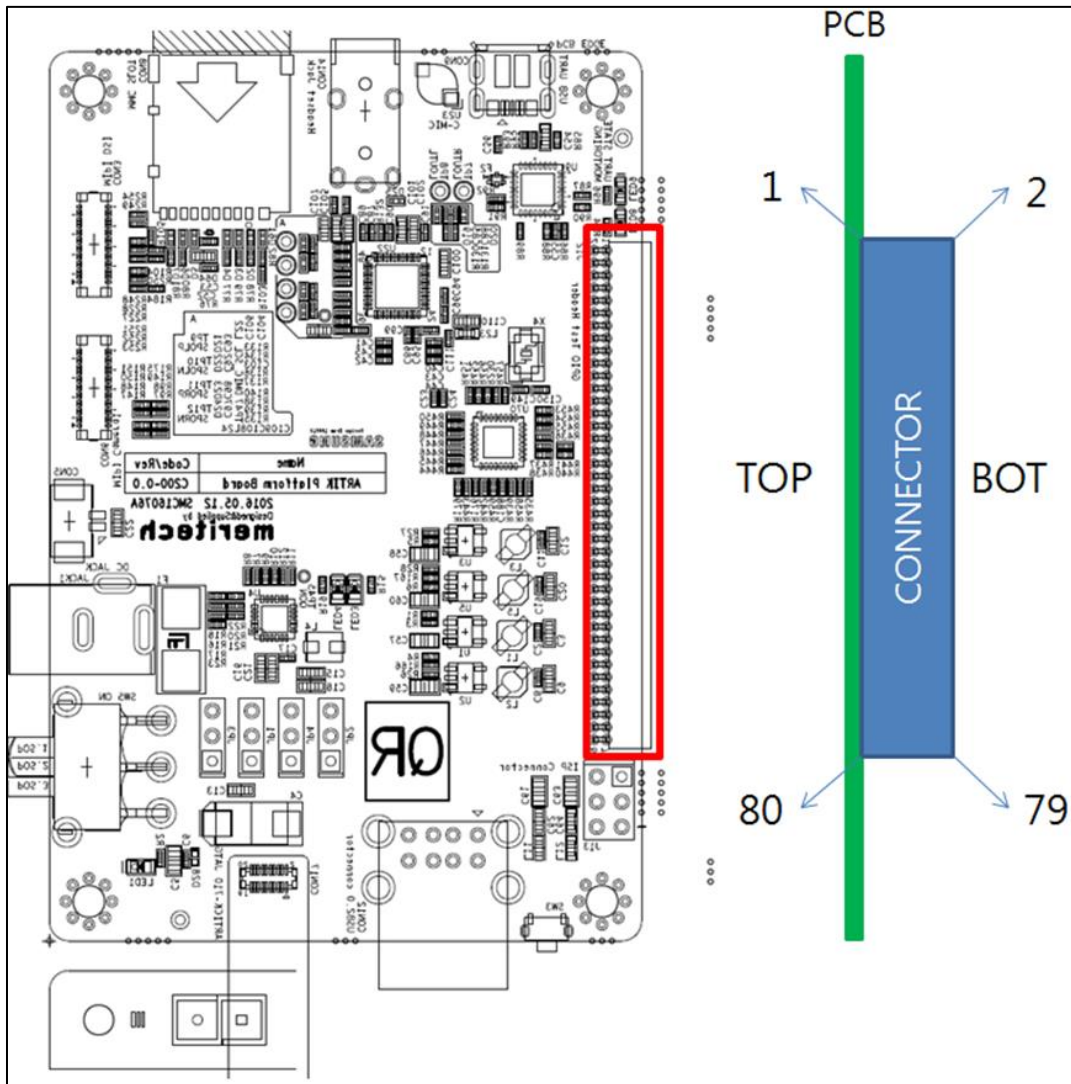


Figure 19. Expansion Connector Interface location on the Platform Board

# ARTIK 530 DEVELOPMENT ENVIRONMENT IF BOARD

## PREVIEW ON THE ARTIK IF BOARD

Figure 20 shows the highlights of the connector IF board. In addition Table 4 with J2 and Table 5 with J3 show the pinout of the connectors with its meaning.

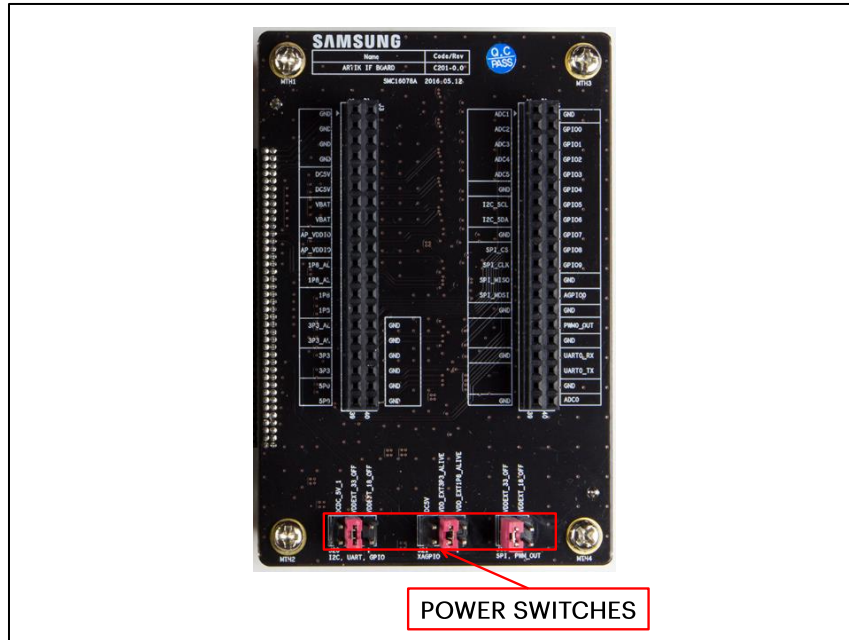


Figure 20. ARTIK 530 Development Board IF Board

Table 4. Connector J2

Pin Name	Pin Number	Pin Number	Pin Name
XADC1	1	2	GND
XADC2	3	4	ADD_XGPIO0
XADC3	5	6	ADD_XGPIO1
XADC4	7	8	ADD_XGPIO2
XADC5	9	10	ADD_XGPIO3
GND	11	12	ADD_XGPIO4
ADD_XI2C0_SCL	13	14	ADD_XGPIO5
ADD_XI2C0_SDA	15	16	ADD_XGPIO6
GND	17	18	ADD_XGPIO7
ADD_XSPI0_CS	19	20	ADD_XGPIO8
ADD_XSPI0_CLK	21	22	ADD_XGPIO9
ADD_XSPI0_MISO	23	24	GND
ADD_XSPI0_MOSI	25	26	ADD_XAGPIO0
GND	27	28	GND
NC	29	30	ADD_XPWM0_OUT
MICOM_GPIO1	31	32	GND
GND	33	34	ADD_XUART0_RX
NC	35	36	ADD_XUART0_TX
NC	37	38	GND
GND	39	40	XADC0

Table 5. Connector J3

Pin Name	Pin Number	Pin Number	Pin Name
GND	1	2	MICOM_GPIO1
GND	3	4	MICOM_GPIO2
GND	5	6	MICOM_GPIO3
GND	7	8	MICOM_GPIO4
DC5V	9	10	MICOM_GPIO5
	11	12	MICOM_GPIO6
VBAT_MAIN	13	14	MICOM_GPIO7
	15	16	MICOM_GPIO8
AP_VDDIO	17	18	MICOM_GPIO9
	19	20	MICOM_GPIO10
VDD_EXT1P8_ALIVE	21	22	MICOM_GPIO11
	23	24	MICOM_GPIO12
VDD_EXT1P8	25	26	MICOM_GPIO13
	27	28	MICOM_GPIO14
VDD_EXT3P3_ALIVE	29	30	GND
	31	32	GND
VDD_EXT3P3	33	34	GND
	35	36	GND
VDD_EXT5P0_1	37	38	GND
	39	40	GND

### CONFIGURATION OF EXTERNAL POWER SOURCE

Through selection of the Jumpers J20 and J21 you can choose the IO power source (I<sup>2</sup>C, UART GPIO) or the XGPIO power source of either, 1.8V, 3.3V or 5V. [Figure 21](#) shows how to set the various jumpers to switch between power sources.

Description	Power Source	Default Value	Connect
I2C, UART, GPIO	DCDC_5V_1	—	Place Jumper J20:[1-2]
	VDDEXT_33_OFF	<input checked="" type="checkbox"/>	Place Jumper J20:[3-4]
	VDDEXT_18_OFF	—	Place Jumper J20:[5-6]
XAGPIO	DC5V	—	Place Jumper J21:[1-2]
	VDD_EXT3P3_ALIVE	<input checked="" type="checkbox"/>	Place Jumper J21:[3-4]
	VDD_EXT1P8_ALIVE	—	Place Jumper J21:[5-6]

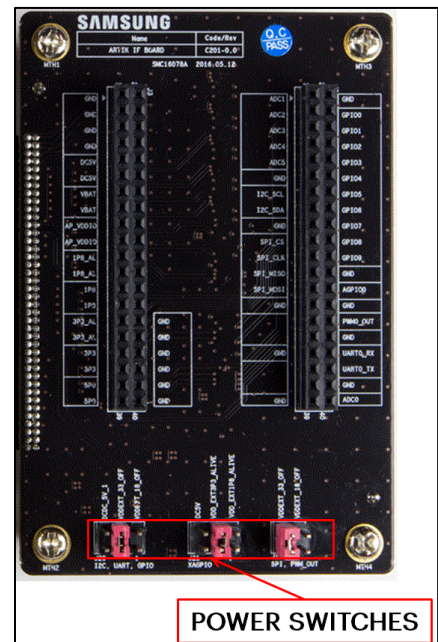


Figure 21. Jumper Interface locations J20, J21 on the IF Board




# ARTIK 530 DEVELOPMENT BOARD BOOTING

This section will describe how to start working with your ARTIK 530 Development Environment by setting up a serial connection on your development PC and booting up the ARTIK 530 Development Environment.

## SERIAL PORT CONNECTION

As a first step we will select a serial console to communicate with the ARTIK 530 Module that is located on the ARTIK 530 Development Environment. You can use a typical Linux<sup>®</sup> serial console as depicted in [Figure 22](#), using the serial connector. If your PC does not have a serial port, use the micro-USB B serial cable instead. To use the serial USB cable you need to install the associated device driver. [Figure 23](#) depicts the USB serial cable and where it is hooked up to the Platform Board.

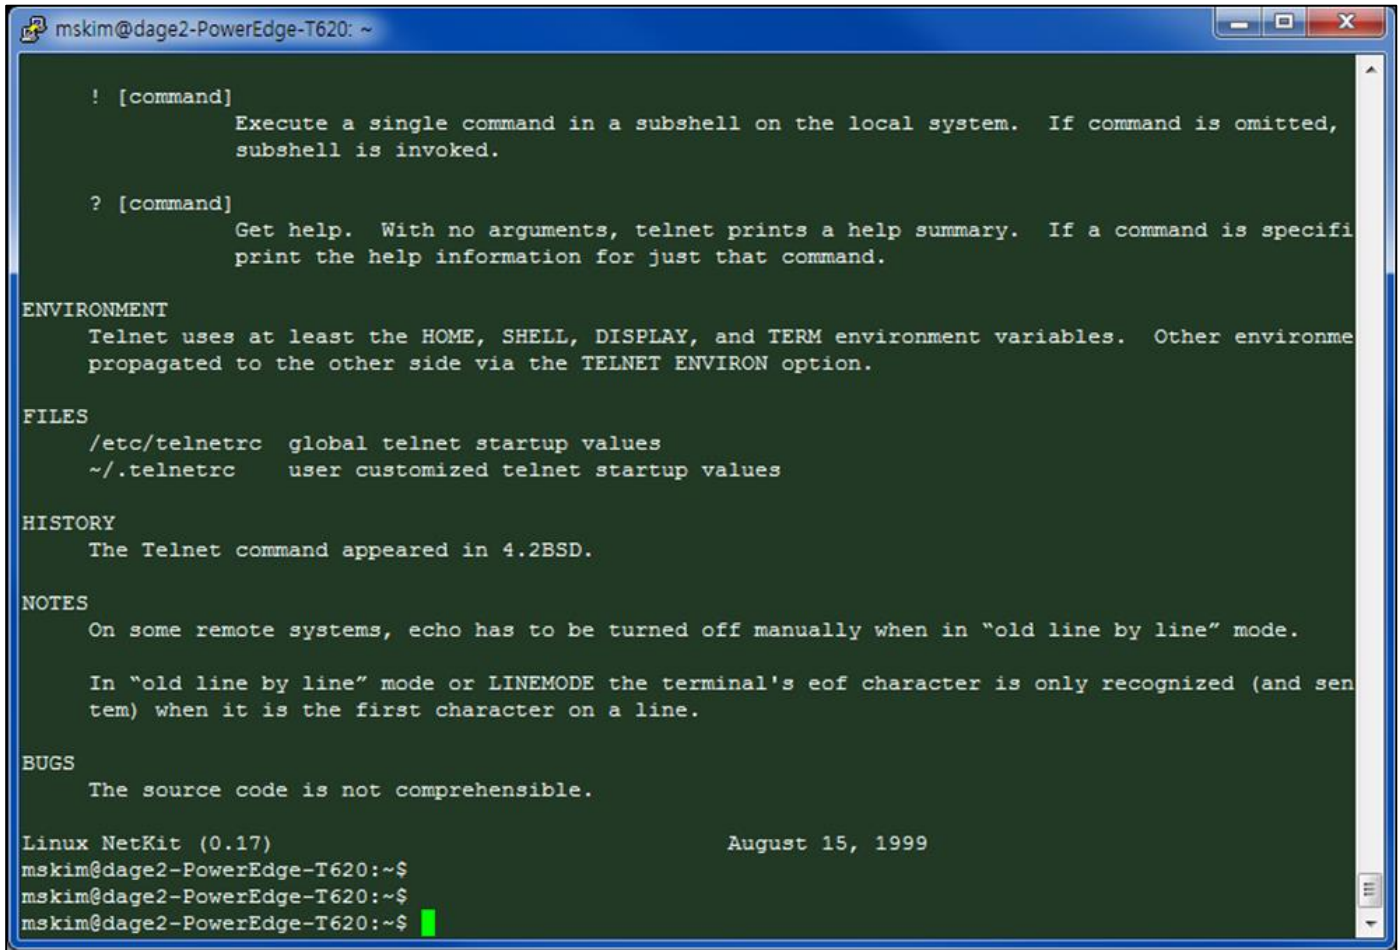

```
mskim@dage2-PowerEdge-T620: ~  
  
! [command]  
    Execute a single command in a subshell on the local system.  If command is omitted,  
    subshell is invoked.  
  
? [command]  
    Get help.  With no arguments, telnet prints a help summary.  If a command is specifi  
    print the help information for just that command.  
  
ENVIRONMENT  
    Telnet uses at least the HOME, SHELL, DISPLAY, and TERM environment variables.  Other environme  
    propagated to the other side via the TELNET ENVIRON option.  
  
FILES  
    /etc/telnetrc  global telnet startup values  
    ~/.telnetrc   user customized telnet startup values  
  
HISTORY  
    The Telnet command appeared in 4.2BSD.  
  
NOTES  
    On some remote systems, echo has to be turned off manually when in "old line by line" mode.  
  
    In "old line by line" mode or LINEMODE the terminal's eof character is only recognized (and sen  
    tem) when it is the first character on a line.  
  
BUGS  
    The source code is not comprehensible.  
  
Linux NetKit (0.17)                                August 15, 1999  
mskim@dage2-PowerEdge-T620:~$  
mskim@dage2-PowerEdge-T620:~$  
mskim@dage2-PowerEdge-T620:~$ █
```

Figure 22. Typical Linux<sup>®</sup> Serial Console



Figure 23. USB Serial Cable hooked up to the Platform Board


## TERMINAL EMULATOR INSTALLATION

Setting up a connection with the ARTIK 530 Module can be done in a wired or wireless manner. Here we choose to install PuTTY a free serial console. The software can be downloaded from <http://www.putty.org/>. Once downloaded go through the following steps:

1. Open the device manager on the control panel.
2. When using a PC install the USB to Serial driver. The driver can be found at the following location: ([http://www.ftdichip.com/Drivers/CDM/CDM21218\\_Setup.zip](http://www.ftdichip.com/Drivers/CDM/CDM21218_Setup.zip)). For other drivers please visit (<http://www.ftdichip.com/Drivers/D2XX.htm>).
3. Check the COM port number on your PC when you connect the USB serial cable. In our case the COM port allocated is COM9.



4. Set the PuTTY configuration as follows:
  - a. Set the "Serial line" as the COM port number found in step 3.
  - b. Set the COM speed to "115200".
  - c. Set the connection type to "Serial".
  - d. Save the session under ARTIK-Pro.
5. Select your saved session and click the "Open" button.

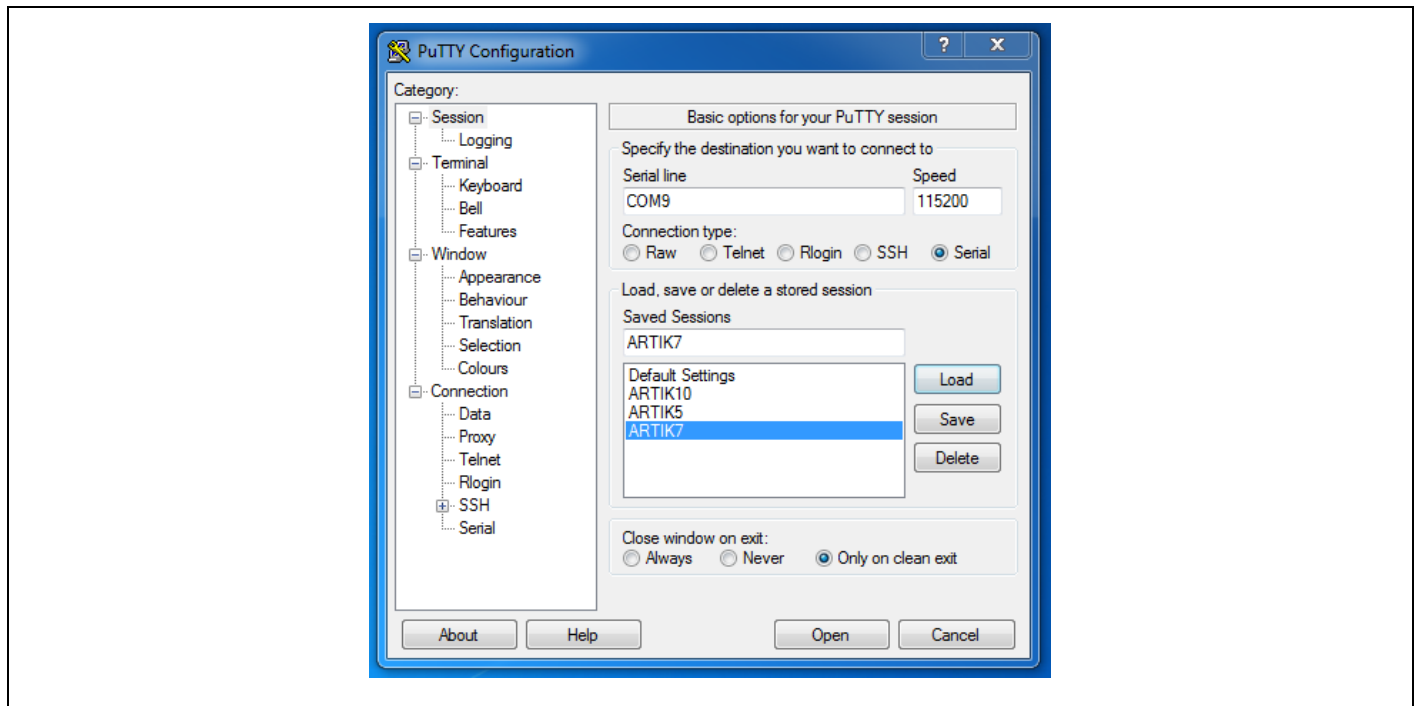

## POWER ON THE ARTIK 530 DEVELOPMENT BOARD

To power up the ARTIK 530 Development Environment you first have to connect the power adaptor and the Platform Board as shown in [Figure 24](#). In addition make certain that the jumpers JP1-JP4 located on the Platform Board are set in state 1-2 see [Configuration of External Power Source](#) section for details.

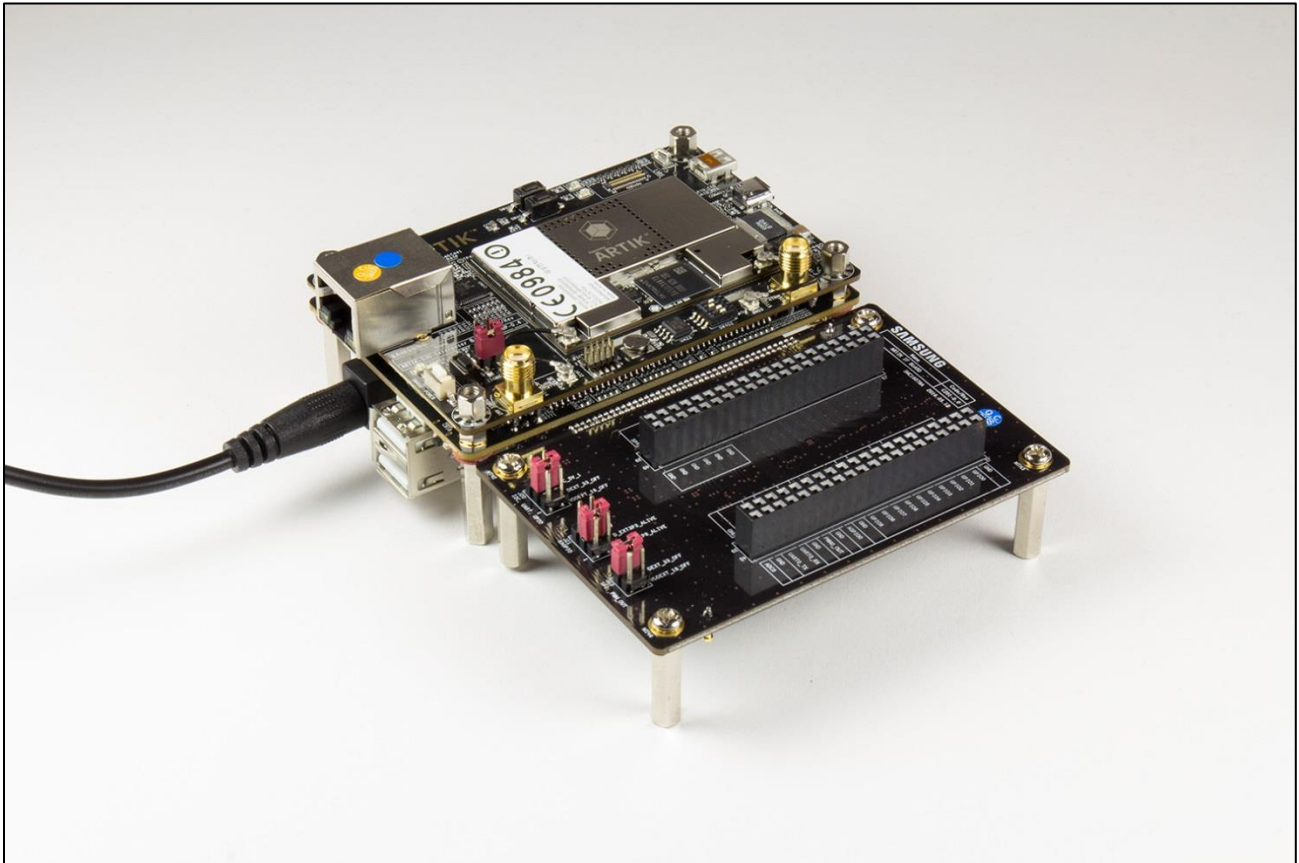


Figure 24 Connection Power adaptor with development Board

Turn on the power switch as shown in [Figure 25](#).

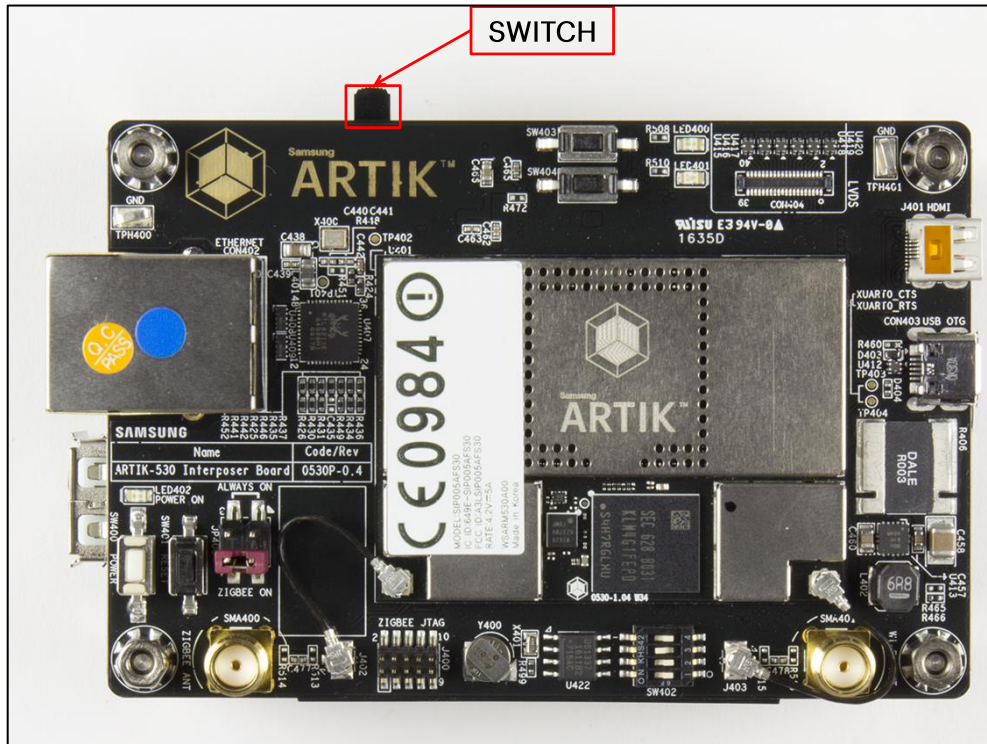


Figure 25. Power switch location on the development Board

Once the power switch is turned on, push the power button (SW2), as depicted in [Figure 26](#), for about 1 second. Once released the booting process will start and you should see booting messages from your console, using the serial connection that you previously established.

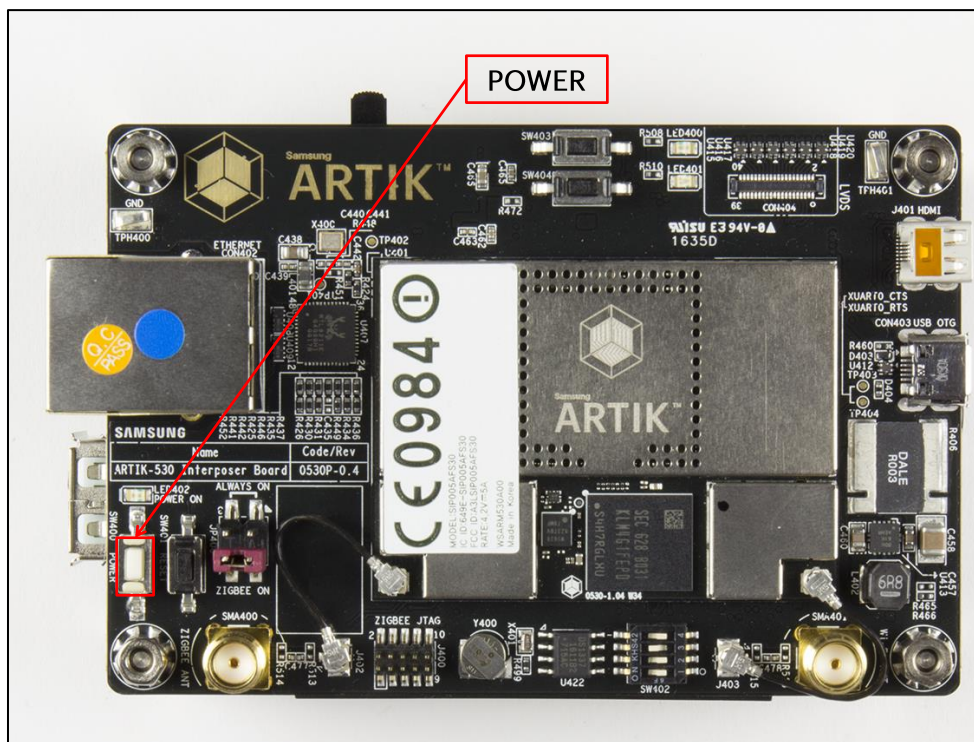


Figure 26. Power button location on the development Board

## LEGAL INFORMATION

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH THE SAMSUNG ARTIK™ DEVELOPMENT BOARD AND ALL RELATED PRODUCTS, UPDATES, AND DOCUMENTATION (HEREINAFTER “SAMSUNG PRODUCTS”). NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. THE LICENSE AND OTHER TERMS AND CONDITIONS RELATED TO YOUR USE OF THE SAMSUNG PRODUCTS ARE GOVERNED EXCLUSIVELY BY THE SAMSUNG ARTIK™ DEVELOPER LICENSE AGREEMENT THAT YOU AGREED TO WHEN YOU REGISTERED AS A DEVELOPER TO RECEIVE THE SAMSUNG PRODUCTS. EXCEPT AS PROVIDED IN THE SAMSUNG ARTIK™ DEVELOPER LICENSE AGREEMENT, SAMSUNG ELECTRONICS CO., LTD. AND ITS AFFILIATES (COLLECTIVELY, “SAMSUNG”) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION CONSEQUENTIAL OR INCIDENTAL DAMAGES, AND SAMSUNG DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, ARISING OUT OF OR RELATED TO YOUR SALE, APPLICATION AND/OR USE OF SAMSUNG PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATED TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT, OR OTHER INTELLECTUAL PROPERTY RIGHT.

SAMSUNG RESERVES THE RIGHT TO CHANGE PRODUCTS, INFORMATION, DOCUMENTATION AND SPECIFICATIONS WITHOUT NOTICE. THIS INCLUDES MAKING CHANGES TO THIS DOCUMENTATION AT ANY TIME WITHOUT PRIOR NOTICE. THIS DOCUMENTATION IS PROVIDED FOR REFERENCE PURPOSES ONLY, AND ALL INFORMATION DISCUSSED HEREIN IS PROVIDED ON AN “AS IS” BASIS, WITHOUT WARRANTIES OF ANY KIND. SAMSUNG ASSUMES NO RESPONSIBILITY FOR POSSIBLE ERRORS OR OMISSIONS, OR FOR ANY CONSEQUENCES FROM THE USE OF THE DOCUMENTATION CONTAINED HEREIN.

Samsung Products are not intended for use in medical, life support, critical care, safety equipment, or similar applications where product failure could result in loss of life or personal or physical harm, or any military or defense application, or any governmental procurement to which special terms or provisions may apply.

This document and all information discussed herein remain the sole and exclusive property of Samsung. All brand names, trademarks and registered trademarks belong to their respective owners. For updates or additional information about Samsung ARTIK™, contact the Samsung ARTIK™ team via the Samsung ARTIK™ website at [www.artik.io](http://www.artik.io).

Copyright © 2017 Samsung Electronics Co., Ltd.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electric or mechanical, by photocopying, recording, or otherwise, without the prior written consent of Samsung Electronics.

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Development Boards & Kits - ARM category](#):*

*Click to view products by [Seeed Studio manufacturer](#):*

Other Similar products are found below :

[SAFETI-HSK-RM48](#) [PICOHOBBITFL](#) [CC-ACC-MMK-2443](#) [TWR-MC-FRDMKE02Z](#) [EVALSPEAR320CPU](#) [EVB-SCMIMX6SX](#)  
[MAX32600-KIT#](#) [TMDX570LS04HDK](#) [TXSD-SV70](#) [OM13080UL](#) [EVAL-ADUC7120QSPZ](#) [OM13082UL](#) [TXSD-SV71](#)  
[YGRPEACHNORMAL](#) [OM13076UL](#) [PICODWARFFL](#) [YR8A77450HA02BG](#) [3580](#) [32F3348DISCOVERY](#) [ATTINY1607](#) [CURIOSITY](#)  
[NANO](#) [PIC16F15376](#) [CURIOSITY NANO BOARD](#) [PIC18F47Q10](#) [CURIOSITY NANO](#) [VISIONSTK-6ULL V.2.0](#) [80-001428](#) [DEV-17717](#)  
[EAK00360](#) [YR0K77210B000BE](#) [RTK7EKA2L1S00001BE](#) [MAX32651-EVKIT#](#) [SLN-VIZN-IOT](#) [LV18F V6 DEVELOPMENT SYSTEM](#)  
[READY FOR AVR BOARD](#) [READY FOR PIC BOARD](#) [READY FOR PIC \(DIP28\)](#) [EVB-VF522R3](#) [AVRPLC16 V6 PLC SYSTEM](#)  
[MIKROLAB FOR AVR XL](#) [MIKROLAB FOR PIC L](#) [MINI-AT BOARD - 5V](#) [MINI-M4 FOR STELLARIS](#) [MOD-09.Z](#) [BUGGY +](#)  
[CLICKER 2 FOR PIC32MX + BLUETOOT](#) [1410](#) [LETS MAKE PROJECT PROGRAM. RELAY PIC](#) [LETS MAKE - VOICE](#)  
[CONTROLLED LIGHTS](#) [LPC-H2294](#) [DSPIC-READY2 BOARD](#) [DSPIC-READY3 BOARD](#) [MIKROBOARD FOR ARM 64-PIN](#)  
[MIKROLAB FOR AVR](#)