

Ferrule Data Chart for Bel-Stewart Ferrule Hand Tool

Cable Dia. ±.005	Ferrule Part Number	Hand Tool Part Number	Ferrule Crimp Inserts		Locator Plate Part Number	Complete Ass'y. Part Number
			Stationary Insert p/n	Ram Insert p/n		
.125	F-210-205	2940211-01	2912515-01	2912516-01	2912517-01	2912501-01
.135					2912518-01	2912502-01
.145					2912519-01	2912503-01
.155					2912522-01	2912504-01
.165					2912520-01	2912521-01
.175	2912524-01		2912506-01			
.185	F-235-205-L		2912525-01	2912526-01	2912527-01	2912507-01
.195					2912528-01	2912508-01
.205					2912529-01	2912509-01
.215					2912532-01	2912510-01
.225		2912530-01			2912531-01	2912533-01
.235	2912534-01		2912512-01			
.245	F-270-205	2912535-01	2912536-01	2912537-01	2912513-01	
.255				2912538-01	2912514-01	
.255	F-270-205	2912535-01	2912536-01	2912540-01*	2912539-01	
.265	F-300-275	2912582-01	2912583-01	2912584-01	2912585-01	



NOTE:

1. If cable diameter falls in between sizes shown, round up to next .005 increment.
2. (*) at part #2912540-01 = 4mm hex nut; no Locator Plate needed.

Bel-Stewart Connector Ferrule Hand Tool Instructions

P/N 2940211-01

Manual #290005 - Rev. A2

Bel-Stewart Connector
11118 Susquehanna Trail South
Glen Rock, PA 17327-9199
(717) 235-7512

ASSEMBLY INSTRUCTIONS

Stationary
Crimp Insert
29125xx-01
(See chart on
back page)



Locator Plate
29125xx-01
(See chart on
back page)



Ram
Insert
29125xx-01
(See chart on
back page)



1



2



3



4



5

1. Position “Stationary Crimp Insert” as shown.
2. Install “Insert” with screw. Use 2.5mm Allen wrench.
3. Position “Ram Crimp Insert” as shown.
4. Place “Insert” on hand tool label side & position “Locator Plate” on opposite side.
5. Install “Insert” & “Plate” with screw. Use 2.5mm Allen wrench.



A

B

This tool incorporates an eccentric axle and an adjustment wheel to adjust and re-calibrate to ensure correct crimp performance.

Should adjustment be necessary, the following procedure should be followed:

1. Loosen and remove the Combination Head screw (A).
2. Using a screw driver, turn the numbered adjustment wheel to the next higher/lower number (B).
3. Re-install the Combination Head Screw and tighten.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Crimpers](#) category:

Click to view products by [Stewart Connector / Bel](#) manufacturer:

Other Similar products are found below :

[576771-1](#) [576788-2](#) [010-0041](#) [010-0055](#) [010-0096](#) [604228-1](#) [M225202-37](#) [CT150-2-D02](#) [CT150-4-LY2](#) [CT150-6-RH07](#) [M322](#) [63484-3701](#)
[63800-0140](#) [63800-8355](#) [63811-3275](#) [63811-3376](#) [63811-6375](#) [63811-6475](#) [63811-7875](#) [63811-8175](#) [63811-8875](#) [63819-0475](#) [63819-1875](#)
[63819-2875](#) [63819-4375](#) [63819-4475](#) [63823-3475](#) [63823-5175](#) [63823-6375](#) [63823-8375](#) [63827-5375](#) [64001-0975](#) [64001-2175](#) [64001-4175](#)
[662903-2](#) [690142-4](#) [690602-6](#) [D38999/20WA98JB-LC](#) [7-1633664-2](#) [7-22278-0](#) [7-22280-5](#) [7-240641-3](#) [762637-1](#) [808714-1](#) [8-1633117-3](#)
[853721-6](#) [91362-1](#) [995-0001-187](#) [1-1633932-5](#) [999-50-020083](#)