


Production Torque Wrenches

PROPER USE GUIDELINES

Cumulative Trauma Disorders can result from the prolonged use of manually powered hand tools. Hand tools are intended for occasional use and low volume applications. A wide selection of powered application equipment for extended-use, production operations is available.

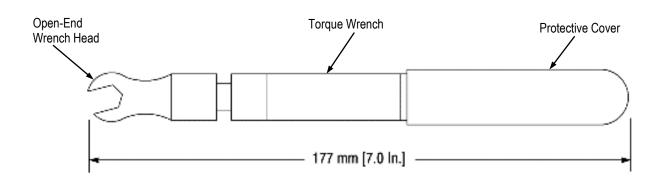

TE	PREVIOUS		WREN	CH SIZE	
CONNECTIVITY PART NUMBER	PART NUMBER	WRENCH DESCRIPTION	mm	[inches]	PRESET TORQUE
1055276-1	2098-0351-54	Production Torque Wrench	6.4	1/4	14 in-lbs ±2 lb
1055419-1	2098-5065-54	For SMA (OSM) Type Connectors	7.9	5/16	8 inlbs +1.5/5 lb
1055480-1	2098-5304-54	For OSSM Type Connectors	6.4	1/4	5 inlbs ±.5 lb
1055512-1	2098-5619-54	For SMA (OSM) Hermetic Type Connectors	7.1	9/32	30 inlbs ±2 lb
1055546-1	2098-5830-54	Production Torque Wrench Kit	6.4 and 8.0	1/4 and 5/16	8 inlbs +1.5/5 lb
1055790-1	2598-5026-54	For SC/N Type Connectors (Hex Nut Design)	20.6	13/16	14 inlbs ±2 lb
1055791-1	2598-5027-54	For TNC Type Connectors (Hex Nut Design)	15.9	5/8	14 inlbs ±2 lb
1055826-1	2598-5160-54	Production Torque Wrench	4.0	5/32	8 inlbs +1.5/5 lb
1055868-1	2598-5298-54	For TNC Type Connectors (Hex Nut Design)	14.3	9/16	14 inlbs±2 lb
1061789-1	7098-5031-54	For 7mm Type Connectors	19.1	3/4	14 inlbs ±2 lb
1490262-1	2598-5383-50	Production Torque Wrench	7.9	5/16	15 inlbs ±2 lb

Figure 1

1. INTRODUCTION

These production torque wrenches are used to properly install or disassemble the connectors listed in Figure 1.

Figure 1 also contains the TE part numbers for the wrenches, the previous part numbers for the wrenches, wrench size, and the preset torque for each wrench.



NOTE

Dimensions on this sheet are in metric units [with U.S. customary units in brackets], unless otherwise noted.

Reason for revision is provided in Section 5, REVISION SUMMARY.

2. DESCRIPTION

Each production torque wrench contains a protective cover, a torque wrench, and an interchangeable head.

Refer to Figure 2 for the appropriate replacement wrench head part numbers.

The wrenches are designed to be used in the *clockwise* or *counterclockwise* direction.



3. OPERATION OF THE WRENCHES



NOTE

If a wrench has not been used recently, move the wrench head back and forth several times, listening for audible "clicks." Clicking the wrench head back and forth spreads lubricant throughout the internal mechanism to improve wrench performance.

TE CONNECTIVITY	WRENCH SIZE		
PART NUMBER	mm	[inches]	
1406504-1	6.4	[1/4]	
1406504-2	8.0	[5/16]	
1406504-3	9.6	[3/8]	
1406504-4	12.8	[1/2]	
1406504-5	19.6	[3/4]	
1406504-6	11.2	[7/16]	
1406504-7	7.1	[9/32]	
1406504-8	10.4	[13/32]	
1406504-9	17.6	[11/16]	
1-1406504-0	14.6	[9/16]	
1-1406504-1	8.8	[11/32]	
1-1406504-2	16.0	[5/8]	
1-1406504-3	20.8	[13/16]	
1-1406504-4	4.0	[5/32]	
1-1406504-5	6.1	[15/64]	

Figure 2

Using the appropriate sized head (Figure 1), turn the wrench clockwise (or counterclockwise) until there is an audible "click." This "click" indicates that the proper torque has been achieved.



CAUTION

Do NOT over-tighten the connector with the torque wrench. Over-tightening the wrench could result in inaccurate torque settings.



CAUTION

Do not use or re-terminate damaged connectors.

4. REPLACEMENT

Remove the wrench head by pulling it off the production torque wrench. Then replace the head with the appropriate head listed in Figure 2.

Order replacement parts through your TE Representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:

CUSTOMER SERVICE (038-035)
TYCO ELECTRONICS CORPORATION
PO BOX 3608
HARRISBURG PA 17105-3608

5. REVISION SUMMARY

- Updated document to corporate requirements
- Added tolerances to table in Figure 1

Rev G 2 of 2

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Spanners category:

Click to view products by TE Connectivity manufacturer:

Other Similar products are found below:

R282320030 1406504-7 PR23350 K8901M-41 K8901M-46 05075624001 9965 9968 9965 9968 BT-A-6010CAGE BT-BS-609WT BT-A-6000B BT-BS-610R BT-BS-610RT 29312 28M-17 28M-19 4040M-13-17 4040M-16-18 6700SM-6 6700SM-7 6960-W 8074 C IP 9029 C 9031-T 9070 PC 9071 PC 9073 C 9073 PC A6700DM-5.5 A7402DM-10 A7402DM-9 BT-ST-302D 30313 MBS09 CRES.FR28SWEU 1320RM-22-24 05003500001 05003529001 05073230001 AV07010 SBS80-17 CPW12 9031P TWM-08 TWM-03 2820V13 2820V17 28MV-10