



EP-SMA CONNECTOR(2081886-1) INSTALLATION MANUAL

- 1. A. Strip the cable according to the size shown in the left drawing. be careful not to cut into the outer shield.
 - B. Soak the outer shield of the cable in tin.
 - C. After leaching, peel off the center conductor and proceed with the center conductor C0.30 chamfering, and finally the remaining sheath and outer shielding remove from the central conductor. place the sleeve over the cable.Remove from the central conductor.
 - D. Place the sleeve over the cable.

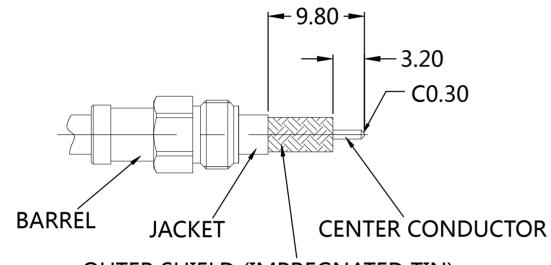


OUTER SHIELD (IMPREGNATED TIN)
RECOMMENDED STRIPPING DIMENSIONS


- 2. A. As shown in the left figure, put the welding cup on the outer shielding layer of the cable first.
 - B. When welding the cup, control the end surface of the cup with a fixture parallel to the outer shielding end face of the cable.
 - C. Control welding time and temperature, and remove excess with tools make sure the surface of the solder cup is smooth and clean when the solder cup is spilled excess residue in welding area.

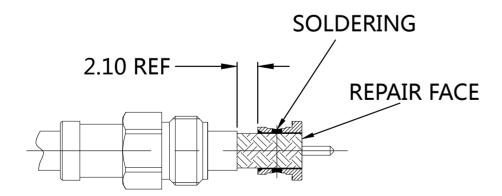


- 3.A. As shown in the figure on the left, first attach the insulator to the outer shield and put it on on the center conductor of the cable, and then attach the center pin to the insulator, weld to the center conductor of the cable.
 - B.Control the welding time and temperature, and remove the excess with tools spill the tin spots, make sure the center needle surface is smooth, then clean the welding area of excess residue.excess residue in welding area.

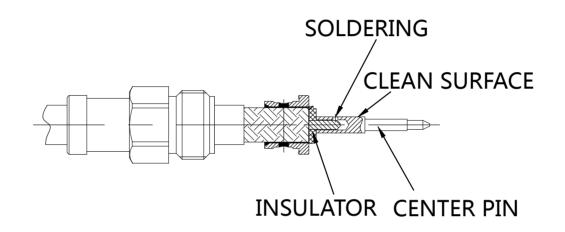

- 4.A. Insert the cable into the main body until it reaches the end face of the insulator on the cable contact with the insulator step inside the main body and cannot be pushed until.

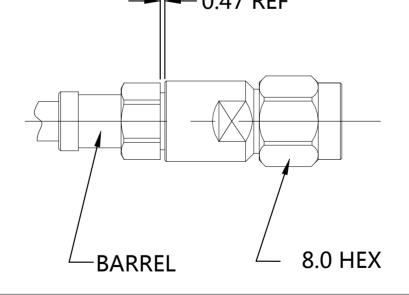

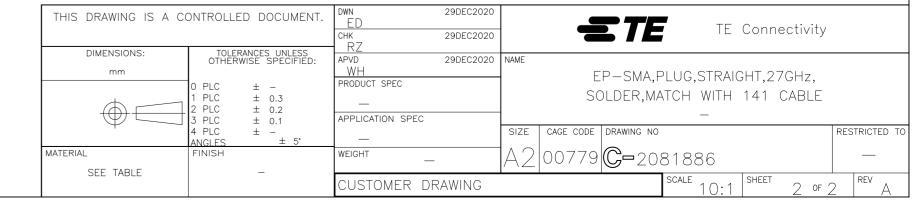

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for RF Connectors / Coaxial Connectors category:

Click to view products by TE Connectivity manufacturer:

Other Similar products are found below:

8915-1511-000 89674-0827 6001-7071-019 6002-7051-003 6059674-1 619550-1 630059-000 M39030/3-01N 6769 CX050L2AQ 7002
1541-010 7002-1542-011 7002-1572-002 7003-1542-011 7004-1512-000 7009-1511-004 7010-1511-000 7029-1511-060 7101-1541-010

7101-1571-002 7145-1521-002 7203-1571-003 7209-1511-011 7210-1511-015 7210-1511-019 73137-5015 73216-2241 73404-2300 7405
1521-005 7405-1521-802 8527 8547 FS11V 9049-9513-000 9074-9513-000 9101-9573-002 910A205F 9130-9573-002 PL11SC-026

PL375-33 PL40-5 PL74C-221 PL75MC-217 PL803-7 980-8666-005 1200690078 1-201144-1 R107003010W R110A172100 R112186000