

# AMP\* EXTRACTION TOOLS WITH BASE PART NUMBER 91200

IS 7916

RELEASED 10-18-90

CUSTOMER HOTLINE 1 800 722-1111

TOOL NUMBER	NUMBER OF TOOL BLADES	CONTACT
91200-1	9	LOCKING
-2	19	LANCE
-3	29	(Typ)
-4	33	(1)(1)
-5	10	TOOL
-6	20	BLADES
-7	35	
-8	12	DETENT
-9	13	
10_	14	RECEPTACIE
11	22	CONTACT
12	23	SLOTS
13	11	
14	18	
15	17	
16	24	
17	26	
18	30	FLEXIBLE CABLE (FFC) CONTACT CAVITY (Typ)
19	5	FLEXIBLE
20	25	(CABLE (Typ)
21	3	(FFC)
22	6	DOUBLE ROW RECEPTACLE
24	4	
2-91200-5	. 8	CONNECTOR (Ref)

Fig. 1

#### 1. INTRODUCTION

The AMP extraction tools listed in Figure 1 extract AMP Flexible Flat Cable (FFC) receptacle contacts from FFC receptacle connectors with side entrance locking lance slots. Refer to Figure 3 for connector part number series. (Refer to IS 7384, tool number 91047 for connectors with end entrance locking lance slots). Read these instructions thoroughly before removing any contacts.



All dimensions on this sheet are in inches.

#### 2. DESCRIPTION

Each tool features a specific number of tool blades that release the contact locking lances in the connector (see Figure 1). The number of tool blades must match the number of cavities in one row of the connector.

CAUTION

All contact locking lances must be released simultaneously, otherwise, damage to the connector, contacts, and/or cable may result.

# 3. EXTRACTION PROCEDURE

Refer to the chart in Figure 1 and select the appropriate tool matching the number of blades on the tool with the number of contact cavities in one row of the connector.

### Proceed as follows:

- 1. Align tool blades with locking lance slots as shown in Figure 1.
- 2. Simultaneously insert all tool blades straight into connector until tool bottoms.

NOTE

Apply pressure to center of blade section as indicated in Figure 2. This will ensure even pressure on all contacts.

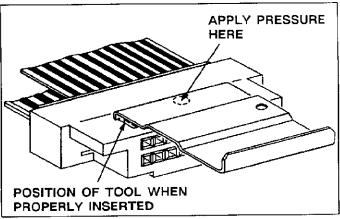


Fig. 2

3. Holding tool and connector in one hand, carefully pull on cable. A slight side-to-side motion may ease contact extraction.

CAUTION

Excessive or improper force may cause damage to contacts and/or cable.

4. After all contacts have been completely extracted, remove tool from connector.

## 4. MAINTENANCE AND INSPECTION

To ensure proper operation, the tool should conform to the dimensions provided in Figure 3. It is recommended that the tool be inspected immediately on its arrival and at regularly scheduled intervals. The tool is not repairable and should be replaced when worn or damaged. It is recommended that the tool be stored in a clean, dry place and cleaned with a soft, lint-free cloth.

Additional tools can be purchased from:

AMP Incorporated Customer Service (38-35) P. O. Box 3608 Harrisburg, PA 17105-3608

or a wholly owned subsidiary of AMP Incorporated.

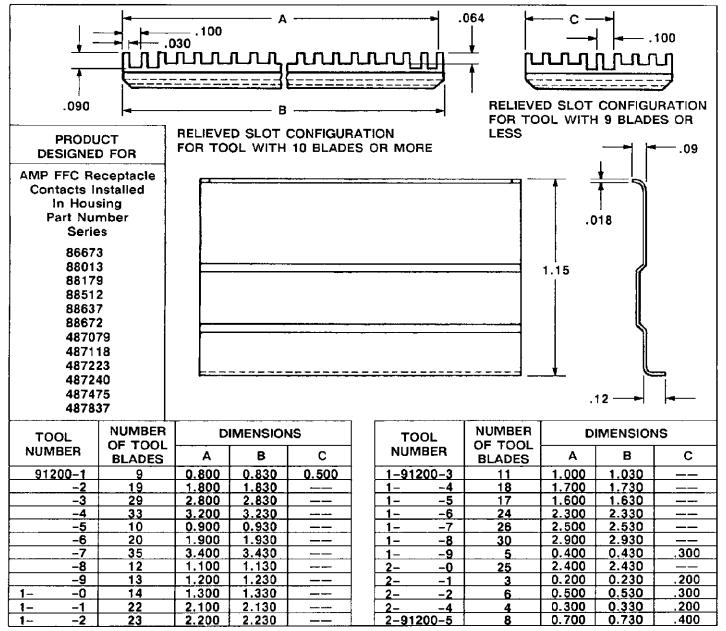


Fig. 3

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Extraction, Removal & Insertion Tools category:

Click to view products by TE Connectivity manufacturer:

Other Similar products are found below:

M8196914-08 768211-2 809-131 844751-2 8-59558-2 91018-1 12014013 12093647 1-21048-0 R282867020 12093078 1-21048-6

12121897 DCF.91.405.5LT 1322 15314260 15350698 15350707 15430130 1579018-4 1643916-1 1-679532-0 1976593-3 OUTEXT-0321

2-1579008-3 2-1579008-4 229694-7 231106-1 241469 91040-3 91040-7 965004-000 965069-000 1738219-1 ET-JL05-16 FG 0300 146

3000 FIT-6 210S048 2-1579007-9 231879-1 312138-3 RJ11FODE 356-162 M8196914-10 4-1579018-0 430395-001 483249-1 5
1579007-2 5-1579007-9 BPR10