## PRODUCT DESCRIPTION

The SP 300-BLUE features a 200mV d.c. measurement range with auto-zero and auto-polarity. Decimal points are user selectable. The SP 300-BLUE features a negative rail generator which enables the meter to measure a signal referenced to its own power supply 0V. The blue LED display ensures excellent readability under low light conditions. The module is easily fitted into the panel, using the fixing clip provided. The module's low cost means it will suit high and low volume applications. The design of the panel meter's housing and seal ensures splash proofing in many applications.

#### **FEATURES**

- 9.4mm (0.37") Digit Height
- Blue LED Display
- 200mV d.c. Full Scale Reading
- 50mA @ +5V d.c. Power Supply
- Auto-zero and Auto-polarity
- Programmable Decimal Points
- Simplified Connection
- Splash Proof



## TYPICAL APPLICATIONS

- Precision Instrumentation Systems
- Power Supply Monitoring
- Test Boxes
- Panel-Mount Indication

# ORDERING INFORMATION

	Stock Number
Standard Meter	SP 300-BLUE

## **ELECTRICAL SPECIFICATIONS**

Specification	Min.	Тур.	Max.	Unit
Accuracy (overall error) *		0.1		% (±1 count)
Linearity			±1	count
Sample rate		2.5		samples/sec
Operating temperature range	0		50	( \\
Warm-up time		10		minute
Temperature stability		150		ppm/°C
Supply voltage	4.75	5	5.25	V
Supply current		50		mA
Input leakage current (Vin = 0V)		1	10	рА

<sup>\*</sup> To ensure maximum accuracy, re-calibrate periodically.

## **SAFETY**

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's pins must not exceed 60Vdc. The user must ensure that the incorporation of the panel meter into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).


LASCAR ELECTRONICS LTD MODULE HOUSE WHITEPARISH WILTSHIRE SP5 2SJ


TEL: +44 (1794) 884567 FAX: +44 (1794) 884616 E-mail: sales@lascar.co.uk LASCAR ELECTRONICS INC. 3750 West 26th Street Erie PA 16506 USA TEL: +1 (814) 835 0621


FAX: +1 (814) 838 8141 E-mail: us-sales@lascarelectronics.com LASCAR ELECTRONICS (HK) LIMITED FLAT C, 5/FL., LUCKY FTY. BLDG. 63-65 HUNG TO ROAD KWUN TONG KOWLOON HONG KONG TEL: +852 2797 3219 FAX: +852 2343 6187 E-mail: b4lascar@samsongroup.com.hk


Specifications liable to change without prior warning SP 300-BLUE Issue 4 SEP/2005 M.C. Applies to SP 300/1




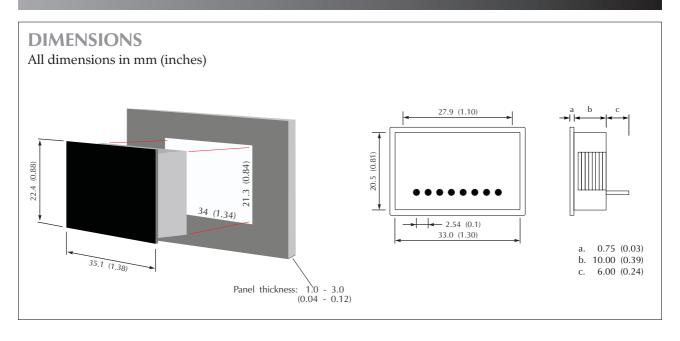

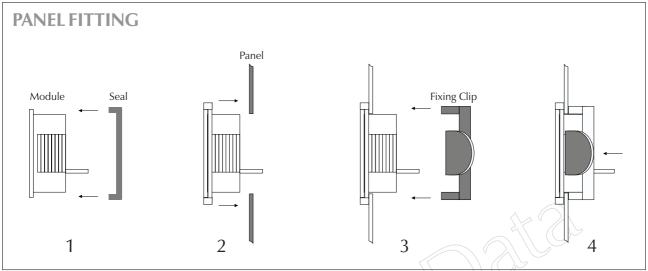

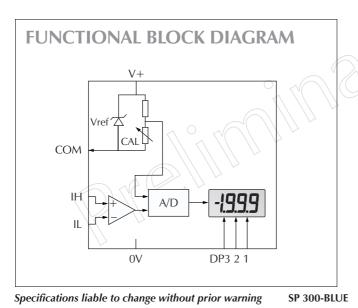

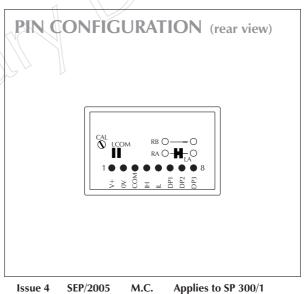

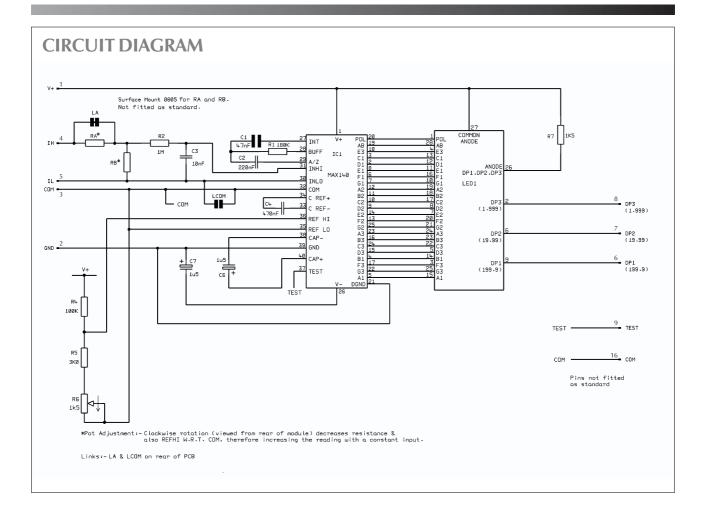

# **PIN FUNCTIONS**

- 1. V+ Positive power supply to the meter.
- 2. 0V 0V power supply connection to the meter.
- 3. COM Ground for analogue section of A/D converter.

It is actively held at 3.05 V (nom) below V + and must not be allowed to sink excessive current (>100 $\mu$ A) by, for instance, connecting to a higher voltage.

- 4. IH Positive measuring input.
- 5. IL Negative measuring input.
- 6. DP1 Connect to 0V to display DP1 (199.9).
- 7. DP2 Connect to 0V to display DP2 (19.99).
- 8. DP3 Connect to 0V to display DP3 (1.999).

#### Note:

A negative supply is generated internally and mirrors the positive supply. For example: if V + is +5V, then the internally generated V - is -5V. When measuring with the input referenced to the same supply rail as that of the panel meter, then the limitations on the input range are (V - +1.5V) to (V + -1.5V).

### Solder Links:

LCOM Normally Open. Connects IL to COM.

Specifications liable to change without prior warning

SP 300-BLUE

Issue 4

SEP/2005

M.C. App

Applies to SP 300/1




# **SCALING**

Two resistors Ra and Rb may be used to alter the full scale reading (FSR) of the meter - see table. The meter will have to be recalibrated by adjusting the calibration potentiometer on the rear of the module.

	FSR	Ra	Rb
	2V	910k**	100k
Voltage	20V	1M**	10k
_	200V	1M**	1k
	2000V*	1M**	100R
Current	200μΑ	0R	1k
	2mA	0R	100R
	20mA	0R	10R
	200mA	0R	1R




<sup>\*\*</sup> Ensure solder link LA is cut.

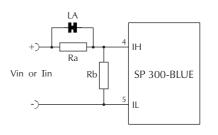


## **APPLICATIONS**


Do not connect more than one meter to the same power supply if the meters cannot use the same signal ground. Taking any input beyond the power supply rails will damage the meter.



Measuring an input voltage referenced to a floating supply, i.e. the input voltage and the meter's power supply are isolated from each other.

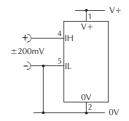


Measuring a single ended input voltage referenced to supply, i.e. the input voltage and the meter's power supply share the same 0V rail.

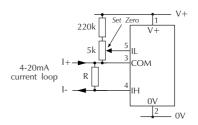

Measuring a 4-20mA loop current.

$$R = \frac{\text{Reading at } 20\text{mA}}{160}$$

The meter's power supply must be isolated from the 4-20mA current loop.

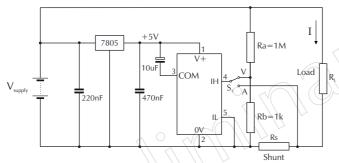


Measuring supply voltage and current to a load.

S<sub>1</sub> selects between voltage and current measurement.

 $Ra~and~Rb~shown~scaled~for~200V_{FSR}~~Rs = \underline{200mV}_{I}~~(e.g.~~0.1\Omega/400mW~for~2A~full~scale)$ 

Display DP1, DP2 or DP3, by connecting to 0V, as required.

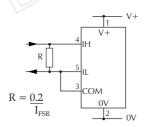

Measuring current. The meter's supply is isolated from the current being measured.

Specifications liable to change without prior warning

SP 300-BLUE

Issue 4 SEP/2005

M.C.

Applies to SP 300/1



# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for lascar manufacturer:

Other Similar products are found below:

EL-USB-1-PRO EL-USB-5 EL-USB-4 SP400-BLUE SGD21-B EL-WIFI-TP+-PROBE-G EL-CC-1-001 PK10 EL-MOTE-WALL-BRACKET EL-MOTE-T-PLUS SGD24-M-IP EL-GFX-1 EM32-1B-LED EMV1200 DPM3AS-BL EL-GFX-DTC EL-USB-RT EL-WIFI-ALERT DTM 995B DPM125-BL DPM942-FPSI EL-CC-2-001 PK10 EL-CC-2-005 PK10 S70-TP EL-SIE-1 EL-SIE-1+ EL-SIE-2+ EL-SIE-6+ SGD24-M-IP420 WIRELESS ALERT TP EL-SGD43-ATP EL-GFX-2 EL-WIFI-TP DPM 950S-EB-W EM32-1B SGD 24-M-420 EL-CC-2-002 PK10 S43-RS485 EL-USB-CO EMT1900 EL-ENVIROPAD-TC SGD 43-A DK+ EL-USB-2-LCD+ EL-WIFI-21CFR-TP+ EL-GFX-DTP+ EL-USB-ACT EL-CC-2-004 PK10 EL-USB-5+ EL-USB-TP-LCD-PROBE-G EL-CC-1-003 PK10 SGD 24-M-IP420