Very low current consumption results in a long battery life and makes the DPM 950 ideal for portable equipment. For low light viewing, a long life LED backlight is fitted. The meter is housed in a robust carrier which can be bolted in place or panel mounted using the bezel, window and clips provided.

- **1**9mm (0.75") Digit Height
- IDC Interface
- **Auto-zero**
- **Auto-polarity**
- 200mV d.c. Full Scale Reading (F.S.R.)
- **LED Backlight**
- **Single Rail Version**
- **Alarm Annunciator**



Two resistors Ra and Rb may be fitted in order to alter the full scale reading (F.S.R.) of the meter - see table. The meter will need re-calibration.

| Required F.S.R. | | Ra | Rb | |
|-----------------|------|------|------|--|
| 2V | Note | 910k | 100k | |
| 20V | Note | 1M | 10k | |
| 200V | Note | 1M | 1k | |
| 2kV | Note | 1M | 100R | |
| 200μΑ | | LINK | 1k | |
| 2mA | | LINK | 100R | |
| 20mA | | LINK | 10R | |
| 200mA | | LINK | 1R | |

NOTE

Ensure that Link 10 is open if fitting Ra.



| Standard Meter Single Rail Version | | | | 9 | Stock Number DPM 950 DPM 950S |
|---------------------------------------|----------|------|------|------|-------------------------------------|
| Specification | | Min. | Тур. | Max. | Unit |
| Accuracy (overall error) ** | | | 0.05 | 0.1 | % (±1 count) |
| Linearity | | | | ±1 | count |
| Sample rate | | | 3 | | samples/sec |
| Operating temperature range | | 0 | | 50 | °C |
| Temperature stability | | | 100 | | ppm/°C |
| Supply voltage | DPM 950 | 7.5 | 9 | 14 | V |
| (V+ to V-) | DPM 950S | 3.5 | 5 | 6.5 | v |
| Supply current | DPM 950 | | 150 | | ^ |
| (not including backlight) | DPM 950S | | 500 | | μΑ |
| Backlight current * | | | 50 | | mA |
| Input leakage current (Vin = 0V) | | | 1 | 10 | рА |

Cable Mounting IDC Supplied With Product

SCALING RESISTORS

METHOD

RFAR

DP2 DP3

CONNECTOR SOURCING GUIDE

DIMENSIONS All dimensions in mm (inches) 76.0 (2.99) 72.5 (2.85) 1.0 (0.04) 2.0 (0.08) a. b. 6.5 (0.26) 11.5 (0.45) 8888888 24.0 (0.94) 9.5 (0.37) 44.0 (1.73) 40.5 (1.59) 51 (2.01) **RFAR** Display in Test Mode 51.0 (2.01) Panel cut-out 72 x 40 (2.83 x 1.57) Maximum panel thickness 3mm (0.12). 61.5 (2.42) 51.0 (2.01) Ø5.7 (0.22) 3111 2 3 4 1 ON BOARD ❿ 12 J 7 1 SOLDER LINKS (96.0) 39.0 (1.54)

24.5

(0)

71.5 (2.81)

Supply voltage 5V nom.

^{**} To ensure maximum accuracy, re-calibrate periodically.



LASCAR ELECTRONICS LTD. MODULE HOUSE, WHITEPARISH, WILTSHIRE SP5 2SJ UK TEL: +44 (0)1794 884567 FAX: +44 (0)1794 884616

E-mail: sales@lascar.co.uk

LASCAR ELECTRONICS INC.

3750 West 26th Street, Erie, PA 16506 USA
TEL: +1 (814) 835 0621 FAX: +1 (814) 838 8141 E-mail: us-sales@lascarelectronics.com

LASCAR ELECTRONICS (HK) LIMITED FLAT C, 5/FL., LUCKY FTY. bldg., 63-65 HUNG TO ROAD KWUN TONG, KOWLOON, HONG KONG TEL: +852 2797 3219 FAX: +852 2343 6187 E-mail: b4lascar@samsongroup.com.hk

PIN FUNCTIONS

| | CHOIG | | | | |
|-------------|--|--|--|--|--|
| 1. LP- | Negative power supply to LED backlighting. | | | | |
| 2. LP+ | Positive power supply to LED backlighting. | | | | |
| 3. V- | Negative power supply connection. | | | | |
| 4. V+ | Positive power supply connection. | | | | |
| 55V | Output from negative rail generator circuit. This output is an inversion of $V + (DPM 950S \text{ only})$. | | | | |
| 6. TEST | Connect to V + to display all segments except DPs. It should not be operated for more than a few seconds as the D.C. voltage applied to determine the property of the | | | | |
| | the LCD may 'burn' the display. This pin is normally at $5V$ below $V+$ and is the ground for the digital section of the meter. It can be | | | | |
| | used to power external logic up to a maximum of 1mA. | | | | |
| 7. INLO | $Negative\ measuring\ differential\ input. \ \underline{\ \ }\ Analogue\ inputs\ must\ be\ no\ closer\ than\ 1V\ to\ either\ positive\ or\ negative\ supply.\ The\ negative\ measuring\ differential\ input. \ \underline{\ \ }\ Analogue\ inputs\ must\ be\ no\ closer\ than\ 1V\ to\ either\ positive\ or\ negative\ supply.\ The\ negative\ negative$ | | | | |
| 8. INHI | Positive measuring differential input. \int supply of the DPM 950S is generated internally and mirrors the positive supply voltage. | | | | |
| 9. COM | Ground for the analogue section of the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter, it is actively held at approximately 2.8V below V+ and must not be allowed to the A/D converter at a finite and the A/D converter at a finite active at | | | | |
| | sink excessive current ($>100\mu$ A) by, for instance, connecting to a higher voltage. | | | | |
| 11. REFLO | Negative input for reference voltage. Can be connected to COM via link 3. | | | | |
| 12. REFHI | Positive input for reference voltage. Connected via link 1 to internal reference. | | | | |
| 13. XDP | $Annunciator \ Drive \ Waveform, this is an inversion of the backplane.$ | | | | |
| 14. DP1 | 199.9 | | | | |
| 15. DP2 | 19.99 Connect to V+ to display required Decimal Point or short corresponding DP link. | | | | |
| 16. DP3 | 1.999 _ | | | | |
| 18 & 32. BP | LCD backplane drive waveform. | | | | |
| 23. REF- | Negative output from internal reference. | | | | |
| 24. REF+ | Positive output from internal reference. | | | | |
| 25. LO BAT | Used to control the low battery annunciator externally, cut link 12 and take to $V+$ to turn on annunciator. | | | | |
| | The annunciator turn on point can also be set by adjusting the BAT potentiometer (R10), in which case do Only Pins 1-16 are fitted | | | | |
| | not connect to this pin and leave link 12 intact. | | | | |

26. REF BG Output from internal bandgap reference. (Factory fitted option.) 27. 🛕 Alarm annunciator, cut link ALM and take to XDP to display. 28. : Colon annunciator, cut link COL and take to XDP to display. $Polarity\ annunciator, connected\ via\ link\ 11\ to\ polarity\ output\ of\ IC1.\ Cut\ link\ 11\ and\ either\ take\ to\ XDP\ to\ Polarity\ output\ of\ IC2.$

29. display or make other side of link 11 to hold off.

30. POL Polarity output of IC1.

31. CLK May be used to override the internal oscillator and control the sample rate. Link 14 must then be made.


these functions are available but a connector is not provided.

SAFETY

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's pins must not exceed 60Vdc. If voltages to the measuring inputs do exceed 60Vdc, then fit scaling resistors externally to the module. The user must ensure that the incorporation of the DPM into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).


VARIOUS OPERATING MODES

ON-BOARD LINKS: In order to quickly and easily change operating modes for different applications, the meter has several on-board links. They are designed to be easily opened (cut) or shorted (soldered). Do not connect more than one meter to the same power supply if the meters cannot use the same signal ground. Taking any input beyond the power supply rails will damage the meter.

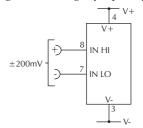


Check Links 2 & 3 are SHORTED.

Measuring a floating voltage source of 200mV full scale.

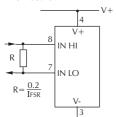


Check Links 2 & 3 are SHORTED. Measuring current. Supply MUST be isolated.

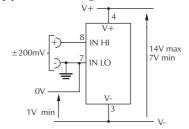

Check Link 3 is SHORTED.

Split rail supply (DPM 950)

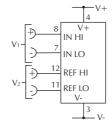


Check Links 1 & 4 are OPEN.

DPM 950

Measuring the ratio of two voltages. Reading = $1000 \text{ V}_1/\text{V}_2$ $50 \text{mV} < V_2 < 200 \text{mV}$


August/2002



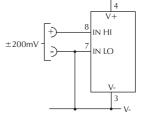

Check Link 3 is SHORTED.

Measuring a single ended input referenced to supply (DPM 950S).

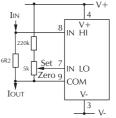

Check Link 3 is SHORTED. Measuring 4-20mA to read 0-999 (supply MUST be isolated).

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Digital Panel Meters category:

Click to view products by Lascar manufacturer:

Other Similar products are found below:

M00558-00 01.098.1658.1 70.360.4828.0 72331-00 85310-25 86427-26 86642-00 87268-13 87316-00 87719-26 98107-56 HB8260-R36-90 DMS-20ACV-3-R-C EM11DINAV81XR1X 25.325.3253.1 25.325.4253.1 25.330.0453.1 25.350.0553.0 20046-20 20182-23 AP1020 AP1021 25.320.5053.0 25.350.3453.1 25.394.3653.1 25.521.3253.0 28006-01 04.630.1080.0 20078-20 EM11DINAV81XO1X 85874-26 87166-00 87895-00 28000-03 K3GN-NDT1-FLK 24VDC 82322K-11 86641-00 87004-00 MV15-DC-20V-110V-CU HB8260R4890 20125-21 86640-00 2CMA100166R1000 N27D 00M0 DMG 100 DMG 110 DMG 800 L01 DMK 01 DMK 01 R1 DMK 11