

Evaluation Board for the [ADA4571-2](#) Integrated AMR Angle Sensor and Signal Conditioner

FEATURES

- USB 2.0 interface
- Jumper or computer controlled temperature compensation mode enable
- Jumper or computer controlled power-down mode enable
- Measurement test points and coaxial connectors

EVALUATION KIT CONTENTS

- [ADA4571-2](#) magnetic stimulus
 - Dipole magnet
 - Hand movable mounting
- Read back electronics

ADDITIONAL EQUIPMENT NEEDED

- 6 V to 12 V bench supply (optional)
- [SDP-S](#) controller board
- USB cable (supplied with the [SDP-S](#) controller board)
- LabVIEW 2013 software downloadable from [ADA4571-2](#) product page

GENERAL DESCRIPTION

The [EVAL-ADA4571-2](#) shows the [ADA4571-2](#) in an end of shaft magnet configuration. The evaluation kit is composed of an [ADA4571-2](#) motherboard, a magnetic stimulus on a hand turnable mount, a USB interface, and an [SDP-S](#) controller board. The required LabVIEW 2013 graphical user interface (GUI) software for Windows® is available on the [ADA4571-2](#) product page.

The [EVAL-ADA4571-2](#) features an on-board 5 V regulator, a 6-channel simultaneous sampling analog-to-digital converter (ADC), and jumpers for enabling the temperature compensation and power-down modes within the [ADA4571-2](#). The motherboard also features test points and unpopulated coaxial connectors for the six outputs of the device.

The [SDP-S](#) controller board controls the ADC on the motherboard reading back the [ADA4571-2](#) outputs, to change the digital inputs to the [ADA4571-2](#), interface with the GUI, and to supply power to the evaluation board through the USB connection.

[ADA4571-2](#) END OF SHAFT EVALUATION SYSTEM

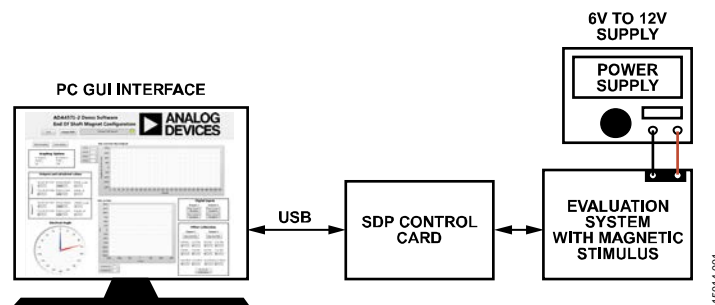


Figure 1.

TABLE OF CONTENTS

Features	1	Jumper Configuration	4
Evaluation Kit Contents.....	1	Device Under Test (DUT) Outputs.....	4
Additional Equipment Needed	1	Evaluation Board Software.....	5
General Description	1	Starting Up the Evaluation GUI	5
ADA4571-2 End of Shaft Evaluation System.....	1	Overview of the Main GUI Window	5
Revision History	2	Evaluation Board Schematic and Artwork.....	8
Getting Started	3	Ordering Information.....	9
Software Installation Procedures.....	3	Related Links.....	9
Evaluation Board Hardware.....	4		

REVISION HISTORY

12/2016—Revision 0: Initial Version

GETTING STARTED

SOFTWARE INSTALLATION PROCEDURES

Before using the LabVIEW 2013 GUI, install the [SDP-S](#) controller board drivers and LabVIEW 2013 runtime engine.

LabVIEW 2013 Runtime Engine

To install the LabVIEW 2013 runtime engine, follow the instructions on the National Instruments website.

SDP Installation

To install the SDP drivers, first download the **SDPDrivers.exe** file from the [SDP-S](#) product page and complete the following steps:

1. Initialize installation by running **SDPDrivers.exe**.
2. When the SDP drivers setup wizard appears, click **Next** (see Figure 2).



Figure 2. SDP Driver Installation

3. When the **Choose Install Location** window appears (see Figure 3), click **Install**. Clicking **Browse** allows the user to select a different destination folder, followed by clicking **Install**.

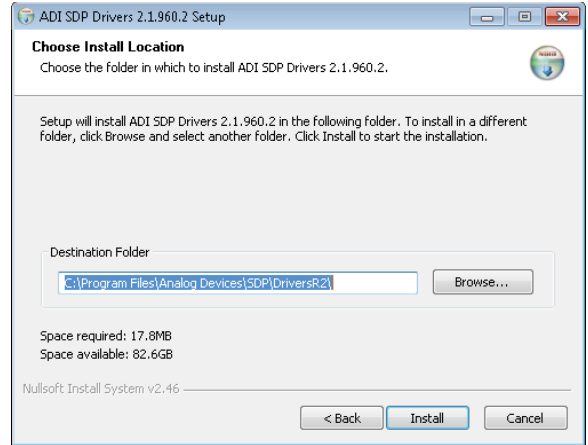


Figure 3. Choose Install Location

4. Click **Finish** to complete the installation of the SDP drivers.
5. Connect the [SDP-S](#) controller board to the motherboard and plug the [SDP-S](#) controller board into the PC with the supplied USB cable. The computer now recognizes the [SDP-S](#) controller board and the LabVIEW GUI can be opened to continue.

Running the GUI

To run the GUI, first download the LabVIEW GUI software from the [ADA4571-2](#) product page and complete the following steps:

1. Place the downloaded executable file and supporting files in a convenient location for use (see Figure 4); it is recommended to place these files on the root C drive of the PC. Do not separate the executable file from the other files that are downloaded or the executable does not run

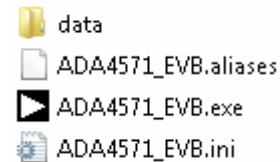


Figure 4. Placing Downloaded Files onto the PC

2. Double-click the executable to launch the evaluation program.

EVALUATION BOARD HARDWARE

The [EVAL-ADA4571-2](#) end of shaft evaluation system comprises of a PCB with the [AD7266](#) ADC and an external mountable magnetic stimulus.

The [ADA4571-2](#) evaluation system can be powered directly from the host PC USB, directly from an external bench supply, or through the on-board 5 V regulator, the [ADP3336](#).

To power the motherboard through an on-board 5 V reference, apply 6 V to 12 V across P3 to P5 and configure the jumpers accordingly. If the bench supply features current-limiting, it is recommended to set the current limit to 100 mA as a precaution.

JUMPER CONFIGURATION

Refer to the [ADA4571-2](#) motherboard schematic, see Figure 13, to understand the purpose of each jumper.

Configure the P10 motherboard default jumper as follows:

- Install a jumper on P10 between VBUS and BRD_SUPPLY to power the evaluation board through the USB connection at the PC.
- Alternatively, install a jumper on P10 between BRD_SUPPLY and _SUPPLY to power the evaluation board through the external bench supply

DEVICE UNDER TEST (DUT) OUTPUTS

The outputs of the [ADA4571-2](#) can be monitored at the test points located on the Evaluation board.

All outputs from the [ADA4571-2](#) are also sampled by the on-board ADC and are available in the GUI.

EVALUATION BOARD SOFTWARE

STARTING UP THE EVALUATION GUI

To power the evaluation board using the [ADP3336](#) on-board 5 V supply install a jumper on P10 connecting SUPPLY and BRD_SUPPLY. Using an external power supply, plug the positive supply for the evaluation board into the red terminal, P3, and the negative terminal into P5 on the motherboard. The evaluation board requires between 6 V to 12 V, which is then regulated to 5 V on the motherboard using the on-board [ADP3336](#). This supply powers both the on-board ADC, [AD7266](#), as well as the [ADA4571-2](#).

To use the [EVAL-ADA4571-2](#) evaluation board with full USB power, install a jumper on P10, connecting VBUS and BRD_SUPPLY. The 5 V USB power supplies the ADC reference pin on the [AD7266](#) as well as the [ADA4571-2](#).

OVERVIEW OF THE MAIN GUI WINDOW

Figure 5 shows the main GUI window after launching the GUI.

When first launching the program, the [SDP-S](#) controller board must be recognized by the GUI before proceeding. Clicking the **Connect SDP** button reads the EEPROM identification of the motherboard to ensure the correct program is being used. If the [SDP-S](#) controller board is not connected or if the drivers are not installed correctly, an error message appears. Ensure the drivers are installed correctly and the PC recognizes the [SDP-S](#) controller board if this occurs.

After the [SDP-S](#) controller board is properly connected and the program recognizes the motherboard, the status bar reads **SDP Board Ready** and the yellow LED turns green.

Initially, all figures are blank. Click the **Start Sampling** button to begin sampling the device.

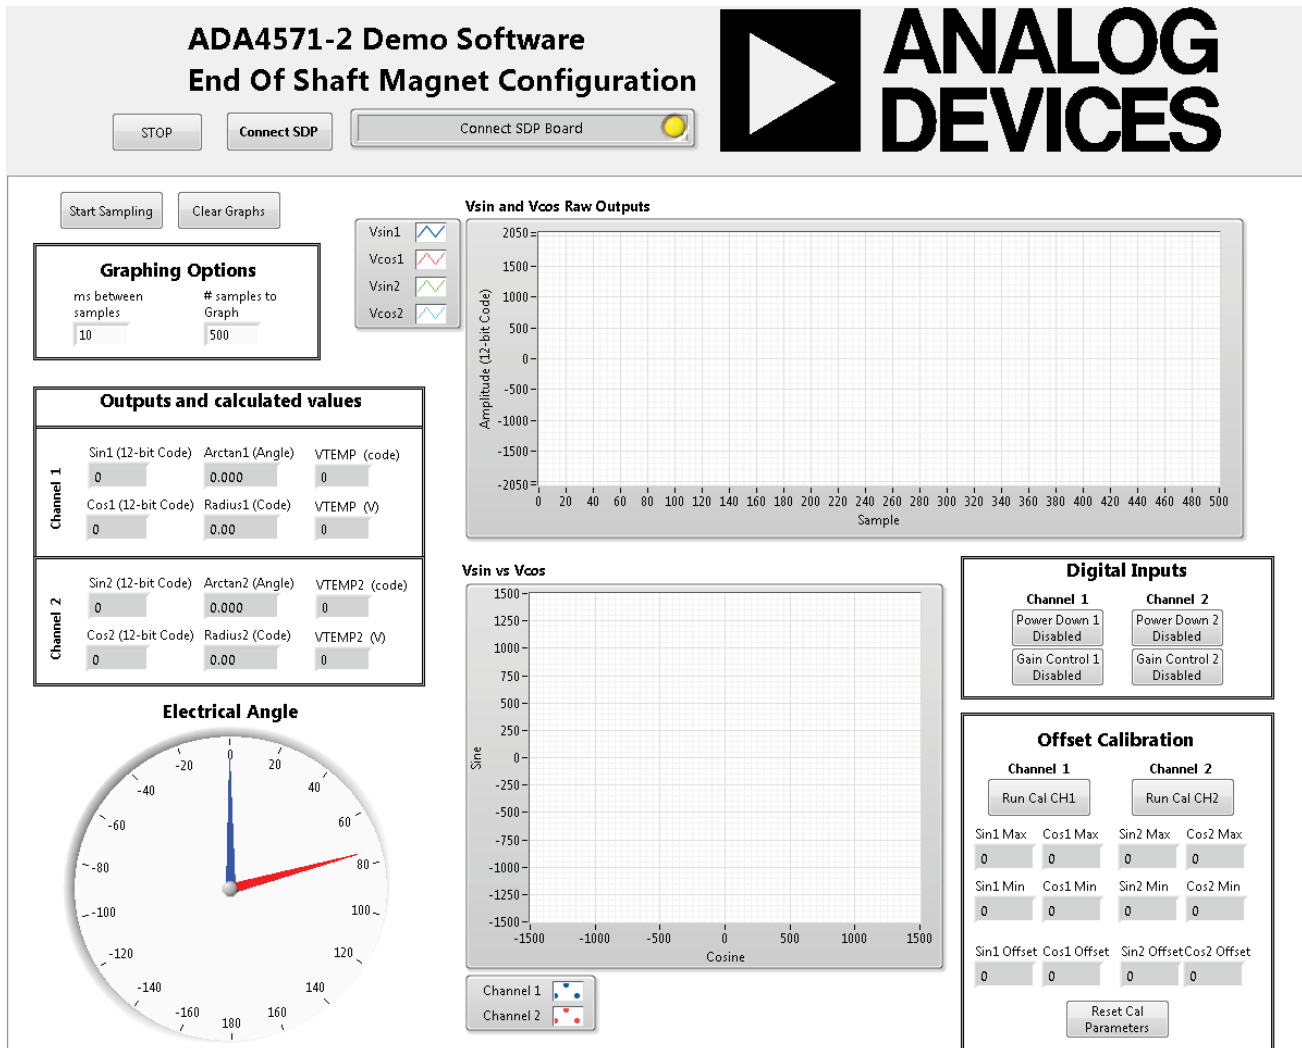


Figure 5. ADA4571-2 Evaluation Board Software Main Window

15014-005

Vsin, Vcos, and VTEMP Raw Outputs

The **Vsin, Vcos and VTEMP Raw Outputs** graph shows all six outputs from the [ADA4571-2](#) dual-channel magnetic angle sensor (see Figure 6).

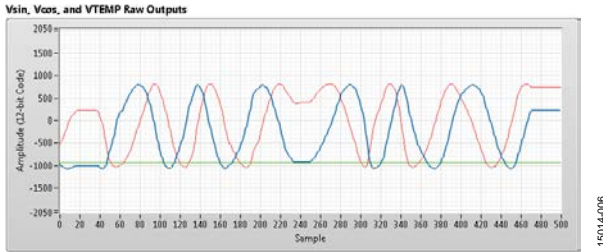


Figure 6. **Vsin, Vcos, and VTEMP Raw Outputs** Graph

The blue and red waveforms indicate the V_{SINx} and V_{COSx} outputs, respectively, and the green waveform indicates the VTEMP output. As the magnet is rotated above the [ADA4571-2](#) the V_{SINx} and V_{COSx} outputs change while staying 90° out-of-phase. The two channels report similar results that differ by the relative rotation of the sensor die and the voltage offset differences for the sine and cosine channels.

This plot shows the output waveforms sampled by the [AD7266](#) ADC. The waveforms are plotted in 12-bit code. The [AD7266](#) simultaneously samples V_{SIN1} and V_{COS1} then switches inputs to sample V_{SIN2} and V_{COS2} . An internal reference of 2.5 V is subtracted in the hardware as the readout of the ADC is in twos complement. Therefore, the two signals center around 0 in the raw waveform plot. In a real application, it is important that these two channels are simultaneously sampled or extra errors introduced from the phase delay between the sampling of the individual channels. Every 50 samples of the V_{SIN1} , V_{COS1} , V_{SIN2} , and V_{COS2} , the [AD7266](#) samples VTEMP1 and VTEMP2.

When powering the board through the USB connector attached to the [SDP-S](#) controller board there is some variation in the supply voltage of the [ADA4571-2](#). Due to the readout of the [AD7266](#) in twos complement form, with respect to the internal 2.5 V reference, the offset of these waveforms are higher than the inherent offset of the [ADA4571-2](#). After offset correction of the sine and cosine signals, which is recommended for the end use of the sensor, the offsets due to the ADC reference as well as the sensor offset are removed.

Graphing Options

When running, the evaluation board constantly samples the V_{SIN1} , V_{COS1} , V_{SIN2} , and V_{COS2} before sampling the VTEMP1 and VTEMP2 channel every 50 iterations.

The interval between sampling is chosen by inputting different values into the **ms between samples** field (see Figure 7). The default is 10 ms. This is a delay set after information is transferred from the [AD7266](#).

The **# samples to graph** field sets the number of samples to save and show in the graphs. The default is 200 samples.

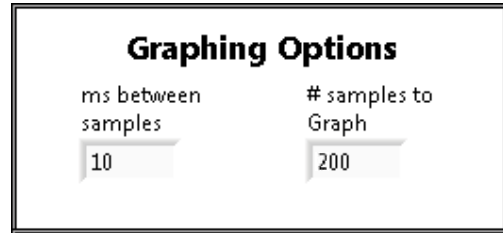


Figure 7. **Graphing Options** Pane

Outputs and Calculated Values

Output and calculated values give the sensor information in number format (see Figure 8). Again, the V_{SINx} , V_{COSx} , and VTEMP outputs are in 12-bit twos complement form with respect to the 2.5 V internal reference of the [AD7266](#) ADC.

Outputs and calculated values			
Channel 1	Sin1 (12-bit Code)	Arctan1 (Angle)	VTEMP (code)
	600	-51.512	-813
Channel 1	Cos1 (12-bit Code)	Radius1 (Code)	VTEMP (V)
	-754	963.28	1.50757
Channel 2	Sin2 (12-bit Code)	Arctan2 (Angle)	VTEMP2 (code)
	557	-55.286	-815
Channel 2	Cos2 (12-bit Code)	Radius2 (Code)	VTEMP2 (V)
	-804	978.09	1.50513

Figure 8. **Outputs and calculated values** Pane for Channel 1 and Channel 2

A calculated angle value is also shown, given by the **Arctan1 (Angle)** and **Arctan2 (Angle)** function field, and a calculated radius, given by the square root of the sum of squares for each V_{SINx} and V_{COSx} channel in the **Radius1 (Code)** and **Radius2 (Code)** field.

Electrical Angle

The electrical angle plot gives the calculated **Arctan1 (Angle)** and **Arctan2 (Angle)** values in a visual format seen in Figure 9. As the magnetic field angle changes at the anisotropic magneto resistive (AMR) sensors, the electrical angle changes. Both channels give approximately the same information.

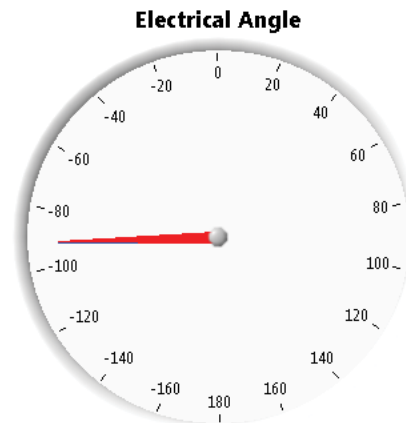


Figure 9. **Electrical Angle**

Vsin vs Vcos

The **Vsin vs Vcos** graph is another way to visualize the electrical angle from the [ADA4571-2](#). However, there is more information given in Figure 10, showing the radius of the output values which can give further diagnostic information to system. As long as the sensor is fully saturated, or the applied magnetic field strength exceeds 25 kA/m, the radius value remains unchanged at a constant temperature. As the AMR effect is smaller at high temperatures the radius value changes with respect to temperature. See the [ADA4571-2](#) data sheet for the temperature coefficient values for the output amplitude for the V_{SINx} and V_{COSx} channels.

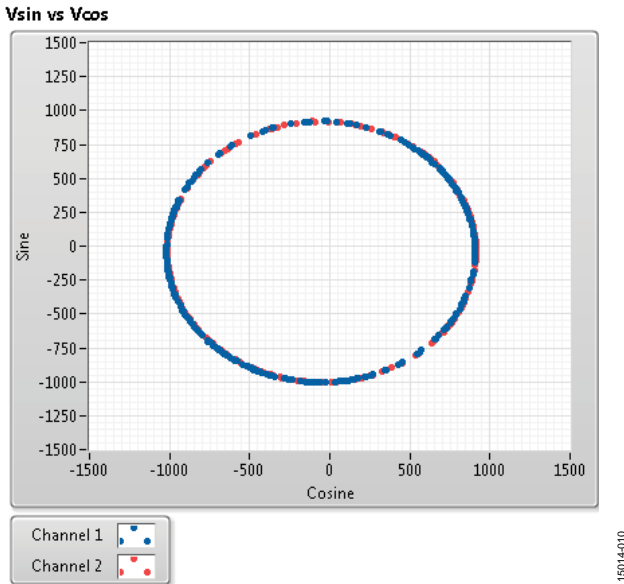


Figure 10. **Vsin vs Vcos** Graph

Digital Inputs

Four digital inputs on the [ADA4571-2](#) can be toggled using the **Digital Inputs** buttons.

The power-down button for each channel puts the devices into a low power state by disabling the internal circuitry for that channel and placing the outputs into a high impedance mode. See the [ADA4571-2](#) data sheet for the power-down current per channel in the device. The power-down function of each channel can be toggled separately.

The **Gain Control 1 Disabled** and **Gain Control 2 Disabled** buttons put the device into the gain control mode (see Figure 11). This mode alters bridge supply voltage based on the internal temperature value of the device.

Through this mode, the output amplitude temperature coefficient of the [ADA4571-2](#) reduces. See the [ADA4571-2](#) data sheet for output amplitude vs. temperature with the gain control enabled and disabled.

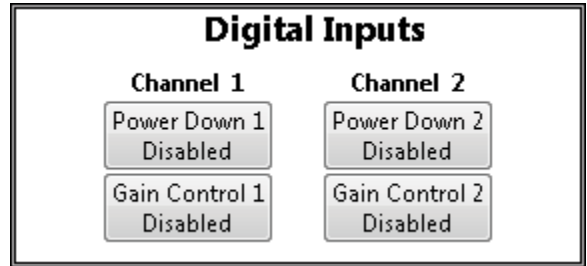


Figure 11. **Digital Inputs** Pane

Offset Calibration

An offset calibration is required to maximize the accuracy of the [ADA4571-2](#). The V_{SIN1} , V_{COS1} , V_{SIN2} , and V_{COS2} channels have inherent voltage offsets due to resistor mismatch within the AMR sensor bridges. See the [ADA4571-2](#) data sheet offset voltage ranges for the outputs.

There are a few methods that can null the offsets for the outputs. To run an offset calibration on Channel 1, click **Run Cal CH1** (see Figure 12). Once clicked, rotate the magnetic stimulus slowly through an entire mechanical rotation. This ensures the maximum and minimum output voltages are found for each channel.

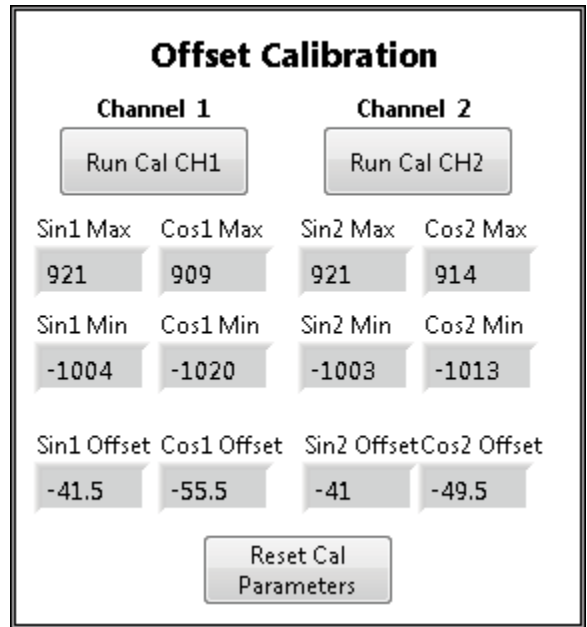


Figure 12. **Offset Calibration** Pane

EVALUATION BOARD SCHEMATIC AND ARTWORK

15014-013

EEPROM ID

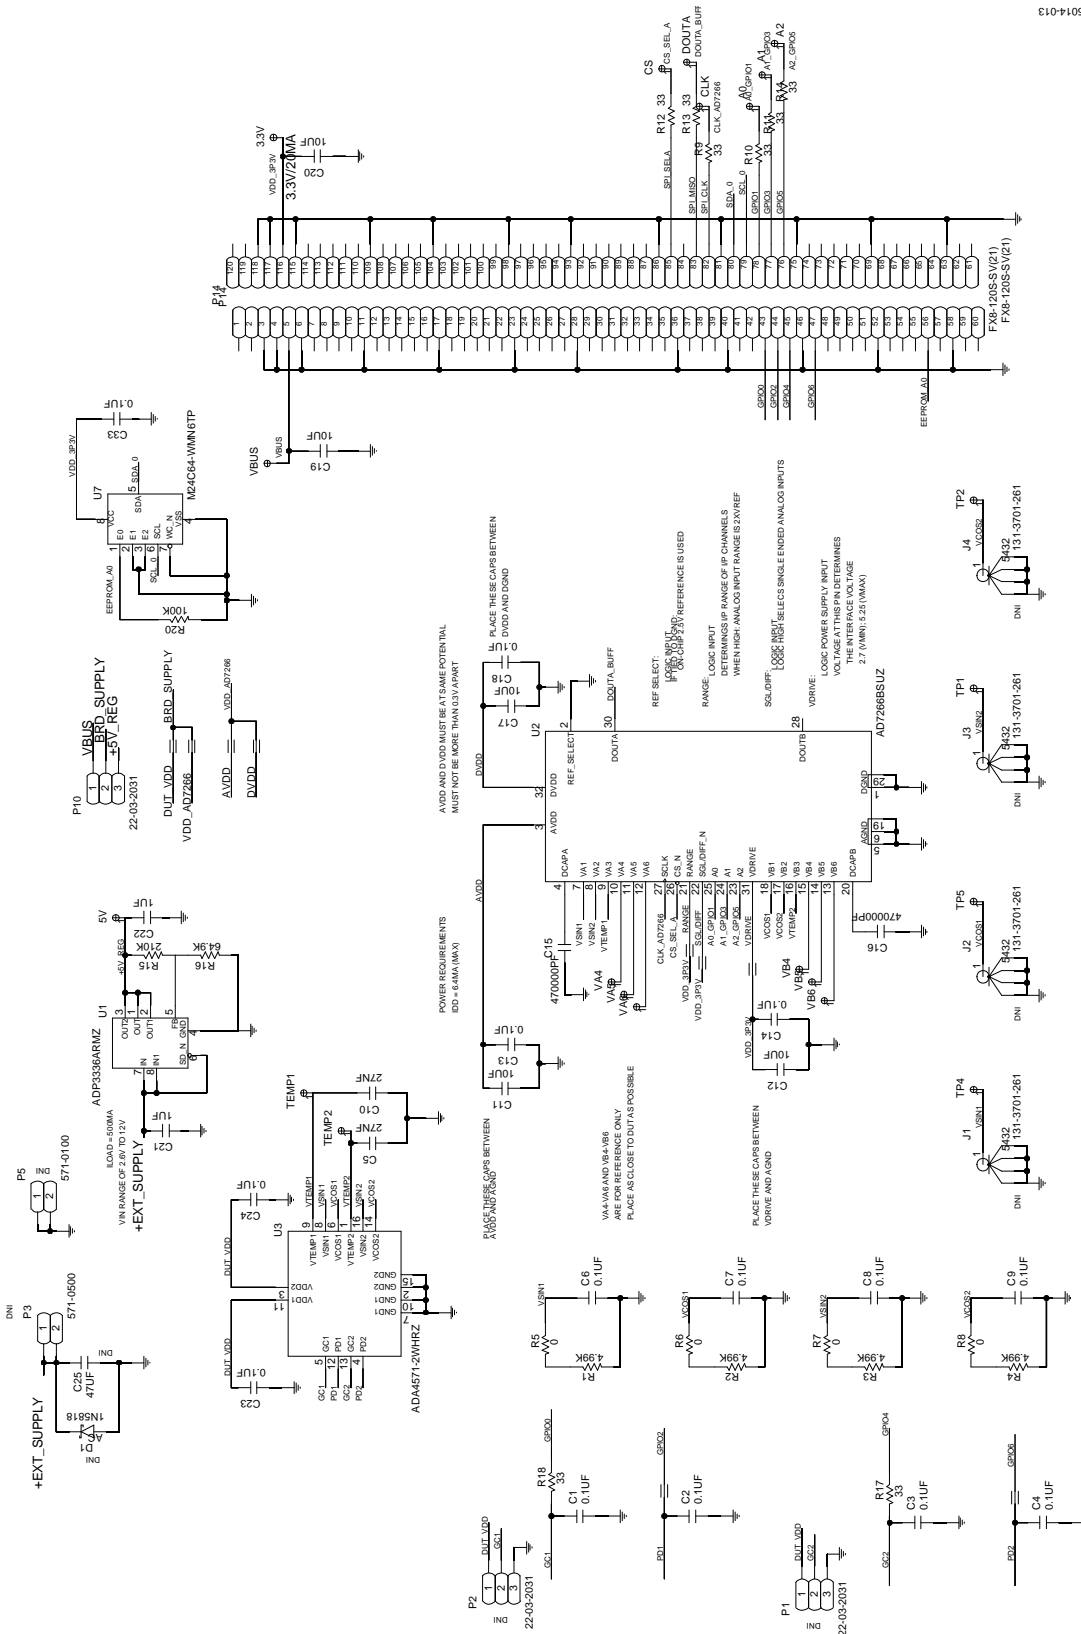


Figure 13. ADA4571-2 Evaluation Motherboard Schematic

ORDERING INFORMATION

RELATED LINKS

Resource	Description
ADA4571-2	Integrated AMR Angle Sensor and Signal Conditioner
ADP3336	High Accuracy Ultralow I _o , 500 mA anyCAP® Adjustable Low Dropout Regulator
AD7266	Differential/Single-Ended Input, Dual 2 MSPS, 12-Bit, 3-Channel SAR ADC



ESD Caution

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.

©2016 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners.
UG15014-0-12/16(0)



www.analog.com

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Magnetic Sensor Development Tools](#) category:

Click to view products by [Analog Devices](#) manufacturer:

Other Similar products are found below :

[AS5045 DB V2](#) [AS5134 AB](#) [MMC5633NJL-B](#) [ROTATEKNOBANGLE2GOTOBO1](#) [MIKROE-1647](#) [MIKROE-1646](#) [EVAL-CN0332-PMDZ](#) [AS5510-SO_EK_AB](#) [AS5510-WL_EK_DB](#) [ADA4571R-EBZ](#) [AS5170A-SO_EK_AB](#) [4366](#) [AS5013-QF_EK_AB](#) [AS5040 AB](#) [AS5040 DB V2](#) [AS5040-SS_EK_PB](#) [AS5045 AB](#) [AS5047D-TS_EK_AB](#) [AS5048A-EK-AB-STM1.1](#) [AS5048A-TS_EK_AB](#) [AS5048-TS_EK_DB](#) [AS5050A-QF_EK_AB](#) [AS5132 AB](#) [AS5132 DB](#) [AS5132-PB](#) [AS5140 DB](#) [AS5145B-EK-AB-STM1.0](#) [AS5147P-TS_EK_AB](#) [AS5162-EK-AB](#) [AS5172B-TS_EK_AB](#) [AS5247-MF_EK_SB](#) [AS5247U-TQ_EK_AB](#) [AS5247U-TQ_EK_SB](#) [AS5262-MF_EK_AB](#) [AS5311-TS_EK_AB](#) [AS5510-SOIC8-AB](#) [AS5600-SO_EK_AB](#) [AS5600-SO_EK_ST](#) [AS5601-SO_EK_AB](#) [AS5601-SO_EK_ST](#) [AS5601-SO_RD_ST](#) [AS5X47U-TS_EK_AB](#) [SD4Y-EK-XX](#) [USB I&P BOX](#) [EVAL-CN0323-SDPZ](#) [EVAL-CN0368-SDPZ](#) [DFR0033](#) [OUTOFSHAFTFOR3D2GOTOBO1](#) [S2GO3DSENSETLV493DTOBO1](#) [S2GOCURSENSETLI4970TOBO1](#)