Easy-wire Connectors for Industrial Components

XN2


Easy-wire Connectors with *CON* * Specifications; Ideal for Connecting Sensors.

- Use industry-proven spring clamps for wiring.
- No special tools required for easy wiring.
- Rewiring (repairing) is possible.
- Each Connector accepts any wire size from AWG28 (0.08 mm²) to AWG20 (0.5 mm²). (External sheath diameter: 1.5 mm max.)
- See the "Standards certification / conformity list" for information on conformity to certification standards.
- Note: *E-con specifications are currently being promoted for standardization by manufacturers of FA components and connectors. Connector specifications are disclosed only for the mating portions.

RoHS Compliant

Wiring Configuration Example



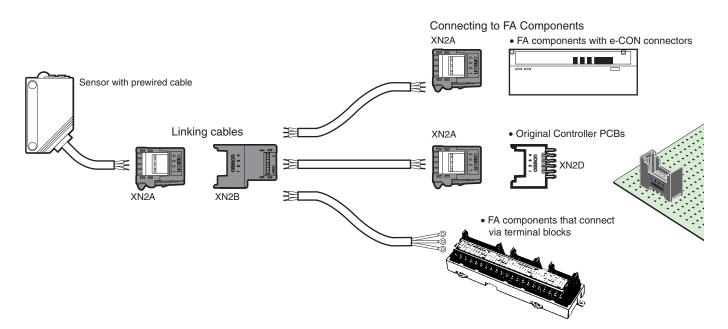

Ordering Information

Туре	Cable Plug Connector	Cable Socket Connector	Single-socket PCB Socket Connector	Four-socket PCB Socket Connector	
Ap- pear- ance	TRANS CONTRACT				
No. of contacts	Model				
3	XN2A-1370		XN2D-1371	_	
4	XN2A-1470	XN2B-1470	XN2D-1471	XN2D-4471	
5	XN2A-1570	—	XN2D-1571	—	
6	XN2A-1670	—	XN2D-1671	—	
8	XN2A-1870	—	XN2D-1871	—	

Ratings and Specifications

Rated current	3 A/pole (Using AWG20 wire) 2 A/pole (Using AWG22 wire) 1 A/pole (Using AWG24 wire) 0.5 A/pole (Using AWG26 or 28 wire)	
Rated voltage	32 VDC	
Contact resistance *1	30 m Ω max. (20 mVDC max., 100 mA max.)	
Insulation resistance	1000 MΩ min. (at 500 VDC)	
Dielectric strength	1,000 VAC for 60 s (leakage current: 1 mA max.)	
Insertion tolerance	50 times	
Ambient temperature *2	Operating: -30°C to 75°C	
Applicable wires *3	0.08 mm ² (AWG28) to 0.5mm ² (AWG20) The external diameter of the cable sheath is 1.5 mm max.	

 $\pmb{\ast}$ 1. This value is the contact resistance of the connector.

*2. The temperature is limited, however, to the maximum operating temperature for the cables.

*3. When using cables with a wire diameter of 0.16 mm or smaller, contact your OMRON sales representative.

Materials and Finish


Item	Cable type	PCB type		
Case	Black PBT resin (UL94V-0)			
Cover	Black PBT resin (UL94V-0)			
Base	Transparent PC resin (UL94V-0)	—		
Lever	PA resin (UL94V-0)/natural (white)			
Contact	Phosphor bronze/Underplating: Nickel (1.5 to 3 Contacts: Gold (0.2 µm min.) Terminals: Tin plating (1.0 µm min.)	.0 μm)		
Spring	Stainless steel	—		
Pin clamp	_	Copper alloy/nickel base with tin-alloy plating		

XN2

Assembly Instructions

Preparing the Cable


Align the cable with the guide marked STRIP GAUGE on the side of the Connector, strip 7 to 8 mm of the cable sheath, and then twist the wires several times.




Connecting the Cable to the Connector

(1) IUse a flat-blade screwdriver to push down the white, square operating lever inside the operation slot until it locks.

(2) Insert the wire fully to



the back of the wire Operation slot insertion hole. Make sure that the cable sheath is inserted into the hole, and that the end of the wire has passed through the contact section.

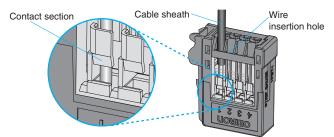


Safety Precautions

Precautions for Safe Use

- Do not pull on the Connectors or cables. Doing so may cause damage to the Connectors or cause the cables to disconnect.
- Install the Connectors in a location where they will not be stepped on, to prevent disconnection of the cables or damage to the Connectors. If the Connectors have to be installed in such a location, use a protective cover.
- Make sure that the Connectors are mated in the correct direction. Mating the Connectors incorrectly will damage to the Connectors.
- Do not use the Connectors if the lock lever is bent or broken. Doing so may cause the Connector to become loose or the device to malfunction.
- Before mounting Connectors to a PCB, make sure that the Connectors are positioned in the correct direction.
- Before bending a cable to connect it to a Connector, check the bending specifications of the cable to be used.
- Do not exceed the rated current of the cable. Always check the rated current of each cable to be used.
- Do not use pliers or other tools to remove the Connectors.
- Hold the Connectors firmly by hand when handling them. Do not use excessive force to push the Connectors. Forcing the Connectors may result in injury.
- These Connectors do not resist water. Do not use Connectors in places where water or oil may be sprayed onto the Connectors.

(3) Insert the screwdriver into the release slot, and gently pull back the lever until a click is heard by resetting the lever.




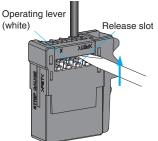

- (4) Make sure that the following operations have been performed.
- Check that the operating lever is reset.
- Check that the procedure in step 2 has been followed. (Pull gently on the cable to make sure that there is resistance, indicating that the Connectors are wired correctly.)

Removing Cables from the Connector

- Press down on the operating lever to lock the lever before removing the cable.
- (2) After removing the cable from the Connector, always reset the operating lever, except when rewiring the Connector. The Connector can be rewired without resetting the operating lever.

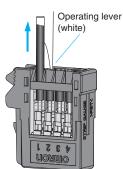

Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

Wiring

- Insert one wire into each insertion hole. Inserting two or more wires into a single hole may cause unexpected problems.
- Make sure that no power is being supplied to a Connector before wiring, inserting, or removing the Connector. Doing so may result in electric shock.
- Follow the wiring diagrams for the device being used when wiring the cables.
- Strip the cables according to the instructions in the applicable operation manual, making sure not to damage the wires.
- Do not use a screwdriver with a tip larger than the specified width when wiring the Connectors.

• Make sure short-circuits are not created, e.g., by protruding wires. Inserting and Removing Connectors


- When connecting or disconnecting Connectors, always hold the case of the Connector.
- When mating Connectors, insert the Connector fully into the back of the socket, and then make sure that the Connector will not become loose by lightly pulling it in the opposite direction.

Recommended Screwdriver

- Use a flat-blade screwdriver with a tip of 2 mm max. Do not use screwdrivers that gradually widen towards the base of the screwdriver.
- Using other screwdrivers may cause damage to the adjacent poles.

Dimensions

XN2A-1□70

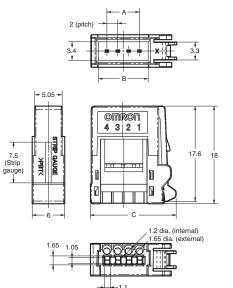

Dimensions

Dimension (mm) No. of contacts	A	В	С
3	4.0	7.2	13.8
4	6.0	9.2	15.8
5	8.0	11.2	17.8
6	10.0	13.2	19.8
8	14.0	17.2	23.8


Cable Socket Connector XN2B-1470


6.4

STR


GAUGE


PBT

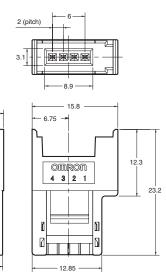



Single-socket PCB Socket Connector XN2D-1

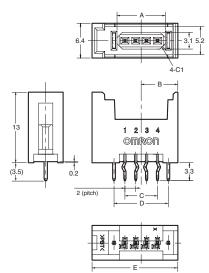




Dimensions

Dimension (mm) No. of contacts	A	В	С	D	E
3	6.9	5.8	4.0	8.0	13.8
4	8.9	6.8	6.0	10.0	15.8
5	10.9	7.8	8.0	12.0	17.8
6	12.9	8.8	10.0	14.0	19.8
8	16.9	10.8	14.0	18.0	23.8

Four-socket PCB Socket Connector XN2D-4471

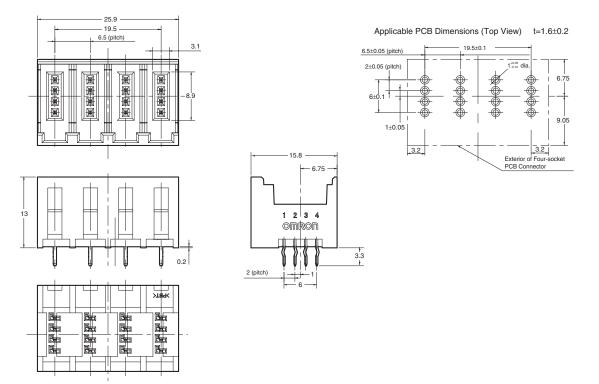

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for I/O Connectors category:

Click to view products by Omron manufacturer:

Other Similar products are found below :

 571763P
 58098-0628
 72.250.1628.2
 72.250.2428.2
 74720-0505
 76.350.0729.0
 76871-1403
 FCN-244F080-G/1
 FCN-260A9920
 PCR

 E36PM
 PCS-XE26MA+
 G38A71314B
 1571250010
 157-22500-3
 MS3471L14-19P L/C
 192991-0703
 172501-4002
 172501-6002
 FCN

 260C008-A/L0
 FCN-260C024-AL0
 FCN-261Z008
 2000314-1
 200331-1
 PCR-E36FC+
 PCS-E28FS+
 PCS-XE26SLFD+
 PCS

 XE26SLFDT+
 G730VID08BDC24
 U90B2054081210
 38113800006
 DP3AR020WQ1R200
 Z4.102.0680.0
 500-1040
 500-1052
 500-1054

 ZP-4008-66L
 0709821002
 DX40-20P(55)
 5554841-1
 MS3474W18-8P-LC*
 U90B3054061110
 U65-E04-4020
 ZPF000000000097891

 747360449
 10099439-003C-TRLF
 10137239-0021LF
 E9320-001-01
 10137239-001LF
 70.060.1028.0