

Alveo Programming Cable

User Guide

UG1377 (v1.2) September 15, 2020



Revision History

The following table shows the revision history for this document.

Section	Revision Summary
9/15/2020 Version 1.2	
Chapter 1: Introduction	Updated to include the latest devices that use this cable.
Connecting and Disconnecting the Ribbon Cable	Added Figure 5: Adapter Card and Figure 6: U25 Adapter Connected to the Alveo U25 Card .
Steps to Connect and Program the Alveo Data Center Accelerator Card	Updated Step 5 to be card agnostic and removed the <i>Select Memory Device</i> image. Removed the <i>Program Configuration Memory</i> image in Step 7.
12/02/2019 Version 1.1	
General updates	Revised outline of document
Chapter 1: Introduction	Updated Figure 1: Alveo Programming Module Interface Locations . Added Note 1 to Table 1: Alveo Programming Module Interface Descriptions .
Connecting and Disconnecting the Ribbon Cable	Updated Figure 3 photo
Connecting the Alveo Programming Module	Updated Figure 5, Figure 6, and Figure 7 photos
Programming Module Specifications	Added adapter specifications
9/17/2019 Version 2019.1	
General updates	No technical content updates
8/30/2019 Version 2019.1	
Chapter 1: Introduction	Provided a general overview of the card
	Provided names of the supported cards and links to each
Chapter 2: Prevention ESD Damage	Updated Figure 1
	Updated Table 1 through Table 4
Chapter 3: Setting Up the System	Updated Figure 2 through Figure 7
	Revised steps to set up ribbon cable
	Added Connecting the Alveo Programming Module
Chapter 4: Programming the Alveo Card	Described how to connect and program the card
Appendix A: Board Specifications	Added physical descriptions of the board
6/21/2019 Version 2019.1	
Initial release.	N/A

Table of Contents

Revision History	2
Chapter 1: Introduction	4
Chapter 2: System Setup using the Programming Cable	6
Standard ESD Measures.....	6
Connecting and Disconnecting the Ribbon Cable.....	7
Connecting the Alveo Programming Module.....	10
Chapter 3: Programming Cable Component Descriptions	14
Programming Module Specifications.....	14
Debug Header for Connecting with the Main Card.....	15
Micro USB Connectors.....	15
Programming Cable.....	16
Chapter 4: Programming the Alveo Data Center Accelerator Card	17
Steps to Connect and Program the Alveo Data Center Accelerator Card.....	17
Appendix A: Regulatory and Compliance Information	19
CE Information.....	19
Compliance Markings.....	20
Appendix B: Additional Resources and Legal Notices	21
Xilinx Resources.....	21
Documentation Navigator and Design Hubs.....	21
References.....	21
Please Read: Important Legal Notices.....	22

Introduction

The Alveo™ programming cable provides development access for debug-port enabled Alveo data center accelerator cards. The cable provides micro-USB support from a host PC to the maintenance connector allowing the card to be programmed using the Vivado® hardware manager.

The Alveo programming cable is available for purchase at [Alveo Accessories](#) and includes the programming module, 6-inch ribbon cable, USB cable, and a special adapter that supports the Alveo U25 SmartNIC data center accelerator cards. Debug-port enabled Alveo data center accelerator cards have a maintenance connector that connects to the programming module through a ribbon cable. The programming module connects to the host computer through a micro-USB that also provides power. The following cards are debug-port enabled and support the Alveo programming cable.

- U50
- U25

The following figure shows the Alveo programming module with available interface call-outs. The following table describes each call-out. [Chapter 3: Programming Cable Component Descriptions](#) gives additional information on each component.

Figure 1: Alveo Programming Module Interface Locations



X23424-102319

Table 1: Alveo Programming Module Interface Descriptions

Call-out	Interface	Description
1	2x15-pin debug connector	Provides connection between the programming module and some Alveo data center accelerator cards. Used for programming the programmable device.
2	Micro USB connector port 1	Provides connection between host system, with Vivado® Design Suite installed, and the programming module. Used for programming the Alveo data center accelerator card.
3	Unused	Reserved. Unused for development tool flows.

Notes:

1. An Alveo programming cable is required for development access. The cable provides micro-USB support from a host PC to the card maintenance connector and can be purchased from Xilinx at [Alveo Accessories](#).

System Setup using the Programming Cable

Standard ESD Measures



CAUTION! ESD can damage electronic components when they are improperly handled, and can result in total or intermittent failures. Always follow ESD-prevention procedures when removing and replacing components.

To prevent ESD damage:

- Attach a wrist strap to an unpainted metal surface of your hardware to prevent electrostatic discharge from damaging your hardware.
- When you are using a wrist strap, follow all electrical safety procedures. A wrist strap is for static control. It does not increase or decrease your risk of receiving electric shock when you are using or working on electrical equipment.
- If you do not have a wrist strap, before you remove the product from ESD packaging and installing or replacing hardware, touch an unpainted metal surface of the system for a minimum of five seconds.
- Do not remove the device from the antistatic bag until you are ready to install the device in the system.
- With the device still in its antistatic bag, touch it to the metal frame of the system.
- Grasp cards and boards by the edges. Avoid touching the components and gold connectors on the adapter.
- If you need to lay the device down while it is out of the antistatic bag, lay it on the antistatic bag. Before you pick it up again, touch the antistatic bag and the metal frame of the system at the same time.
- Handle the devices carefully to prevent permanent damage.


Connecting and Disconnecting the Ribbon Cable

A 2x15 ribbon cable is required to connect between the Alveo data center accelerator card and the programming module. See [Programming Cable](#).

Connecting the Ribbon Cable

When connecting the ribbon cable and programming module, align the cable key with the spacing on the maintenance connector. The cable key is shown in the following image.

Figure 2: Ribbon Cable Key

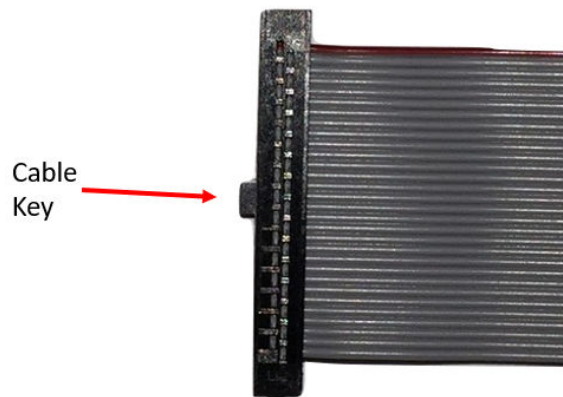

★ **IMPORTANT!** The ribbon length you use can vary depending on your system setup. For ribbon cable lengths greater than six inches, the JTAG transfer frequency used by the Vivado® hardware manager to program the card must be reduced from 15 MHz to 10 MHz. Complete details are discussed in [Chapter 4: Programming the Alveo Data Center Accelerator Card](#).

★ **IMPORTANT!** The U25 card can only be programmed using the 6-inch cable. Longer cables are not supported.

Debug-port enabled Alveo data center accelerator cards have a maintenance connector that attaches to the corresponding connector on the programming module through the ribbon cable. The corresponding connector on the programming module is shown in [Figure 3](#). [Figure 4](#) shows the ribbon cable attaching to the 2x15-pin maintenance connector of the Alveo U50 data center accelerator card.

Figure 3: Connecting Ribbon Cable to Debug Connector

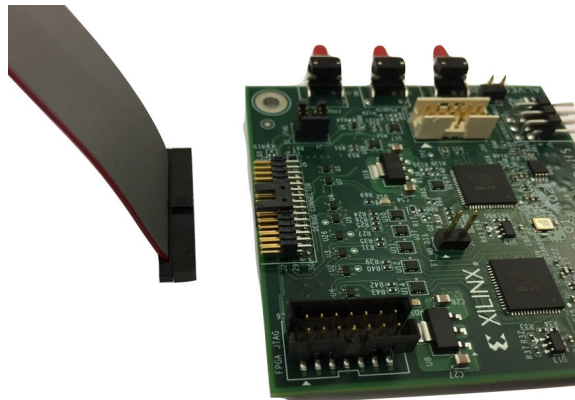


Figure 4: Attaching the Ribbon Cable to Alveo Maintenance Connector Port




When attaching the cable, apply gentle pressure and ensure the cable has a tight connection.



IMPORTANT! Do not apply excessive force when connecting the ribbon cable as the connector pins can be damaged or bent.


The Alveo U25 card requires the adapter card (shown in the following image) to convert the U25 debug edge connector to the 2x15-pin connector format. Prior to connecting the adapter to the debug port of the U25 card, attach the six-inch ribbon cable to the adapter card.


Figure 5: Adapter Card

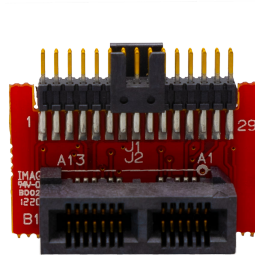

With the ribbon cable attached to the adapter card, gently connect the adapter card to the U25 debug port, found at the top of the card as shown in the following figure.

Figure 6: U25 Adapter Connected to the Alveo U25 Card

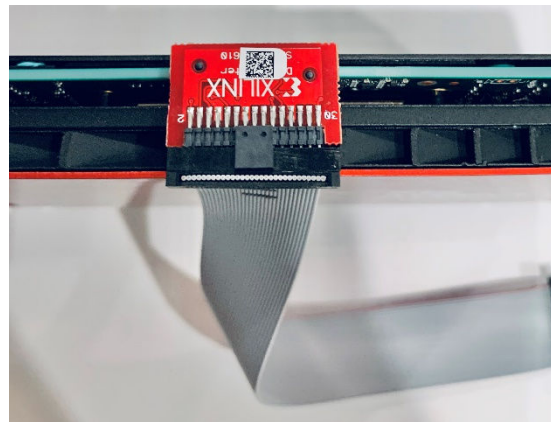


 **IMPORTANT!** Do not apply excessive force when connecting the ribbon cable as the connector pins can be damaged or bent.

Disconnecting the Ribbon Cable

When removing the ribbon from the Alveo card, adapter card, or the programming module, firmly hold the ribbon connector and pull the cable out in a straight line. Twisting or rotating the connector will damage the connector pins on the Alveo data center accelerator card or the programming module.

Connecting the Alveo Programming Module

This section outlines the programming module connection to the Alveo data center accelerator card procedures. Depending on your system setup, the following installation steps could differ. The following example uses a 15-inch cable. Two adjacent PCIe® slots are necessary: one for the Alveo data center accelerator card and the other for ribbon cable access.

 **IMPORTANT!** *The U25 card can only be programmed using the 6-inch cable. Longer cables are not supported.*

1. Before installing the Alveo data center accelerator card, connect one end of the ribbon cable to the maintenance port on the Alveo data center accelerator card following the instructions outlined in [Connecting the Ribbon Cable](#).
2. Power off the server and install the Alveo data center accelerator card in the server. Follow the card installation procedures described in the card specific installation guide (see [References](#)).
3. When the card is installed, guide the ribbon cable through the adjacent PCIe slot, providing enough length to attach it to the Alveo programming module.
4. Attach the other end of the ribbon cable to the maintenance connector on the Alveo programming module following the instructions outlined in [Connecting the Ribbon Cable](#). The following figures show the subsequent setup from the top and side views.

Figure 7: Installed Alveo Data Center Accelerator Card Connected to Alveo Programming Module - Top View

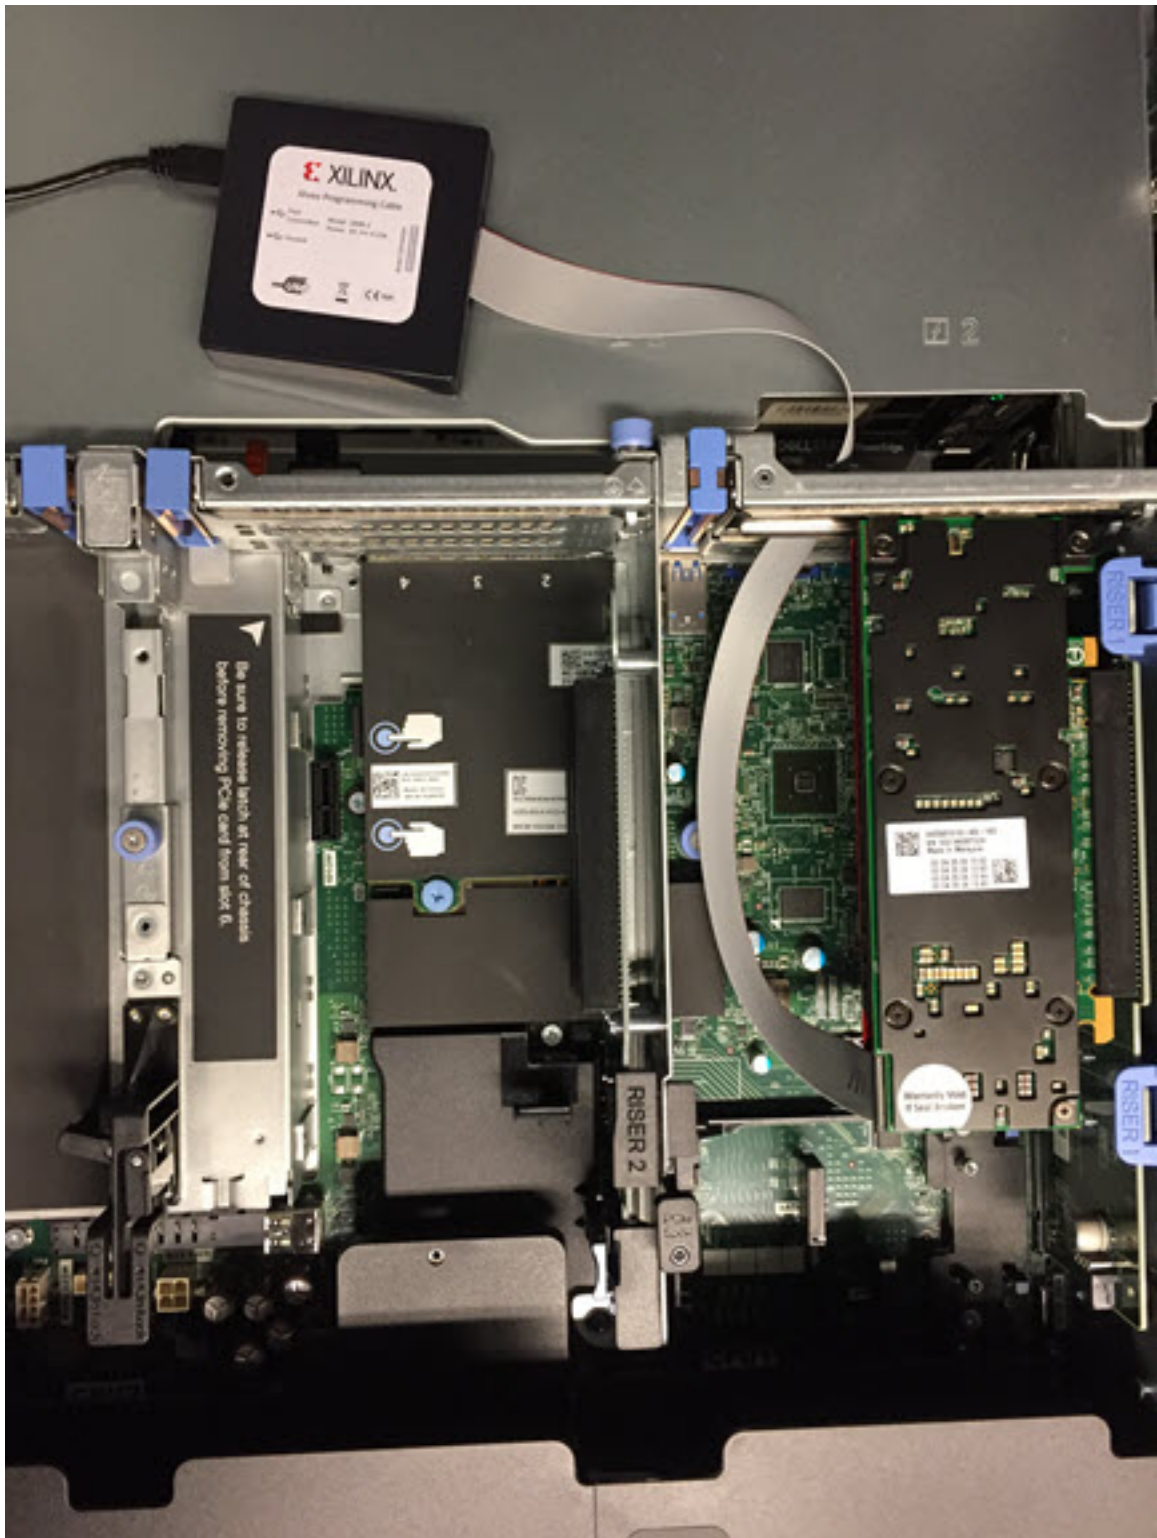


Figure 8: Installed Alveo Data Center Accelerator Card Connected to Alveo Programming Module – Side View



5. Replace the server cover.
6. Attach the micro-USB cable to USB port 1 of the Alveo programming module. The following figure shows both the ribbon (on the left side) and USB connected (on the right side).

Figure 9: Alveo Programming Module with Ribbon and USB Cables Connected



7. Guide the other end of the micro-USB cable to a location that is accessible by the host computer/laptop with the Vivado® Design Suite installed.

The Alveo programming module is successfully installed and the server can now be powered on.


Programming Cable Component Descriptions

This chapter provides a functional description of the components of the Alveo™ programming cable.

Programming Module Specifications

Dimensions (Square Form Factor)

Figure 10: Programming Module Dimensions

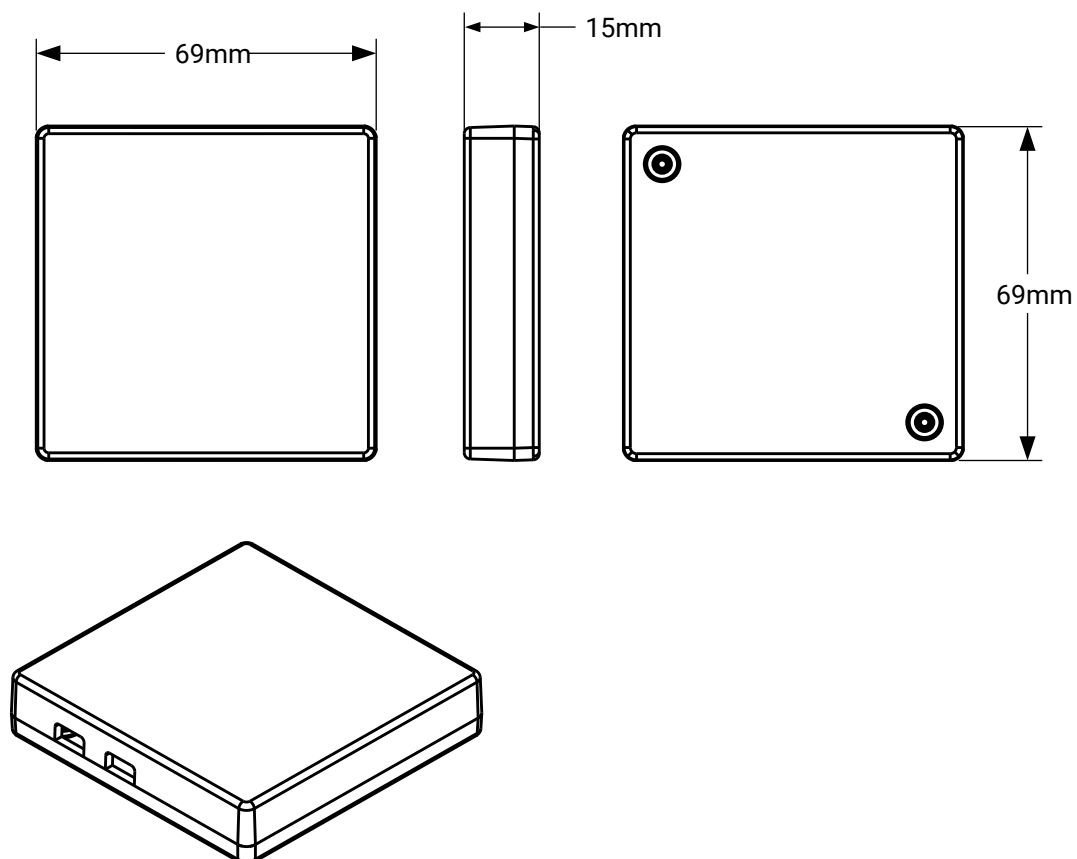

X23509-110819

The following dimensions are of the PCB inside the programming module:

Height: 2.5 inch (6.35 cm)

Length: 2.5 inch (6.35 cm)

Thickness ($\pm 5\%$): 0.062 inch (0.1574 cm)

Environmental

Operating Temperature: 0°C to +55°C

Storage Temperature: -40°C to +75°C

Humidity: 10% to 90% non-condensing

Debug Header for Connecting with the Main Card

The programming module, populated with a 2x15-pin debug connector (shown as call-out 1 in [Figure 1](#)), connects to the Alveo Data Center accelerator card with a ribbon cable. The 2x15 connector details are listed.

- Manufacturer: SAMTEC
- Part number: FTSH-115-01-F-D-RA-K
- Description: CONN HEADER R/A 30POS 1.27MM

The connector debug header pin definitions are listed in [Table 2: Micro-USB Connectors](#).

Micro USB Connectors

The programming module has two micro-USB connectors (call-outs 2 and 3 in [Figure 1](#)), one for each FT4232 USB to multi-protocol converter. Connect the external micro-USB cable from the host to the micro-USB connector 1 (call-out 2 in [Figure 1](#)). The micro-USB connector number 2 should be left unused (call-out 3 in [Figure 1](#)). The pin description of the micro-USB connector is listed in the following table.

Table 2: Micro-USB Connectors

Pin Number	Signal Name	Functionality
1	USB_VBUS	USB power
2	USB_DN	USB differential data -
3	USB_DP	USB differential data +
4	USB_ID	USB ID
5	GND	Ground
6	GND	Shield ground
7	GND	
8	GND	
9	GND	
10	GND	
11	GND	

Programming Cable

The required cables for the programming module are listed in the following table.

Table 3: Maintenance Board Accessories

Item Number	Quantity per Board	Description	Manufacturer	Manufacturer Part Number	Notes
1	1	Ribbon cables/IDC cables .050" tiger-eye IDC ribbon cable assembly, 1.27 mm, 30 position, 6" length, female to female	Samtec	FFSD-15-D-06.00-01-N	Connection between programming module and Alveo data center accelerator card connector.
2	1	Cable USB-A TO micro USB-B 2M	Assmann	AK67421-2-R	Connection between programming module and external device (i.e., host computer)

Programming the Alveo Data Center Accelerator Card

When using the Vitis™ IDE flow, follow the software and platform installation instructions in the specific card installation guide (see [References](#)). Traditional RTL-flow Alveo data center accelerator cards, enabled with a maintenance port, can be programmed using the Alveo programming module and the Vivado® Design Suite hardware manager application. To use this flow:


- Vivado® Design Suite 2019.1 or later hardware manager must be installed on your host machine or laptop to program the device via JTAG.
- Alveo data center accelerator card must be installed (see [Connecting the Alveo Programming Module](#)) and the server powered on.
- Alveo programming cable connected as described in [Connecting the Alveo Programming Module](#).

Steps to Connect and Program the Alveo Data Center Accelerator Card

To connect and program the Alveo data center accelerator card using the Vivado Design Suite hardware manager:

1. Attach the free end of the USB cable (coming from the Alveo programming module) to the host computer to connect the module with the host computer.
2. Start the Vivado Design Suite on the host computer.
3. Open the hardware manager by selecting **Flow Navigator** → **Open Hardware Manager**.
4. Select **Tools** → **Auto Connect** to open the target. A window, similar to one shown in the following example opens. In this case, an Alveo U50 is connected.


Figure 11: Vivado Design Suite Hardware Manager Auto-Connect

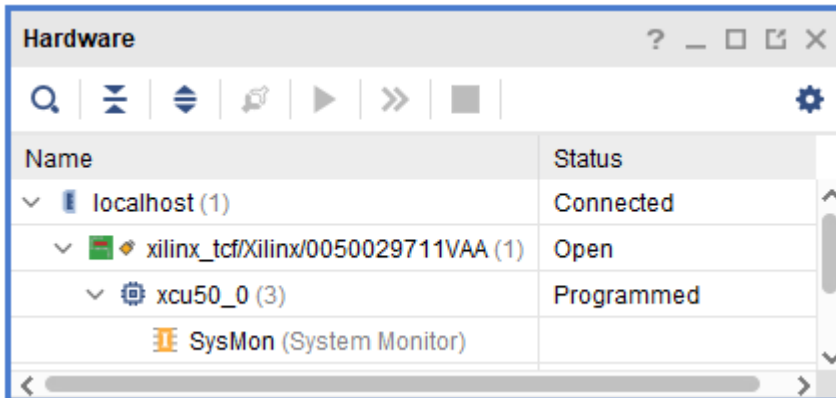

When using a ribbon cable longer than 6 inches, the JTAG transfer frequency must be changed from 15 MHz to 10 MHz. This lower frequency ensures proper signal integrity and successful programming. To change the JTAG transfer frequency to 10 MHz, run the following Tcl command in the hardware manager command line as shown in the following image:

```
set_property PARAM.FREQUENCY 1000000 [current_hw_target]
```

Figure 12: Changing JTAG Transfer Frequency via Tcl Command

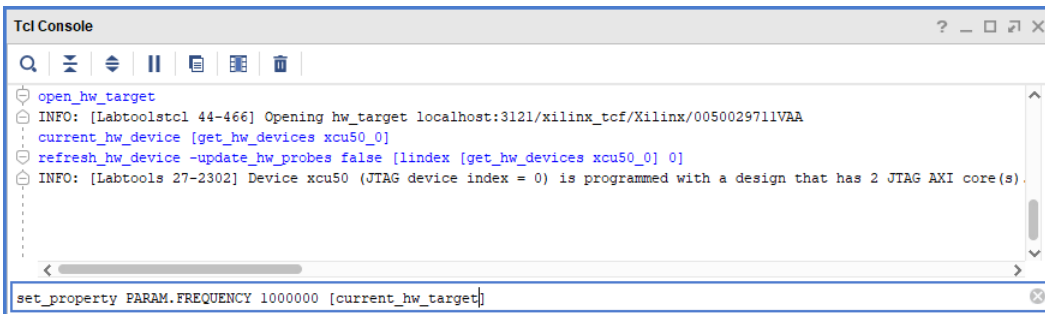

5. Choose the memory configuration device on the card.
 - a. Right-click on the target opened and select **Add Configuration Memory Device**.
 - b. Select the memory associated with the card installed, and click **OK**.
 - c. When prompted to program the configuration memory device, click **OK**.
6. Select the desired MCS file.
7. In the Address Range drop-down list, select **Configuration File Only** and click **OK**.
8. Disconnect the card in the Vivado Design Suite hardware manager.
9. Disconnect the USB cable from your host computer.
10. Power-cycle the card. The card is now updated.

Regulatory and Compliance Information

This product is designed and tested to conform to the European Union directives and standards described in this section.

For Technical Support, open a [Support Service Request](#).

CE Information

CE Directives

2006/95/EC, *Low Voltage Directive (LVD)*

2004/108/EC, *Electromagnetic Compatibility (EMC) Directive*

CE Standards

EN standards are maintained by the European Committee for Electrotechnical Standardization (CENELEC). IEC standards are maintained by the International Electrotechnical Commission (IEC).

CE Electromagnetic Compatibility

EN 55022:2010, *Information Technology Equipment Radio Disturbance Characteristics – Limits and Methods of Measurement*

EN 55024:2010, *Information Technology Equipment Immunity Characteristics – Limits and Methods of Measurement*


This is a Class A product. In a domestic environment, this product can cause radio interference, in which case the user might be required to take adequate measures.

CE Safety

IEC 60950-1:2005, *Information technology equipment – Safety, Part 1: General requirements*

EN 60950-1:2006, *Information technology equipment – Safety, Part 1: General requirements*

Compliance Markings

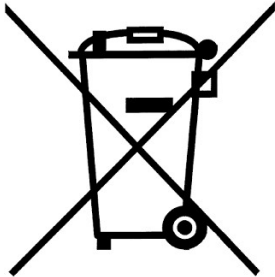

In August of 2005, the European Union (EU) implemented the EU Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC and later the WEEE Recast Directive 2012/19/EU. These directives require Producers of electronic and electrical equipment (EEE) to manage and finance the collection, reuse, recycling and to appropriately treat WEEE that the Producer places on the EU market after August 13, 2005. The goal of this directive is to minimize the volume of electrical and electronic waste disposal and to encourage re-use and recycling at the end of life.

Xilinx has met its national obligations to the EU WEEE Directive by registering in those countries to which Xilinx is an importer. Xilinx has also elected to join WEEE Compliance Schemes in some countries to help manage customer returns at end-of-life.

If you have purchased Xilinx-branded electrical or electronic products in the EU and are intending to discard these products at the end of their useful life, please do not dispose of them with your other household or municipal waste. Xilinx has labeled its branded electronic products with the WEEE Symbol to alert our customers that products bearing this label should not be disposed of in a landfill or with municipal or household waste in the EU.

This product complies with Directive 2002/95/EC on the restriction of hazardous substances (RoHS) in electrical and electronic equipment.

This product complies with CE Directives 2006/95/EC, *Low Voltage Directive (LVD)* and 2004/108/EC, *Electromagnetic Compatibility (EMC) Directive*.

Additional Resources and Legal Notices

Xilinx Resources

For support resources such as Answers, Documentation, Downloads, and Forums, see [Xilinx Support](#).

Documentation Navigator and Design Hubs

Xilinx[®] Documentation Navigator (DocNav) provides access to Xilinx documents, videos, and support resources, which you can filter and search to find information. To open DocNav:

- From the Vivado[®] IDE, select **Help** → **Documentation and Tutorials**.
- On Windows, select **Start** → **All Programs** → **Xilinx Design Tools** → **DocNav**.
- At the Linux command prompt, enter `docnav`.

Xilinx Design Hubs provide links to documentation organized by design tasks and other topics, which you can use to learn key concepts and address frequently asked questions. To access the Design Hubs:

- In DocNav, click the **Design Hubs View** tab.
- On the Xilinx website, see the [Design Hubs](#) page.

Note: For more information on DocNav, see the [Documentation Navigator](#) page on the Xilinx website.

References

These documents provide supplemental material useful with this guide:

1. *Alveo U50 Data Center Accelerator Card Installation Guide* ([UG1370](#))

Please Read: Important Legal Notices

The information disclosed to you hereunder (the "Materials") is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of Xilinx's limited warranty, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in such critical applications, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>.

AUTOMOTIVE APPLICATIONS DISCLAIMER

AUTOMOTIVE PRODUCTS (IDENTIFIED AS "XA" IN THE PART NUMBER) ARE NOT WARRANTED FOR USE IN THE DEPLOYMENT OF AIRBAGS OR FOR USE IN APPLICATIONS THAT AFFECT CONTROL OF A VEHICLE ("SAFETY APPLICATION") UNLESS THERE IS A SAFETY CONCEPT OR REDUNDANCY FEATURE CONSISTENT WITH THE ISO 26262 AUTOMOTIVE SAFETY STANDARD ("SAFETY DESIGN"). CUSTOMER SHALL, PRIOR TO USING OR DISTRIBUTING ANY SYSTEMS THAT INCORPORATE PRODUCTS, THOROUGHLY TEST SUCH SYSTEMS FOR SAFETY PURPOSES. USE OF PRODUCTS IN A SAFETY APPLICATION WITHOUT A SAFETY DESIGN IS FULLY AT THE RISK OF CUSTOMER, SUBJECT ONLY TO APPLICABLE LAWS AND REGULATIONS GOVERNING LIMITATIONS ON PRODUCT LIABILITY.

Copyright

© Copyright 2019–2020 Xilinx, Inc. Xilinx, the Xilinx logo, Alveo, Artix, Kintex, Spartan, Versal, Virtex, Vivado, Zynq, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. All other trademarks are the property of their respective owners.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [USB Cables / IEEE 1394 Cables](#) category:

Click to view products by [Xilinx](#) manufacturer:

Other Similar products are found below :

[68768-0173](#) [FNY-W6003-01](#) [88764-0800](#) [148700-1](#) [17-200621](#) [17-250051P](#) [954](#) [17-200261](#) [AC102012-1](#) [AC102012-2](#) [FTP-629Y601](#) [45-1345-15](#) [45-1358-15](#) [45-1363-15](#) [IP-USB1\(C10\)S-RW](#) [CABLE/RTP/USB/DT](#) [45-1351-15](#) [45-1357-15](#) [45-1433-1](#) [687680278](#)
[USBFTVX2SA2N03A](#) [USBFTV2SA2N03A](#) [USBFTV2SA2N05A](#) [MDM9PH004B](#) [MDM9PH004P](#) [FTP-629Y401](#) [FTP-628Y302](#) [FTP-628Y402](#) [CSMNB9MF-5](#) [FNY-W6022](#) [UA-30AMF-SD7B03](#) [UA-30AMFM-SL7B03](#) [USBAPSCC7202A](#) [17-200641](#) [UES-1001A160](#) [UES-1003A160](#) [USBFTVX7SA2N20A](#) [FTP-629Y602](#) [USBCAMCM100](#) [USB A/F*2 to 2.54 2*5P-SH L=400mm](#) [68784-0075](#) [MINI-SCREW-USB-DATACABLE](#) [19800-010500-200-RS](#) [103-1092-BL-F0050](#) [103-1020-BL-00100](#) [103-1092-BL-F0200](#) [103-1092-BL-F0100](#) [105-1092-BL-00300](#) [105-1092-BL-00200](#) [105-1031-BL-00200](#)