


## PRODUCT INFORMATION


### WAGO TOPJOB®S - DIN Rail Terminal Kit - 51251782




#### 2002 Series 0.25 - 2.5mm<sup>2</sup> 24A

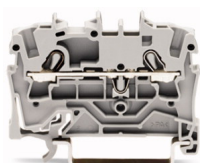

2002-1201 x 26

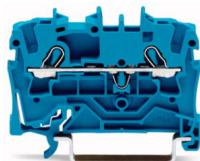

2002-1204 x 9

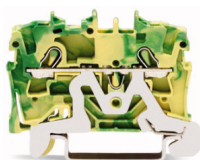


2002-1207 x 9




2002-1292 x 5


#### 2004 Series 0.5 - 4mm<sup>2</sup> 32A

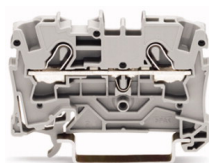

2004-1201 x 22

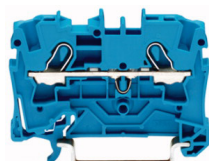

2004-1204 x 8

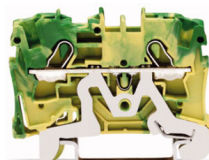


2004-1207 x 8




2004-1292 x 5


#### 2006 Series 0.5 - 6mm<sup>2</sup> 41A

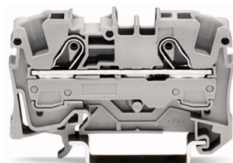

2006-1201 x 9

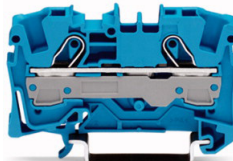

2006-1204 x 2

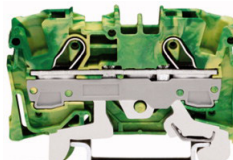

2006-1207 x 2



2006-1292 x 2

#### Accessories



210-110 x 1



210-719 X 1



210-720 X 1



2002-402 X 10



2002-403 X 5



2004-402 X 10



2004-403 X 5



2006-402 X 5




249-116 X 12



793-501 X 1

# CAGE CLAMP® S

## Solid Conductors and Fine-Stranded Conductors with Ferrules

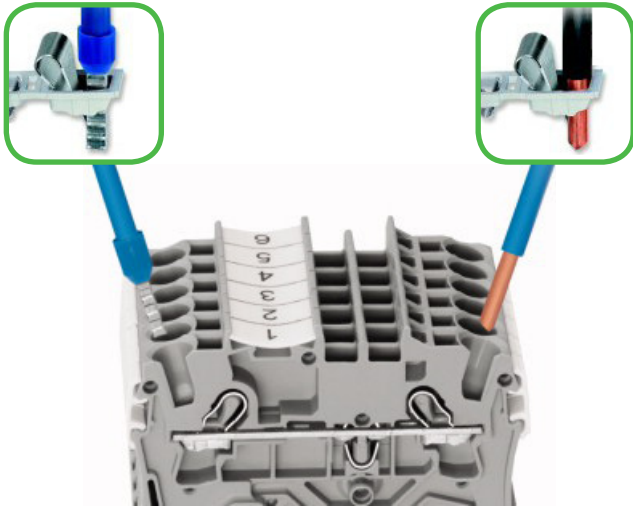


### Push-in termination

Stripped solid conductors, fine-stranded conductors with ferrules, or ultrasonically "bonded" conductors are simply pushed in until they hit the backstop.

**Without using any tools.**

## Fine-Stranded Conductors

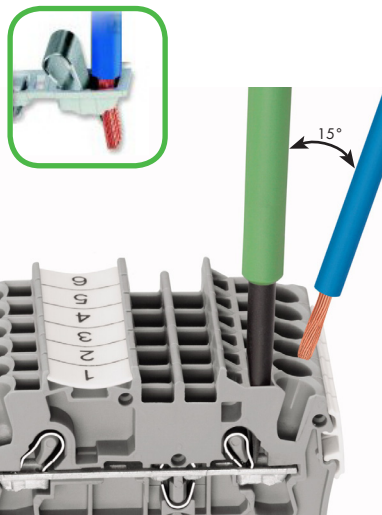


### Termination using a screwdriver

Connecting fine-stranded conductors without ferrules, or small cross-sectional conductors that cannot be pushed in, is performed similar to the original CAGE CLAMP® - just use a screwdriver.

#### Conductor removal:

Like the original CAGE CLAMP®, a screwdriver is used for conductor removal with CAGE CLAMP®S.

## Push-In Type Jumper Bars

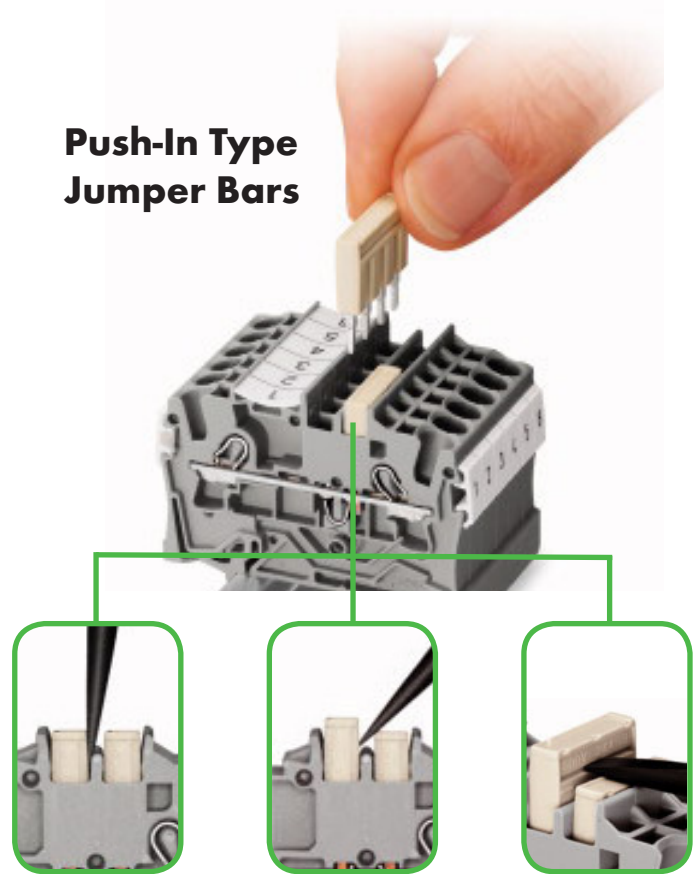

### Jumper removal

Insert the screwdriver blade between the jumper and the partition wall of the dual jumper slots, then lift up the jumper.

Place the screwdriver in the centre of jumpers with up to 5 contacts. For jumpers with more than 5 contacts, place on both sides of jumper.



### Attention: Observe operating instructions, danger to life and limb!

1. To be used by qualified personal only
2. Do not touch whilst live!
3. Do not use products for purposes other than those for which it is intended!
4. Observe the relevant regulations!
5. Observe products' technical data!
6. Do not use damaged products!
7. Observe stripped length!
8. Use original accessories only!
9. Insert conductor up to the stop!

**To be sold only with installation instructions!**

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [wago manufacturer](#):*

Other Similar products are found below :

[750-460](#) [231-118/026-000](#) [231-303/026-000](#) [231-620/019-000](#) [257-403](#) [280-438](#) [280-831](#) [284-624](#) [210-111](#) [231-303/037-000](#) [231-446/001-000\\_NR](#) [232-216/026-000](#) [234-510](#) [264-726](#) [280-339](#) [0283-0671](#) [830-800/000-305](#) [750-512](#) [750-455](#) [51251782](#) [286-312](#) [713-1428/107-000](#) [731-138/048-000](#) [750-459](#) [750-517](#) [793-3505](#) [826-172](#) [859-304](#) [280-335](#) [231-535/001-000](#) [2604-1106](#) [2604-1504](#) [2606-1103/020-000](#) [2624-1103](#) [2626-3103/020-000](#) [821-104](#) [713-1107](#) [852-1411](#) [2106-1307](#) [2116-5307](#) [832-1205](#) [832-3604](#) [2009-110](#) [281-512/281-501](#) [286-336](#) [750-421](#) [750-838](#) [753-559](#) [750-1505](#) [787-732](#)