





Step 1 Cut Ribbon Cable to Desired Length

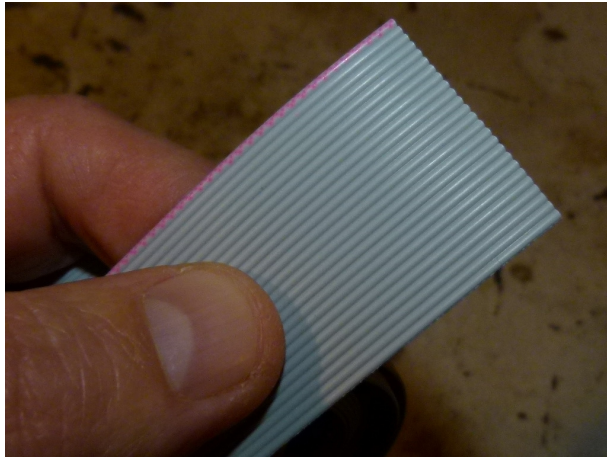

Step 2 Cut Ribbon Cable to Desired Width

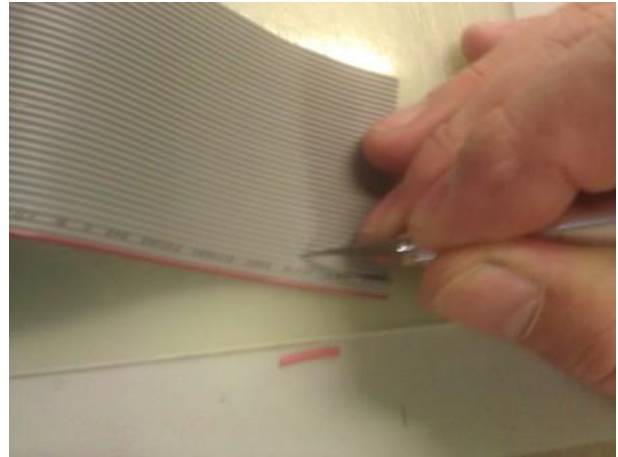

Step 3 Place IDC Connector on the cable and close it all the way to assure proper connection

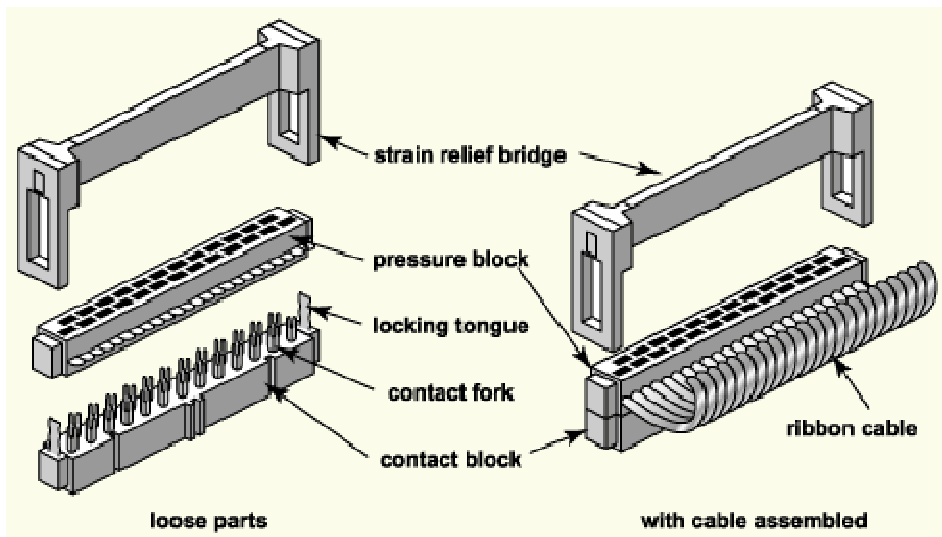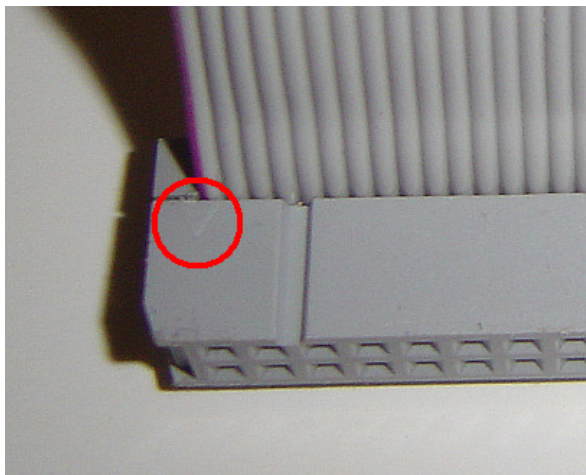

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Jumper Wires](#) category:

Click to view products by [SchmartBoard](#) manufacturer:

Other Similar products are found below :

[420688201-3](#) [08-015-173](#) [05-001-152FB](#) [05-001.5-152FB](#) [920-0169-50](#) [PCIEC-064-1000-EC-EM-P-85](#) [PCIEC-064-0500-EC-EM-P-85](#) [12-002-172](#) [MIKROE-1388](#) [MIKROE-2022](#) [BC-32626](#) [BC-32678](#) [920-0137-01](#) [920-0164-01](#) [920-0163-01](#) [920-0162-01](#) [920-0182-01](#) [TW-AF-6](#) [20-006-172](#) [22-006-173](#) [18-006-171](#) [14-002.5-172](#) [920-0189-01](#) [920-0114-01](#) [920-0180-01](#) [MIKROE-2023](#) [920-0194-50](#) [920-0195-50](#) [920-0192-50](#) [920-0191-01](#) [920-0190-01](#) [920-0188-01](#) [920-0187-01](#) [920-0183-01](#) [920-0176-01](#) [920-0156-50](#) [920-0155-50](#) [920-0154-01](#) [920-0146-01](#) [920-0142-01](#) [920-0140-01](#) [920-0087-01](#) [920-0085-01](#) [310-001](#) [250-047](#) [TW-AM-6](#) [ICTC-MP](#) [10-020-171P](#) [923345-04-C](#) [923351-I](#)