

3M


Plug Knockout Tools

For use with 3M 929 Series

.100" Thru Board Sockets


3M offers 2 Plug Knockout Tools for the removal of integral solder mask plugs for all levels of production. Both are designed for use as a hand tool. Each tool can easily be adapted for use with standard 3M presses. The 929013 with the 3640 assembly press and the 929012 with the 929050 (long neck) press.

For Prototype and Low Volume Production

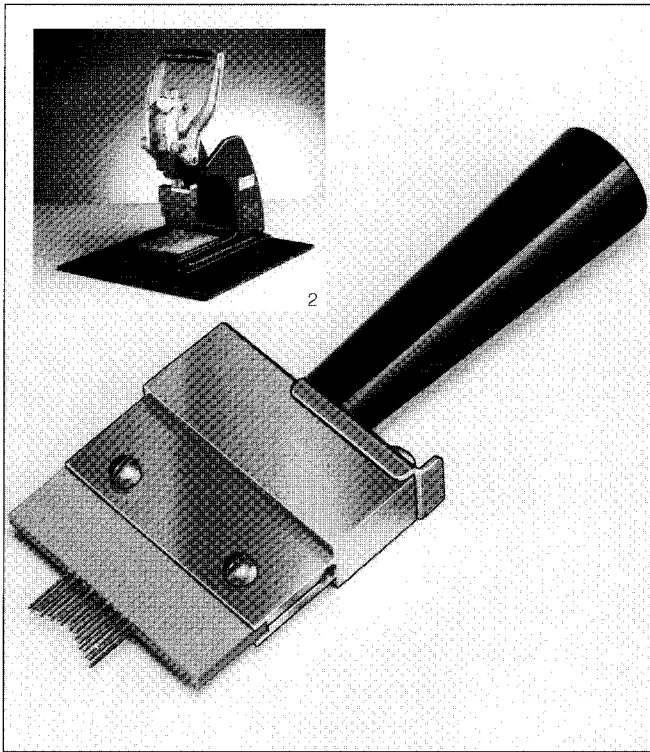

929013 Knockout Tool (Inset) 3640 Press

For Medium and High Volume Production

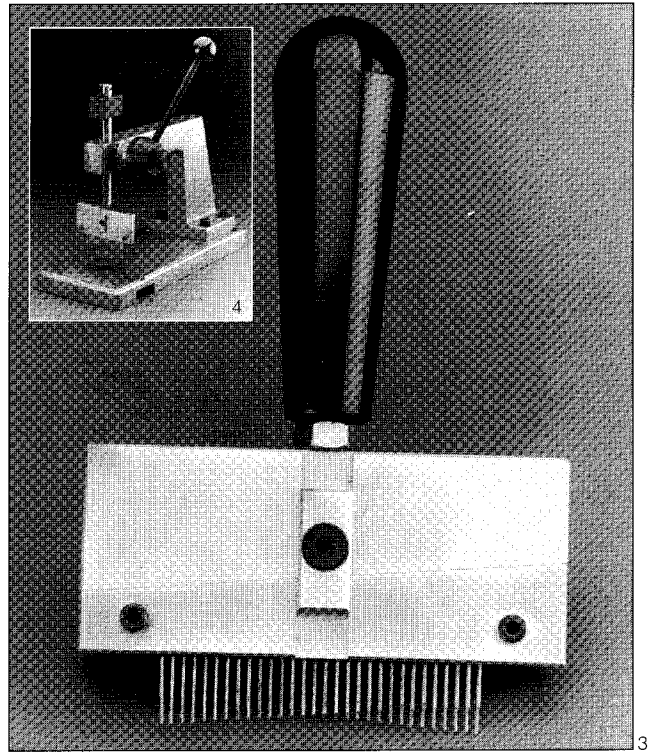

929012 Knockout Tool (Inset) 929050 Press

Order Information:

Knockout Tool **929013**

Note: This does not include a molded head.

Hand Press (Standard) **3640**

Molded Head (with staggered pins)

929025-0X-XX

1 = One Row

2 = Two Row

Number of pins
per row

Order Information:

Knockout Tool Kit **929012**

200 Qty. Replacement Pins **929018**

Hand Press(Long neck) **929050**

Press Setup

3640 Assembly Press Only

With each hand tool, you will receive a plastic sleeve that is designed to slip over the press shaft. This acts as a safety stop so that the pins in the knockout tool will not hit the base of the press.

1. Unscrew the black handle from the knockout tool.
2. a. Remove the four (4) hex screws on the assembly head.
b. Remove the two (2) hex screws on the bottom of the assembly head.
c. Slide the shaft out of the assembly head.
d. Put the plastic sleeve that comes with each hand tool inside the return spring by bending the spring in the middle.
e. Replace the shaft by sliding it through the spring and into the plastic sleeve, and then through the press casting.
f. Replace the hex screws removed in steps a and b.
3. Adjust the press to the uppermost position.
4. Attach the knockout tool to the shaft using the latch provided.

929012 Knockout Tool Assembly

1. Loosen the three screws from the pin holder with a 3/32" allen key wrench. Do not unscrew the cap screws completely. If the center supports should become loose it is important they are correctly reassembled. The pressure heels must face inward.

2. Place the desired number of pins into the pin holder. It is important not to bend the pins. Make sure that all pins are properly positioned in the holder. Tighten all three screws with an allen wrench.

Press Setup

929050 Press (Long neck)

1. Loosen the down stop on the press with an allen wrench.
2. Raise the ram and screw the pin holder into the bottom of the ram.
3. To properly align the holder on the press, the holder must be lowered until it rests in the alignment slot.
4. Adjust the down stop on the top of the ram by loosening the two screws with an allen key. Set the tool to your desired height and retighten the screws. A fine adjustment for the height is available. This is located on the top of the stop and can be adjusted with an allen key.

For more details please refer to instructions for 929012 & 929050 Literature code 34-7034-0145-4. Also it is recommended to follow detailed instructions on how to use Thru board sockets in your production on "Tech Brief" Literature code 80-6106-0815-2.

Call 800-225-5373

for sales, ordering and technical product information

Important Notice

All statements, technical information and recommendations related to the Seller's products are based on information believed to be reliable, but the accuracy or completeness thereof is not guaranteed. Before utilizing the product, the user should determine the suitability of the product for its intended use. The user assumes all risks and liability whatsoever in connection with such use.

Any statements or recommendations of the Seller which are not contained in the Seller's current publications shall have no force or effect unless contained in an agreement signed by an authorized officer of

the Seller. The statements contained herein are made in lieu of all warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose which warranties are hereby expressly disclaimed.

Seller shall not be liable to the user or any other person under any legal theory, including but not limited to negligence or strict liability, for any injury or for any direct or consequential damages sustained or incurred by reason of the use of any of the seller's products that were defective.

3M

Electronic Products Division

6801 River Place Blvd.
Austin, Texas 78726-9000



Printed on recycled paper.

Printed in the USA

© 3M 1993 80-6106-0819-4 (08310.0)W-1

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Punches & Dies](#) category:

Click to view products by [3M](#) manufacturer:

Other Similar products are found below :

[58510-1](#) [63454-1601](#) [63457-0056](#) [63457-3401](#) [730-5/8](#) [730BB-1-3/8](#) [734410](#) [PV-670508-001](#) [1328](#) [1338](#) [13782673](#) [AR-19](#) [AR-24](#)
[1583609-1](#) [1720](#) [1762951-1](#) [2063500-2](#) [19031-0168](#) [AR-20](#) [AR-23](#) [CD5-8](#) [313336-3](#) [11-19-3122](#) [539663-1](#) [63446-2241](#) [TL-11](#) [TL-18](#)
[0634451912](#) [1762674-1](#) [63454-0123](#) [68240-1](#) [68247-1](#) [734252](#) [313183-1](#) [PA2029](#) [119174-001](#) [23846-1](#) [11-40-5342](#) [68010-2](#) [690370015](#)
[730BB-1-1/8](#) [730BB-1-1/16](#) [19032-0048](#) [63465-0023](#) [11-40-4438](#) [63457-0041](#) [19032-0202](#) [11-11-0054](#) [11-11-0052](#) [19813-5041](#)