



# CY3214-PSoCEVALUSB KIT QUICK START GUIDE

1

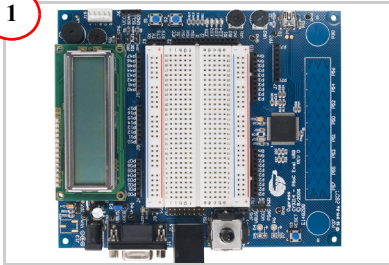


Remove the CY3214-PSoCEVALUSB Kit from package.

2

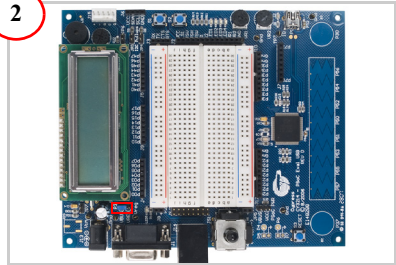

Ensure that P3, the power selection jumper (shunt), is placed on the first two pins (designated as VBUS).

3

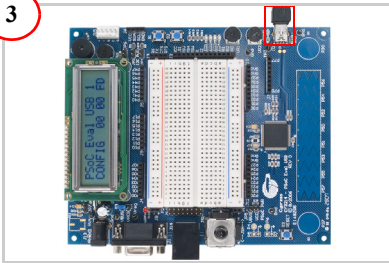


Connect the USB cable. LED5 lights up. The message "PSoC Eval USB 1" is displayed on the LCD. Observe that the mouse pointer on the PC screen moves in a square fashion.

4



Insert the kit CD in your PC's CD drive. Install the kit contents, PSoc Designer, and PSoc Programmer.

## CY3214-PSoCEVALUSB Board Details

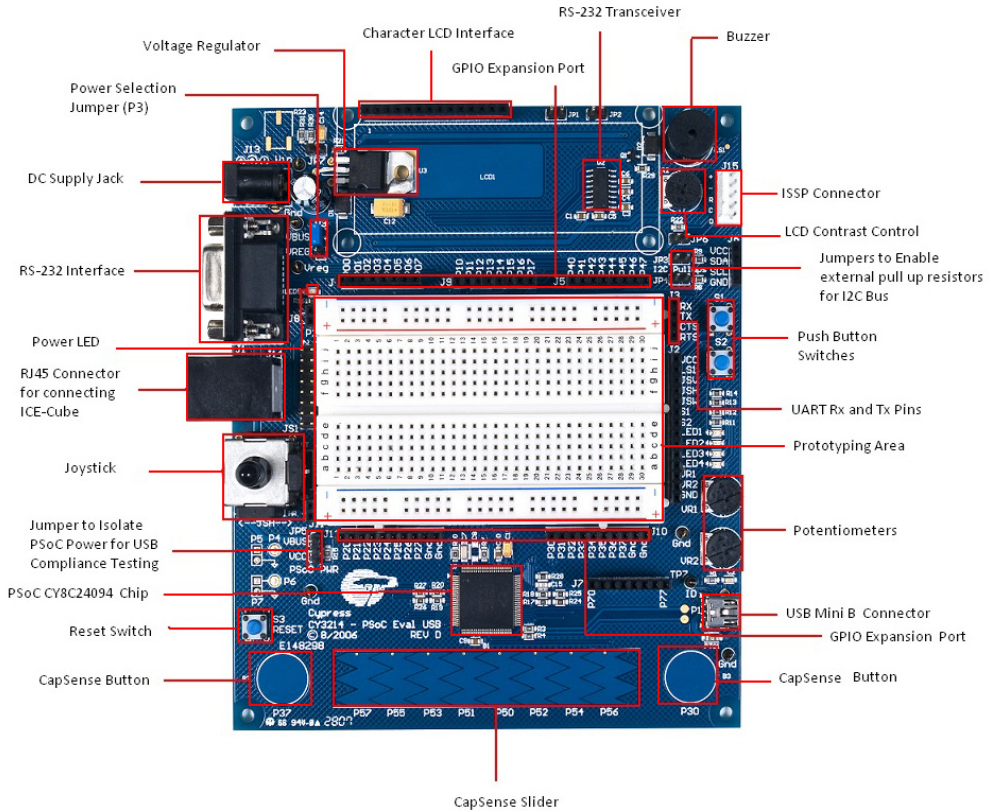

For the latest information about this kit, visit  
<http://www.cypress.com/go/CY3214-PSoCEVALUSB>

