LT5546

DESCRIPTION

Demonstration circuit 696 with LT5546 IC is a 40MHz to 500MHz monolithic integrated quadrature demodulator with variable gain amplifier (VGA), designed for low voltage operation. It supports standards that use linear modulation format. The chip consists of a VGA, quadrature down-converting mixers and 17MHz lowpass noise filters. The LO port consists of a divide-by-two stage and LO buffers. The IC provides all building blocks for IF down-conversion to I and Q baseband signals with a single supply voltage of 1.8V to 5.25V. The VGA gain has a linear-in-dB relationship to the control input voltage. Hard-clipping amplifiers at the mixer outputs reduce the recovery time from a signal overload condition. The lowpass filters

reduce the out-of-band noise and spurious frequency components. The –3dB corner frequency of the noise filters is approximately 17MHz. The external 2XLO frequency is required to be twice the IF input frequency for the mixers. The standby mode provides reduced supply current and fast transient response into the normal operating mode when the I/Q outputs are AC-coupled to a baseband chip.

Design files for this circuit board are available. Call the LTC factory.

LT is a trademark of Linear Technology Corporation

 Table 1. Dip-Switch Setting For Different Operating Modes

EN	STBY	COMMENTS
Low	Low	Shutdown Mode
Low	High	Standby Mode
High	Low or High	Normal Operation Mode

DC POWER CONSUMPTION MEASUREMENTS

- 1) Connect test equipment and power supplies to the demo board as shown in Figure 1.
- 2) Set Power Supply #1 and Power Supply #2 to +3.0V.
 - NOTE: One Power Supply can be used as well.
- Set Power Supply #3 Between +4.75V and +5.25V. This is the voltage source for the two Op-Amps U2 and U3.
- 4) Set Power Supply #4 to 0V (minimum gain).
- 5) <u>Shutdown Mode</u>
 - a) Set dipswitches for EN and STBY to "On" (Logic Low).
 - b) Measure Current in Vcc1. It should be approximately 0.2μA.

- 6) Standby Mode
 - a) Set EN dipswitch to "On" position (Logic Low).
 - b) Set STBY dipswitch to "Off" position (Logic High).
 - c) Measure Current in Vcc1. It should be approximately 3.6mA.
- 7) <u>Normal Operation Mode</u>
 - a) Set EN dipswitch to "Off" position (Logic High).
 - b) Set STBY dipswitch to either "On" or "Off".
 - c) Measure Current in Vcc1. It should be approximately 27mA.



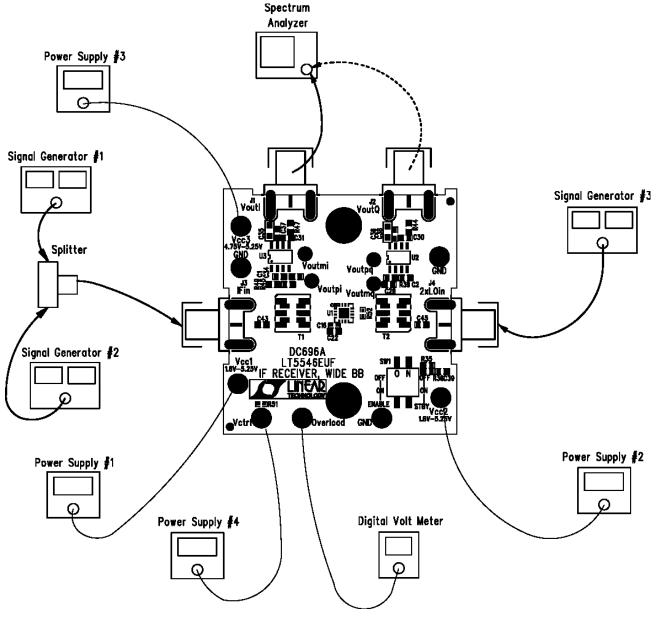


Figure 1. Test and Measurement Setup

TOTAL HARMONIC DISTORTION MEASUREMENTS

- 1) Use setting steps 1 to 4 from previous DC power consumption measurements.
- Set dipswitch of EN and STBY to "Off " position (Logic High). The IC is in Normal Operation Mode.
- 3) Set Signal Generator # 1 for f_{IF} =280.0MHz, CW mode, with P_{IF} = -40dBm.
- 4) Set Signal Generator # 2 for f_{IF} =280.1MHz, CW mode, with P_{IF} = -40dBm.
- 5) Set Signal Generator # 3 for f_{L0} =570MHz, CW mode, with P_{L0} = -3dBm.
- 6) Set the Spectrum Analyzer to the following:
 - a) Center Frequency = 4.9MHz.
 - b) Frequency Span = 1MHz.
 - c) Amplitude Reference Level = 0dBm.
 - d) Res. BW = 10kHz,
 - e) Vid. BW = 30kHz.

Two CW tones will be on the screen of the spectrum analyzer, at 4.9MHz and 5.0MHz.

7) Slowly adjust the power supply #4 for V_{ctrl} (V_{ctrl} or Gain Control Voltage) to set the output of Fundamental tones at -10dBm each.

NOTE: Do not adjust this voltage to more than Vcc1. If necessary, adjust the P_{IF} of either Signal Generator #1 or Signal Generator #2 so that the two tones are equivalent in level or Power value (power delta of 0.3dB or less, preferably).

- 8) Record the actual value of the two tones on the Spectrum Analyzer. These are the two Fundamental tones.
- 9) Set the Spectrum Analyzer to the following:
 - a) Center Frequency = 4.8MHz.
 - b) Frequency Span = 50kHz.
 - c) Amplitude Reference Level = -30dBm.
 - d) Averaging = ON.
 - e) Measure the lower IM3 Product on the Spectrum Analyzer at 4.8MHz.
- 10) Repeat step 9 for the Upper IM3 product at 5.1MHz.

NOTE: IM5 and IM7 products can be measured with higher IF input signal levels.

BASEBAND LOWPASS FILTER, IF DETECT (OVERLOAD) AND PHASE & AMPLITUDE MISMATCH MEASUREMENTS

- 1) Use setting steps 1 to 4 from previous DC power consumption measurements.
- 2) Set signal generator # 3 for f_{L0} =570MHz, CW mode, with P_{L0} = -3dBm.
- 3) Set Signal Generator # 1 for f_{IF} =286.0MHz, CW mode, with P_{IF} = -30dBm.
- 4) Turn "Off" the RF output for the signal generator #2.
- 5) Set dipswitch of EN and STBY to "Off " position (Logic High).
- 6) Set the Spectrum Analyzer to the following:

- a) Start Frequency = 100kHz.
- b) Stop Frequency = 50MHz.
- c) Amplitude Reference Level = 0dBm.
- d) Res. BW = 100kHz.
- 7) Slowly adjust the Power Supply #4 for Vcc4 (V_{ctrl} or Gain Control Voltage) to set the output tone at -4dBm.
- <u>BaseBand Filters frequency response</u> can be measured by sweeping input IF frequency from 286MHz to 335MHz. Correspondingly, BB output will have 1 to 50MHz sweep. In case of manual

frequency sweep of IF input, the Spectrum Analyzer should be in "Maximum Hold" mode. One marker should be placed at 1MHz point as a reference and another marker should be placed at the point where the frequency response of the BB filter has a 3.0dB drop. This represents the 3.0dB corner frequency of the BB filter.

- 9) IF Detector (Overload) measurement:
 - a) Change Signal Generator # 1 Output power with 1 or 2dB step size, from -30 to +8dBm.
 - b) IF Detector (Overload) Output voltage should be in a range of 0.3 to 1.2 Volts correspondingly.
- 10) <u>BaseBand Phase and Amplitude mismatch meas-</u> <u>urements.</u>


a) Connect two (vertical) inputs of the oscilloscope to BB outputs.

NOTE: An Oscilloscope of 1GHz or faster is recommended. Calibration and identical connecting cables are required. Measurements should be done with internal or external 50ohm termination resistors.

b) Measure Phase and Amplitude error. Phase error should be ± 3.0 degrees maximum. Amplitude error should be within ± 0.5 dB.

NOTE: If available, an Impedance Analyzer like the HP 4192A is recommended for BB Phase and Amplitude mismatch measurements.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 696 IF RECEIVER, WIDE BB

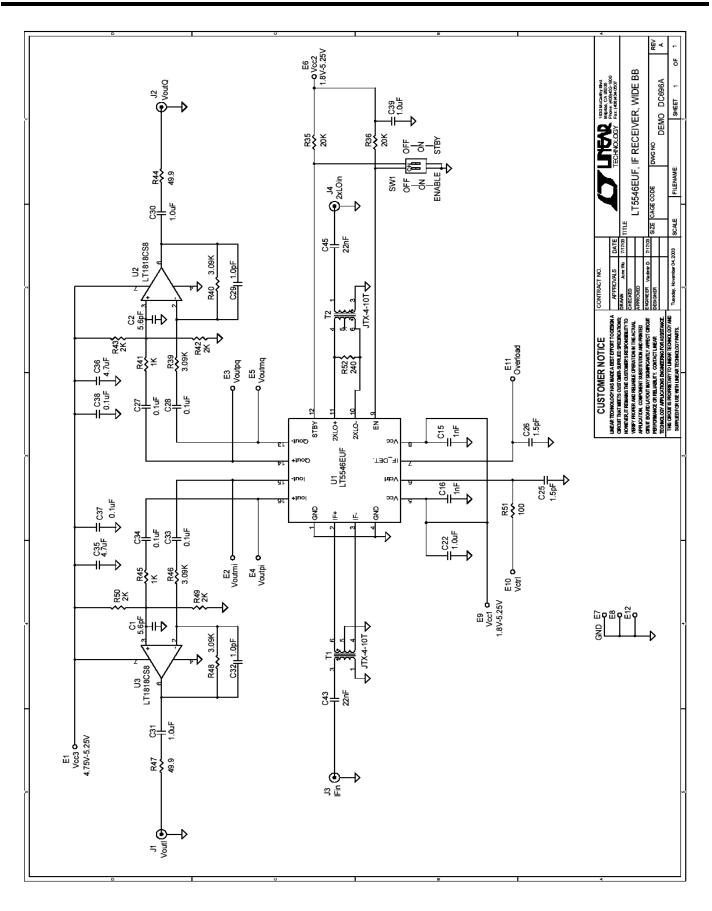

TECHNOLOGY

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for RF Development Tools category:

Click to view products by Analog Devices manufacturer:

Other Similar products are found below :

MAAM-011117 MAAP-015036-DIEEV2 EV1HMC1113LP5 EV1HMC6146BLC5A EV1HMC637ALP5 EVAL-ADG919EBZ ADL5363-EVALZ LMV228SDEVAL SKYA21001-EVB SMP1331-085-EVB EV1HMC618ALP3 EVAL01-HMC1041LC4 MAAL-011111-000SMB MAAM-009633-001SMB MASW-000936-001SMB 107712-HMC369LP3 107780-HMC322ALP4 SP000416870 EV1HMC470ALP3 EV1HMC520ALC4 EV1HMC244AG16 MAX2614EVKIT# 124694-HMC742ALP5 SC20ASATEA-8GB-STD MAX2837EVKIT+ MAX2612EVKIT# MAX2692EVKIT# EV1HMC629ALP4E SKY12343-364LF-EVB 108703-HMC452QS16G EV1HMC863ALC4 119197-HMC658LP2 EV1HMC647ALP6 ADL5725-EVALZ 106815-HMC441LM1 EV1HMC1018ALP4 UXN14M9PE MAX2016EVKIT EV1HMC939ALP4 MAX2410EVKIT MAX2204EVKIT+ EV1HMC8073LP3D SIMSA868-DKL SIMSA868C-DKL SKY65806-636EK1 SKY68020-11EK1 SKY67159-396EK1 SKY66181-11-EK1 SKY65804-696EK1 SKY13396-397LF-EVB